

TWAIN Specification

Version 2.1

This document was released for IP
by the TWAIN Working Group
on July 8, 2009



Acknowledgments

The TWAIN Working Group acknowledges the following individuals and their respective companies for their contributions to this document. Their hard work in defining, designing, editing, proofreading, and discussing the evolution of the document have been invaluable.

Adobe Systems Incorporated

Scott Foshee

AnyDoc Software, Inc.

Merit Greaves

Atalasoft

Glenn Chittenden Jr.

Adam Scarborough

Avision inc.

Leo Liao

Eastman Kodak Company

Mark McLaughlin

Epson

Tak Shiozaki

Fujitsu Computer Products of America

Pamela Doyle

Hewlett-Packard

Yuri Breloff

JFL Peripheral Solutions Inc.

Fred Harju

Jon Harju

Jim Watters

Ricoh Americas Corporation

Rob Pope

The TWAIN Working Group

Hilary Minugh

Trees & Generals

Debra Herman

Xerox

Wayne Buchar

We would also like to thank the TWAIN Working Group Technical Committee for their opinions and contributions..



Table of Contents

1. Introduction	1-1
Need for Consistency	1-1
Elements of TWAIN	1-1
Benefits of Using TWAIN	1-2
Creation of TWAIN	1-3

2. Technical Overview	2-1
TWAIN Architecture	2-1
TWAIN User Interface	2-3
Communication Between the Elements of TWAIN	2-5
Using Operation Triplets	2-11
The State-Based Protocol	2-13
Capabilities	2-16
Modes Available for Data Transfer	2-21

3. Application Implementation	3-1
Levels of TWAIN Implementation	3-1
Installation of the Source Manager Software	3-2
Changes Needed to Prepare for a TWAIN Session	3-5
Controlling a TWAIN Session from Your Application	3-15
Error Handling	3-39
Requirements for an Application to be TWAIN-Compliant	3-41

4. Advanced Application Implementation	4-1
Capabilities	4-1
Options for Transferring Data	4-17
The ImageData and Its Layout	4-24
Transfer of Multiple Images	4-27
Transfer of Compressed Data	4-33
Alternative User Interfaces	4-37
Grayscale and Color Information for an Image	4-40
Contrast, Brightness, and Shadow Values	4-42

5. Source Implementation	5-1
The Structure of a Source	5-2
Operation Triplets	5-3
Sources and the Event Loop	5-4
User Interface Guidelines	5-7
Capability Negotiation	5-10
Data Transfers	5-12
Error Handling	5-15
Memory Management	5-17
Requirements for a Source to be TWAIN-Compliant	5-18
Other Topics	5-22

6. Entry Points and Triplet Components	6-1
Entry Points	6-1
Data Groups	6-4
Data Argument Types	6-4
Messages	6-6
Custom Components of Triplets	6-7

7. Operation Triplets	7-1
Triplet Overview	7-1
Format of the Operation Triplet Descriptions	7-5
Operation Triplets	7-7

8. Data Types and Data Structures	8-1
Naming Conventions	8-1
Platform Dependent Definitions and Typedefs	8-3
Definitions of Common Types	8-7
Data Structure Definitions	8-7
Data Argument Types that Don't Have Associated TW_Structures	8-63
Constants	8-65
Deprecated Items	8-101

9. Extended Image Information Definitions	9-1
TWAIN 1.7 Extended Image Attribute Capabilities	9-1
TWAIN 1.9 Extended Image Attribute Capabilities	9-12
TWAIN 1.91 Extended Image Attribute Capabilities	9-16
TWAIN 2.0 Extended Image Attribute Capabilities	9-17
TWAIN 2.1 Extended Image Attribute Capabilities	9-19

10. Capabilities	10-1
Overview	10-1
Required Capabilities	10-2
Capabilities in Categories of Functionality	10-2

11. Return Codes and Condition Codes	11-1
An Overview of Return Codes and Condition Codes	11-1

Currently Defined Return Codes	11-2
Currently Defined Condition Codes	11-2
Custom Return and Condition Codes	11-4

A. TWAIN Articles..... A 1

Device Events	A-1
Supported Sizes	A-5
Automatic Capture	A-8
Camera Preview	A-9
File System	A-11
Internationalization	A-19
Audio Snippets	A-19
How to use the Preview Device	A-21
Imprinter / Endorser	A-23
Capability Ordering	A-24
Defaults	A-30

B. TWAIN Technical Support..... B 1

E-Mail Support	B-1
Worldwide Web	B-2

1

Introduction

Chapter Contents

Need for Consistency	1-1
Elements of TWAIN	1-1
Benefits of Using TWAIN	1-2
Creation of TWAIN	1-3

Need for Consistency

With the introduction of scanners, digital cameras, and other image acquisition devices, users eagerly discovered the value of incorporating images into their documents and other work. However, supporting the display and manipulation of this raster data placed a high cost on application developers. They needed to create user interfaces and build in device control for the wide assortment of available image devices. Once their application was prepared to support a given device, they faced the discouraging reality that devices continue to be upgraded with new capabilities and features. Application developers found themselves continually revising their product to stay current.

Developers of both the image acquisition devices and the software applications recognized the need for a standard communication between the image devices and the applications. A standard would benefit both groups as well as the users of their products. It would allow the device vendors' products to be accessed by more applications and application vendors could access data from those devices without concern for which type of device, or particular device, provided it. TWAIN was developed because of this need for consistency and simplification.

Elements of TWAIN

TWAIN defines a standard software protocol and API (application programming interface) for communication between software applications and image acquisition devices (the source of the data).

The three key elements in TWAIN are:

- **Application software**

An application must be modified to use TWAIN.

- **Source Manager software**

This software manages the interactions between the application and the Source. This code is provided in the TWAIN Developer's Toolkit and should be shipped for free with each TWAIN application and Source.

- **Source software**

This software controls the image acquisition device and is written by the device developer to comply with TWAIN specifications. Traditional device drivers are now included with the Source software and do not need to be shipped by applications.

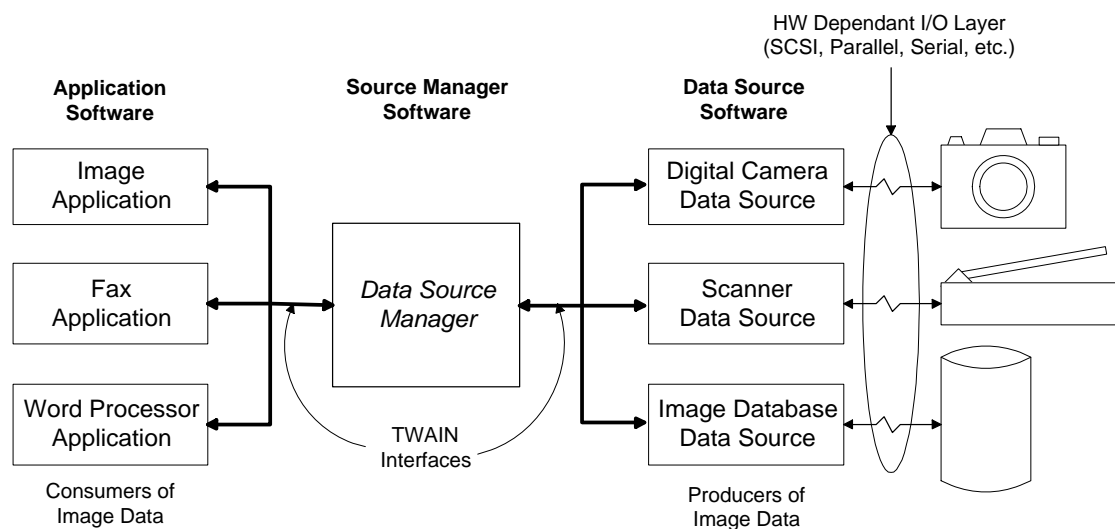


Figure 1-1 TWAIN Elements

Benefits of Using TWAIN

For the Application Developer

- Allows you to offer users of your application a simple way to incorporate images from any compatible raster device without leaving your application.
- Saves time and dollars. If you currently provide low-level device drivers for scanners, etc., you no longer need to write, support, or ship these drivers. The TWAIN-compliant image acquisition devices will provide Source software modules that eliminate the need for you to create and ship device drivers.
- Permits your application to access data from any TWAIN-compliant image peripheral simply by modifying your application code once using the high-level TWAIN application programming interface. No customization by product is necessary. TWAIN image peripherals can include desktop scanners, hand scanners, digital cameras, frame grabbers,

image databases, or any other raster image source that complies to the TWAIN protocol and API.

- Allows you to determine the features and capabilities that an image acquisition device can provide. Your application can then restrict the Source to offer only those capabilities that are compatible with your application's needs and abilities.
- Eliminates the need for your application to provide a user interface to control the image acquisition process. There is a software user interface module shipped with every TWAIN-compliant Source device to handle that process. Of course, you may provide your own user interface for acquisition, if desired.

For the Source Developer

- Increases the use and support of your product. More applications will become image consumers as a result of the ease of implementation and breadth of device integration that TWAIN provides.
- Allows you to provide a proprietary user interface for your device. This lets you present the newest features to the user without waiting for the applications to incorporate them into their interfaces.
- Saves money by reducing your implementation costs. Rather than create and support various versions of your device control software to integrate with various applications, you create just a single TWAIN-compliant Source.

For the End User

- Gives users a simple way to incorporate images into their documents. They can access the image in fewer steps because they never need to leave your application.

Note: As of this writing TWAIN is supported on the following operating systems: all versions of Apple Macintosh, Microsoft Windows 3.x / 9x / NT / Me / XP and Windows 2000. TWAIN is not available on Windows CE. TWAIN is available on IBM OS/2, but the binaries for the Source Manager were not built or distributed by the TWAIN Working Group.

Creation of TWAIN

TWAIN was created by a small group of software and hardware companies in response to the need for a proposed specification for the imaging industry. The Working Group's goal was to provide an open, multi-platform solution to interconnect the needs of raster input devices with application software. The original Working Group was comprised of representatives from five companies: Aldus, Caere, Eastman Kodak, Hewlett-Packard, and Logitech. Three other companies, Adobe, Howtek, and Software Architects also contributed significantly.

The design of TWAIN began in January, 1991. Review of the original TWAIN Developer's Toolkit occurred from April, 1991 through January, 1992. The original Toolkit was reviewed by the TWAIN Coalition. The Coalition includes approximately 300 individuals representing 200 companies who continue to influence and guide the future direction of TWAIN.

The current version of TWAIN was written by members of the TWAIN Working Group including Adobe, Eastman Kodak Company, Fujitsu Computer Products of America, Hewlett-Packard Company, JFL Peripheral Solutions Inc., Ricoh Corporation, Xerox Corporation, and Lizardtech Corporation.

In May, 1998, an agreement was announced between Microsoft and the TWAIN Working Group which provided for the inclusion of the TWAIN Data Source Manager in Microsoft Windows 98 and Microsoft Windows NT 5.0.

During the creation of TWAIN, the following architecture objectives were adhered to:

- **Ease of Adoption** — Allow an application vendor to make their application TWAIN-compliant with a reasonable amount of development and testing effort. The basic features of TWAIN should be implemented just by making modest changes to the application. To take advantage of a more complete set of functionality and control capabilities, more development effort should be anticipated.
- **Extensibility** — The architecture must include the flexibility to embrace multiple windowing environments spanning various host platforms (Macintosh, Microsoft Windows, Motif, etc.) and facilitate the exchange of various data types between Source devices and destination applications. Currently, only the raster image data type is supported but suggestions for future extensions include text, facsimile, vector graphics, and others.
- **Integration** — Key elements of the TWAIN implementation “belong” in the operating system. The agreement between Microsoft and the TWAIN Working Group indicates that this integration into the operating system is beginning. TWAIN must be implemented to encourage backward compatibility (extensibility) and smooth migration into the operating system. An implementation that minimizes the use of platform-specific mechanisms will have enhanced longevity and adoptability.
- **Easy Application <-> Source Interconnect** — A straight-forward Source identification and selection mechanism will be supplied. The application will drive this mechanism through a simple API. This mechanism will also establish the data and control links between the application and Source. It will support capability and configuration communication and negotiation between the application and Source.
- **Encapsulated Human Interface** — A device-native user interface will be required in each Source. The application can optionally override this native user interface while still using the Source to control the physical device.

2

Technical Overview

Chapter Contents

TWAIN Architecture	2-1
TWAIN User Interface	2-3
Communication Between the Elements of TWAIN	2-5
Using Operation Triplets	2-11
The State-Based Protocol	2-13
Capabilities	2-16
Modes Available for Data Transfer	2-21

The TWAIN protocol and API are easiest to understand when you see the overall picture. This chapter provides a technical overview of TWAIN.

TWAIN Architecture

The transfer of data is made possible by three software elements that work together in TWAIN: the application, the Source Manager, and the Source.

These elements use the architecture of TWAIN to communicate. The TWAIN architecture consists of four layers:

- Application
- Protocol
- Acquisition
- Device

The TWAIN software elements occupy the layers as illustrated below. Each layer is described in the sections that follow.

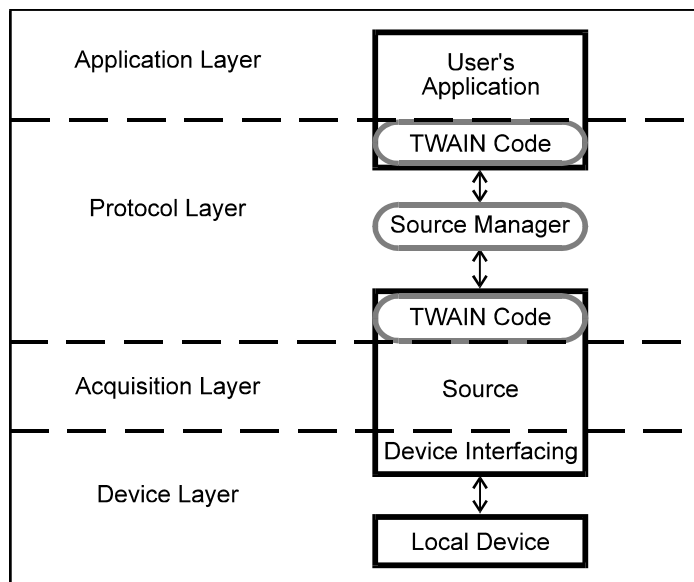


Figure 2-1 TWAIN Software Elements

Application

The user's software application executes in this layer.

TWAIN describes user interface guidelines for the application developer regarding how users access TWAIN functionality and how a particular Source is selected.

TWAIN is not concerned with how the application is implemented. TWAIN has no effect on any inter-application communication scheme that the application may use.

Protocol

The protocol is the "language" spoken and syntax used by TWAIN. It implements precise instructions and communications required for the transfer of data.

The protocol layer includes:

- The portion of application software that provides the interface between the application and TWAIN
- The TWAIN Source Manager provided by TWAIN
- The software included with the Source device to receive instructions from the Source Manager and transfer back data and Return Codes

The contents of the protocol layer are discussed in more detail in "[Communication Between the Elements of TWAIN](#)" on page 2-5".

Acquisition

Acquisition devices may be physical (like a scanner or digital camera) or logical (like an image database). The software elements written to control acquisitions are called Sources and reside primarily in this layer.

The Source transfers data for the application. It uses the format and transfer mechanism agreed upon by the Source and application.

The Source always provides a built-in user interface that controls the device(s) the Source was written to drive. An application can override this and present its own user interface for acquisition, if desired.

Device

This is the location of traditional low-level device drivers. They convert device-specific commands into hardware commands and actions specific to the particular device the driver was written to accompany. Applications that use TWAIN no longer need to ship device drivers because they are part of the Source.

TWAIN is not concerned with the device layer at all. The Source hides the device layer from the application. The Source provides the translation from TWAIN operations and interactions with the Source's user interface into the equivalent commands for the device driver that cause the device to behave as desired.

Note: The Protocol layer is the most thoroughly and rigidly defined to allow precise communications between applications and Sources. The information in this document concentrates on the Protocol and Acquisition layers.

TWAIN User Interface

When an application uses TWAIN to acquire data, the acquisition process may be visible to the application's users in the following three areas:

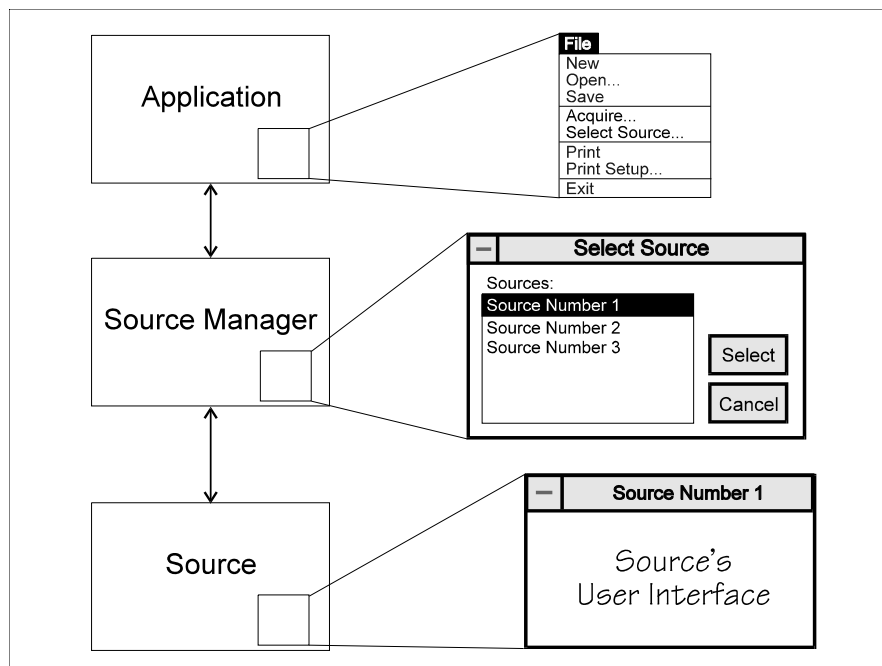


Figure 2-2 Data Acquisition Process

The Application

The user needs to select the device from which they intend to acquire the data. They also need to signal when they are ready to have the data transferred. To allow this, TWAIN strongly recommends the application developer add two options to their File menu:

- **Select Source** - to select the device
- **Acquire** - to begin the transfer process

The Source Manager

When the user chooses the Select Source option, the application requests that the Source Manager display its Select Source dialog box. This lists all available devices and allows the user to highlight and select one device. If desired, the application can write its own version of this user interface.

The Source

Every TWAIN-compliant Source provides a user interface specific to its particular device. When the application user selects the Acquire option, the **Source's User Interface** may be displayed. If desired, the application can write its own version of this interface, too.

Communication Between the Elements of TWAIN

Communication between elements of TWAIN is possible through two entry points. They are called `DSM_Entry()` and `DS_Entry()`. DSM means Data Source Manager and DS means Data Source.

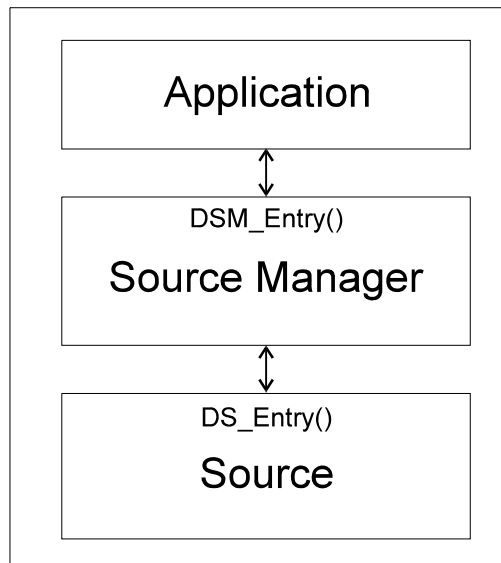


Figure 2-3 Entry Points for Communicating Between Elements

The Application

The goal of the application is to acquire data from a Source. However, applications cannot contact the Source directly. All requests for data, capability information, error information, etc. must be handled through the Source Manager.

Approximately 140 operations are defined by TWAIN. The application sends them to the Source Manager for transmission. The application specifies which element, Source Manager or Source, is the final destination for each requested operation.

The application communicates to the Source Manager through the Source Manager's only entry point, the `DSM_Entry()` function.

The parameter list of the `DSM_Entry` function contains:

- An identifier structure providing information about the application that originated the function call
- The destination of this request (Source Manager or Source)
- A triplet that describes the requested operation. The triplet specifies:
 - Data Group for the Operation (`DG_`)
 - Data Argument Type for the Operation (`DAT_`)
 - Message for the Operation (`MSG_`)

- (These are described more in the section called “The Use of Operation Triplets” located later in this chapter.)
- A pointer field to allow the transfer of data

The function call returns a value (the Return Code) indicating the success or failure of the operation.

Written in C code form, the function call looks like this:

On Windows

```
TW_UINT16 FAR PASCAL DSM_Entry
(
    pTW_IDENTITY    pOrigin,    // source of message
    pTW_IDENTITY    pDest,      // destination of message
    TW_UINT32       DG,         // data group ID: DG_xxxx
    TW_UINT16       DAT,        // data argument type: DAT_xxxx
    TW_UINT16       MSG,        // message ID: MSG_xxxx
    TW_MEMREF       pData       // pointer to data
);
```

On Macintosh

```
FAR PASCAL TW_UINT16 DSM_Entry
(
    pTW_IDENTITY    pOrigin,    // source of message
    pTW_IDENTITY    pDest,      // destination of message
    TW_UINT32       DG,         // data group ID: DG_xxxx
    TW_UINT16       DAT,        // data argument type: DAT_xxxx
    TW_UINT16       MSG,        // message ID: MSG_xxxx
    W_MEMREF        pData       // pointer to data
);
```

Note: Data type definitions are covered in [Chapter 8, "Data Types and Data Structures,"](#) and in the file called `TWAIN.H` which can be downloaded from the TWAIN Working Group web site <http://www.twain.org>.)

The Source Manager

The Source Manager provides the communication path between the application and the Source, supports the user's selection of a Source, and loads the Source for access by the application. Communications from application to Source Manager arrive in the `DSM_Entry()` entry point.

- **If the destination in the `DSM_Entry` call is the Source Manager**
The Source Manager processes the operation itself.
- **If the destination in the `DSM_Entry` call is the Source**
The Source Manager translates the parameter list of information, removes the destination parameter and calls the appropriate Source. To reach the Source, the Source Manager calls the Source's `DS_Entry()` function. TWAIN requires each Source to have this entry point.

Written in C code form, the `DS_Entry` function call looks like this:

On Windows

```
TW_UINT16 FAR PASCAL DS_Entry
    (pTW_IDENTITY    pOrigin,    // source of message
     TW_UINT32       DG,        // data group ID: DG_xxxx
     TW_UINT16       DAT,       // data argument type: DAT_xxxx
     TW_UINT16       MSG,       // message ID: MSG_xxxx
     TW_MEMREF       pData      // pointer to data
    );
```

On Macintosh

```
FAR PASCAL TW_UINT16 DS_Entry
    (pTW_IDENTITY    pOrigin,    // source of message
     TW_UINT32       DG,        // data group ID: DG_xxxx
     TW_UINT16       DAT,       // data argument type: DAT_xxxx
     TW_UINT16       MSG,       // message ID: MSG_xxxx
     TW_MEMREF       pData      // pointer to data
    );
```

In addition, the Source Manager can initiate three operations that were not originated by the application. These operation triplets exist just for Source Manager to Source communications and are executed by the Source Manager while it is displaying its Select Source dialog box. The operations are used to identify the available Sources and to open or close Sources.

The implementation of the Source Manager differs between the supported systems:

On Windows

- The Source Manager for Windows is a Dynamic Link Library (DLL).
- The Source Manager can manage simultaneous sessions between many applications with many Sources. That is, the same instance of the Source Manager is shared by multiple applications.

On Macintosh

- The Source Manager for Macintosh is a Mach-O framework (TWAIN.framework).

The Source

The Source receives operations either from the application, via the Source Manager, or directly from the Source Manager. It processes the request and returns the appropriate Return Code (the codes are prefixed with TWRC_) indicating the results of the operation to the Source Manager. If the originator of the operation was the application, then the Return Code is passed back to the application as the return value of its DSM_Entry() function call. If the operation was unsuccessful, a Condition Code (the codes are prefixed with TWCC_) containing more specific information is set by the Source. Although the Condition Code is set, it is not automatically passed back. The application must invoke an operation to inquire about the contents of the Condition Code.

The implementation of the Source is the same as the implementation of the Source Manager:

On Windows

The Source is a Dynamic Link Library (DLL) so applications share the same copy of each element.

On Macintosh

The Source is implemented as a bundle (preferably Mach-O).

Communication Flowing from Source to Application

The majority of operation requests are initiated by the application and flow to the Source Manager and Source. The Source, via the Source Manager, is able to pass back data and Return Codes.

However, there are four times when the Source needs to interrupt the application and request that an action occur. These situations are:

- **Notify the application that a data transfer is ready to occur.** The time required for a Source to prepare data for a transfer will vary. Rather than have the application wait for the preparation to be complete, the Source just notifies it when everything is ready. The MSG_XFERREADY notice is used for this purpose.
- **Request that the Source's user interface be disabled.** This notification should be sent by the Source to the application when the user clicks on the "Close" button of the Source's user interface. The MSG_CLOSEDREQ notice is used for this purpose.
- **Notify the application that the OK button has been pressed, accepting the changes the user has made.** This is only used if the Source is opened with DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLEDSUIONLY. The MSG_CLOSEDOK notice is used for this purpose.
- **A Device Event has occurred.** This notification is sent by the Source to the Application when a specific event has occurred, but only if the Application gave the Source prior instructions to pass along such events. The MSG_DEVICEEVENT notice is used for this purpose.

These notices are presented to the application in its event (or message) loop. The process used for these notifications is covered more fully in [Chapter 3, "Application Implementation,"](#) in the discussion of the application's event loop.

Identifying TWAIN 2.0 Elements

It is not sufficient to test the TW_IDENTITY.ProtocolMajor field to determine if an Application, a Data Source Manager or a Source is TWAIN 2.0 compliant. Check the TW_IDENTITY.SupportedGroups field for the Application or the Source, and look for the following:

- DF_APP2, indicating that the Application is 2.0 compliant
- DF_DSM2, indicating that the Data Source Manager is 2.0 compliant
- DF_DS2, indicating that the Data Source is 2.0 compliant

Applications

All TWAIN 2.0 compliant Applications must report `DF_APP2` in their `TW_IDENTITY.SupportedGroups` field.

All TWAIN 2.0 compliant Applications must test for the `DF_DSM2` flag in the `TW_IDENTITY.SupportedGroups` field, after a call to `DG_CONTROL / DAT_PARENT / MSG_OPENDSM`. If this flag is not found, then follow the legacy behavior for 1.x Applications, using the memory management functions detailed in the TWAIN Specification.

If the flag is found, then the Application must call `DG_CONTROL / DAT_ENTRYPOINT / MSG_GET` in State 3, before performing any other operation, to obtain pointers to the memory management functions.

Sources

All TWAIN 2.0 compliant Sources must report `DF_DS2` in their `TW_IDENTITY.SupportedGroups` field.

All TWAIN 2.0 compliant Sources must be prepared to receive the `DG_CONTROL / DAT_ENTRYPOINT / MSG_SET` call in State 3, before `DG_CONTROL / DAT_IDENTITY / MSG_OPENDS` is called. If this operation is not called, then follow the legacy behavior for 1.x Sources, using the memory management functions detailed in the TWAIN Specification, and locating the Data Source Manager as indicated.

If the operation is called then the Source must use the pointers to the memory management functions, and must use the supplied entry point to access `DSM_Entry`.

Using `DAT_CALLBACK` to Messages from the Source to the Application

Applications

TWAIN Applications running on Linux or Apple Macintosh OS X must use `DG_CONTROL / DAT_CALLBACK / MSG_REGISTERCALLBACK` to register to receive asynchronous notifications for events `MSG_XFERREADY`.

TWAIN Applications on Microsoft Windows that detect the presence of the `DF_DSM2` flag inside of `TW_IDENTITY.SupportedGroups` are encouraged to use `DAT_CALLBACK` instead of processing `TWRC_DSEVENT` from `DG_CONTROL / DAT_EVENT / MSG_PROCESSEVENT`. The legacy TWAIN 1.x behavior is still supported by the Data Source Manager.

TWAIN Applications on Microsoft Windows using older versions of the Data Source Manager (no `DF_DSM2` flag detected) must use the legacy behavior.

Please note that TWAIN Applications are advised to return as soon as possible from a callback function. Events like `MSG_XFERREADY` should initiate the image transfer in a different thread so that the callback can return immediately.

Sources

TWAIN sources running on Apple Macintosh OS X that use a Data Source Manager that does not report `DF_DSM2` in `TW_IDENTITY.SupportedGroups` must use `DG_CONTROL / DAT_CALLBACK / MSG_INVOKECALLBACK` to return events like `MSG_XFERREADY`.

All other TWAIN sources, regardless of version or operating system must use `DG_CONTROL / DAT_NULL` with the appropriate message to return events like `MSG_XFERREADY`.

Installation of the Data Source Manager

Microsoft Windows

Please refer to the TWAIN 1.9 Specification for support of versions of Microsoft Windows prior to Windows 2000.

Microsoft provides `TWAIN_32.DLL` for access to the legacy 1.x Data Source Manager on 32-bit systems and `SYSWOW64`.

`TWAIN_32.DLL` is not available for native 64-bit Applications. A native 64-bit TWAIN session must use `TWAINDSM.DLL`.

Applications that wish to use `TWAINDSM.DLL`, for access to the new open source Data Source Manager, must install it themselves. Please refer to the TWAIN website <http://www.twain.org> to obtain this file, and for installation instructions. This DSM is fully backwards compatible with all versions of TWAIN.

Apple Macintosh

Please refer to the TWAIN 1.9 Specification for support of operating systems prior to Apple Mac OS X.

Apple provides `/System/Library/Frameworks/TWAIN.framework` for access to the legacy 1.x Data Source Manager.

The TWAIN 2.0 open source Data Source Manager is not currently available on any version of Apple Mac OS X. TWAIN 2.0 compliant Application and Source writers are strongly encouraged to include and check for the `DF_APP2`, `DF_DSM2` and `DF_DS2` flags, and to handle `DAT_CALLBACK` when these flags are detected, so they are ready when the TWAIN 2.0 Data Source Manager appears.

Linux

Please check the TWAIN website <http://www.twain.org> to see if your distro is represented, and if not, please consider making a submission to the TWAIN Working Group.

Note that TWAIN 2.0 compliant Sources must support `TW_USERINTERFACE.ShowUI` being set to 0 (no UI), which in concert with `CAP_INDICATORS` set to `FALSE` is expected to prevent the Source from showing any dialog, making it suitable for use from any command shell.

Memory Management in TWAIN 2.0 and Higher

TWAIN requires Applications and Sources to manage each other's memory. The chief problem is guaranteeing agreement on the API's to use.

TWAIN 2.0 introduces four new functions that are obtained from the Source Manager through `DAT_ENTRYPOINT`.

```
TW_HANDLE PASCAL DSM_MemAllocate (TW_UINT32)
```

```
void PASCAL DSM_MemFree (TW_HANDLE)
TW_MEMREF PASCAL DSM_MemLock (TW_HANDLE)
void PASCAL DSM_MemUnlock (TW_HANDLE)
```

This applies when a 1.x Application or Source is detected.

These functions correspond to the WIN32 Global Memory functions mentioned in previous versions of the TWAIN Specification:

```
GlobalAlloc, GlobalFree, GlobalLock, GlobalUnlock
```

On MacOS/X these functions call `NewPtrClear` and `DisposePtr`. The lock and unlock functions are no-ops, but they still must be called.

TWAIN 2.0 compliant Applications and Sources must use these calls on all platforms (Windows, MacOS/X and Linux).

The Source Manager takes the responsibility to make sure that all components are using the same memory management API's.

Using Operation Triplets

The `DSM_Entry()` and `DS_Entry()` functions are used to communicate operations. An operation is an action that the application or Source Manager invokes. Typically, but not always, it involves using data or modifying data that is indicated by the last parameter (`pData`) in the function call.

Requests for actions occur in one of these ways:

From	To	Using this function
The application	The Source Manager	<code>DSM_Entry</code> with the <code>pDest</code> parameter set to <code>NULL</code>
The application	The Source (via the Source Manager)	<code>DSM_Entry</code> with the <code>pDest</code> parameter set to point to a valid structure that identifies the Source
The Source Manager	The Source	<code>DS_Entry</code>

The desired action is defined by an operation triplet passed as three parameters in the function call. Each triplet uniquely, and without ambiguity, specifies a particular action. No operation is specified by more than a single triplet. The three parameters that make up the triplet are Data Group, Data Argument Type, and Message ID. Each parameter conveys specific information.

Data Group (DG_xxxx)

Operations are divided into large categories by the Data Group identifier. There are currently only two defined in TWAIN:

- **CONTROL** (The identifier is DG_CONTROL.): These operations involve control of the TWAIN session. An example where DG_CONTROL is used as the Data Group identifier is the operation to open the Source Manager.
- **IMAGE** (The identifier is DG_IMAGE.): These operations work with image data. An example where DG_IMAGE is used as a Data Group is an operation that requests the transfer of image data.
- **AUDIO** (The identifier is DG_AUDIO): These operations work with audio data (supported by some digital cameras). An example where DG_AUDIO is used as a Data Group is an operation that requests the transfer of audio data.

Data Argument Type (DAT_xxxx)

This parameter of the triplet identifies the type of data that is being passed or operated upon. The argument type may reference a data structure or a variable. There are many data argument types. One example is DAT_IDENTITY.

The DAT_IDENTITY type is used to identify a TWAIN element such as a Source. Remember, from the earlier code example, data is typically passed or modified through the pData parameter of the DSM_Entry and DSM_Entry. In this case, the pData parameter would point to a data structure of type TW_IDENTITY. Notice that the data argument type begins with DAT_xxxx and the associated data structure begins with TW_xxxx and duplicates the second part of the name. This pattern is followed consistently for most data argument types and their data structures. Any exceptions are noted on the reference pages in [Chapter 7, "Operation Triplets"](#) and [Chapter 8, "Data Types and Data Structures."](#)

Message ID (MSG_xxxx)

This parameter identifies the action that the application or Source Manager wishes to have taken. There are many different messages such as MSG_GET or MSG_SET. They all begin with the prefix of MSG_.

Here are three examples of operation triplets:

- The triplet the application sends to the Source Manager to open the Source Manager module is:
DG_CONTROL / DAT_PARENT / MSG_OPENDSM
- The triplet that the application sends to instruct the Source Manager to display its Select Source dialog box and thus allow the user to select which Source they plan to obtain data from is:
DG_CONTROL / DAT_IDENTITY / MSG_USERSELECT
- The triplet the application sends to transfer data from the Source into a file is:
DG_IMAGE / DAT_IMAGEFILEXFER / MSG_GET

The State-Based Protocol

The application, Source Manager, and Source must communicate to manage the acquisition of data. It is logical that this process must occur in a particular sequence. For example, the application cannot successfully request the transfer of data from a Source before the Source Manager is loaded and prepared to communicate the request.

To ensure the sequence is executed correctly, the TWAIN protocol defines seven states that exist in TWAIN sessions. A session is the period while an application is connected to a particular Source via the Source Manager. The period while the application is connected to the Source Manager is another unique session. At a given point in a session, the TWAIN elements of Source Manager and Source each occupy a particular state. Transitions to a new state are caused by operations requested by the application or Source. Transitions can be in the forward or backward direction. Most transitions are single-state transitions. For example, an operation moves the Source Manager from State 1 to State 2 not from State 1 to State 3. (There are situations where a two-state transition may occur. They are discussed in [Chapter 3, "Application Implementation."](#))

When viewing the state-based protocol, it is helpful to remember:

States 1, 2, and 3

- Are occupied only by the Source Manager.
- The Source Manager never occupies a state greater than State 3.

States 4, 5, 6, and 7

- Are occupied exclusively by Sources.
- A Source never has a state less than 4 if it is open. If it is closed, it has no state.
- If an application uses multiple Sources, each connection is a separate session and each open Source "resides" in its own state without regard for what state the other Sources are in.

The State Transition Diagram looks like this:

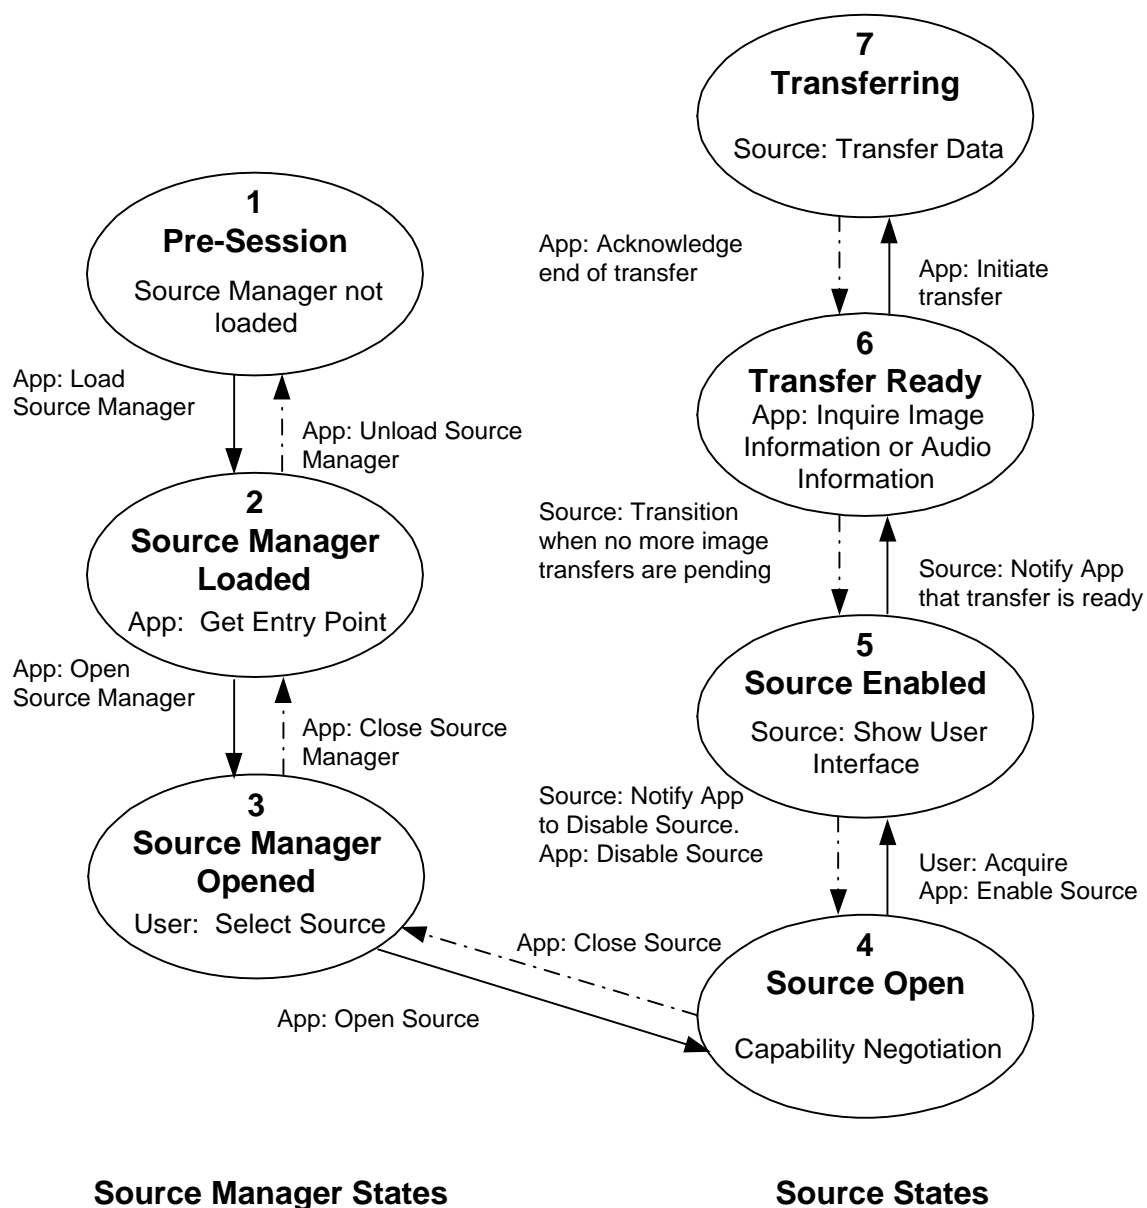


Figure 2-4 State Transition Diagram

The Description of the States

The following sections describe the states.

State 1 — Pre-Session

The Source Manager *resides* in State 1 before the application establishes a session with it. At this point, the Source Manager code has been installed on the disk but typically is not loaded into memory yet.

The only case where the Source Manager could already be loaded and running is under Windows because the implementation is a DLL (hence, the same instance of the Source

Manager can be shared by multiple applications). If that situation exists, the Source Manager will be in State 2 or 3 with the application that loaded it.

State 2 — Source Manager Loaded

The Source Manager now is loaded into memory. It is not open yet.

At this time, the Source Manager is prepared to accept other operation triplets from the application.

State 3 — Source Manager Open

The Source Manager is open and ready to manage Sources.

The Source Manager is now prepared to provide lists of Sources, to open Sources, and to close Sources.

The Source Manager will remain in State 3 for the remainder of the session until it is closed. The Source Manager refuses to be closed while the application has any Sources open.

State 4 — Source Open

The Source has been loaded and opened by the Source Manager in response to an operation from the application. It is ready to receive operations.

The Source should have verified that sufficient resources (i.e. memory, device is available, etc.) exist for it to run.

The application can inquire about the Source's capabilities (i.e. levels of resolution, support of color or black and white images, automatic document feeder available, etc.). The application can also set those capabilities to its desired settings. For example, it may restrict a Source capable of providing color images to transferring black and white only.

Note: Inquiry about a capability can occur while the Source is in States 4, 5, 6, or 7. But, an application can set a capability only in State 4 unless special permission is negotiated between the application and Source.

State 5 — Source Enabled

The Source has been enabled by an operation from the application via the Source Manager and is ready for user-enabled transfers.

If the application has allowed the Source to display its user interface, the Source will do that when it enters State 5.

State 6 — Transfer is Ready

The Source is ready to transfer one or more data items (images) to the application.

The transition from State 5 to 6 is triggered by the Source notifying the application that the transfer is ready.

Before initiating the transfer, the application must inquire information about the image (resolution, image size, etc.). If the Source supports audio, then before transferring the image, the Application must transfer all the audio snippets that are associated with the image.

It is possible for more than one image to be transferred in succession. This topic is covered thoroughly in [Chapter 4, "Advanced Application Implementation."](#)

State 7 — Transferring

The Source is transferring the image to the application.

The transfer mechanism being used was negotiated during State 4.

The transfer will either complete successfully or terminate prematurely. The Source sends the appropriate Return Code indicating the outcome.

Once the Source indicates that the transfer is complete, the application must acknowledge the end of the transfer.

A TWAIN 2.0 compliant Application tests its `TW_IDENTITY.SupportedGroups` for `DF_DSM2` after a call to `DG_CONTROL/DAT_PARENT/MSG_OPENDSM` and if found it issues a call to `DG_CONTROL / DAT_ENTRYPOINT / MSG_GET`.

A TWAIN 2.0 compliant Source is sent `DG_CONTROL / DAT_ENTRYPOINT / MSG_SET`; it tests the Application's `TW_IDENTITY.SupportedGroups` for `DF_DSM2` and `DF_APP2`.

Capabilities

One of TWAIN's benefits is it allows applications to easily interact with a variety of acquisition devices. Devices can provide image or audio data. For instance,

- Some devices have automatic document feeders.
- Some devices are not limited to one image but can transfer multiple images.
- Some devices support color images.
- Some devices offer a variety of halftone patterns.
- Some devices support a range of resolutions while others may offer different choices.
- Some devices allow the recording of audio data associated with an image.

Developers of applications need to be aware of a Source's capabilities and may influence the capabilities that the Source offers to the application's users. To do this, the application can perform **capability negotiation**. The application generally follows this process:

- **Determine** if the selected Source supports a particular capability.
- **Inquire** about the Current Value for this capability. Also, inquire about the capability's Default Value and the set of Available Values that are supported by the Source for that capability.
- **Request** that the Source set the Current Value to the application's desired value. The Current Value will be displayed as the current selection in the Source's user interface.
- **Limit**, if needed, the Source's Available Values to a subset of what would normally be offered. For instance, if the application wants only black and white data, it can restrict the Source to transmit only that. If a limitation effects the Source's user interface, the Source should modify the interface to reflect those changes. For example, it may gray out options that are not available because of the application's restrictions.
- **Verify** that the new values have been accepted by the Source.

TWAIN capabilities are divided into three groups:

- **CAP_XXXX:** Capabilities whose names begin with CAP are capabilities that could apply to any general Source. Such capabilities include use of automatic document feeders, identification of the creator of the data, etc.
- **ICAP_XXXX:** Capabilities whose names begin with ICAP are capabilities that apply to image devices. The “I” stands for image. (When TWAIN is expanded to support other data transfer such as text or fax data, there will be TCAPs and FCAPs in a similar style.)
- **ACAP_XXXX:** Capabilities whose names begin with ACAP are capabilities that apply to devices that support audio. The “A” stands for audio.

Capability Containers

Capabilities exist in many varieties but all have a Default Value, Current Value, and may have other values available that can be supported if selected. To help categorize the supported values into clear structures, TWAIN defines four types of **containers** for capabilities.

Name of the Data Structure for the Container	Type of Contents
TW_ONEVALUE	A single value whose current and default values are coincident. The range of available values for this type of capability is simply this single value. For example, a capability that indicates the presence of a document feeder could be of this type.
TW_ARRAY	A rectangular array of values that describe a logical item. It is similar to the TW_ONEVALUE because the current and default values are the same and there are no other values to select from. For example, a list of the names, such as the supported capabilities list returned by the CAP_SUPPORTEDCAPS capability, would use this type of container.
TW_RANGE	Many capabilities allow users to select their current value from a range of regularly spaced values. The capability can specify the minimum and maximum acceptable values and the incremental step size between values. For example, resolution might be supported from 100 to 600 in steps of 50 (100, 150, 200, ..., 550, 600).
TW_ENUMERATION	This is the most general type because it defines a list of values from which the Current Value can be chosen. The values do not progress uniformly through a range and there is not a consistent step size between the values. For example, if a Source’s resolution options did not occur in even step sizes then an enumeration would be used (for example, 150, 400, and 600).

In general, most capabilities can have more than one of these containers applied to them depending on how the particular Source implements the capability. The data structure for each of these containers is defined in [Chapter 8, "Data Types and Data Structures."](#) A complete table with all defined capabilities is located in [Chapter 10, "Capabilities."](#) A few of the capabilities must be supported by the application and Source. The remainder of the capabilities are optional.

Capability Negotiation and Container Types

It is very important for Application and Data Source developers to note that Container types are dictated by the Data Source in all cases where a value is queried. Also the allowable container types of each capability are clearly defined in [Chapter 10, "Capabilities,"](#) of the TWAIN Specification. The only time it is appropriate for the calling Application to specify a container type is during the MSG_SET operation. At that time, the Application must also consider the allowable containers and types for the particular capability.

Capability Containers and String Values

The only containers that can possibly hold a string are the following:

```
TW_ENUMERATION
TW_ARRAY
TW_ONEVALUE
```

It is not possible or useful to use this type in a TW_RANGE. in fact there is no case where a capability has been defined in [Chapter 10, "Capabilities,"](#) of the TWAIN Specification where a TW_RANGE is allowed for a TW_STRxxxx type of value.

There are four types of TWAIN strings defined for developer use:

```
TW_STR32
TW_STR64
TW_STR128
TW_STR256
```

As of version 1.7, only the following capabilities accept strings:

```
CAP_AUTHOR, TW_ONEVALUE, TW_STR128
CAP_CAPTION, TW_ONEVALUE, TW_STR255
CAP_TIMEDATE, TW_ONEVALUE, TW_STR32
ICAP_HALFTONES, TW_ONEVALUE/TW_ENUMERATION/TW_ARRAY, TW_STR32
```

The definition of the various container types could be confusing. For example, the definition of a TW_ONEVALUE is as follows:

```
/* TWON_ONEVALUE. Container for one value. */
typedef struct {
    TW_UINT16 ItemType;
    TW_UINT32 Item;
} TW_ONEVALUE, FAR * pTW_ONEVALUE;
```

At first glance, it is tempting to try placing the string into this container by assigning "Item" to be a pointer. This is not at all consistent with the implementation of other structures in the specification and introduces a host of problems concerning management of the memory occupied by the string. (See TW_IDENTITY for consistent TWAIN string use)

The correct and consistent method of holding a string in a TWAIN container is to ensure the string is embedded in the container itself. Either a new structure is defined within the developers code, or the added size is considered when allocating the container.

The following examples are designed to demonstrate possible methods of using TWAIN Strings in Containers. These examples are suitable for demonstration only, and require refinement to be put to real use.

Example 1:

TW_ONEVALUE structure defined for holding a TW_STR32 value

```
/* TWON_ONEVALUESTR32. Container for one value holding TW_STR32. */
typedef struct {
    TW_UINT16  ItemType;
    TW_STR32   Item;
} TW_ONEVALUESTR32, FAR * pTW_ONEVALUESTR32;
```

Note: Pay attention to two-byte structure packing when defining custom container structures.

This clearly demonstrates where the memory is allocated and where the string resides. The data source does not have to be concerned with how the string is managed locally, and the application does not have to be concerned with managing the string memory or contents.

Example 2:

TW_ONEVALUE structure allocated and filled with consideration of holding a TW_STR32 value (Windows Example)

```
HGLOBAL AllocateAndFillOneValueStr32( const pTW_STR32 pInString )
{
    DWORD dwContainerSize = 0l;
    HGLOBAL hContainer = NULL;
    pTW_ONEVALUE pOneValue = NULL;
    pTW_STR32 pString = NULL;
    assert(pInString);

    // Note: This calculation will yield a size approximately one
    // pointer larger than that required for this container
    // (sizeof(TW_UINT32)). For simplicity the size difference
    // is negligible. The first TW_STR32 item shall be located
    // immediately after the pEnum->DefaultIndex member.

    dwContainerSize = sizeof(TW_ONEVALUE) + sizeof(TW_STR32);
    hContainer = GlobalAlloc( GPTR, dwContainerSize );

    if(hContainer)
    {
        pOneValue = (pTW_ONEVALUE)GlobalLock(hContainer);
        if(pOneValue)
        {
```

```

        pOneValue->ItemType = TWTY_STR32;
        pString = (pTW_STR32)&pOneValue->Item;

        memcpy(pString, pInString, sizeof(TW_STR32));
        GlobalUnlock(hContainer);
        pOneValue = NULL;
        pString = NULL;
    }
}

return hContainer;
}

```

Example 3:

TW_ENUMERATION structure allocated with consideration of holding TW_STR32 values (Windows Example)

```

HGLOBAL AllocateEnumerationStr32( TW_UINT32 unNumItems )
{
    DWORD dwContainerSize = 0l;
    HGLOBAL hContainer = NULL;
    pTW_ENUMERATION pEnum = NULL;

    // Note: This calculation will yield a size approximately
    // one pointer larger than that required for this container
    // (sizeof(pTW_UINT8)). For simplicity the size difference is
    // negligible. The first TW_STR32 item shall be located
    // immediately after the pEnum->DefaultIndex member.
    dwContainerSize = sizeof(TW_ENUMERATION) + ( sizeof(TW_STR32) *
    unNumItems);
    hContainer = GlobalAlloc( GPTR, dwContainerSize );

    if(hContainer)
    {
        pEnum = (pTW_ENUMERATION) GlobalLock(hContainer);
        if(pEnum)
        {
            pEnum->ItemType = TWTY_STR32;
            pEnum->NumItems = unNumItems;
            GlobalUnlock(hContainer);
            pEnum = NULL;
        }
    }
    return hContainer;
}

```

Example 4

Indexing a string from an Enumeration Container

```

pTW_STR128 IndexStr128FromEnumeration( pTW_ENUMERATION pEnum, TW_UINT32
unIndex)

```

```

{
    BYTE *pBegin = (BYTE *)&pEnum->ItemList[0];
    assert(pEnum->NumItems > unIndex);
    assert(pEnum->ItemType == TWTY_STR128);
    pBegin += (unIndex * sizeof(TW_STR128));
    return (pTW_STR128)pBegin;
}

```

Modes Available for Data Transfer

There are three different modes that can be used to transfer data from the Source to the application: native, disk file, and buffered memory.

Note: At this time, TWAIN support for audio only allows native and disk file transfers.)

Native

Every Source must support this transfer mode. It is the default mode and is the easiest for an application to implement. However, it is restrictive (i.e. limited to the DIB or PICT formats and limited by available memory).

The format of the data is platform-specific:

- Windows: DIB (Device-Independent Bitmap)
- Macintosh: A handle to a Picture

The Source allocates a single block of memory and writes the image data into the block. It passes a pointer to the application indicating the memory location. The application is responsible for freeing the memory after the transfer.

Disk File

A Source is not required to support this transfer mode but it is recommended.

The application creates the file to be used in the transfer and ensures that it is accessible by the Source for reading and writing.

A capability exists that allows the application to determine which file formats the Source supports. The application can then specify the file format and file name to be used in the transfer.

The disk file mode is ideal when transferring large images that might encounter memory limitations with Native mode. Disk File mode is simpler to implement than the buffered mode discussed next. However, Disk File mode is a bit slower than Buffered Memory mode and the application must be able to manage the file after creation.

Buffered Memory

Every Source must support this transfer mode.

The transfer occurs through memory using one or more buffers. Memory for the buffers are allocated and deallocated by the application.

The data is transferred as an unformatted bitmap. The application must use information available during the transfer (TW_IMAGEINFO and TW_IMAGEMEMXFER) to learn about each individual buffer and be able to correctly interpret the bitmap.

If using the Native or Disk File transfer modes, the transfer is completed in one action. With the Buffered Memory mode, the application may need to loop repeatedly to obtain more than one buffer of data.

Buffered Memory transfer offers the greatest flexibility, both in data capture and control. However, it is the least simple to implement.

3

Application Implementation

Chapter Contents

Levels of TWAIN Implementation	3-1
Installation of the Source Manager Software.....	3-2
Changes Needed to Prepare for a TWAIN Session	3-5
Controlling a TWAIN Session from Your Application	3-15
Error Handling.....	3-39
Requirements for an Application to be TWAIN-Compliant.....	3-41

This chapter provides the basic information needed to implement TWAIN at a minimum level.

Mac OS X includes two high-level native development environments that you can use for your application's graphical user interface: Carbon, and Cocoa. These environments are full-featured development environments in their own right, and you can write TWAIN applications and TWAIN Data Sources in any one of these environments.

Because both Carbon and Cocoa change the event handling mechanism (no `WaitNextEvent` loops), these paragraphs update and extend the section of the previous specification that describes how to modify the application event loop to support TWAIN.

Carbon and Cocoa-based Mac OS X TWAIN applications are required to supply an event handler callback function that the TWAIN DSM will call. Carbon applications using the Classic Event Manager (`WaitNextEvent`) should continue to route all events through the Data Source of the Specification. However, Data Sources on Mac OS X can no longer use the Classic Event Manager.

Advanced topics are discussed in [Chapter 4, "Advanced Application Implementation."](#) They include how to take advantage of Sources that offer automatic feeding of multiple images.

Levels of TWAIN Implementation

Application developers can choose to implement TWAIN features in their application along a range of levels.

- **At the minimum level:** The application does not have to take advantage of capability negotiation or transfer mode selection. Using TWAIN defaults, it can just acquire a single image in the Native mode.
- **At a greater level:** The application can negotiate with the Source for desired capabilities or image characteristics and specify the transfer arrangement. This gives the application more control over the type of image it receives. To do this, developers should follow the instructions provided in this chapter and use information from [Chapter 4, "Advanced Application Implementation,"](#) as well.
- **At the highest level:** An application may choose to negotiate capabilities, select transfer mode, and create/present its own user interfaces instead of using the built-in ones provided with the Source Manager and Source. Again, refer to this chapter and [Chapter 4, "Advanced Application Implementation."](#)

Installation of the Source Manager Software

The TWAIN Source Manager for Microsoft Windows consists of four binaries that are owned by the TWAIN Working Group (TWG). These binaries are built and distributed by the TWG for Windows 3.x / 9x / NT, and built and distributed by Microsoft (as protected system files) for all versions of Windows 2000. These files are as follows:

TWAIN_32.DLL	The 32-bit Source Manager. This is the DLL that 32-bit applications must use to communicate with TWAIN.
TWAIN.DLL	The 16-bit Source Manager. This is the DLL that 16-bit applications must use to communicate with TWAIN.
TWUNK_32.EXE	This program works invisibly under the hood to allow 16-bit applications to communicate with 32-bit Sources.
TWUNK_16.EXE	This program works invisibly under the hood to allow 32-bit applications to communicate with 16-bit Sources. Note that 16-bit Sources will not run correctly on Windows NT systems.

For a TWAIN-compliant application or Source to work properly, a Source Manager **must** be installed on the host system. To guarantee that a Source Manager is available, ship a copy of the latest Source Manager on your product's distribution disk and provide the user with an installer or installation instructions as suggested below. To ensure that the most recent version of the Source Manager is available to you and your user on their computer, you must do the following:

1. Look for a Source Manager:

On Windows systems:

Look for the file names TWAIN.DLL, TWAIN_32.DLL, TWUNK_16.EXE, and TWUNK_32.EXE in the Windows directory (this is typically C:\Windows on Windows 3.1/95/98, and C:\Winnt on Windows NT).

On Macintosh systems:

There's no need to install anything on Mac OS X version 10.2 and later. The system will always have the latest TWAIN.framework. For version 10.1.5 the source manager is supported only and you will need to install it separately.

2. If no Source Manager is currently installed, install the Source Manager sent out with your application.
3. If a Source Manager already exists, check the version of the installed Source Manager. If the version provided with your application is more recent, rename the existing one as follows and install the Source Manager you shipped. To rename the existing Source Manager:

On Windows systems:

Rename the four files to be TWAIN.BAK, TWAIN_32.BAK, TWUNK_16.BAK, and TWUNK_32.BAK.

On Macintosh systems:

Move the Source Manager to the Extensions (Disabled) folder.

How to Install the Source Manager on Microsoft Windows Systems

To allow the comparison of Source Manager versions, the Microsoft Windows Source Manager DLL has version information built into it which conforms to the Microsoft File Version Stamping specification. Application developers are strongly encouraged to take advantage of this in their installation programs. Microsoft provides the File Version Stamping Library, VER.DLL, which should be used to install the Source Manager.

VER.DLL, VER.LIB and VER.H are included in this Toolkit; VER.DLL may be freely copied and distributed with your installation program. Of course, your installation program will have to link to this DLL to use it. Documentation on the File Version Stamping Library API can be found on the Microsoft Windows SDK.

The following code fragment demonstrates how the VerInstallFile() function provided in VER.DLL can be used to install the Source Manager into the user's Windows directory.

The following example assumes that your installation floppy disk is in the A: drive and the Source Manager is in the root of the installation disk.

```
#include "windows.h"
#include "ver.h"
#include "stdio.h"

// Max file name length is based on 8 dot 3 file name convention.
#define MAXFNAMELEN 12

// Max path name length is based on GetWindowsDirectory()
// documentation.
#define MAXPATHLEN 144

VOID InstallWinSM ( VOID )
{
    DWORD   dwInstallResult;
    WORD     wTmpFileLen = MAXPATHLEN;
    WORD     wLen;
    char     szSrcDir[MAXPATHLEN];
    char     szDstDir[MAXPATHLEN];
```

```

char    szCurDir[MAXPATHLEN];
char    szTmpFile[MAXPATHLEN];
wLen = GetWindowsDirectory( szDstDir, MAXPATHLEN );
if ( !wLen || wLen>MAXPATHLEN )
{
    return;    // failure getting Windows dir
}
strcpy( szCurDir, szDstDir );
strcpy( szSrcDir, "a:\\\" );
dwInstallResult = VerInstallFile( VIFF_DONTDELETEOLD,
                                   "TWAIN_32.DLL",
                                   "TWAIN_32.DLL",
                                   szSrcDir,
                                   szDstDir,
                                   szCurDir,
                                   szTmpFile,
                                   &wTmpFileLen );

// If VerInstallFile() left a temporary copy of the new
// file in DstDir be sure to delete it. This happens
// when a more recent version is already installed.
if ( dwInstallResult & VIF_TEMPFILE    &&
      ((wTmpFileLen - MAXPATHLEN) > MAXFNAMELEN) )
{
    // when dst path is root it already ends in '\\'
    if (szDstDir[wLen-1] != '\\')
    {
        strcat( szDstDir, "\\\" );
    }
    strcat( szDstDir, szTmpFile );
    remove( szDstDir );
}
}

```

You should enhance the above code so that it handles the other three files (TWAIN.DLL, TWUNK_16.EXE, and TWUNK_32.EXE), as well as fixing it to handle low memory and other error conditions, as indicated by the dwInstallResult return code. Also note that the above code does not leave a backup copy of the user's prior Source Manager on their disk, but you should do this. Copy the older versions to TWAIN.BAK, TWAIN_32.BAK, TWUNK_16.BAK, and TWUNK_32.BAK.

How to Install the Source Manager on Macintosh Systems

For Mac OS X version 10.2 and later, the Source Manager is installed automatically with the OS and developers should not install or modify `TWAIN.framework`. For Mac OS X version 10.1.5, developers will need to follow these instructions to install the Source Manager.

The file `TWAIN Source Manager` should be installed in the `Extensions` folder of the active System Folder, if the version being installed is newer than the existing version, or there is no previous version of this file.

The folder `TWAIN Data Sources` should be created in the `Extensions` folder if it does not exist.

If you are a scanner vendor, install your scanner data sources into the `Extensions:TWAIN Data Sources:` folder you created.

The file `Source Manager` should be installed in the `Preferences:TWAIN:` folder if it does not exist, or if its version number is higher than the existing file.

The last step is very important. The file you are installing is the 68k shim file that routes calls made by older applications to the new DSM. Without this file, older applications will not be able to use the TWAIN DSM properly.

Changes Needed to Prepare for a TWAIN Session

There are three areas of the application that must be changed before a TWAIN session can even begin. The application developer must:

- Alter the application's user interface to add **Select Source** and **Acquire** menu choices.
- Include the file called `TWAIN.H` in your application.
- Alter the application's event loop.

Alter the Application's User Interface to Add Select Source and Acquire Options

As mentioned in the [Chapter 2, "Technical Overview,"](#) the application should include two menu items in its File menu: **Select Source...** and **Acquire...**. It is strongly recommended that you use these phrases since this consistency will benefit all users.

Windows	Macintosh																				
<table><tr><th>File</th></tr><tr><td>New</td></tr><tr><td>Open...</td></tr><tr><td>Save</td></tr><tr><td>Acquire...</td></tr><tr><td>Select Source...</td></tr><tr><td>Print</td></tr><tr><td>Print Setup...</td></tr><tr><td>Exit</td></tr></table>	File	New	Open...	Save	Acquire...	Select Source...	Print	Print Setup...	Exit	<table><tr><th>File</th></tr><tr><td>New...</td></tr><tr><td>Open...</td></tr><tr><td>Close</td></tr><tr><td>Save</td></tr><tr><td>Save As...</td></tr><tr><td>Acquire...</td></tr><tr><td>Select Source...</td></tr><tr><td>Page Setup...</td></tr><tr><td>Print...</td></tr><tr><td>Quit</td></tr></table>	File	New...	Open...	Close	Save	Save As...	Acquire...	Select Source...	Page Setup...	Print...	Quit
File																					
New																					
Open...																					
Save																					
Acquire...																					
Select Source...																					
Print																					
Print Setup...																					
Exit																					
File																					
New...																					
Open...																					
Close																					
Save																					
Save As...																					
Acquire...																					
Select Source...																					
Page Setup...																					
Print...																					
Quit																					

Figure 3-1 User Interface for Selecting a Source and Acquiring Options

Note the following:

When this is selected:	The application does this:
Select Source...	The application requests that the Source Manager's Select Source Dialog Box appear (or it may display its own version). After the user selects the Source they want to use, control returns to the application.
Acquire...	The application requests that the Source display its user interface. (Again, the application can create its own version of a user interface or display no user interface.)

Detailed information on the operations used by the application to successfully acquire data is provided later in this chapter in [“Controlling a TWAIN Session from Your Application” on page 3-15](#).

Include the TWAIN.H File in Your Application

The `TWAIN.H` file that is shipped with this TWAIN Developer's Toolkit contains all of the critical definitions needed for writing a TWAIN-compliant application or Source. Be sure to include it in your application's code and print out a copy to refer to while reading this chapter.

The `TWAIN.H` file contains:

Category	Prefix for each item
Data Groups	DG_
Data Argument Types	DAT_
Messages	MSG_
Capabilities	CAP_, ICAP_, or ACAP_
Return Codes	TWRC_
Condition Codes	TWCC_
Type Definitions	TW_
Structure Definitions	TW_
Entry points	These are DSM_Entry and DS_Entry

In addition, there are many constants defined in `TWAIN.H` which are not listed here.

Alter the Application's Event Loop

Events include activities such as key clicks, mouse events, periodic events, accelerators, etc. Every TWAIN-compliant application on Windows needs an event loop. (On Windows, these actions are called messages but that can be confusing because TWAIN uses the term messages to describe the third parameter of an operation triplet. Therefore, we will refer to these key clicks, etc. as events in this section generically.) During a TWAIN session, the application opens one or more Sources. However, even if several Sources are open, the application should only have one Source enabled at any given time. That is the Source from which the user is attempting to acquire data.

Altering the event loop serves three purposes:

- Passing events from the application to the Source so it can respond to them
- Notifying the application when the Source is ready to transfer data or have its user interface disabled
- Notifying the application when a device event occurs.

Event Loop Modification - Events in State 4

Please note that with TWAIN 1.8 and the addition of the DG_CONTROL / DAT_NULL / MSG_DEVICEEVENT message, it is possible to receive events after the Source has been opened but before it has been enabled (State 4). However, these events will not be sent from the Source to the Application unless the Application has negotiated for specific events using CAP_DEVICEEVENTS. Events posted in this way must use the hWnd passed to them by the DG_CONTROL / DAT_PARENT / MSG_OPENDS message. Sources are required to have all device events turned off when they are opened to support backward compatibility with older TWAIN applications.

Event Loop Modification - Passing events (The first purpose)

While a Source is enabled, all events are sent to the application's event loop. Some of the events may belong to the application but others belong to the enabled Source. To ensure that the Source receives and processes its events, the following changes are required:

The application **must** send all events that it receives in its event loop to the Source as long as the Source is enabled. The application uses:

DG_CONTROL / DAT_EVENT / MSG_PROCESSEVENT

The TW_EVENT data structure used looks like this:

```
typedef struct {
    TW_MEMREF    pEvent;      /* Windows pMSG */
    TW_UINT16    TWMessage; /* TW message from Source to */
                                /* the application */
} TW_EVENT, FAR *pTW_EVENT;
```

The pEvent field points to the message structure.

The Source receives the event from the Source Manager and determines if the event belongs to it.

- **If it does**, the Source processes the event. It then sets the Return Code to TWRC_DSEVENT to indicate it was a Source event. In addition, it should set the TWMessage field of the TW_EVENT structure to MSG_NULL.
- **If it does not**, the Source sets the Return Code to TWRC_NOTDSEVENT meaning it is not a Source event. In addition, it should set the TWMessage field of the TW_EVENT structure to MSG_NULL. The application receives this information from DSM_Entry and should process the event in its event loop as normal.

Event Loop Modification - Notifications from Source to application (The second and third purpose)

When the Source has data ready for a data transfer or it wishes to request that its user interface be disabled, it needs to communicate this information to the application asynchronously.

These notifications appear in the application's event loop. They are contained in the `TW_EVENT.TWMessage` field. The four notices of interest are:

- `MSG_XFERREADY` to indicate data is ready for transfer
- `MSG_CLOSEDREQ` to request that the Source's user interface be disabled
- `MSG_CLOSEDOK` to request that the Source's user interface be disabled (special case for use with `DG_CONTROL` / `DAT_USERINTERFACE` / `MSG_ENABLEDSUIONLY`).
- `MSG_DEVICEEVENT` to report that a device event has occurred.

Therefore, the application's event loop must always check the `TW_EVENT.TWMessage` field following a `DG_CONTROL` / `DAT_EVENT` / `MSG_PROCESSEVENT` call to determine if it is the simple `MSG_NULL` or critical `MSG_XFERREADY` or `MSG_CLOSEDREQ`. Information about how the application should respond to these two special notices is detailed later in this chapter in the ["Controlling a TWAIN Session from Your Application" on page 3-15.](#)

How to Modify the Event Loop for Microsoft Windows

This section illustrates typical modifications needed in an Microsoft Windows application to support TWAIN-connected Sources.

```
TW_EVENT twEvent;
TW_INT16 rc;
while (GetMessage ( (LPMSG) &msg, NULL, 0, 0 ) ) {
    rc = TWRC_NOTDSEVENT;
    if Source is enabled {
        twEvent.pEvent = (TW_MEMREF)&msg;
        twEvent.TWMessage = MSG_NULL;
        rc = (*pDSM_Entry) (pAppId,
                           pSourceId,
                           DG_CONTROL,
                           DAT_EVENT,
                           MSG_PROCESSEVENT,
                           (TW_MEMREF)&twEvent);
        // check for message from Source
        switch (twEvent.TWMessage) {
            case MSG_XFERREADY:
                SetupAndTransferImage(NULL);
                break;
            case MSG_CLOSEDREQ:
                DisableAndCloseSource(NULL);
                break;
            case MSG_CLOSEDOK:
                DisableAndCloseSource(NULL);
        }
    }
}
```



```

        GetCustomDsData();
        break;
    case MSG_NULL:
        // no message returned from the source
        break;
    }
}
// Source didn't process it, so we will
if (rc == TWRC_NOTDSEVENT) {
    TranslateMessage( (LPMSG) &msg);
    DispatchMessage( (LPMSG) &msg);
}
}

```

Note: Source writers are advised to keep stack space usage to a minimum. Application writers should also be aware that, in the Windows environment, sources run in their calling application's data space. They depend upon the application to reserve enough stack space for the source to be able to perform its various functions. For this reason, applications should define enough stack space in their linker DEF files for the sources that they might use.

Two new TWAIN triplets exist to support the new event handling mechanism:

- DG_CONTROL / DAT_CALLBACK / MSG_REGISTER_CALLBACK
- DG_CONTROL / DAT_CALLBACK / MSG_INVOKE_CALLBACK

A Cocoa or Carbon Event Manager application will register the callback after opening the DS using the DG_CONTROL/ DAT_CALLBACK/ MSG_REGISTER_CALLBACK triplet, and a Carbon DS will invoke the callback using the DG_CONTROL/ DAT_CALLBACK/ MSG_INVOKE_CALLBACK triplet.

The callback function should look like this:

```

TW_UINT16 TWAIN_callback(pTW_IDENTITY pOrigin,
    pTW_IDENTITY pDest,
    TW_UINT32 DG,
    TW_UINT16 DAT,
    TW_UINT16 MSG,
    TW_MEMREF pData)
{
    // process message the same as if it was received through
    // the event loop
    return TWRC_SUCCESS; // or failure etc
}

```

An application would register the callback function with this code:

```

TW_CALLBACK callback = { 0 };
callback.CallBackProc = TWAIN_callback;
Result = DSM_Entry(&appIdentity, NULL,
    DG_CONTROL, DAT_CALLBACK, MSG_REGISTER_CALLBACK,

```

```

        (TW_MEMREF)&callback);
The DS would invoke the callback thus:
TW_CALLBACK callback = { 0 };
callback.Message = MSG_XFERREADY;
Result = DSM_Entry(&appIdentity, NULL,
        DG_CONTROL, DAT_CALLBACK, MSG_INVOKE_CALLBACK,
        (TW_MEMREF)&callback);
DSM_Entry Call and Available Operation Triplets

```

As described in the [Chapter 2, "Technical Overview,"](#) all actions that the application invokes on the Source Manager or Source are routed through the Source Manager. The application passes the request for the action to the Source Manager via the DSM_Entry function call which contains an operation triplet describing the requested action. In code form, the DSM_Entry function looks like this:

On Windows:

```

TW_UINT16 FAR PASCAL DSM_Entry
( pTW_IDENTITY  pOrigin,      // source of message
  pTW_IDENTITY  pDest,        // destination of message
  TW_UINT32     DG,           // data group ID: DG_xxxx
  TW_UINT16     DAT,          // data argument type: DAT_xxxx
  TW_UINT16     MSG,          // message ID: MSG_xxxx
  TW_MEMREF     pData         // pointer to data
);

```

On Macintosh:

```

FAR PASCAL TW_UINT16 DSM_Entry
( pTW_IDENTITY  pOrigin,      // source of message
  pTW_IDENTITY  pDest,        // destination of message
  TW_UINT32     DG,           // data group ID: DG_xxxx
  TW_UINT16     DAT,          // data argument type: DAT_xxxx
  TW_UINT16     MSG,          // message ID: MSG_xxxx
  TW_MEMREF     pData         // pointer to data
);

```

The DG, DAT, and MSG parameters contain the operation triplet. The parameters must follow these rules:

pOrigin

References the application's TW_IDENTITY structure. The contents of this structure must not be changed by the application from the time the connection is made with the Source Manager until it is closed.

pDest

Set to NULL if the operation's final destination is the Source Manager.

Otherwise, set to point to a valid TW_IDENTITY structure for an open Source.

DG_xxxx

Data Group of the operation. Currently, only DG_CONTROL, DG_IMAGE, and DG_AUDIO are defined. Custom Data Groups can be defined.

DAT_xxxx

Designator that uniquely identifies the type of data *object* (structure or variable) referenced by pData.

MSG_xxxx

Message specifies the action to be taken.

pData

Refers to the TW_xxxx structure or variable that will be used during the operation. Its type is specified by the DAT_xxxx. This parameter should always be typecast to TW_MEMREF when it is being referenced.

Operation Triplets - Application to Source Manager

There are nine operation triplets that can be sent from the application to be consumed by the Source Manager. They all use the DG_CONTROL data group and they use three different data argument types: DAT_IDENTITY, DAT_PARENT, and DAT_STATUS. The following table lists the data group, data argument type, and messages that make up each operation. The list is in alphabetical order not the order in which they are typically called by an application. Details about each operation are available in reference format in [Chapter 7, "Operation Triplets."](#)

Control Operations from Application to Source Manager

DG_CONTROL / DAT_IDENTITY

MSG_CLOSEDSD :	Prepare specified Source for unloading
MSG_GETDEFAULT :	Get identity information of the default Source
MSG_GETFIRST :	Get identity information of the first available Source
MSG_GETNEXT :	Get identity of the next available Source
MSG_OPENDSD :	Load and initialize the specified Source
MSG_USERSELECT :	Present "Select Source" dialog

DG_CONTROL / DAT_PARENT

MSG_CLOSEDMSM :	Prepare Source Manager for unloading
MSG_OPENDMSM :	Initialize the Source Manager

DG_CONTROL / DAT_STATUS

MSG_GET :	Return Source Manager's current Condition Code
-----------	--

Operation Triplets - Application to Source

The next group of operations are sent to a specific Source by the application. These operations are still passed via the Source Manager using the DSM_Entry call. The first set of triplets use the DG_CONTROL identification for their data group. These are operations that could be performed on any kind of TWAIN device. The second set of triplets use the DG_IMAGE identification for their data group which indicates these operations are specific to image data. Details about each operation are available in reference format in [Chapter 7, "Operation Triplets"](#).

Control Operations from Application to Source

DG_CONTROL / DAT_CAPABILITY

MSG_GET	Return a Capability's valid value(s) including current and default values
MSG_GETCURRENT	Get a Capability's current value
MSG_GETDEFAULT	Get a Capability's preferred default value (Source specific)
MSG_RESET	Change a Capability's current value to its TWAIN-defined default (See Chapter 10, "Capabilities.")
MSG_SET	Change a Capability's current and/or available value(s)

DG_CONTROL / DAT_DEVICEEVENT

MSG_GET:	Get an event from the Source (issue this call only in response to a DG_CONTROL / DAT_NULL / MSG_DEVICEEVENT from the Source)
----------	--

DG_CONTROL / DAT_EVENT

MSG_PROCESSEVENT	Pass an event to the Source from the application
------------------	--

DG_CONTROL / DAT_FILESYSTEM

MSG_AUTOMATICCAPTUREDDIRECTORY	Select directory to receive automatically captured images
MSG_CHANGEDIRECTORY	Change the current domain, host, directory, or device.
MSG_COPY	Copy files
MSG_CREATEDIRECTORY	Create a directory
MSG_DELETE	Delete a file or directory
MSG_FORMATMEDIA	Format a storage device
MSG_GETCLOSE	Close a context created by a call to MSG_GETFILEFIRST
MSG_GETFIRSTFILE	Get the first file in a directory
MSG_GETINFO	Get information about the current file context
MSG_RENAME	Rename a file

DG_CONTROL / DAT_PASSTHRU / MSG_PASSTHRU

MSG_PASSTHRU	Special command for the use by Source vendors when writing diagnostic Applications
--------------	--

DG_CONTROL / DAT_PENDINGXFERS

MSG_ENDXFER	Application acknowledges or requests the end of data transfer
MSG_GET	Return the number of transfers the Source is ready to supply
MSG_RESET	Set the number of pending transfers to zero
MSG_STOPFEEDER	Stop ADF without ending session

DG_CONTROL / DAT_SETUPFILEXFER

MSG_GET	Return info about the file that the Source will write the acquired data into
MSG_GETDEFAULT	Return the default file transfer information
MSG_RESET	Reset current file information to default values
MSG_SET	Set file transfer information for next file transfer

DG_CONTROL / DAT_SETUPMEMXFER

MSG_GET	Return Source's preferred, minimum, and maximum transfer buffer sizes
---------	---

DG_CONTROL / DAT_STATUS

MSG_GET	Return the current Condition Code from specified Source
---------	---

DG_CONTROL / DAT_USERINTERFACE

MSG_DISABLED	Cause Source's user interface to be taken down
MSG_ENABLED	Cause Source to prepare to display its user interface

DG_CONTROL / DAT_XFERGROUP

MSG_GET	Return the Data Group (currently DG_IMAGE or a custom data group) for the upcoming transfer
---------	---

There are five more DG_CONTROL operations for communications between the Source Manager and the Source. They are discussed in [Chapter 5, "Source Implementation."](#)

Image Operations from Application to Source

DG_IMAGE / DAT_CIECOLOR

MSG_GET	Return the CIE XYZ information for the current transfer
---------	---

DG_IMAGE / DAT_GRAYRESPONSE

MSG_RESET	Reinstate identity response curve for grayscale data
MSG_SET	Source uses specified response curve on grayscale data

DG_IMAGE / DAT_IMAGEFILEXFER

MSG_GET	Initiate image acquisition using the Disk File transfer mode
---------	--

DG_IMAGE / DAT_IMAGEINFO

MSG_GET	Return information that describes the image for the next transfer
---------	---

DG_IMAGE / DAT_IMAGELAYOUT

MSG_GET	Describe physical layout / position of "original" image
MSG_GETDEFAULT	Default information on the layout of the image
MSG_RESET	Set layout information for the next transfer to defaults
MSG_SET	Set layout for the next image transfer

DG_IMAGE / DAT_IMAGEMEMXFER

MSG_GET Initiate image acquisition using the Buffered Memory transfer mode

DG_IMAGE / DAT_IMAGEMEMFILEXFER

MSG_GET Initiate image acquisition using the Buffered Memory transfer mode, but transferring the same data one would save to a file

DG_IMAGE / DAT_IMAGENATIVEXFER

MSG_GET Initiate image acquisition using the Native transfer mode

DG_IMAGE / DAT_JPEGCOMPRESSION

MSG_GET Return JPEG compression parameters for current transfer

MSG_GETDEFAULT Return default JPEG compression parameters

MSG_RESET Use Source's default JPEG parameters on JPEG transfers

MSG_SET Use specified JPEG parameters on JPEG transfers

DG_IMAGE / DAT_PALETTE8

MSG_GET Return palette information for current transfer

MSG_GETDEFAULT Return Source's default palette information for current pixel type

MSG_RESET Use Source's default palette for transfer of this pixel type

MSG_SET Use specified palette for transfers of this pixel type

DG_IMAGE / DAT_RGBRESPONSE

MSG_RESET Use Source's default (identity) RGB response curve

MSG_SET Use specified response curve for RGB transfers

DG_AUDIO / DAT_AUDIOFILEXFER

MSG_GET Transfers audio data in file mode

DG_AUDIO / DAT_AUDIOINFO

MSG_GET Gets information about the current transfer

DG_AUDIO / DAT_AUDIONATIVEXFER

MSG_GET Transfers audio data in native mode

DSM_Entry Parameters

The parameters for the DG_XXXX, DAT_XXXX, and MSG_XXXX fields are determined by the operation triplet. The other parameters are filled as follows:

- pOrigin
Refers to a copy of the application's TW_IDENTITY structure.
- pDest

If the operation's destination is the Source Manager: Always holds a value of NULL. This indicates to the Source Manager that the operation is to be consumed by it not passed on to a Source.

If the operation's destination is a Source: This parameter references a copy of the Source's TW_IDENTITY structure that is maintained by the application. The application received this structure in response to the DG_CONTROL / DAT_IDENTITY / MSG_OPENDS operation sent from the application to the Source Manager. This is discussed more in the next section ("[Controlling a TWAIN Session from Your Application](#)" - State 3 to 4).

- **pData**

Always references a structure or variable corresponding to the TWAIN type specified by the DAT_xxxx parameter. Typically, but not always, the data argument type name corresponds to a TW_xxxx data structure name. For example, the DAT_IDENTITY argument type uses the corresponding TW_IDENTITY data structure. All data structures can be seen in the file called TWAIN.H. The application is responsible for allocating and deallocating the structure or element and assuring that pData correctly references it.

Note that there are two cases when the Source, rather than the application, allocates a structure that is used during an operation.

- One occurs during DG_CONTROL / DAT_CAPABILITY / MSG_GET, MSG_GETCURRENT, MSG_GETDEFAULT, and MSG_RESET operations. The application still allocates *pData but the Source allocates a structure referenced by *pData called a "container structure".
- The other occurs during the DG_IMAGE / DAT_JPEGCOMPRESSION operations. The topic of data compression is covered in [Chapter 4, "Advanced Application Implementation."](#)

In all cases, the application still deallocates all structures.

Controlling a TWAIN Session from Your Application

In addition to the preparations discussed at the beginning of this chapter, the application must be modified to actually initiate and control a TWAIN session.

The session consists of the seven states of the TWAIN protocol as introduced in the Technical Overview. However, the application is not forced to move the session from State 1 to State 7 without stopping. For example, some applications may choose to pause in State 3 and move among the higher states (4 - 7) to repeatedly open and close Sources when acquisitions are requested by the user. Another example of session flexibility occurs when an application transfers multiple images during a session. The application will repeatedly move the session from State 6 to State 7 then back to State 6 and forward to State 7 again to transfer the next image.

For the sake of simplicity, this chapter illustrates moving the session from State 1 to State 7 and then backing it out all the way from State 7 to State 1. The diagram on the next page shows the operation triplets that are used to transition the session from one state to the next. Detailed information about each state and its associated transitions follow. The topics include:

- [State 1 to 2 - Load the Source Manager and Get the DSM_Entry](#)
- [State 2 to 3 - Open the Source Manager](#)

- State 3 - Select the Source
- State 3 to 4 - Open the Source
- State 4 - Negotiate Capabilities with the Source
- State 4 to 5 - Request the Acquisition of Data from the Source
- State 5 to 6 - Recognize that the Data Transfer is Ready
- State 6 to 7 - Start and Perform the Transfer
- State 7 to 6 to 5 - Conclude the Transfer
- State 5 to 1 - Disconnect the TWAIN Session

Note: Sources and Applications that support the DAT_FILESYSTEM operation may negotiate and select different device contexts immediately after the opening of a Source. For example, an Application may choose to browse through the stored images on a digital camera, rather than treat it as a real-time capture device.

TWAIN States

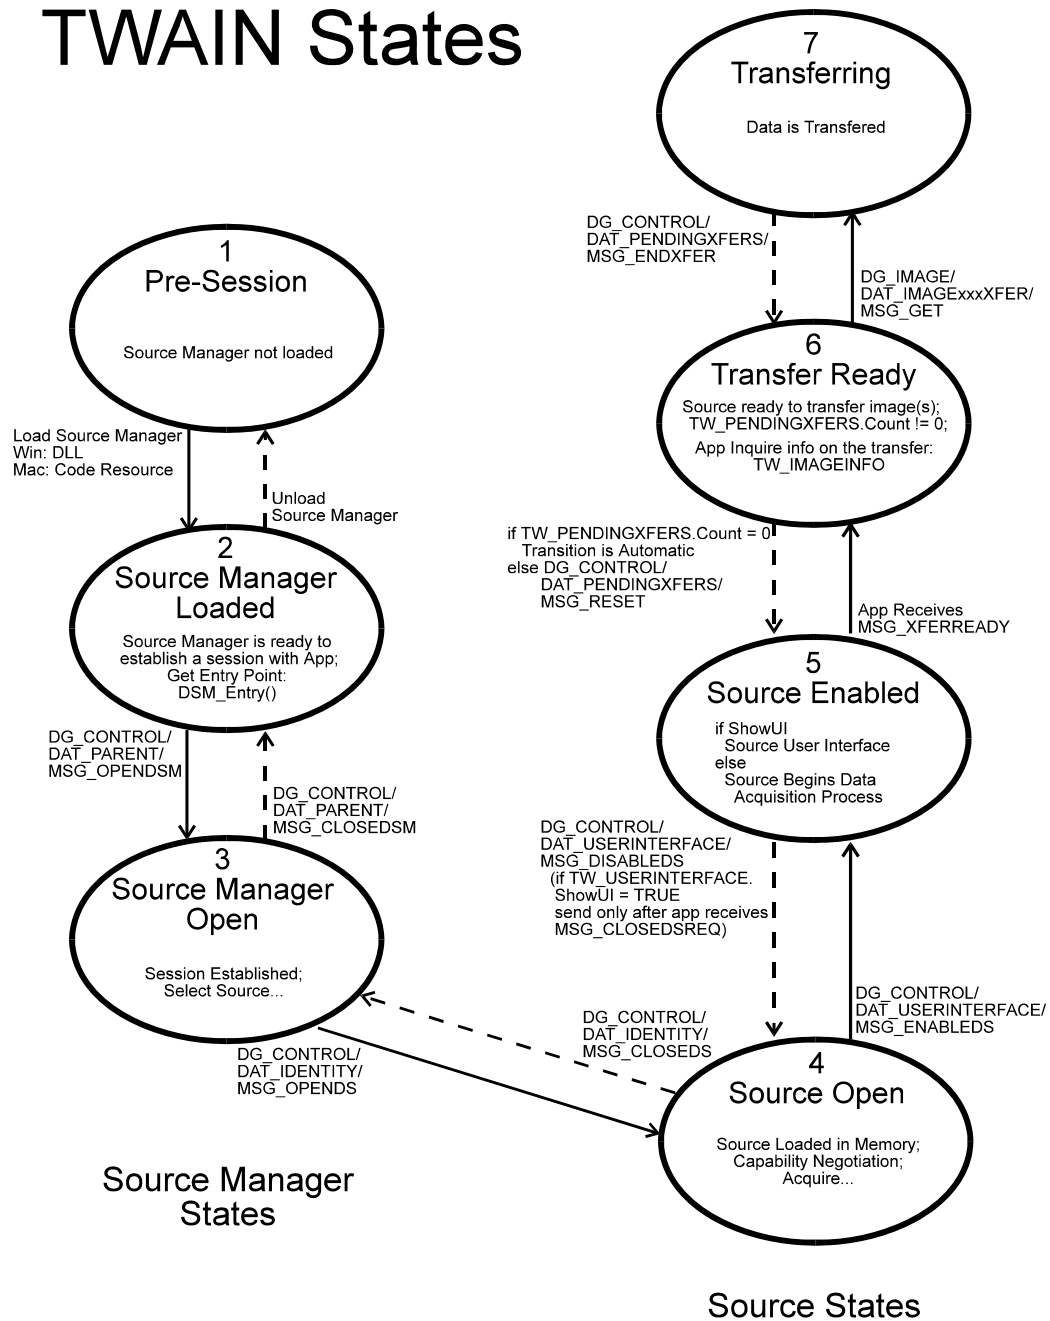


Figure 3-2 TWAIN States

State 1 to 2 - Load the Source Manager and Get the DSM_Entry

The application must load the Source Manager before it is able to call its DSM_Entry point.

Operations Used:

No TWAIN operations are used for this transition. Instead,

On Windows:

Load TWAIN_32.DLL using the LoadLibrary() routine.

Get the DSM_Entry by using the GetProcAddress() call.

On Macintosh:

Link against TWAIN.framework.

On Windows:

The application can load the Source Manager by doing the following:

```

DSMENTRYPROC    pDSM_Entry;
HANDLE          hDSMLib;
char            szSMDir;
OFSTRUCT        of;
// check for the existence of the TWAIN_32.DLL file in the Windows
// directory
GetWindowsDirectory (szSMDir, sizeof(szSMDir));
/**/ Could have been networked drive with trailing '\\' ***/
if (szSMDir [(lstrlen (szSMDir) - 1)] != '\\')
{
    lstrcat( szSMDir, "\\");
}
if ((OpenFile(szSMDir, &of, OF_EXIST) != -1)
{
    // load the DLL
    if (hDSMDLL = LoadLibrary("TWAIN_32.DLL")) != NULL)
    {
        // check if library was loaded
        if (hDSMDLL >= (HANDLE)VALID_HANDLE)
        {
            if (lpDSM_Entry = (DSMENTRYPROC)GetProcAddress(hDSMDLL,
MAKEINTRESOURCE (1))) != NULL)
            {
                if (lpDSM_Entry )
                    FreeLibrary(hDSMDLL);
            }
        }
    }
}

```

Note, the code appends TWAIN_32.DLL to the end of the Windows directory and verifies that the file exists before calling LoadLibrary(). Applications are strongly urged to perform a dynamic run-time link to DSM_Entry() by calling LoadLibrary() rather than statically linking to TWAIN_32.LIB via the linker. If the TWAIN_32.DLL is not installed on the machine, Microsoft Windows will fail to load an application that statically links to TWAIN_32.LIB. If the Application has a dynamic link, however, it will be able to give users a meaningful error message, and perhaps continue with image acquisition facilities disabled.

After getting the DSM_Entry, the application must check pDSM_Entry. If it is NULL, it means that the Source Manager has not been installed on the user's machine and the application cannot provide any TWAIN services to the user. If NULL, the application must not attempt to call *pDSM_Entry as this would result in an Unrecoverable Application Error (UAE).

On Macintosh:

The Source Manager is a mach-o framework (TWAIN.framework).

When building your application, you should link against TWAIN.framework. There should be no need to check for an existing Source Manager - beginning with Mac OS X 10.2, the TWAIN.framework is part of Mac OS X.

State 2 to 3 - Open the Source Manager

The Source Manager has been loaded. The application must now open the Source Manager.

One Operation is Used:

DG_CONTROL / DAT_PARENT / MSG_OPENDSM

pOrigin

The application must allocate a structure of type TW_IDENTITY and fill in all fields except for the Id field. Once the structure is prepared, this pOrigin parameter should point at that structure.

During the MSG_OPENDSM operation, the Source Manager will fill in the Id field with a unique identifier of the application. The value of this identifier is only valid while the application is connected to the Source Manager.

The application must save the entire structure. From now on, the structure will be referred to by the pOrigin parameter to identify the application in every call the application makes to DSM_Entry().

The TW_IDENTITY structure is defined in the TWAIN.H file but for quick reference, it looks like this:

```
/* DAT_IDENTITY Identifies the program/library/code */
/*          resource.                                */
typedef struct {
    TW_UINT32    Id; /* Unique number for identification*/
    TW_VERSION    Version;
    TW_UINT16    ProtocolMajor;
    TW_UINT16    ProtocolMinor;
    TW_UINT32    SupportedGroups; /*Bit field OR combination */
                                /*of DG_constants found in */
                                /*the TWAIN.H file          */
    TW_STR32     Manufacturer;
    TW_STR32     ProductFamily;
    TW_STR32     ProductName;
} TW_IDENTITY, FAR *pTW_IDENTITY;
```

pDest

Set to NULL indicating the operation is intended for the Source Manager.

pData

Typically, you would expect to see this point to a structure of type TW_PARENT but this is not the case. This is an exception to the usual situation where the DAT field of the triplet identifies the data structure for pData.

- **On Windows:** pData points to the window handle (hWnd) that will act as the Source's "parent". The variable is of type TW_INT32. For 16 bit Microsoft Windows, the handle is stored in the low word of the 32 bit integer and the upper word is set to zero. If running under the WIN32 environment, this is a 32 bit window handle. The Source Manager will maintain a copy of this window handle for posting messages back to the application.
- **On Macintosh:** pData should be a 32-bit NULL value.

How to Initialize the TW_IDENTITY Structure

Here is a Windows example of code used to initialize the application's TW_IDENTITY structure.

```
TW_IDENTITY    AppID;           // App's identity structure
AppID.Id = 0;           // Initialize to 0 (Source Manager
                        // will assign real value)
AppID.Version.MajorNum = 3;    //Your app's version number
AppID.Version.MinorNum = 5;
AppID.Version.Language = TWLG_ENGLISH_USA;
AppID.Version.Country = TWCY_USA;
lstrcpy (AppID.Version.Info, "Your App's Version String");
AppID.ProtocolMajor = TWON_PROTOCOLMAJOR;
AppID.ProtocolMinor = TWON_PROTOCOLMINOR;
AppID.SupportedGroups = DF_APP2 | DG_IMAGE | DG_CONTROL;
lstrcpy (AppID.Manufacturer, "App's Manufacturer");
lstrcpy (AppID.ProductFamily, "App's Product Family");
lstrcpy (AppID.ProductName, "Specific App Product Name");
```

On Windows: Using DSM_Entry to open the Source Manager

```
TW_UINT16 rc;
rc = (*pDSM_Entry) (&AppID,
                    NULL,
                    DG_CONTROL,
                    DAT_PARENT,
                    MSG_OPENDSM,
                    (TW_MEMREF) &hWnd);
```

where AppID is the TW_IDENTITY structure that the application set up to identify itself and hWnd is the application's main window handle.

On Macintosh: Using DSM_Entry to open the Source Manager

```
rc = DSM_Entry(&AppID,
               NULL,
               DG_CONTROL,
               DAT_PARENT,
               MSG_OPENDSM,
               NULL);
```

If your data source requires resources, it is responsible for loading and unloading them at run time. The Source Manager no longer manages resources automatically.

State 3 - Select the Source

The Source Manager has just been opened and is now available to assist your application in the selection of the desired Source.

DG_CONTROL / DAT_PARENT / MSG_OPENDSM. If it finds DF_DSM2 then the Application must issue the DG_CONTROL / DAT_ENTRYPOINT / MSG_GET call before it opens the Source. This takes the form:

DG_CONTROL / DAT_ENTRYPOINT / MSG_GET

pOrigin

Points to the application's TW_IDENTITY structure.

pDest

Set to NULL.

pData

Points to a structure of type TW_ENTRYPOINT

The Source Manager returns pointers to functions that the Application must use when managing memory that is either freed or allocated by the Source.

One Operation is Used:

DG_CONTROL / DAT_IDENTITY / MSG_USERSELECT

pOrigin

Points to the application's TW_IDENTITY structure. The desired data type should be specified by the application. This was done when you initialized the SupportedGroups field in your application's TW_IDENTITY structure.

This causes the Source Manager to make available for selection by the user only those Sources that can provide the requested data type(s). All other Sources are grayed out. (Note, if more than one data type were available, for example image and text, and the application wanted to accept both types of data, it would do a bit-wise OR of the types' constants and place the results into the SupportedGroups field.)

pDest

Set to NULL.

pData

Points to a structure of type TW_IDENTITY. The application must allocate this structure prior to making the call to DSM_Entry. Once the structure is allocated, the application must:

- Set the Id field to zero.
- Set the ProductName field to the null string (""). (If the application wants a specific Source to be highlighted in the Select Source dialog box, other than the system default, it can enter the ProductName of that Source into the ProductName field instead of null. The system default Source and other available Sources can be determined by using the DG_CONTROL / DAT_IDENTITY / MSG_GETDEFAULT, MSG_GETFIRST and MSG_GETNEXT operations.)

Additional fields of the structure will be filled in by the Source Manager during this operation to identify the selected Source. Make sure the application keeps a copy of this updated structure after completing this call. You will use it to identify the Source from now on.

The most common approach for selecting the Source is to use the Source Manager's Select Source dialog box. This is typically displayed when the user clicks on your Select Source option. To do this:

1. The application sends a `DG_CONTROL / DAT_IDENTITY / MSG_USERSELECT` operation to the Source Manager to have it display its dialog box. The dialog displays a list of all Sources that are installed on the system that can provide data of the type specified by the application. It highlights the Source that is the system default unless the application requests otherwise.
2. The user selects a Source or presses the **Cancel** button. If no devices are available, the Select Source Dialog's **Select/OK** button will be grayed out and the user will have no choice but to select Cancel.
3. The application must check the Return Code of `DSM_Entry` to determine the user's action.
 - a: **If** `TWRC_SUCCESS`: Their selected Source is listed in the `TW_IDENTITY` structure pointed to by the `pData` parameter and is now the default Source.
 - b: **If** `TWRC_CANCEL`: The user either clicked **Cancel** intentionally or had no other choice because no devices were listed. Do not attempt to open a Source.
 - c: **If** `TWRC_FAILURE`: Use the `DG_CONTROL / DAT_STATUS / MSG_GET` operation (sent to the Source Manager) to determine the cause. The most likely cause is a lack of sufficient memory.

As an alternative to using the Source Manager's Select Source dialog, the application can devise its own method for selecting a Source. For example, it could create and display its own user interface or simply select a Source without offering the user a choice. This alternative is discussed in [Chapter 4, "Advanced Application Implementation."](#)

State 3 to 4 - Open the Source

The Source Manager is open and able to help your application open a Source.

One Operation is Used:

`DG_CONTROL / DAT_IDENTITY / MSG_OPENDS`

pOrigin

Points to the application's `TW_IDENTITY` structure.

pDest

Set to `NULL`.

pData

Points to a structure of type `TW_IDENTITY`.

Typically, this points to the application's copy of the Source's `TW_IDENTITY` structure filled in during the `MSG_USERSELECT` operation previously.

However, if the application wishes to have the Source Manager simply open the default Source, it can do this by setting the TW_IDENTITY.ProductName field to “\0” (null string) and the TW_IDENTITY.Id field to zero.

During the MSG_OPENDS operation, the Source Manager assigns a unique identifier to the Source and records it in the TW_IDENTITY.Id field. Copy the resulting TW_IDENTITY structure. Once the Source is opened, the application will point to this resulting structure via the pDest parameter on every call that the application makes to DSM_Entry where the desired destination is this Source.

Note: The user is not required to take advantage of the Select Source option. They may click on the Acquire option without having selected a Source. In that case, your application should open the default Source. **The default source is either the last one used by the user or the last one installed.**

State 4 - Negotiate Capabilities with the Source

At this point, the application has a structure identifying the open Source. Operations can now be directed from the application to that Source. To receive a single image from the Source, only one capability, CAP_XFERCOUNT, must be negotiated now. All other capability negotiation is optional.

Note: M2 in its TW_IDENTITY.SupportedGroups, then the Application must use the DSM_MemAllocate, DSM_MemFree, DSM_MemLock and DSM_MemUnlock functions it got from DG_CONTROL / DAT_ENTRYPOINT / MSG_GET to manage any memory it uses with the Source.

Two Operations are Used:

DG_CONTROL / DAT_CAPABILITY / MSG_GET

DG_CONTROL / DAT_CAPABILITY / MSG_SET

The parameters for each of the operations, in addition to the triplet, are these:

pOrigin

Points to the application's TW_IDENTITY structure.

pDest

Points to the desired Source's TW_IDENTITY structure. The Source Manager will receive the DSM_Entry call, recognize that the destination is a Source rather than itself, and pass the operation along to the Source via the DS_Entry function.

pData

Points to a structure of type TW_CAPABILITY.

The definition of TW_CAPABILITY is:

```
typedef struct {
    TW_UINT16  Cap;          /* ID of capability to get or set */
    TW_UINT16  ConType;      /* TWON_ONEVALUE, TWON_RANGE,      */
                             /* TWON_ENUMERATION or TWON_ARRAY */
    TW_HANDLE  hContainer; /* Handle to container of type    */
}
```

```

/* ConType
*/
} TW_CAPABILITY, FAR *pTW_CAPABILITY;

```

The Source allocates the container structure pointed to by the `hContainer` field when called by the `MSG_GET` operation. The application allocates it when calling with the `MSG_SET` operation. Regardless of who allocated it, the application deallocates the structure either when the operation is complete or when the application no longer needs to maintain the information.

Each operation serves a special purpose:

MSG_GET

Since Sources are not required to support all capabilities, this operation can be used to determine if a particular TWAIN-defined capability is supported by a Source. The application needs to set the `Cap` field of the `TW_CAPABILITY` structure to the identifier representing the capability of interest. The constants identifying each capability are listed in the `TWAIN.H` file.

If the capability is supported and the operation is successful, it returns the Current, Default, and Available values. These values reflect previous `MSG_SET` operations on the capability which may have altered them from the TWAIN default values for the capability.

This operation may fail due to several causes. If the capability is not supported by the Source, the Return Code will be `TWRC_FAILURE` and the condition code will be one of the following:

<code>TWCC_CAPUNSUPPORTED</code>	Capability not supported by Source
<code>TWCC_CAPBADOPERATION</code>	Operation not supported by capability
<code>TWCC_CAPSEQERROR</code>	Capability has dependency on other capability

Applications should be prepared to receive the condition code `TWCC_BADCAP` from Sources written prior to TWAIN 1.7, which maps to any of the three situations mentioned above.

MSG_SET

Changes the Current or Available Value(s) of the specified capability to those requested by the application. The application may choose to set just the capability's Current Value or it may specify a list of values for the Source to use as the complete set of Available Values for that capability.

Note: Source is not required to limit values based on the application's request although it is strongly recommended that they do so. If the Return Code indicates `TWRC_FAILURE`, check the Condition Code. A code of `TWCC_BADVALUE` can mean:

- The application sent an invalid value for this Source's range.
- The Source does not allow the setting of this capability.
- The Source doesn't allow the type of container used by the application to set this capability.

Capability negotiation gives the application developer power to guide the Source and control the images they receive from the Source. The negotiation typically occurs during State 4. The following material illustrates only one very basic capability and container structure. Refer to [Chapter 4, "Advanced Application Implementation"](#) for a more extensive discussion of capabilities including information on how to delay the negotiation of some capabilities beyond State 4.

Note: It is important here to once again remind application writers to always check the return code from any negotiated capabilities transactions.

Set the Capability to Specify the Number of Images the Application can Transfer

The capability that specifies how many images an application can receive during a TWAIN session is CAP_XFERCOUNT. All Sources must support this capability. Possible values for CAP_XFERCOUNT are:

Value:	Description:
1	Application wants to receive a single image.
greater than 1	Application wants to receive this specific number of images.
-1	Application can accept any arbitrary number of images during the session. This is the default for this capability.
0	This value has no legitimate meaning and the application should not set the capability to this value. If a Source receives this value during a MSG_SET operation, it should maintain the Current Value without change and return TWRC_FAILURE and TWCC_BADVALUE.

The default value allows multiple images to be transferred. The following is a simple code example illustrating the setting of a capability and specifically showing how to limit the number of images to one. Notice there are differences between the code for Windows and Macintosh applications. Both versions are included here with ifdef statements for MSWIN versus MAC.

```

TW_CAPABILITY      twCapability;
TW_INT16           count;
TW_STATUS          twStatus;
TW_UINT16          rc;
#ifdef _MSWIN_
pTW_ONEVALUE      pval;
#endif
#ifdef _MAC_
TW_HANDLE          h;
pTW_INT16          pInt16;
#endif
//-----Setup for MSG_SET for CAP_XFERCOUNT
twCapability.Cap = CAP_XFERCOUNT;
twCapability.ConType = TWON_ONEVALUE;
#ifdef _MSWIN_
twCapability.hContainer = GlobalAlloc(GHND, sizeof(TW_ONEVALUE));
pval = (pTW_ONEVALUE) GlobalLock(twCapability.hContainer);
pval->ItemType = TWTY_INT16;
pval->Item = 1;          //This app will only accept 1 image
GlobalUnlock(twCapability.hContainer);
#endif
#ifdef _MAC_
twCapability.hContainer = (TW_HANDLE)h =
NewHandle(sizeof(TW_ONEVALUE));
((TW_ONEVALUE*)(*h))->ItemType = TWTY_INT16;

```

```

count = 1;          //This app will only accept 1 image
pInt16 = ((TW_ONEVALUE*)(*h))->Item;
*pInt16 = count;
#endif
//-----Set the CAP_XFERCOUNT
rc = (*pDSM_Entry) (&AppID,
                    &SourceID,
                    DG_CONTROL,
                    DAT_CAPABILITY,
                    MSG_SET,
                    (TW_MEMREF)&twCapability);

#ifdef _MSWIN_
GlobalFree((HANDLE)twContainer.hContainer);
#endif
#ifdef _MAC_
DisposHandle((HANDLE)twContainer.hContainer);
#endif
//-----Check Return Codes
//SUCCESS
if (rc == TWRC_SUCCESS)
    //the value was set
//APPROXIMATION MADE
else if (rc == TWRC_CHECKSTATUS)
{
    //The value could not be matched exactly
    //MSG_GET to get the new current value
    twCapability.Cap = CAP_XFERCOUNT;
    twCapability.ConType = TWON_DONTCARE16; //Source will specify
    twCapability.hContainer = NULL; //Source allocates and fills
    container
    rc = (*pDSM_Entry) (&AppID,
                        &SourceID,
                        DG_CONTROL,
                        DAT_CAPABILITY,
                        MSG_GET,
                        (TW_MEMREF)&twCapability);
    //remember current value
#ifdef _MSWIN_
pval = (pTW_ONEVALUE) GlobalLock(twCapability.hContainer);
count = pval->Item;
//free hContainer allocated by Source
GlobalFree((HANDLE)twCapability.hContainer);
#endif
#ifdef _MAC_
pInt16 = ((TW_ONEVALUE*)(*h))->Item;
count = *pInt16;

```

```

        //free hContainer allocated by Source
        DisposeHandle((HANDLE)twCapability.hContainer);
    #endif
    }
//MSG_SET FAILED
else if (rc == TWRC_FAILURE)
{
    //check Condition Code
    rc = (*pDSM_Entry) (&AppID,
                        &SourceID,
                        DG_CONTROL,
                        DAT_STATUS,
                        MSG_GET,
                        (TW_MEMREF)&twStatus);
    switch (twStatus.ConditionCode)
    {
        TWCC_BADCAP:
        TWCC_CAPUNSUPPORTED:
        TWCC_CAPBADOPERATION:
        TWCC_CAPSEQERROR:
            //Source does not support setting this cap
            //All Sources must support CAP_XFERCOUNT
            break;
        TWCC_BADDEST:
            //The Source specified by pSourceID is not open
            break;
        TWCC_BADVALUE:
            //The value set was out of range for this Source
            //Use MSG_GET to determine what setting was made
            //See the TWRC_CHECKSTATUS case handled earlier
            break;
        TWCC_SEQERROR:
            //Operation invoked in invalid state
            break;
    }
}

```

Other Capabilities

Image Type

Although not shown, the application should be aware of the Source's ICAP_PIXELTYPE and ICAP_BITDEPTH. If your application cannot accept all of the Source's Available Values, capability negotiation should be done. (Refer to [Chapter 4, "Advanced Application Implementation."](#))

Transfer Mode

The default transfer mode is Native. That means the Source will access the largest block of memory available and use it to transfer the entire image to the application at once. If the

available memory is not large enough for the transfer, then the Source should fail the transfer. The application does not need to do anything to select this transfer mode. If the application wishes to specify a different transfer mode, Disk File or Buffered Memory, further capability negotiation is required. (Refer to [Chapter 4, "Advanced Application Implementation."](#))

State 4 to 5 - Request the Acquisition of Data from the Source

The Source device is open and capabilities have been negotiated. The application now enables the Source so it can show its user interface, if requested, and prepare to acquire data.

One Operation is Used:

DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLEDS

pOrigin

Points to the application's TW_IDENTITY structure.

pDest

Points to the Source's TW_IDENTITY structure.

pData

Points to a structure of type TW_USERINTERFACE.

The definition of TW_USERINTERFACE is:

```
typedef struct {
    TW_BOOL    ShowUI;
    TW_BOOL    ModalUI;
    TW_HANDLE  hParent;
} TW_USERINTERFACE, FAR *pTW_USERINTERFACE;
```

Set the ShowUI field to TRUE if you want the Source to display its user interface. Otherwise, set to FALSE.

The Application will set the ModalUI field to TRUE if it wants the Source to run modal, and FALSE if it wants the Source to run modeless. Please note that to successfully run modal, it may be necessary for the application to disable inputs to its windows while the Source's GUI is running.

The application sets the hParent field differently depending on the platform on which the application runs.

- **On Windows** - The application should place a handle to the Window that is acting as the Source's parent.
- **On Macintosh** - The application sets this field to NULL.

In response to the user choosing the application's Acquire menu option, the application sends this operation to the Source to enable it. The application typically requests that the Source display the Source's user interface to assist the user in acquiring data. If the Source is told to display its user interface, it will display it when it receives the operation triplet. Modal and Modeless interfaces are discussed in [Chapter 4, "Advanced Application Implementation"](#) and [Chapter 5, "Source Implementation."](#) Sources **must** check the ShowUI field and return an error if they cannot support the specified mode. In other words it is unacceptable for a source to ignore a ShowUI = FALSE request and still activate its user interface. The application may

develop its own user interface instead of using the Source's. This is discussed in [Advanced Application Implementation](#)."

Note: Once the Source is enabled via the `DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLEDS` operation, all events that enter the application's main event loop must be immediately forwarded to the Source. The explanation for this was given earlier in this chapter when you were instructed to modify the event loop in preparation for a TWAIN session.

State 5 to 6 - Recognize that the Data Transfer is Ready

The Source is now working with the user to arrange the transfer of the desired data. Unlike all the earlier transitions, the Source, not the application, controls the transition from State 5 to State 6.

No Operations (from the application) are Used:

This transition is not triggered by the application sending an operation. The Source causes the transition.

Remember while the Source is enabled, the application is forwarding all events in its event loop to the Source by using the `DG_CONTROL / DAT_EVENT / MSG_PROCESSEVENT` operation. The `TW_EVENT` data structure associated with this operation looks like this:

```
typedef struct {
    TW_MEMREF pEvent; /*Windows pMSG or MAC pEvent */
    TW_UINT16 TWMessage; /*TW message from the Source to the
    application*/
} TW_EVENT, FAR *pTW_EVENT;
```

The Source can set the `TWMessage` field to signal when the Source is ready to transfer data. Following each `DG_CONTROL / DAT_EVENT / MSG_PROCESSEVENT` operation, the application must check the `TWMessage` field. If it contains `MSG_XFERREADY`, the session is in State 6 and the Source will wait for the application to request the actual transfer of data.

State 6 to 7 - Start and Perform the Transfer

The Source indicated it is ready to transfer data. It is waiting for the application to inquire about the image details, initiate the actual transfer, and, hence, transition the session from State 6 to 7. If the initiation (`DG_IMAGE / DAT_IMAGENATIVEXFER / MSG_GET`) fails, the session does not transition to State 7 but remains in State 6.

Two Operations are Used:

`DG_IMAGE / DAT_IMAGEINFO / MSG_GET`

pOrigin

Points to the application's `TW_IDENTITY` structure.

pDest

Points to the Source's `TW_IDENTITY` structure.

pData

Points to a structure of type TW_IMAGEINFO. The definition of TW_IMAGEINFO is:

```
typedef struct {
    TW_FIX32    XResolution;
    TW_FIX32    YResolution;
    TW_INT32    ImageWidth;
    TW_INT32    ImageLength;
    TW_INT16    SamplesPerPixel;
    TW_INT16    BitsPerSample[8];
    TW_INT16    BitsPerPixel;
    TW_BOOL     Planar;
    TW_INT16    PixelType;
    TW_UINT32    Compression;
} TW_IMAGEINFO, FAR *pTW_IMAGEINFO;
```

The Source will fill in information about the image that is to be transferred. The application uses this operation to get the information regardless of which transfer mode (Native, Disk File, or Buffered Memory) will be used to transfer the data.

DG_IMAGE / DAT_IMAGENATIVEXFER / MSG_GET

pOrigin

Points to the application's TW_IDENTITY structure.

pDest

Points to the Source's TW_IDENTITY structure.

pData

Points to a TW_UINT32 variable. This is an exception from the typical pattern.

- **On Windows:** This is a pointer to a handle variable. For 16 bit Microsoft Windows, the handle is stored in the low word of the 32-bit integer and the upper word is set to zero. If running under the WIN32 environment, this is a 32 bit window handle. The Source will set pHandle to point to a device-independent bitmap (DIB) that it allocates.
- **On Macintosh:** This is a pointer to a PicHandle. The Source will set pHandle to point to a PicHandle that the Source allocates.

In either case, the application is responsible for deallocating the memory block holding the Native-format image.

The application may want to inquire about the image data that it will be receiving. The DG_IMAGE / DAT_IMAGEINFO / MSG_GET operation allows this. Other operations, such as DG_IMAGE / DAT_IMAGELAYOUT / MSG_GET, provide additional information. This information can be used to determine if the application actually wants to initiate the transfer.

To actually transfer the data in the Native mode, the application invokes the DG_IMAGE / DAT_IMAGENATIVEXFER / MSG_GET operation. The Native mode is the default transfer mode and will be used unless a different mode was negotiated via capabilities in State 4. For the Native mode transfer, the application only invokes this operation once per image. The Source returns the TWRC_XFERDONE value when the transfer is complete. This type of transfer cannot be aborted by the application once initiated. (Whether it can be aborted from the Source's User Interface depends on the Source.) Use of the other transfer modes, Disk File and Buffered Memory, are discussed in [Chapter 4, "Advanced Application Implementation."](#)

The following code illustrates how to get information about the image that will be transferred and how to actually perform the transfer. This code segment is continued in the next section (State 7 to 6 to 5).

```
// After receiving MSG_XFERREADY
TW_UINT16 TransferNativeImage()
{
    TW_IMAGEINFO    twImageInfo;
    TW_UINT16        rc;
    TW_UINT32        hBitmap;
    TW_BOOL          PendingXfers = TRUE;
    while (PendingXfers)
    {
        rc = (*pDSM_Entry)(&AppId,
                           &SourceId,
                           DG_IMAGE,
                           DAT_IMAGEINFO,
                           MSG_GET,
                           (TW_MEMREF)&twImageInfo);
        if (rc == TWRC_SUCCESS)
        {
            Examine the image information
            // Transfer the image natively
            hBitmap = NULL;
            rc = (*pDSM_Entry)(&AppId,
                               SourceId,
                               DG_IMAGE,
                               DAT_IMAGENATIVEXFER,
                               MSG_GET,
                               (TW_MEMREF)&HbITMAP);

            // Check the return code
            switch(rc)
            {
                case TWRC_XFERDONE:
                    // Notes: hBitmap points to a valid image Native image (DIB or
                    // PICT)
                    // The application is now responsible for deallocating the
memory.
                    // The source is currently in state 7.
                    // The application must now acknowledge the end of the transfer,
                    // determine if other transfers are pending and shut down the
data
                    // source.
                    PendingXfers = DoEndXfer(); //Function found in
code
                                                    //example in next section

                    break;
                case TWRC_CANCEL:
                    // The user canceled the transfer.
                    // hBitmap is an invalid handle but memory was allocated.
                    // Application is responsible for deallocating the memory.

```

```

// The source is still in state 7.
// The application must check for pending transfers and shut down
// the data source.
        PendingXfers = DoEndXfer(); //Function found in code
                                   //example in next section
        break;
        case TWRC_FAILURE:
// The transfer failed for some reason.
// hBitmap is invalid and no memory was allocated.
// Condition code will contain more information as to the cause of
// the failure.
// The state transition failed, the source is in state 6.
// The image data is still pending.
// The application should abort the transfer.
        DoAbortXfer(MSG_RESET); //Function in next section
        PendingXfers = FALSE;
        break;
    }
}
//Check the return code
switch (rc)
{
    case TWRC_XFERDONE:
        //hBitMap points to a valid Native Image (DIB or PICT)
        //The application is responsible for deallocating the memory
        //The source is in State 7
        //Acknowledge the end of the transfer
        goto LABEL_DO_ENDXFER //found in next section
        break;
    case TWRC_CANCEL:
        //The user canceled the transfer
        //hBitMap is invalid
        //The source is in State 7
        //Acknowledge the end of the transfer
        goto LABEL_DO_ENDXFER //found in next section
        break;
    case TWRC_FAILURE:
        //The transfer failed
        //hBitMap is invalid and no memory was allocated
        //Check Condition Code for more information
        //The state transition failed, the source is in State 6
        //The image data is still pending
        //To abort the transfer
        goto LABEL_DO_ENDXFER //found in code example for
                              //the next section
}

```



```

        break;
    }

```

State 7 to 6 to 5 - Conclude the Transfer

While the transfer occurs, the session is in State 7. When the Source indicates via the Return Code that the transfer is done (TWRC_XFERDONE) or canceled (TWRC_CANCEL), the application needs to transition the session backwards.

One Operation is Used:

DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER

pOrigin

Points to the application's TW_IDENTITY structure.

pDest

Points to the Source's TW_IDENTITY structure.

pData

Points to a structure of type TW_PENDINGXFERS.

The DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER operation is sent by the application to the Source at the end of every transfer, successful or canceled, to indicate the application has received all the data it expected.

After this operation returns, the application should examine the pData->Count field to determine if there are more images waiting to be transferred. The value of pData->Count indicates the following:

Value	Description
pData->Count = 0	<p>If zero, the Source will "automatically" transition back to State 5 without the application needing to take any additional action. Application writers please make special note of this instance of an implied source transition.</p> <p>The application should return to its main event loop and await notification from the Source (either MSG_XFERREADY or MSG_CLOSEDREQ).</p>

Value	Description
pData->Count = -1 or pData->Count > 0	<p>The Source has more transfers available and is waiting in State 6.</p> <p>If the value is -1, that means the Source has another image available but it is unsure of how many more will be available. This might occur if the Source was controlling a device equipped with a document feeder and some unknown number of documents were stacked in that feeder.</p> <p>If the number of images is known, the Count will be a value greater than 0.</p> <p>Either way, the Source will remain in State 6 ready for the application to initiate another transfer. The Source will <i>NOT</i> send another MSG_XFERREADY to trigger this. The application should proceed as if it just received a MSG_XFERREADY.</p>

If more images were pending and your application does not wish to transfer all of them, you can discard one or all pending images by doing the following:

- **To discard just the next pending image**, use the DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER operation. Then, check the Count field again to determine if there are additional images pending.
- **To discard all pending images**, use the DG_CONTROL / DAT_PENDINGXFERS / MSG_RESET operation. Following successful execution of this operation, the session will be in State 5.

The following code is a continuation of the code example started in the State 6 to 7 section. It illustrates how to conclude the transfer.

```
void DoEndXfer()
{
    TW_PENDINGXFERS    twPendingXfers;
    // If the return code from DG_IMAGE/DAT_IMAGENATIVEXFER/MSG_GET was
    // TWRC_CANCEL or TWRC_DONE
    // Acknowledge the end of the transfer
    rc = (*pDSM_Entry)(&AppId,
                      SourceId,
                      DG_CONTROL,
                      DAT_PENDINGXFERS,
                      MSG_ENDXFER,
                      (TW_MEMREF)&twPendingXfers);

    if (rc == TWRC_SUCCESS)
    {
        // Check for additional pending xfers
        if (twPendingXfers.Count == 0)
        {
            // Source is now in state 5. NOTE THE IMPLIED STATE
            // TRANSITION! Disable and close the source and
            // return to TransferNativeImage with a FALSE notifying
            // it to not attempt further image transfers.
        }
    }
}
```

```

        DisableAndCloseDS();
        return(FALSE);
    }
    else
    {
        // Source is in state 6 ready to transfer another image
        // if want to transfer this image
        {
            // returns to the caller, TransferNativeImage
            // and allows the next image to transfer
            return TRUE;
        }
        else if want to abort and skip over this transfer
        {
            // The current image will be skipped, and the
            // next, if exists will be acquired by returning
            // to TransferNativeImage
            if (DoAbortXfer(MSG_ENDXFER) > 0)
                return(TRUE);
            else
                return(FALSE);
        }
    }
}

TW_UINT16 DoAbortXfer(TW_UINT16 AbortType)
{
    rc = (*pDSM_Entry)(&AppId,
                        SourceId,
                        DG_CONTROL,
                        DAT_PENDINGXFERS,
                        MSG_ENDXFER,
                        (TW_MEMREF)&twPendingXfers);

    if (rc == TWRC_SUCCESS)
    {
        // If the next image is to be skipped, but subsequent images
        // are still to be acquired, the PendingXfers will receive
        // the MSG_ENDXFER, otherwise, PendingXfers will receive
        // MSG_RESET.
        rc = (*pDSM_Entry)(&AppId,
                            SourceId,
                            DG_CONTROL,
                            DAT_PENDINGXFERS,
                            AbortType,
                            (TW_MEMREF)&twPendingXfers);
    }
}

```

```

    }
}
//To abort all pending transfers:
LABEL_ABORT_ALL:
{
    rc = (*pDSM_Entry) (&AppID,
        &SourceID,
        DG_CONTROL,
        DAT_PENDINGXFERS,
        MSG_RESET,
        (TW_MEMREF)&twPendingXfers);
    if (rc == TWRC_SUCCESS)
        //Source is now in state 5
}
}

```

State 5 to 1 - Disconnect the TWAIN Session

Once the application has acquired all desired data from the Source, the application can disconnect the TWAIN session. To do this, the application transitions the session backwards.

In the last section, the Source transitioned to State 5 when there were no more images to transfer (`TW_PENDINGXFERS.Count = 0`) or the application called the `DG_CONTROL / DAT_PENDINGXFERS / MSG_RESET` operation to purge all remaining transfers. To back out the remainder of the session:

Three Operations (plus some platform-dependent code) are Used:

To move from State 5 to State 4

`DG_CONTROL / DAT_USERINTERFACE / MSG_DISABLED`

pOrigin

Points to the application's `TW_IDENTITY` structure.

pDest

Points to the Source's `TW_IDENTITY` structure.

pData

Points to a structure of type `TW_USERINTERFACE`.

The definition of `TW_USERINTERFACE` is:

```

typedef struct {
    TW_BOOL    ShowUI;
    TW_BOOL    ModalUI;
    TW_HANDLE  hParent;
} TW_USERINTERFACE, FAR *pTW_USERINTERFACE;

```

Its contents are not used.

Note the following:

- **If the Source's User Interface was displayed:** This operation causes the Source's user interface, if displayed during the transition from State 4 to 5, to be lowered. This operation is sent by the application in response to a MSG_CLOSEDREQ from the Source. This request from the Source appears in the TWMessage field of the TW_EVENT structure. It is sent back from the DG_CONTROL / DAT_EVENT / MSG_PROCESSEVENT operation used by the application to send events to the application.
- **If the application did not have the Source's User Interface displayed:** The application invokes this command when all transfers have been completed. In addition, the application could invoke this operation to transition back to State 4 if it wanted to modify one or more of the capability settings before acquiring more data.

To move from State 4 to State 3

DG_CONTROL / DAT_IDENTITY / MSG_CLOSED

pOrigin

Points to the application's TW_IDENTITY structure.

pDest

Should reference a NULL value (indicates destination is Source Manager)

pData

Points to a structure of type TW_IDENTITY

This is the same TW_IDENTITY structure that you have used throughout the session to direct operation triplets to this Source.

When this operation is completed, the Source is closed. (In a more complicated scenario, if the application had more than one Source open, it must close them all before closing the Source Manager. Once all Sources are closed and the application does not plan to initiate any other TWAIN session with another Source, the Source Manager should be closed by the application.)

To move from State 3 to State 2

DG_CONTROL / DAT_PARENT / MSG_CLOSED

pOrigin

Points to the application's TW_IDENTITY structure.

pDest

Should reference a NULL value (indicates destination is Source Manager)

pData

Typically, you would expect to see this point to a structure of type TW_PARENT but this is not the case. This is an exception to the usual situation where the DAT field of the triplet identifies the data structure for pData.

On Windows: pData points to the window handle (hWnd) that acted as the Source's "parent". The variable is of type TW_INT32. For 16 bit Microsoft Windows, the handle is stored in the low word of the 32 bit integer and the upper word is set to zero. If running under the WIN32 environment, this is a 32 bit window handle.

On Macintosh: pData should be a 32-bit NULL value.

To Move from State 2 to State 1

Once the Source Manager has been closed, the application must unload the DLL (on Windows) from memory before continuing.

On Windows:

Use `FreeLibrary(hDSMLib)`; where `hDSMLib` is the handle to the Source Manager DLL returned from the call to `LoadLibrary()` seen earlier (in the State 1 to 2 section).

On Macintosh:

No action is necessary.

TWAIN Session Review

Applications have flexibility regarding which state they leave their TWAIN sessions in between TWAIN commands (such as Select Source and Acquire).

For example:

- An application might load the Source Manager on start-up and unload it on exit. Or, it might load the Source Manager only when it is needed (as indicated by Select Source and Acquire).
- An application might open a Source and leave it in State 4 between acquires.

The following is the simplest view of application's TWAIN flow. All TWAIN actions are initiated by a TWAIN command, either user-initiated (Select Source and Acquire) or notification from the Source (`MSG_XFERREADY` and `MSG_CLOSEDREQ`).

Application Receives	State	Application Action
Select Source...	1 -> 2	Load Source Manager
	2 -> 3	DG_CONTROL / DAT_PARENT / MSG_OPENDSM DG_CONTROL / DAT_IDENTITY / MSG_USERSELECT
	3 -> 2	DG_CONTROL / DAT_PARENT / MSG_CLOSEDISM
	2 -> 1	Unload Source Manager
Acquire...	1 -> 2	Load Source Manager
	2 -> 3	DG_CONTROL / DAT_PARENT / MSG_OPENDSM
	3 -> 4	DG_CONTROL / DAT_IDENTITY / MSG_OPENDS Capability Negotiation
	4 -> 5	DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLEDS

Application Receives	State	Application Action
MSG_XFERREADY	6	For each pending transfer: DG_IMAGE / DAT_IMAGEINFO / MSG_GET DG_IMAGE / DAT_IMAGELAYOUT / MSG_GET DG_CONTROL / DAT_CAPABILITY / MSG_GETCURRENT
	6 -> 7	DG_IMAGE / DAT_IMAGExxxxXFER / MSG_GET
	7 -> 6	DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER
	6 -> 5	Automatic transition to State 5 if TW_PENDINGXFERS.Count equals 0.
MSG_CLOSEDREQ	5 -> 4	DG_CONTROL / DAT_USERINTERFACE /
	4 -> 3	MSG_DISABLED
	3 -> 2	DG_CONTROL / DAT_IDENTITY / MSG_CLOSED
	2 -> 1	DG_CONTROL / DAT_PARENT / MSG_CLOSED Unload the Source Manager

Error Handling

Your application must be robust enough to recognize and handle error conditions that may occur during a TWAIN session. Every TWAIN operation triplet has a defined set of Return Codes and Conditions Codes that it may generate. These codes are listed on the reference pages for each triplet located in [Chapter 7, "Operation Triplets."](#) Be sure to check the Return Code following every call to the DSM_Entry function. If it is TWRC_FAILURE, make sure your code checks the Condition Code and handles the error condition appropriately.

The following code segment illustrates the basic operations for doing this:

```

TW_STATUS    twStatus;
if (rc == TWRC_FAILURE)
    //check Condition Code
    rc = (*pDSM_Entry) (&AppID,
        &SourceID,
        DG_CONTROL,
        DAT_STATUS,
        MSG_GET,
        (TW_MEMREF)&twStatus);
    switch (twStatus.ConditionCode)
        //handle each possible Condition Code for the operation

```

Common Types of Error Conditions

Sequence Errors

The TWAIN protocol allows the invoking of specific operations only while the TWAIN session is in a particular state or states. The valid states for each operation are listed on the operation's reference pages in [Chapter 7, "Operation Triplets."](#) If an operation is called from an

inappropriate state, the call will return an error, `TWRC_FAILURE`, and set the Condition Code to `TWCC_SEQERROR`. Although this error should not occur if both the application and Source are behaving correctly, it is possible for the session to get out of sync.

If this error occurs, correct it by assuming the Source believes it is in State 7. The application should invoke the correct operations to back up from State 7 to State 6 and so on down the states until an operation succeeds. Then, the application can continue or terminate the session.

The following pseudo code illustrates this:

```
if (TWCC_SEQERROR)
    // Assume State 7, start backing out from State 7 until
    // the Condition Code != TWCC_SEQERROR
    State 7 to 6    DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER
    State 6 to 5    DG_CONTROL / DAT_PENDINGXFERS / MSG_RESET
    State 5 to 4    DG_CONTROL / DAT_USERINTERFACE / MSG_DISABLED
    State 4 to 3    DG_CONTROL / DAT_IDENTITY / MSG_CLOSED
```

Low Memory Errors

Another common type of error condition occurs when insufficient memory is available to perform a requested operation. The most likely times for this to occur are:

- When a Source is being opened
- When a Source is being enabled
- During a Native image transfer

Your application must check the Return Code and Condition Code (`TWRC_FAILURE` / `TWCC_LOWMEMORY`) to recognize this. Your application may be able to free up sufficient memory to continue or it must quit.

State Transition Operation Triplet Errors

Many operations normally cause state transitions. If one of these operations fails, for example, returns `TWRC_FAILURE`, do not make the state transition. The application must check the Return Code following every operation and update the current state only if the operation succeeds.

An implied state transition during `DG_CONTROL/DAT_PENDINGXFERS/ MSG_ENDXFER` deserves special note here. If the `Count` field of the `TW_PENDINGXFERS` structure is zero then the source will automatically transition back to State 5. Application writers should be aware of this condition and react accordingly.

Error Handling and State Transitions

It is possible that during execution of any triplet that the data source will fail unexpectedly. It is very important that applications pay attention to the TWAIN State of the data source at the time of failure. A hanging or deadlock condition will occur if the application fails to recover from error conditions with the proper state transitions. Most error handling is fairly obvious, however the following items have been mishandled in the past.

Failing Transition to State 5

A data source may fail a call to `DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLEDS` unexpectedly. It is important to note that if an application requests the User Interface be suppressed, and the data source returns a code of `TWRC_CHECKSTATUS`, this means only that User Interface suppression was not possible. The transition to State 5 still occurred. If the application does not like this condition, then it may call `MSG_DISABLED`s to close the data source without further user interaction. A return code of `TWRC_FAILURE` indicates that the transition to State 5 has not occurred.

Failure During State 6 or 7

It is important to be aware that when an error occurs during image transfer, a state transition to State 5 is not implicit. A call to `DG_CONTROL / DAT_PENDINGXFER / MSG_RESET` or `MSG_ENDXFER` is required for a state transition back to State 5. If an application calls `MSG_DISABLED`s immediately after such a failure without first making the required calls to `DAT_PENDINGXFER`s, the resulting behavior of the data source will not be predictable. The data source should fail any call to `MSG_DISABLED`s outside of State 5.

Requirements for an Application to be TWAIN-Compliant

Applications are required to support only a subset of the defined TWAIN operations. As an application advances its need to set attributes it will also need to implement a more complete set of the defined operations. This includes provision of support for more transfer mechanisms.

An application **must** support the following to be considered TWAIN-compliant:

Requirements

All TWAIN Applications must support the following:

Operations

The following six operations are consumed by the Source Manager:

`DG_CONTROL / DAT_IDENTITY / MSG_CLOSED`
`DG_CONTROL / DAT_IDENTITY / MSG_OPEN`
`DG_CONTROL / DAT_PARENT / MSG_CLOSED`
`DG_CONTROL / DAT_PARENT / MSG_OPEN`
`DG_CONTROL / DAT_STATUS / MSG_GET`

The following seven operations are consumed by a Source:

`DG_CONTROL / DAT_CAPABILITY / MSG_GET`
`DG_CONTROL / DAT_CAPABILITY / MSG_SET`
`DG_CONTROL / DAT_EVENT / MSG_PROCESSEVENT`
`DG_IMAGE / DAT_IMAGENATIVEXFER / MSG_GET`

DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER
DG_CONTROL / DAT_STATUS / MSG_GET
DG_CONTROL / DAT_USERINTERFACE / MSG_DISABLED
DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLED

Notices

Every application must support receipt of two notices from Sources. These are:

MSG_XFERREADY indicates application can initiate transfer
MSG_CLOSEDREQ indicates the Source needs to be disabled

Capabilities

Applications must support one capability:

CAP_XFERCOUNT Application sets the maximum number of transfers a Source is allowed to offer per session.

Applications that consume image information should support negotiation with the following capabilities:

ICAP_XFERMECH the transfer mechanism to be used for the next transfer
ICAP_UNITS unit of measure for all measured values (default is inches)
ICAP_PIXELTYPE how image data is interpreted (Color, Gray, B&W, etc.)

Source requirements for TWAIN-compliance are presented in [Chapter 5, "Source Implementation."](#)

4

Advanced Application Implementation

Chapter Contents

Capabilities	4-1
Options for Transferring Data	4-17
The ImageData and Its Layout	4-24
Transfer of Multiple Images	4-27
Transfer of Compressed Data	4-33
Alternative User Interfaces	4-37
Grayscale and Color Information for an Image	4-40
Contrast, Brightness, and Shadow Values	4-42

Using TWAIN to acquire a raster image from a device is relatively simple to implement as demonstrated in [Chapter 3, "Application Implementation."](#) However, TWAIN also allows application developers to go beyond the simple acquisition of a single image in Native (DIB or PICT) format. These more advanced topics are discussed in this chapter.

Capabilities

Capabilities, and the power of an application to negotiate capabilities with the Source, give control to TWAIN-compliant applications. In [Chapter 4, "Advanced Application Implementation,"](#) you saw the negotiation of one capability, CAP_XFERCOUNT. This capability was negotiated during State 4 as is always the case unless delayed negotiation is agreed to by both the application and Source. In fact, there is much more to know about capabilities.

Capability Values

Several values are used to define each capability. As seen in [Chapter 10, "Capabilities,"](#) TWAIN defines a Default Value and a set of Allowed Values for each of the capabilities. The application is not able to modify the Default Value. However, it is able to limit the values offered to a user to a subset of the Allowed Values and to select the capability's Current Value.

Default Value

When a Source is opened, the Current Values for each of its capabilities are set to the TWAIN Default Values listed in [Chapter 10, "Capabilities."](#) If no default is defined by TWAIN, the Source will select a value for its default. An application can return a capability to its TWAIN-defined default by issuing a `DG_CONTROL / DAT_CAPABILITY / MSG_RESET` operation.

Although TWAIN defines defaults for many of the capabilities, a Source may have a different value that it would prefer to use as its default because it would be more efficient. For example, the Source may normally use a 0 bit in a black and white image to indicate white. However, the default for `ICAP_PIXELFLAVOR` is `TWPF_CHOCOLATE` which states that a 0 represents black. Although the TWAIN default is `TWPF_CHOCOLATE`, the Source's preferred default would be `TWPF_VANILLA`. When the application issues a `DG_CONTROL / DAT_CAPABILITY / MSG_GETDEFAULT` operation, the Source returns information about its preferred defaults. The Source and application may be able to negotiate a more efficient transfer based on this information.

Note that this does not imply that the TWAIN defaults should be completely disregarded.

When trying to resolve the conflict between the "preferred" value of a particular data source capability and the TWAIN-specified default, it should be considered that the problem is similar to storing and restoring image attributes from session to session. It is reasonable to assume that a data source will want to store the current values for some capabilities to be restored as the current values in a future session. It is then also reasonable to expect that these restored values will be reflected as the current settings for the appropriate capabilities. While storing settings is only really useful for image attributes (the data source would not store the value of `ICAP_PIXELFLAVOR`, but it might store the current `ICAP_RESOLUTION`), it should be stated that preferred values of a data source are to be treated in the same manner.

At the time of loading the data source, all current values for the appropriate capabilities would be set to values that have either been restored from a previous session, or those that are "preferred" by the data source. This current value will remain until it has been explicitly changed by the calling application, or that application issues a `MSG_RESET`.

These are best illustrated using examples, since not all capabilities are suitable for preferred values, and most are not suitable to be stored and restored across multiple scanning sessions.

Example 1:

Scan Parameters are stored in one session and restored in another

1. User configures the data source User Interface with the following parameters: 4x6 inch image in 24-bit at 200 DPI X and Y resolution
2. User selects "Scan" and data source signals application to transfer.
3. Application acquires the image successfully.
4. Application disables the data source.
5. Application inquires during State 4 the current values of Frame, Pixel Type, Bit Depth, and Resolution.
6. Data source reports to each inquiry the current values that were set by the user: 4x6 inch image in 24-bit at 200 DPI X and Y resolution.
7. Application closes the data source.
8. During close procedure, the data source stores the current Frame, Pixel Type, Bit Depth and Resolution.

9. Application opens data source.
10. During open procedure, the data source restores current Frame, Pixel Type, Bit Depth and Resolution.
11. Application inquires during State 4 the current values of Frame, Pixel Type, Bit Depth, and Resolution.
12. Data source reports to each inquiry the current values that were restored from previous session: 4x6 inch image in 24-bit at 200 DPI X and Y resolution in one session.

Example 2:

Data Source represents the preferred Pixel Flavor without compromising TWAIN Defined Default value

1. Application opens data source for the first time
2. Application inquires during State 4 about the Default Pixel Flavor
3. Data source reports that the default pixel flavor is TWPF_CHOCOLATE. (See [Chapter 10, "Capabilities."](#))
4. Application inquires during State 4 about the current pixel flavor.
5. Data source reports that the current pixel flavor is TWPF_VANILLA (because this device returns data in that gender natively).
6. Application issues reset to current pixel flavor.
7. During reset operation, data source changes current value to TWPF_CHOCOLATE and prepares to invert data during transfer to accommodate the calling application request.

There is a condition where this logic falls apart. If the data source wants to return a TW_ENUMERATION to a MSG_GET request for a constrained capability, there is a chance that the Default value imposed by the TWAIN Specification ([Chapter 10, "Capabilities"](#)) will not exist within the constrained set of values. In this case, the application should consider the default value to be undefined. Common sense should dictate that the data source provide some default that is reasonable within the currently available set of values for safety (a bad index in a TW_ENUMERATION could be a disaster). When the default value is actually used (during MSG_RESET) the constraints shall be lifted, and the original default value will once again exist and be defined. (See next section on Constrained Capabilities about MSG_RESET) This is only a problem with a TW_ENUMERATION container, since it contains an index to the default.

Current Value

The application may request to set the Current Value of a capability. If the Source's user interface is displayed, the Current Value should be reflected (perhaps by highlighting). If the application sets the Current Value, it will be used for the acquire and transfer unless the user or an automatic Source process changes it. The application can determine if changes were made by checking the Current Value during State 6.

To determine just the capability's Current Value, use DG_CONTROL / DAT_CAPABILITY / MSG_GETCURRENT. To determine both the Current Value and the Available Values, use the DG_CONTROL / DAT_CAPABILITY / MSG_GET operation. For example, you could do a MSG_GET on ICAP_PIXELTYPE and the Source might return a TW_ENUMERATION container containing TWPT_BW, TWPT_GRAY, and TWPT_RGB as Available Values.

To set the Current Value:

Use `DG_CONTROL` / `DAT_CAPABILITY` / `MSG_SET` and one of the following containers:

- `TWON_ONEVALUE`: Place the desired value in `TW_ONEVALUE.Item`.
- `TWON_ARRAY`: Place only the desired items in `TW_ARRAY.ItemList`.

These must be a subset of the items returned by the Source from a `MSG_GET` operation.

It is also possible to set Current Values using the `TW_ENUMERATION` and `TW_RANGE` containers. See the Available Values information for details.

Available Values

To limit the settings the Source can use during the acquire and transfer process, the application may be able to restrict the Available Values. The Source should not use a value outside these values. These restrictions should be reflected in the Source's user interface so unavailable values are not offered to the user.

For example, if the `MSG_GET` operation on `ICAP_PIXELTYPE` indicates the Source supports `TWPT_BW`, `TWPT_GRAY`, and `TWPT_RGB` images and the application only wants black and white images, it can request to limit the Available Values to black and white.

To limit the Available Values:

Use `DG_CONTROL` / `DAT_CAPABILITY` / `MSG_SET` and one of the following containers:

- `TWON_ENUMERATION`: Place only the desired values in the `TW_ENUMERATION.ItemList` field. The Current Value can also be set at this time by setting the `CurrentIndex` to point to the desired value in the `ItemList`.
- `TWON_RANGE`: Place only the desired values in the `TW_RANGE` fields. The current value can also be set by setting the `CurrentValue` field.

Note: `TWON_ONEVALUE` and `TWON_ARRAY` containers cannot be used to limit the Available Values.

Capability Negotiation

The negotiation process consists of three basic parts:

1. The application determines which capabilities a Source supports
2. The application sets the supported capabilities as desired
3. The application verifies that the settings were accepted by the Source

Negotiation (Part 1)

Application Determines Which Capabilities the Source Supports

Step 1

Application allocates a `TW_CAPABILITY` structure and fills its fields as follows:

- `Cap` = the `CAP_` or `ICAP_` name for the capability it is interested in
- `ConType` = `TWON_DONTCARE16`
- `hContainer` = `NULL`

Step 2

Application uses the TW_CAPABILITY structure in a DG_CONTROL / DAT_CAPABILITY / MSG_GET operation.

Step 3

The Source examines the Cap field to see if it supports the capability. If it does, it creates information for the application. In either case, it sets its Return Code appropriately.

Step 4

Application examines the Return Code, and maybe the Condition Code, from the operation.

If TWRC_SUCCESS then the Source does support the capability and

- The ConType field was filled by the Source with a container identifier (TWON_ARRAY, TWON_ENUMERATION, TWON_ONEVALUE, or TWON_RANGE)
- The Source allocated a container structure of ConType and referenced the hContainer field to this structure. It then filled the container with values describing the capability's Current Value, Default Value, and Available Values.

Based on the type of container and its contents (whose type is indicated by its ItemType field), the application can read the values. The application must deallocate the container.

If TWRC_FAILURE and TWCC_CAPUNSUPPORTED

- Source does not support this capability

The application can repeat this process for every capability it wants to learn about. If the application really only wants to get the Current Value for a capability, it can use the MSG_GETCURRENT operation instead. In that case, the ConType will just be TWON_ONEVALUE or TWON_ARRAY but not TWON_RANGE or TWON_ENUMERATION.

Note: The capability, CAP_SUPPORTEDCAPS, returns a list of capabilities that a Source supports. But it doesn't indicate whether the supported capabilities can be negotiated. If the Source does not support the CAP_SUPPORTEDCAPS capabilities, it returns TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Negotiation (Part 2)

The Application Sets the Supported Capability as Desired

Step 1

Application allocates a TW_CAPABILITY structure and fills its fields as follows:

- Cap = the CAP_ , ICAP_ , or ACAP_name for the capability it is interested in
- ConType = TWON_ARRAY, TWON_ENUMERATION, TWON_ONEVALUE or TWON_RANGE (Refer to [Chapter 10, "Capabilities"](#) to see each capability and what type(s) of container may be used to set a particular capability.)
- hContainer = The application must allocate a structure of type ConType and reference this field to it. (See the next step.)

Step 2

Application allocates a structure of type ConType and fills it. Based on values received from the Source during the MSG_GET, it can specify the desired Current Value and Available Values that it wants the Source to use. The application should not attempt to set

the Source's Default Value, just put an appropriate constant in that field (ex. TWON_DONTCARE32).

Note: The application is responsible for deallocating the container structure when the operation is finished.

Step 3

Send the request to the Source using DG_CONTROL / DAT_CAPABILITY / MSG_SET.

Negotiation (Part 3)

The Application MUST Verify the Result of Their Request

Step 1

Even if a Source supports a particular capability, it is not required to support the setting of that capability. The application must examine the Return Code from the MSG_SET request to see what took place.

If TWRC_SUCCESS then the Source set the capability as requested.

If TWRC_CHECKSTATUS then

- The Source could not use one or more of your exact values. For instance, you asked for a value of 310 but it could only accept 100, 200, 300, or 400. Your request was within its legitimate range so it rounded it to its closest valid setting.

Use the `DG_CONTROL / DAT_CAPABILITY / MSG_GET` operation to determine the current and available settings at this time. This is the only way to determine if the Source's choice was acceptable to your application.

If `TWRC_FAILURE / TWCC_BADVALUE` then

- Either the Source is not granting your request to set or restrict the value.
- Or, your requested values were not within its range of legitimate values. It may have attempted to set the value to its closest available value.

Use the `DG_CONTROL / DAT_CAPABILITY / MSG_GET` operation to determine the current and available settings at this time. This is the only way to determine if your application can continue without your requested values.

You can repeat the setting and verifying processes for every capability of interest to your application. Remember, your application must deallocate all container structures.

The Most Common Capabilities

TWAIN defines over 150 capabilities. Although the number may seem overwhelming, it is easier to handle if you recognize that some of the capabilities are more commonly used. Here are some of these capabilities:

Basic Capabilities

Units

The `ICAP_UNITS` capability determines the unit of measure which will be used by the Source. The default is inches but centimeters, pixels, etc. are allowed. This capability's value is used when measuring several other values in capabilities and data structures including:

`ICAP_PHYSICALHEIGHT,`
`ICAP_PHYSICALWIDTH,`
`ICAP_XNATIVERESOLUTION,`
`ICAP_YNATIVERESOLUTION,`
`ICAP_XRESOLUTION,`
`ICAP_YRESOLUTION,`
`TW_FRAME,`
`TW_IMAGEINFO.XResolution,`
`TW_IMAGEINFO.YResolution`

Sense of the Pixel

The `ICAP_PIXELFLAVOR` specifies how a bit of data should be interpreted when transferred from Source to application. The default is `TWPF_CHOCOLATE` which means a 0 indicates black (or the darkest color). The alternative, `TWPF_VANILLA`, means a 0 indicates white (or the lightest color).

Resolution

The image resolution is reported in the `TW_IMAGEINFO` structure. To inquire or set the Source's resolution, use `ICAP_XRESOLUTION` and `ICAP_YRESOLUTION`.

Refer also to `ICAP_XNATIVERESOLUTION` and `ICAP_YNATIVERESOLUTION`.

Image Type Capabilities

Types of Pixel

The application should negotiate `ICAP_PIXELTYPE` and `ICAP_BITDEPTH` unless it can handle all pixel types at all bit depths. The allowed pixel types are: `TWPT_BW`, `TWPT_GRAY`, `TWPT_RGB`, `TWPT_PALETTE`, `TWPT_CMY`, `TWPT_CMYK`, `TWPT_YUV`, `TWPT_YUVK`, `TWPT_CIEXYZ`, and `TWPT_INFRARED`.

Depth of the Pixels (in bits)

A pixel type such as `TWPT_BW` allows only 1 bit per pixel (either black or white). The other pixel types may allow a variety of bits per pixel (4-bit or 8-bit gray, 8-bit or 24-bit color). Be sure to set the `ICAP_PIXELTYPE` first, then set the `ICAP_BITDEPTH`.

Parameters for Acquiring the Image

Exposure

Several capabilities can influence this. They include `ICAP_BRIGHTNESS`, `ICAP_CONTRAST`, `ICAP_SHADOW`, `ICAP_HIGHLIGHT`, `ICAP_GAMMA`, and `ICAP_AUTOBRIGHT`.

Scaling

To instruct a Source to scale an image before transfer, refer to `ICAP_XSCALING` and `ICAP_YSCALING`.

Rotation

To instruct a Source to rotate the image before transfer, refer to `ICAP_ROTATION` and `ICAP_ORIENTATION`.

Constrained Capabilities and Message Responses

There is some confusion about how the data source should respond to various capability queries when the application has imposed constraints upon the supported values. The following guidelines should help clarify the situation.

MSG_RESET

It is known that this call resets the current value of the requested capability to the default. It must also be stated that this call will also reset any application imposed constraints upon the requested capability.

MSG_GETCURRENT, and MSG_GETDEFAULT

It is intuitive to assume that this message should not be supported by capabilities that have no Current or Default value. However, the specification says otherwise in [Chapter 10, "Capabilities"](#) (a good example is `ICAP_SUPPORTEDCAPS`). In this case, it makes sense to simply respond to these messages in the same manner as `MSG_GET`.

It can also be assumed that it is more intuitive for a data source to respond to this capability with a `TW_ONEVALUE` container in all cases that a `TW_ONEVALUE` container is allowed.

MSG_GET

If an application has constrained the current capability, then the data source response to this message should reflect those constraints. Otherwise, this should respond with all the values

that the data source supports. Of course, the number of values that can be placed in the response are restricted by the allowed containers for the particular current capability outlined in [Chapter 10, "Capabilities."](#)

MSG_SET

As indicated in [Chapter 7, "Operation Triplets,"](#) description of this capability triplet:

"Current Values are set when the container is a TW_ONEVALUE or TW_ARRAY. Available and Current Values are set when the container is a TW_ENUMERATION or TW_RANGE."

To further clarify this operation, it should be stated that when an application imposes a constraint, the data source must consider the set of supported values and the set of requested constraints. The resulting set of values shall contain only the values that are shared by those supported and those requested.

A condition may arise after constraints are imposed, where the default value is no longer within the set of supported values. When using a TW_ENUMERATION, the reported default index should be changed by the data source to something that falls within the new constrained set. This is simply a precaution to ensure it is a valid index. In this case, the Default index in a TW_ENUMERATION loses meaning and should be ignored by applications, since MSG_RESET shall cause the constraints to be eliminated.

Capability Containers in Code Form

Capability information is passed between application and Source by using data structures called containers: TW_ARRAY, TW_ENUMERATION, TW_ONEVALUE, and TW_RANGE. The actions needed to create (pack) and read (unpack) containers are illustrated here in the following code segments. Containers are flexible in that they can be defined to contain one of many types of data. Only one ItemType (TWTY_xxxx) is illustrated per Container (TWON_xxxx) here. Refer to the toolkit disk for complete packing and unpacking utilities that you can use with containers.

Reading (unpacking) a Container from a MSG_GET Operation

```
//-----  
//Example of DG_CONTROL / DAT_CAPABILITY / MSG_GET  
//-----  
TW_CAPABILITY    twCapability;  
TW_INT16         rc;  
//Setup TW_CAPABILITY Structure  
    twCapability.Cap = Cap;        //Fill in capability of interest  
    twCapability.ConType = TWON_DONTCARE16;  
    twCapability.hContainer = NULL;  
//Send the Triplet  
    rc = (*pDSM_Entry)(&AppID,  
                        &SourceID,  
                        DG_CONTROL,  
                        DAT_CAPABILITY,
```

```

        MSG_GET,
        (TW_MEMREF)&twCapability);

//Check return code
    if (rc == TWRC_SUCCESS)
    {
        //Switch on Container Type
        switch (twCapability.ConType)
        {
            //-----ENUMERATION
            case TWON_ENUMERATION:
            {
                pTW_ENUMERATION    pvalEnum;
                TW_UINT16           valueU16;
                TW_UINT16           index;

                pvalEnum =
                (pTW_ENUMERATION)GlobalLock(twCapability.hContainer);

                NumItems = pvalEnum->NumItems;
                CurrentIndex = pvalEnum->CurrentIndex;
                DefaultIndex = pvalEnum->DefaultIndex;
                for (index = 0; index < pvalEnum->NumItems; index++)
                {
                    if (pvalEnum->ItemType == TWTY_UINT16)
                    {
                        valueU16 = ((TW_UINT16)(pvalEnum->ItemList[index*2]));
                        //Store Item Value
                    }
                    else if (pvalEnum->ItemType == TWTY_BOOL)
                    {
                        valueBool = ((TW_BOOL*)&pvalEnum->ItemList)[index];
                        //Store Item Value
                    }
                }
                GlobalUnlock(twCapability.hContainer);
            }
            break;

```

```

//-----ONEVALUE
    case TWON_ONEVALUE:
    {
        pTW_ONEVALUE      pvalOneValue;
        TW_BOOL            valueBool;

        pvalOneValue =
        (pTW_ONEVALUE)GlobalLock(twCapability.hContainer);
        if (pvalOneValue->ItemType == TWTY_BOOL)
        {
            valueBool = (TW_BOOL)pvalOneValue->Item;
            //Store Item Value
        }
        GlobalUnlock(twCapability.hContainer);
    }
    break;

//-----RANGE
    case TWON_RANGE:
    {
        pTW_RANGE          pvalRange;
        pTW_FIX32           pTWFix32;
        float               valueF32;
        TW_UINT16           index;

        pvalRange = (pTW_RANGE)GlobalLock(twCapability.hContainer);
        if ((TW_UINT16)pvalRange->ItemType == TWTY_FIX32)
        {
            pTWFix32 = &(pvalRange->MinValue);
            valueF32 = FIX32ToFloat(*pTWFix32);
            //Store Item Value

            pTWFix32 = &(pvalRange->MaxValue);
            valueF32 = FIX32ToFloat(*pTWFix32);
            //Store Item Value

            pTWFix32 = &(pvalRange->StepSize);
            valueF32 = FIX32ToFloat(*pTWFix32);
            //Store Item Value
        }
        GlobalUnlock(twCapability.hContainer);
    }

```

```

    }
    break;
//-----ARRAY
    case TWON_ARRAY:
    {
        pTW_ARRAY          pvalArray;
        TW_UINT16          valueU16;
        TW_UINT16          index;

        pvalArray = (pTW_ARRAY)GlobalLock(twCapability.hContainer);
        for (index = 0; index < pvalArray->NumItems; index++)
        {
            if (pvalArray->ItemType == TWTY_UINT16)
            {
                valueU16 = ((TW_UINT16)(pvalArray->Item
                >ItemList[index*2]));
                //Store Item Value
            }
        }
        GlobalUnlock(twCapability.hContainer);
    }
    break;
} //End Switch Statement
GlobalFree(twCapability.hContainer);
} else {
    //Capability MSG_GET Failed check Condition Code
}

/*****
* Fix32ToFloat
* Convert a FIX32 value into a floating point value.
*****/
float FIX32ToFloat (TW_FIX32    fix32)
{
    float    floater;

    floater = (float)fix32.Whole + (float)fix32.Frac / 65536.0;
    return floater;
}

```

Creating (packing) a Container for a MSG_SET Operation

```
//-----  
//Example of DG_CONTROL / DAT_CAPABILITY / MSG_SET  
//-----  
TW_CAPABILITY    twCapability;  
TW_INT16         rc;  
TW_UINT32        NumberOfItems;  
  
    twCapability.Cap = Cap;          //Insert Capability of Interest  
    twCapability.ConType = Container;  
        //Use TWON_ONEVALUE or TWON_ARRAY to set current value  
        //Use TWON_ENUMERATION or TWON_RANGE to limit available values  
    switch (twCapability.ConType)  
    {  
//-----ENUMERATION  
        case TWON_ENUMERATION:  
        {  
            pTW_ENUMERATION    pvalEnum;  
                //The number of Items in the ItemList  
            NumberOfItems = 2;  
  
            //Allocate memory for the container and additional ItemList  
            // entries  
            twCapability.hContainer = GlobalAlloc(GHND,  
                (sizeof(TW_ENUMERATION) + sizeof(TW_UINT16) *  
                (NumberOfItems)));  
            pvalEnum = (pTW_ENUMERATION)GlobalLock(twCapability.hContainer);  
            pvalEnum->NumItems = 2          //Number of Items in ItemList  
            pvalEnum->ItemType = TWTY_UINT16;  
            ((TW_UINT16)(pvalEnum->ItemList[0])) = 1;  
            ((TW_UINT16)(pvalEnum->ItemList[1])) = 2;  
            GlobalUnlock(twCapability.hContainer);  
        }  
        break;  
//-----ONEVALUE  
        case TWON_ONEVALUE:  
        {  

```

```

        pTW_ONEVALUE      pvalOneValue;

        twCapability.hContainer = GlobalAlloc(GHND,
sizeof(TW_ONEVALUE));

        pvalOneValue =
(pTW_ONEVALUE)GlobalLock(twCapability.hContainer);

        (TW_UINT16)pvalOneValue->ItemType = TWTY_UINT16;
        (TW_UINT16)pvalOneValue->Item = 1;

        GlobalUnlock(twCapability.hContainer);
    }

    break;

//-----RANGE

    case TWON_RANGE:
    {
        pTW_RANGE      pvalRange;
        TW_FIX32      TWFix32;
        float          valueF32;

        twCapability.hContainer = GlobalAlloc(GHND, sizeof(TW_RANGE));
        pvalRange = (pTW_RANGE)GlobalLock(twCapability.hContainer);
        (TW_UINT16)pvalRange->ItemType = TWTY_FIX32;
        valueF32 = 100;
        TWFix32 = FloatToFIX32 (valueF32);
        pvalRange->MinValue = *((pTW_INT32) &TWFix32);
        valueF32 = 200;
        TWFix32 = FloatToFIX32 (valueF32);
        pvalRange->MaxValue = *((pTW_INT32) &TWFix32);
        GlobalUnlock(twCapability.hContainer);
    }

    break;

//-----ARRAY

    case TWON_ARRAY:
    {
        pTW_ARRAY      pvalArray;

        //The number of Items in the ItemList
        NumberOfItems = 2;

        //Allocate memory for the container and additional ItemList
        entries

```



```

        twCapability.hContainer = GlobalAlloc(GHND,
        (sizeof(TW_ARRAY) + sizeof(TW_UINT16) * (NumberOfItems)));
        pvalArray = (pTW_ARRAY)GlobalLock(twCapability.hContainer);

        (TW_UINT16)pvalArray->ItemType = TWTY_UINT16;
        (TW_UINT16)pvalArray->NumItems = 2;
        ((TW_UINT16)(pvalArray->ItemList[0])) = 1;
        ((TW_UINT16)(pvalArray->ItemList[1])) = 2;
        GlobalUnlock(twCapability.hContainer);
    }
    break;
}

//-----MSG_SET
rc = (*pDSM_Entry)(&AppID,
                    &SourceID,
                    DG_CONTROL,
                    DAT_CAPABILITY,
                    MSG_SET,
                    (TW_MEMREF)&twCapability);
GlobalFree(twCapability.hContainer);
switch (rc)
{
    case TWRC_SUCCESS:
        //Capability's Current or Available value was set as specified
    case TWRC_CHECKSTATUS:
        //The Source matched the specified value(s) as closely as
possible
        //Do a MSG_GET to determine the settings made
    case TWRC_FAILURE:
        //Check the Condition Code for more information
    }
}

/*****
* FloatToFix32
* Convert a floating point value into a FIX32.
*****/
TW_FIX32 FloatToFix32 (float floater)
{
    TW_FIX32 Fix32_value;

```

```

TW_INT32 value = (TW_INT32) (floater * 65536.0 + 0.5);
Fix32_value.Whole = value >> 16;
Fix32_value.Frac = value & 0x0000ffffL;
return (Fix32_value);
}

```

Delayed Negotiation - Negotiating Capabilities After State 4

Applications may inquire about a Source's capability values at any time during the session with the Source. However, as a rule, applications can only request to **set** a capability during State 4. The rationale behind this restriction is tied to the display of the Source's user interface when the Source is enabled. Many Sources will modify the contents of their user interface in response to some of the application's requested settings. These user interface modifications prevent the user from selecting choices that do not meet the application's requested values. The Source's user interface is never displayed in State 4 so changes can be made without the user's awareness. However, the interface may be displayed in States 5 through 7.

Some capabilities have no impact on the Source's user interface and the application may really want to set them later than State 4. To allow delayed negotiation, the application must request, during State 4, that a particular capability be able to be set later (during States 5 or 6). The Source may agree to this request or deny it. The request is negotiated by the application with the Source by using the DG_CONTROL / DAT_CAPABILITY operations on the CAP_EXTENDEDCAPS capability.

On the CAP_EXTENDEDCAPS capability, the DG_CONTROL / DAT_CAPABILITY operations:

MSG_GET

Indicates all capabilities that the Source is willing to negotiate in State 5 or 6.

MSG_SET

Specifies which capabilities the application wishes to negotiate in States 5 or 6.

MSG_GETCURRENT

Provides a list of all capabilities which the Source and application have agreed to allow to be negotiated in States 5 or 6.

As with any other capability, if the Source does not support negotiating CAP_EXTENDEDCAPS, it will return the Return Code TWRC_FAILURE with the Condition Code TWCC_CAPUNSUPPORTED.

If an application attempts to set a capability in State 5 or 6 and the Source has not previously agreed to this arrangement, the operation will fail with a Return Code of TWRC_FAILURE and a Condition Code of TWCC_SEQERROR.

If an application does not use the Source's user interface but presents its own, the application controls the state of the Source explicitly. If the application wants to set the value of any capability, it returns the Source to State 4 and does so. Therefore, an application using its own user interface will probably not need to use CAP_EXTENDEDCAPS.

Options for Transferring Data

As discussed previously, there are three modes defined by TWAIN for transferring data:

- Native
- Disk File
- Buffered Memory

A Source is required to support Native and Buffered Memory transfers.

Native Mode Transfer

The use of Native mode, the default mode, for transferring data was covered in [Chapter 3, "Application Implementation."](#) There is one potential limitation that can occur in a Native mode transfer. That is, there may not be an adequately large block of RAM available to hold the image. This situation will not be discovered until the transfer is attempted when the application issues the `DG_IMAGE / DAT_IMAGENATIVEXFER / MSG_GET` operation.

When the lack of memory appears, the Source may respond in one of several ways. It can:

- Simply fail the operation.
- Clip the image to make it fit in the available RAM - The Source should notify the user that the clipping operation is taking place due to limited RAM. The clipping should maintain both the aspect ratio of the selected image and the origin (upper-left).
- Interact with the user to allow them to resize the image or cancel the capture.

The Return Code / Condition Code returned from the `DG_IMAGE / DAT_IMAGENATIVEXFER / MSG_GET` operation may indicate one of these actions occurred.

If the Return Code is `TWRC_XFERDONE`:

This indicates the transfer was completed and the session is in State 7. However, it does not guarantee that the Source did not clip the image to make it fit. Even if the application issued a `DG_IMAGE / DAT_IMAGEINFO / MSG_GET` operation prior to the transfer to determine the image size, it cannot assume that the `ImageWidth` and `ImageLength` values returned from that operation really apply to the image that was ultimately transferred. If the dimensions of the image are important to the application, the application should always check the actual transferred image size after the transfer is completed. To do this:

1. Execute a `DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER` operation to move the session from State 7 to State 6 (or 5).
2. Determine the actual size of the image that was transferred:
 - a. **On Windows** - Read the DIB header
 - b. **On Macintosh** - Check the `picFrame` in the Picture

If the Return Code is TWRC_CANCEL:

The acquisition was canceled by the user. The session is in State 7. Execute a DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER operation to move the session from State 7 to State 6 (or 5).

If the Return Code is TWRC_FAILURE:

Check the Condition Code to determine the cause of the failure. The session is in State 6. No memory was allocated for the DIB or PICT. The image is still pending. If lack of memory was the cause, you can try to free additional memory or discard the pending image by executing DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER.

Disk File Mode Transfer

Beginning with version 1.9, there are now two file transfer mechanisms available. Windows developers may continue to use the TWSX_FILE option. Macintosh developers must use TWSX_FILE2, instead of TWSX_FILE, in order to correctly address image and audio files in the newer versions of the operating system.

Determine if a Source Supports the Disk File Mode

- Use the DG_CONTROL / DAT_CAPABILITY / MSG_GET operation.
- Set the TW_CAPABILITY's Cap field to ICAP_XFERMECH.
- The Source returns information about the transfer modes it supports in the container structure pointed to by the hContainer field of the TW_CAPABILITY structure. The disk file mode is identified as TWSX_FILE or TWSX_FILE2. Sources are not required to support Disk File Transfer so it is important to verify its support.

After Verifying Disk File Transfer is Supported, Set Up the Transfer**During State 4:**

- Set the ICAP_XFERMECH to TWSX_FILE or TWSX_FILE2. Use the DG_CONTROL / DAT_CAPABILITY / MSG_SET operation.
- Use the DG_CONTROL / DAT_CAPABILITY / MSG_GET operation to determine which file formats the Source can support. Set TW_CAPABILITY.Cap to ICAP_IMAGEFILEFORMAT and execute the MSG_GET. The Source returns the supported format identifiers which start with TWFF_ and may include TWFF_PICT, TWFF_BMP, TWFF_TIFF, etc. They are listed in the TWAIN.H file and in the Constants section of [Chapter 8, "Data Types and Data Structures."](#)

During States 4, 5, or 6:

To set up the transfer the DG_CONTROL / DAT_SETUPFILEXFER operation of MSG_GET, MSG_GETDEFAULT, and MSG_SET can be used.

The data structure used in the DSM_Entry call is a TW_SETUPFILEXFER structure (for DAT_SETUPFILEXFER, on Windows and pre-1.9 Macintosh Sources and Applications):

```
typedef struct {
    TW_STR255    FileName;        /* File to contain data    */
    TW_UINT16    Format;          /* A TWFF_xxxx constant   */
    TW_HANDLE    VrefNum;        /* Used for Macintosh only */
} TW_SETUPFILEXFER, FAR *pTW_SETUPFILEXFER;
```

The application could use the MSG_GETDEFAULT operation to determine the default file format and filename (TWAIN.TMP or TWAIN.AUD in the current directory). If acceptable, the application could just use that file. However, most applications prefer to set their own values for filename and format. The MSG_SET operation allows this. It is done during State 6. To set your own filename and format, do the following:

1. Allocate the required TW_SETUPFILEXFER structure. Then, fill in the appropriate fields:
 - a. `FileName` – the desired filename. On Windows, be sure to include the complete path name.
 - b. `Format` – the constant for the desired, and supported, format (TWFF_XXXX). If you set it to an unsupported format, the operation returns TWRC_FAILURE / TWCC_BADVALUE and the Source resets itself to write data to the default file.
 - c. `VRefNum` – On Macintosh, write the file's volume reference number. On Windows, fill in the field with a TWON_DONTCARE16.
2. Invoke the DG_CONTROL / DAT_SETUPFILEXFER / MSG_SET as appropriate.

Execute the Transfer into the File

After the application receives the MSG_XFERREADY notice from the Source and has issued the DG_CONTROL / DAT_SETUPFILEXFER / MSG_GET.

Use the following operation: DG_IMAGE / DAT_IMAGEFILEXFER / MSG_GET

This operation does not have an associated data structure but just uses NULL for the pData parameter in the DSM_Entry call.

- If the application has not specified a filename (during the setup) - the Source will use either its default file or the last file information it was given.
- If the file specified by the application does not exist - the Source should create it.
- If the file exists but already has data in it - the Source should overwrite the existing data. Notice, if you are transferring multiple files and using the same file name each time, you will overwrite the data unless you copy it to a different filename between transfers.

Note: The application cannot abort a Disk File transfer once initiated. However, the Source's user interface may allow the user to cancel the transfer.

Following execution, be sure to check the Return Code:

TWRC_XFERDONE: File was written successfully. The application needs to invoke the DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER to transition the session back to State 6 (or 5) as was illustrated in [Chapter 4, "Advanced Application Implementation."](#)

TWRC_CANCEL: The user canceled the transfer. The contents of the file are undefined. Invoke DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER to transition the session back to State 6 (or 5) as was illustrated in [Chapter 3, "Application Implementation."](#)

TWRC_FAILURE

The Source remained in State 6.

The contents of the file are undefined.

The image is still pending. To discard it, use `DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER`.

Check the Condition Code to determine the cause of the failures. The alternatives are:

`TWCC_BADDEST` = Operation aimed at invalid Source

`TWCC_OPERATIONERROR` = Either the file existed but could not be accessed or a system error occurred during the writing

`TWCC_SEQERROR` = Operation invoked in invalid state (i.e. not 6)

Buffered Memory Mode Transfer**Set Capability Values for the Buffered Memory Mode, if Desired**

Data is typically transferred in uncompressed format. However, if you are interested in knowing if the Source can transfer compressed data when using the buffered memory mode, perform a `DG_CONTROL / DAT_CAPABILITY / MSG_GET` on the `ICAP_COMPRESSION`. The values will include `TWCP_NONE` (the default) and perhaps others such as `TWCP_PACKBITS`, `TWCP_JPEG`, etc. (See the list in the Constants section of [Chapter 8, "Data Types and Data Structures."](#)) More information on compression is available later in this chapter in the section called Transfer of Compressed Data.

Set up the Transfer**During State 4:**

Set the `ICAP_XFERMECH` to `TWSX_MEMORY` by using the `DG_CONTROL / DAT_CAPABILITY / MSG_SET` operation.

During States 4, 5, or 6:

The `DG_CONTROL / DAT_SETUPMEMXFER / MSG_GET` operation is used by the application to determine what buffer sizes the Source wants to use during the transfer. The Source might have more accurate information in State 6.

The data structure used in the `DSM_Entry` call is a `TW_SETUPMEMXFER` structure:

```
typedef struct {
    TW_UINT32  MinBufSize  /* Minimum buffer size in bytes */
    TW_UINT32  MaxBufSize  /* Maximum buffer size in bytes */
    TW_UINT32  Preferred   /* Preferred buffer size in bytes */
} TW_SETUPMEMXFER, FAR *pTW_SETUPMEMXFER;
```

The Source will fill in the appropriate values for its device.

Buffers Used for Uncompressed Strip Transfers

- The application is responsible for allocating and deallocating all memory used during the buffered memory transfer.
- For optimal performance, create buffers of the Preferred size.

- In all cases, the size of the allocated buffers must be within the limits of `MinBufSize` to `MaxBufSize`. If outside of these limits, the Source will fail the transfer operation with a Return Code of `TWRC_FAILURE` / `TWCC_BADVALUE`.
- If using more than one buffer, all buffers must be the same size.
- Raster lines must be double-word aligned and padded with zeros is recommended .

Execute the Transfer Using Buffers

After the application receives the `MSG_XFERREADY` notice from the Source and has issued the `DG_CONTROL` / `DAT_SETUPMEMXFER` / `MSG_GET` operation:

- Allocate one or more buffers of the same size. The best size is the one indicated by the `TW_SETUPMEMXFER.Preferred` field. If that is impossible, be certain the buffer size is between `MinBufSize` and `MaxBufSize`.
- Allocate the `TW_IMAGEMEMXFER` structure. It will be used in the `DG_IMAGE` / `DAT_IMAGEMEMXFER` / `MSG_GET` operation.

The TW_IMAGEMEMXFER structure looks like this:

```
typedef struct {
    TW_UINT16  Compression;
    TW_UINT32  BytesPerRow;
    TW_UINT32  Columns;
    TW_UINT32  Rows;
    TW_UINT32  XOffset;
    TW_UINT32  YOffset;
    TW_UINT32  BytesWritten;
    TW_MEMORY  Memory;
} TW_IMAGEMEMXFER, FAR *pTW_IMAGEMEMXFER;
```

Fill in the TW_IMAGEMEMXFER's first field with TWON_DONTCARE16 and the following six fields with TWON_DONTCARE32.

The TW_MEMORY structure embedded in there looks like this:

```
typedef struct {
    TW_UINT32  Flags;
    TW_UINT32  Length;
    TW_MEMREF  TheMem;
} TW_MEMORY, FAR *pTW_MEMORY;
```

Fill in the TW_MEMORY structure as follows:

Memory.Flags

Place TWMF_APPOWNS bit-wise ORed with TWMF_POINTER or TWMF_HANDLE

Memory.Length

The size of the buffer in bytes

Memory.TheMem

A handle or pointer to the memory buffer allocated above (depending on which one was specified in the Flags field).

Following each buffer transfer, the Source will have filled in all the fields except Memory which it uses as a reference to the memory block for the data.

The flow of the transfer of buffers is as follows:

Step 1

Buffered Memory transfers provide no embedded header information. Therefore, the application must determine the image attributes. After receiving the MSG_XFERREADY, i.e. while in State 6, the application issues the DG_IMAGE / DAT_IMAGEINFO / MSG_GET and DG_IMAGE / DAT_IMAGELAYOUT / MSG_GET operations to learn about the image's bitmap characteristics and the size and location of the original image on the original page (before scaling or other processing). If additional information is desired, use the DG_CONTROL / DAT_CAPABILITY / MSG_GET operation.

Step 2

The application issues DG_IMAGE / DAT_IMAGEMEMXFER / MSG_GET.

Step 3

The application checks the Return Code.

- If TWRC_SUCCESS:
Examine the TW_IMAGEMEMXFER structure for information about the buffer. If you plan to reuse the buffer, copy the data to another location.
Loop back to Step 2 to get another buffer. Be sure to reinitialize the information in the TW_IMAGEMEMXFER structure (including the Memory fields), if necessary. Issue another DG_IMAGE / DAT_IMAGEMEMXFER / MSG_GET operation.
- If TWRC_XFERDONE:
This is how the Source indicates it just transferred the last buffer successfully. Examine the TW_IMAGEMEMXFER structure for information about the buffer. Perhaps, copy the data to another location, as desired, then go to Step 4.
- If TWRC_CANCEL:
The user aborted the transfer. The application must send a DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER as described in [Chapter 3, "Application Implementation"](#) to move from State 7 to State 6 (or 5).
- If TWRC_FAILURE:
Examine the Condition Code to determine the cause and handle it.
If the failure occurred during the transfer of the first buffer, the session is in State 6. If the failure occurred on a subsequent buffer, the session is in State 7.
The contents of the buffer are invalid and the transfer of the buffer is still pending. To abort it, use DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER.

Step 4

Once the TWRC_XFERDONE has been returned, the application must send the DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER to conclude the transfer. This was described in [Chapter 3, "Application Implementation"](#) in the section called State 7 to 6 to 5 - Conclude the Transfer.

Note: The majority of Sources divide the image data into strips when using buffered transfers. A strip is a horizontal band starting at the leftmost side of the image and spanning the entire width but covering just a portion of the image length. The application can verify that strips are being used if the information returned from the Source in the TW_IMAGEMEMXFER structure's XOffset field is zero and the Columns field is equal to the value in the TW_IMAGEINFO structure's ImageWidth field.

An alternative to strips is the use of tiles although they are used by very few Sources. Refer to the TW_IMAGEMEMXFER information in [Chapter 8, "Data Types and Data Structures"](#) for an illustration of tiles.

Buffered Memory Mode Transfer With File Format

This operation works very much like Buffered Memory Mode, but the data transferred from the Source to the Application conforms to the image file format specified by a previous call to DG_IMAGE / DAT_SETUPFILEXFER / MSG_GET. There is no requirement for the data to be

transferred as complete image lines or for any kind of padding, the data is assumed to be self-contained and self-describing.

The ImageData and Its Layout

The image which is transferred from the Source to the application has several attributes. Some attributes describe the size of the image. Some describe where the image was located on the original page. Still others might describe information such as resolution or number of bits per pixel. TWAIN provides means for the application to learn about these attributes.

Users are often able to select and modify an image's attributes through the Source's user interface. Additionally, TWAIN provides capabilities and operations that allow the application to impact these attributes prior to acquisition and transfer.

Getting Information About the Image That will be Transferred

Before the transfer occurs, while in State 6, the Source can provide information to the application about the actual image that it is about to transfer. Note, the information is lost once the transfer takes place so the application should save it, if needed. This information can be retrieved through two operations:

- DG_IMAGE / DAT_IMAGELAYOUT / MSG_GET
- DG_IMAGE / DAT_IMAGEINFO / MSG_GET

The area of an image to be acquired will always be a rectangle called a frame. There may be one or more frames located on a page. Frames can be selected by the user or designated by the application. The TW_IMAGELAYOUT structure communicates where the image was located on the original page relative to the origin of the page. It also indicates, in its FrameNumber field, if this is the first frame, or a later frame, to be acquired from the page.

The TW_IMAGELAYOUT structure looks like this:

```
typedef struct {
    TW_FRAME      Frame;
    TW_UINT32     DocumentNumber;
    TW_UINT32     PageNumber;
    TW_UINT32     FrameNumber;
} TW_IMAGELAYOUT, FAR *pTW_IMAGELAYOUT;
```

The TW_FRAME structure specifies the values for the Left, Right, Top, and Bottom of the frame to be acquired. Values are given in ICAP_UNITS.

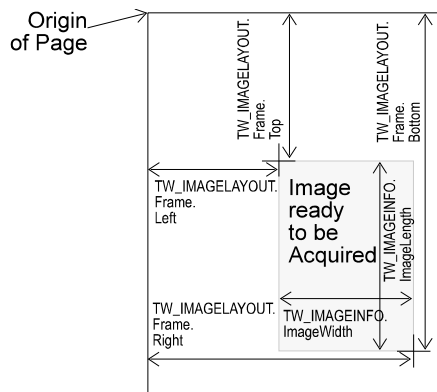


Figure 4-1. TW_FRAME Structure

The DG_IMAGE / DAT_IMAGEINFO / MSG_GET operation communicates other attributes of the image being transferred. The TW_IMAGEINFO structure looks like this:

```
typedef struct {
    TW_FIX32    XResolution;
    TW_FIX32    YResolution;
    TW_INT32    ImageWidth;
    TW_INT32    ImageLength;
    TW_INT16    SamplesPerPixel;
    TW_INT16    BitsPerSample[8];
    TW_INT16    BitsPerPixel;
    TW_BOOL     Planar;
    TW_INT16    PixelType;
    TW_UINT16    Compression;
} TW_IMAGEINFO, FAR * pTW_IMAGEINFO;
```

Notice how the ImageWidth and ImageLength relate to the frame described by the TW_IMAGELAYOUT structure.

Changing the Image Attributes

Normally, the user will select the desired attributes. However, the application may wish to do this initially during State 4. For example, if the user interface will not be displayed, the application may wish to select the frame. The application can use a DG_IMAGE / DAT_IMAGELAYOUT / MSG_SET operation to define the area (frame) to be acquired. Although, there is no corresponding DG_IMAGE / DAT_IMAGEINFO / MSG_SET operation, the application can change those attributes by setting capabilities and the TW_IMAGELAYOUT data structure.

Here are the relationships:

TW_IMAGEINFO fields	Capability or data structure that impacts the attribute
XResolution	ICAP_XRESOLUTION
YResolution	ICAP_YRESOLUTION
ImageWidth	TW_IMAGELAYOUT.TW_FRAME.Right - TW_FRAME.Left **

TW_IMAGEINFO fields	Capability or data structure that impacts the attribute
ImageLength	TW_IMAGELAYOUT.TW_FRAME.Bottom - TW_FRAME.Top **
SamplesPerPixel	ICAP_PIXELTYPE (i.e. TWPT_BW has 1, TWPT_RGB has 3)
BitsPerSample	Calculated by BitsPerPixel divided by SamplesPerPixel
BitsPerPixel	ICAP_BITDEPTH
Planar	ICAP_PLANARCHUNKY
PixelFormat	ICAP_PIXELTYPE
Compression	ICAP_COMPRESSION

**ImageWidth and ImageLength are actually provided in pixels whereas TW_FRAME uses ICAP_UNITS.

Resolving Conflict Between ICAP_FRAMES, ICAP_SUPPORTEDSIZES, DAT_IMAGELAYOUT

Since there are several ways to negotiate the scan area, it becomes confusing when deciding what should take precedence. It is logical to assume that the last method used to set the frame will dictate the current frame. However, it may still be confusing to decide how that is represented during a MSG_GET operation for any of the three methods. The following behavior is suggested.

Note: Frame extents are only limited by ICAP_PHYSICALWIDTH and ICAP_PHYSICALHEIGHT. Setting ICAP_SUPPORTEDSIZES does NOT imply a new extent limitation. TWSS_xxxx sizes are simply predefined fixed frame sizes.

- If the frame is set in DAT_IMAGELAYOUT
 - ICAP_FRAMES shall respond to MSG_GETCURRENT with the dimensions of the frame set in the DAT_IMAGELAYOUT call.
 - ICAP_SUPPORTEDSIZES shall respond to MSG_GETCURRENT with TWSS_NONE
- If the current frame is set from ICAP_FRAMES
 - DAT_IMAGELAYOUT shall respond with the dimensions of the current frame set in ICAP_FRAMES
 - ICAP_SUPPORTEDSIZES shall respond to MSG_GETCURRENT with TWSS_NONE
- If the current fixed frame is set from ICAP_SUPPORTEDSIZES
 - DAT_IMAGELAYOUT shall respond to MSG_GET with the dimensions of the fixed frame specified in ICAP_SUPPORTEDSIZES
 - ICAP_FRAMES shall respond to MSG_GETCURRENT with the dimensions of the fixed frame specified in ICAP_SUPPORTEDSIZES

ICAP_ROTATION, ICAP_ORIENTATION Affect on ICAP_FRAMES, DAT_IMAGELAYOUT, DAT_IMAGEINFO

There is considerable confusion when trying to resolve the affect of Rotation and Orientation on the current frames and image layout. After careful consideration of the specification it has been

concluded that ICAP_ROTATION and ICAP_ORIENTATION shall be applied after considering ICAP_FRAMES and DAT_IMAGELAYOUT.

Obviously a change in orientation will have an effect on the output image dimensions, so these must be reflected in DAT_IMAGEINFO during State 6. The resulting image dimensions shall be reported by the data source after considering the affect of the rotation on the current frame.

ICAP_ORIENTATION and ICAP_ROTATION are additive. The original frame is modified by ICAP_ORIENTATION as it is downloaded to the device by the Source, and represents the orientation of the paper being scanned. ICAP_ROTATION is then applied to the captured image to yield the final framing information that is reported to the Application in State 6 or 7. One possible reason for combining these two values is to use them to cancel each other out. For instance, some scanners with automatic document feeders may receive a performance benefit from describing an ICAP_ORIENTATION of TWOR_LANDSCAPE in combination with an ICAP_ROTATION of 90 degrees. This would allow the user to feed images in a landscape orientation (which lets them feed faster), while rotating the captured images back to portrait (which is the way the user wants to view them).

Transfer of Multiple Images

Chapter 3, "Application Implementation" discussed the transfer of a single image. Transferring multiple images simply requires looping through the single-image transfer process repeatedly whenever more images are available. Two classes of issues arise when considering multiple image transfer under TWAIN:

- What state transitions are allowable when a session is at an inter-image boundary?
- What facilities are available to support the operation of a document feeder? This includes issues related to high-performance scanning.

This section starts with a review of the single-image transfer process. This is followed by a discussion of options available to an application once the transfer of a single image is complete. Finally, document feeder issues are presented.

To briefly review the single-image transfer process:

- The application enables the Source and the session moves from State 4 to State 5.
- The Source sends the application a MSG_XFERREADY when an image is ready for transfer.
- The application uses DG_IMAGE / DAT_IMAGEINFO / MSG_GET and DG_IMAGE / DAT_IMAGELAYOUT / MSG_GET to get information about the image about to be transferred.
- The application initiates the transfer using a DG_CONTROL / DAT_IMAGExxxxFER / MSG_GET operation. The transfer occurs.
- Following a successful transfer, the Source returns TWRC_XFERDONE.
- The application sends the DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER operation to acknowledge the end of the transfer and learn the number of pending transfers.

If the intent behind transferring a single image is to simply flush it from the Source (for example, an application may want to scan only every other page from a stack placed in a scanner with a document feeder), the following operation suffices:

- Issue a `CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER` operation. As with normal image transfer, this operation tells the Source that the application has completed acquisition of the current image, and the Source responds by reporting the number of pending transfers.

Preparing for Multiple Image Transfer

The `DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER` operation issued by the application at the end of every image transfer performs two important functions:

- It returns a count of pending transfers (in `TW_PENDINGXFERS.Count`)
- It transitions the session to State 6 (Transfer Ready) if the count of pending transfers is nonzero, or to State 5 (Source Enabled) if the count is zero. Recall that the count returned is a positive value if the Source knows the number of images available for acquisition. If the Source does not know the number of images available, the count returned is -1. The latter situation can occur if, for example, a document feeder is in use. Note that not knowing the number of images available includes the possibility that no further images are available; see the description of `DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER` for more on this.

We have just seen that after the `MSG_ENDXFER` operation is issued following an image transfer, the session is either in State 6 or State 5; that is, the session is still very much in an active state. If the session is in State 6 (i.e. “an image is available”), the application takes one of two actions so as to eventually transition the session to State 5 (i.e. “Source is ready to acquire an image, though none is available”):

- It continues to perform the single-image transfer process outlined earlier until no more images are available, or
- It issues a `DG_CONTROL / DAT_PENDINGXFERS / MSG_RESET` to flush all pending transfers from the Source.

Once the session is back in State 5, the application has to decide whether to stay in State 5 or transition down to State 4 (“Source is open, and ready for capability negotiation”). Two scenarios are possible here.

In one scenario, the application lets the Source control further state transitions. If the Source sends it a `MSG_XFERREADY`, the application restarts the multiple image transfer loop described above. If the Source sends it a `MSG_CLOSEDREQ` (e.g. because the user activated the “Done” trigger on the UI displayed by the Source), the application sends back a `DG_CONTROL / DAT_USERINTERFACE / MSG_DISABLED`, thereby putting the session in State 4.

In the other scenario, the application directly controls session state transitions. For example, the application may want to shut down the current session as soon as the current batch of images have been transferred. In this case, the application issues a `DG_CONTROL / DAT_USERINTERFACE / MSG_DISABLED` as soon as the pending transfers count reaches zero.

It should be noted that there is no “right”, “wrong” or “preferred” scenario for an application to follow when deciding what to do once all images in the current set have been transferred. If an application wants to let the user control the termination of a session explicitly, it may well wait for the Source to send it a `MSG_CLOSEDREQ`. On the other hand, the application may have a strong sense of what constitutes a session; for example, it may want to terminate a scan session as soon as a blank page is transferred. In such a case, the application will want to control the condition under which the `MSG_DISABLED` is sent.

Use of a Document Feeder

The term document feeder can refer to a physical device's automatic document feeder, such as might be available with a scanner, or to the logical feeding ability of an image database. Both input mechanisms apply although the following text uses the physical feeder for its discussion. The topics covered in this section are:

- Controlling whether to scan pages from the document feeder or the platen
- Detecting whether or not paper is ready for scanning
- Controlling scan lookahead

Note that these concepts are applicable to scanners that do not have feeders; see the discussion below for details.

Selecting the Document Feeder

Sometimes the use of a document feeder actually alters how the image is acquired. For instance, a scanner may move its light bar over a piece of paper if the paper is placed on a platen. When a document feeder is used, however, the same scanner might hold the light bar stable and scan the moving paper. To prepare for such variations the application and Source can explicitly agree to use the document feeder. The negotiation for this action must occur during State 4 **before** the Source is enabled using the following capability.

CAP_FEEDERENABLED

Determine if a Source has a document feeder available and, if so, select that option.

- To determine if this capability is supported, use a DG_CONTROL / DAT_CAPABILITY / MSG_GET operation. TWRC_FAILURE / TWCC_CAPUNSUPPORTED indicates this Source does not have the ability to select the document feeder.
- If supported, use the DG_CONTROL / DAT_CAPABILITY / MSG_SET operation during State 4.
- Set TW_CAPABILITY.Cap to CAP_FEEDERENABLED.
- Create a container of type TW_ONEVALUE and set it to TRUE. Reference TW_CAPABILITY.hContainer to the container.
- Execute the MSG_SET operation and check the Return Code.

If TWRC_SUCCESS then the feeder is available and your request to use it was accepted. The application can now set other document feeder capabilities.

If TWRC_FAILURE and TWCC_CAPUNSUPPORTED, TWCC_CAPBADOPERATION, or TWCC_BADVALUE then this Source does not have a document feeder capability or does not allow it to be selected explicitly.

Note: If an application wanted to prevent the user from using a feeder, the application should use a MSG_SET operation to set the CAP_FEEDERENABLED capability to FALSE.

Detecting Whether an Image is Ready for Acquisition

Having an image ready for acquisition in the Source device is independent of having a selectable document feeder. There are three possibilities here:

- The Source cannot tell whether an image is available,
- An image is available for acquisition, or
- No image is available for acquisition

These cases can be detected by first determining whether a Source can tell that image data is available for acquisition (case 1. vs. cases 2. and 3.) and then determining whether image data is available (case 2. vs. case 3.) The capabilities used to do so are as follows:

CAP_PAPERDETECTABLE

First, determine if the Source can tell that documents are loaded.

- To check if a Source can detect documents, use the DG_CONTROL / DAT_CAPABILITY / MSG_GET operation.
- Set the TW_CAPABILITY.Cap field to CAP_PAPERDETECTABLE.
- The Source returns TWRC_SUCCESS with the hContainer structure's value set to TRUE if it can detect a loaded document that is ready for acquisition. If the result code is TWRC_FAILURE with TWCC_CAPUNSUPPORTED or TWCC_BADVALUE, then the Source cannot detect that paper is loaded.

Note: CAP_PAPERDETECTABLE can be used independently of CAP_FEEDERENABLED. Also, an automatic document feeder need not be present for a Source to support this capability; e.g. a scanner that can detect paper on its platen should return TRUE.

The application cannot set this capability. The Source is simply reporting on a condition.

CAP_FEEDERLOADED

Next, determine if there are documents loaded in the feeder.

- To check if pages are present, use the DG_CONTROL / DAT_CAPABILITY / MSG_GET operation.
- Set the TW_CAPABILITY.Cap field to CAP_FEEDERLOADED.
- The Source returns TRUE if there are documents loaded. The information is in the container structure pointed to by the hContainer field of the TW_CAPABILITY structure.

Note: Neither CAP_FEEDERENABLED nor CAP_PAPERDETECTABLE need be TRUE to use this capability. A FALSE indication from this capability simply indicates that the feeder is not loaded or that the Source's feeder cannot tell. For a definitive answer, be sure to check CAP_PAPERDETECTABLE.

Controlling Scan Lookahead

With low-end scanners there is usually ample time for the CPU handling the image acquisition to process incoming image data on-the-fly or in the scan delay between pages. However, with higher performance scanners the CPU image processing time for a given page can become a significant fraction of the scan time. This problem can be alleviated if the scanner can scan ahead image data that the CPU has yet to acquire. This data can be buffered in scanner-local memory, or stored in main memory by the Source via a DMA operation while the CPU processes the current image.

Scan look-ahead is not always desirable, however. This is because the decision to continue a scan may be determined by the results of previously scanned images. For example, a scanning application may decide to stop a scan whenever it sees a blank page. If scan look-ahead were always enabled, one or more pages past the blank page may be scanned and transferred to the scanner's output bin. Such behavior may be incorrect from the point of view of the application's design

We have argued that the ability to control scan look-ahead is highly desirable. However, a single "enable scan look-ahead" command is insufficient to capture the richness of function provided by some scanners. In particular, TWAIN's model of document feeding has each image (e.g., sheet of paper) transition through a three stage process.

1. **Image is in input bin.** This action is taken by the user (for example, by placing a stack of paper into an auto-feeder.)
2. **Image is ready for scan.** This action causes the next available image to be placed at the start of the scan area. Set the CAP_AUTOFEED capability(described below)to automatically feed images to the start of the scan area.
3. **Image is scanned.** This action actually causes the image to be scanned. For example, the DG_IMAGE/DAT_IMAGEMEMXFER/MSG_GET operation initiates image transfer to an application via buffered memory. TWAIN allows a Source to pre-fetch images into Source-local memory (even before the application requests them) by setting the CAP_AUTOSCAN capability.

CAP_AUTOFEED

Enable the Source's automatic document feeding process.

- Use DG_CONTROL / DAT_CAPABILITY / MSG_SET.
- Set the TW_CAPABILITY.Cap field to CAP_AUTOFEED and set the capability to TRUE.
- When set to TRUE, the behavior of the Source is to eject one page and feed the next page after all frames on the first page are acquired. This automatic feeding process will continue whenever there is image data ready for acquisition (and the Source is in an enabled state). CAP_FEEDERLOADED is TRUE showing that pages are in the document feeder.

Note: CAP_FEEDERENABLED must be set to TRUE to use this capability. If not, the Source should return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

CAP_AUTOSCAN

Enable the Source's automatic document scanning process.

- Use DG_CONTROL / DAT_CAPABILITY / MSG_SET.
- Set the TW_CAPABILITY.Cap field to CAP_AUTOSCAN and set the capability to TRUE.
- When set to TRUE, the behavior of the Source is to eject one page and scan the next page after all frames on the first page are acquired. This automatic scanning process will continue whenever there is image data ready for acquisition (and the Source is in an enabled state).

Note: Setting CAP_AUTOSCAN to TRUE implicitly sets CAP_AUTOFEED to TRUE also.

When your application uses automatic document feeding:

- Set `CAP_XFERCOUNT` to -1 indicating your application can accept multiple images.
- Expect the Source to return the `TW_PENDINGXFERS.Count` as -1. It indicates the Source has more images to transfer but it is not sure how many.
- Using automatic document feeding does not change the process of transferring multiple documents described earlier and in [Chapter 3, "Application Implementation."](#)

Control of the Document Feeding by the Application

In addition to automatic document feeding, TWAIN provides an option for an application to manually control the feeding of documents. This is only possible if the Source agrees to negotiate the following capabilities during States 5 and 6 by use of `CAP_EXTENDEDCAPS`. If `CAP_AUTOFEED` is set to `TRUE`, it can impact the way the Source responds to the following capabilities as indicated below.

CAP_FEEDPAGE

- If the application sets this capability to `TRUE`, the Source will eject the current page (if any) and feed the next page.
- To work as described requires that `CAP_FEEDERENABLED` and `CAP_FEEDERLOADED` be `TRUE`.
- If `CAP_AUTOFEED` is `TRUE`, the action is the still the same.
- The page ejected corresponds to the image that the application is acquiring (or is about to acquire). Therefore, if `CAP_AUTOSCAN` is `TRUE` and one or more pages have been scanned speculatively, the page ejected may correspond to a page that has already been scanned into Source-local buffers.

CAP_CLEARPAGE

- If the application sets this capability to `TRUE`, the Source will eject the current page and leave the feeder acquire area empty (that is, with no image ready to acquire).
- To work as described, this requires that `CAP_FEEDERENABLED` be `TRUE` and there be a paper in the feeder acquire area to begin with.
- If `CAP_AUTOFEED` is `TRUE`, the next page will advance to the acquire area.
- If `CAP_AUTOSCAN` is `TRUE`, setting this capability returns `TWRC_FAILURE` with `TWCC_BADVALUE`.

CAP_REWINDPAGE

- If the application sets this capability to `TRUE`, the Source will return the current page to the input area and return the last page from the output area into the acquisition area.
- To work as described requires that `CAP_FEEDERENABLED` be `TRUE`.
- If `CAP_AUTOFEED` is `TRUE`, the normal automatic feeding will continue after all frames of this page are acquired.
- The page rewound corresponds to the image that the application is acquiring. Therefore, if `CAP_AUTOSCAN` is `TRUE` and one or more pages have been scanned speculatively, the page rewound may correspond to a page that has already been scanned into Source-local buffers.

Transfer of Compressed Data

When using the Buffered Memory mode for transferring images, some Sources may support the transfer of data in a compressed format.

To determine if a Source supports transfer of compressed data and to set the capability

1. Use the DG_CONTROL / DAT_CAPABILITY / MSG_GET operation.
2. Set the TW_CAPABILITY.Cap field to ICAP_COMPRESSION.
3. The Source returns information about the compression schemes they support in the container structure pointed to by the hContainer field of TW_CAPABILITY. The identifiers for the compression alternatives all begin with TWCP_, such as TWCP_PACKBITS, and can be seen in the Constants section of [Chapter 8, "Data Types and Data Structures"](#) and in the TWAIN.H file.
4. If you wish to negotiate for the transfer to use one of the compression schemes shown, use the DG_CONTROL / DAT_CAPABILITY / MSG_SET operation.

The TW_IMAGEMEMXFER structure is used with the DG_IMAGE / DAT_IMAGEMEMXFER / MSG_GET operation. The structure looks like this:

```
typedef struct {
    TW_UINT16    Compression; /* A TWCP_xxxx constant */
    TW_UINT32    BytesPerRow;
    TW_UINT32    Columns;
    TW_UINT32    Rows;
    TW_UINT32    XOffset;
    TW_UINT32    YOffset;
    TW_UINT32    BytesWritten;
    TW_MEMORY    Memory;
} TW_IMAGEMEMXFER, FAR *pTW_IMAGEMEMXFER;
```

When compressed strips of data are transferred:

- The BytesPerRow field will be set to 0. The Columns, Rows, XOffset, and YOffset fields will contain TWON_DONTCARE32 indicating the fields hold invalid values. (The original image height and width are available by using the DG_IMAGE / DAT_IMAGEINFO / MSG_GET operation during State 6 prior to the transfer.)
- Transfer buffers are always completely filled by the Source. For compressed data, it is very likely that at least one partial line will be written into the buffer.
- The application is responsible for deallocating the buffers.

When compressed, tiled data are transferred:

- All fields in the structure contain valid data. BytesPerRow, Columns, Rows, XOffset, and YOffset all describe the uncompressed tile. Compression and BytesWritten describe the compressed tile.

- In this case, unlike with compressed, strip data transfer, the Source allocates the transfer buffers. This allows the Source to create buffers of differing sizes so that complete, compressed tiles can be transferred to the application intact (not split between sequential buffers). Under these conditions, the application should set the fields of the TW_MEMORY structure so Flags is TWMF_DSOWNS, Length is TWON_DONTCARE32 and TheMem is NULL. The Source must assume that the application will keep the previous buffer rather than releasing it. Therefore, the Source must allocate a new buffer for each transfer.
- The application is responsible for deallocating the buffers.
- Finally, the application cannot assume that the tiles will be transferred in any particular, logical order.

JPEG Compression

TWAIN supports transfer of several forms of compressed data. JPEG compression is one of them. The JPEG compression algorithm provides compression ratios in the range of 10:1 to 25:1 for grayscale and full-color images, often without causing visible loss of image quality. This compression, which is created by the application of a series of “perceptual” filters, is achieved in three stages:

Color Space Transformation and Component Subsampling (Color Images Only, Not for Grayscale)

The human eye is far more sensitive to light intensity (luminance) than it is to light frequency (chrominance, or “color”) since it has, on average, 100 million detectors for brightness (the “rods”) but only about 6 million detectors for color (the “cones”). Substantial image compression can be achieved simply by converting a color image into a more efficient luminance/chrominance color space and then subsampling the chrominance components.

This conversion is provided for by the TW_JPEGCOMPRESSION structure. By specifying the TW_JPEGCOMPRESSION.ColorSpace = TWPT_YUV, Source RGB data is converted into more space-efficient YUV data (better known as CCIR 601-1 or YCbCr).

TW_JPEGCOMPRESSION.SubSampling specifies the ratio of luminance to chrominance samples in the resulting YUV data stream, and a typical choice calls for two luminance samples for every chrominance sample. This type of subsampling is specified by entering 0x21102110 into the TW_JPEGCOMPRESSION.SubSampling field. A larger ratio of four luminance samples for every chrominance sample is represented by 0x41104110. To sample two luminance values for every chrominance sample in both the horizontal and vertical axes, use a value of 0x21102110.

Application of the Discrete Cosine Transform (DCT) and Quantization

The original components (with or without color space conversion) are next mathematically converted into a spatial frequency representation using the DCT and then filtered with quantization matrices (each frequency component is divided by its corresponding member in a quantization matrix). The quantization matrices are specified by TW_JPEGCOMPRESSION.QuantTable[] and up to four quantization matrices may be defined for up to four different original components. TW_JPEGCOMPRESSION.QuantMap[] maps the particular original component to its respective quantization matrix.

Note: Defaults are provided for the quantization map and tables are suggested in Section K of the JPEG Draft International Standard, version 10918-1 are used as the default tables for QuantTable, HuffmanDC, and HuffmanAC by TWAIN. The default tables are selected by putting NULL into each of the TW_JPEGCOMPRESSION.QuantTable[] entries.

Huffman encoding

The resulting coefficients from the DCT and quantization steps are further compressed in one final stage using a loss-less compression algorithm called Huffman encoding. Application developers can provide Huffman tables, though typically the default tables – selected by writing `NULL` into `TW_JPEGCOMPRESSION.HuffmanDC[]` and `TW_JPEGCOMPRESSION.HuffmanAC[]` – yield very good results.

The algorithm optionally supports the use of restart marker codes. The purpose of these markers is to allow random access to strips of compressed data in JPEG data stream. They are more fully described in the JPEG specification.

See [Chapter 8, "Data Types and Data Structures"](#) for the definition of the TW_JPEGCOMPRESSION data structure. Example data structures are shown below for RGB image compression and grayscale image compression:

```

/* RGB image compression - YUV conversion and 2:1:1 chrominance */
/* subsampling */
typedef struct TW_JPEGCOMPRESSION myJPEG;
myJPEG.ColorSpace      = TWPT_YUV;          // convert RGB to YUV
myJPEG.SubSampling     = 0x21102110;       // 2 Y for each U, V
myJPEG.NumComponents   = 3;                 // Y, U, V
myJPEG.RestartFrequency = 0;                // No restart markers
myJPEG.QuantMap[0]     = 0;                 // Y component uses table0
myJPEG.QuantMap[1]     = 1;                 // U component uses table 1
myJPEG.QuantMap[2]     = 1;                 // V component uses table 1
myJPEG.QuantTable[0]   = NULL;              // select defaults for quant
                                           // tables
myJPEG.QuantTable[1]   = NULL;              //
myJPEG.QuantTable[2]   = NULL;              //
myJPEG.HuffmanMap[0]   = 0;                 // Y component uses DC & AC
                                           // table 0
myJPEG.HuffmanMap[1]   = 1;                 // U component uses DC & AC
                                           // table 1
myJPEG.HuffmanMap[2]   = 1;                 // V component uses DC & AC
                                           // table 1
myJPEG.HuffmanDC[0]    = NULL;              // select default for
Huffman
                                           // tables
myJPEG.HuffmanDC[1]    = NULL;              //
myJPEG.HuffmanAC[0]    = NULL;              //
myJPEG.HuffmanAC[1]    = NULL;              //
/* Grayscale image compression - no color space conversion or */
/* subsampling */
typedef struct TW_JPEGCOMPRESSION myJPEG;
myJPEG.ColorSpace      = TWPT_GRAY;         // Grayscale data
myJPEG.SubSampling     = 0x10001000;       // no chrominance
components
myJPEG.NumComponents   = 1;                 // Grayscale
myJPEG.RestartFrequency = 0;                // No restart markers
myJPEG.QuantMap[0]     = 0;                 // select default for quant
                                           // map
myJPEG.QuantTable[0]   = NULL;              //
myJPEG.HuffmanMap[0]   = 0;                 // select default for Huffman
                                           // tables
myJPEG.HuffmanDC[0]    = NULL;              //
myJPEG.HuffmanAC[0]    = NULL;              //

```

The resulting compressed images from these examples will be compatible with the JPEG File Interchange Format (JFIF version 1.1) and will therefore be usable by a variety of applications that are JFIF-aware.

Alternative User Interfaces

Alternatives to Using the Source Manager's Select Source Dialog

TWAIN ships its Source Manager code to act as the communication vehicle between application and Source. One of the services the Source Manager provides is locating all available Sources that meet the application's requirements and presenting those to the user for selection.

It is recommended that the application use this approach. However, the application is not required to use this service. Two alternatives exist:

- The application can develop and present its own custom selection interface to the user. This is presented in response to the user choosing **Select Source...** from its menu.
- Or, if the application is dedicated to control of a specific Source, the application can transparently select the Source. In this case, the application does not functionally need to have a Select Source... option in the menu but a grayed-out one should be displayed for consistency with all other TWAIN-compliant applications.

Displaying a custom selection interface:

1. Use the `DG_CONTROL / DAT_IDENTITY / MSG_GETFIRST` operation to have the Source Manager locate the first Source available. The name of the Source is contained in the `TW_IDENTITY.ProductName` field. Save the `TW_IDENTITY` structure.
2. Use the `DG_CONTROL / DAT_IDENTITY / MSG_GETNEXT` to have the Source Manager locate the next Source. Repeatedly use this operation until it returns `TWRC_ENDOFLIST` indicating no more Sources are available. Save the `TW_IDENTITY` structure.
3. Use the `ProductName` information to display the choices to the user. Once they have made their selection, use the saved `TW_IDENTITY` structure and the `DG_CONTROL / DAT_IDENTITY / MSG_OPENDS` operation to have the Source Manager open the desired Source. (Note, using this approach, as opposed to the `MSG_USERSELECT` operation, the Source Manager does not update the system default Source information to reflect your choice.)

Transparently selecting a Source:

If the application wants to open the system default Source, use the `DG_CONTROL / DAT_IDENTITY / MSG_GETDEFAULT` operation to have the Source Manager locate the default Source and fill the `TW_IDENTITY` structure with information about it. The name of the Source is contained in the `TW_IDENTITY.ProductName` field. Save the `TW_IDENTITY` structure.

OR

If you know the `ProductName` of the Source you wish to use and it is not the system default Source, use the `DG_CONTROL / DAT_IDENTITY / MSG_GETFIRST` and `DG_CONTROL / DAT_IDENTITY / MSG_GETNEXT` operations to have the Source Manager locate each Source. You must continue looking at Sources until you verify that the desired Source is available. Save the `TW_IDENTITY` structure when you locate the Source you want. If the Return Code `TWRC_ENDOFLIST` appears before the desired Source is located, it is not available.

Use the saved TW_IDENTITY structure and the DG_CONTROL / DAT_IDENTITY / MSG_OPENS operation to have the Source Manager open the desired Source. (Note, using this approach, rather than MSG_USERSELECT, the Source Manager does not update the system default Source information to reflect your choice.)

Alternatives to Using the Source's User Interface

Just as with the Source Manager's Select Source dialog, the application may ask to not use the Source's user interface. Certain types of applications may not want to have the Source's user interface displayed. An example of this can be seen in some text recognition packages that wish to negotiate a few capabilities (i.e. pixel type, resolution, page size) and then proceed directly to acquiring and transferring the data.

To Enable the Source without Displaying its User Interface

- Use the DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLEDS operation.
- Set the ShowUI field of the TW_USERINTERFACE structure to FALSE.
- When the command is received and accepted (TWRC_SUCCESS), the Source does not display a user interface but is armed to begin capturing data. For example, in a flatbed scanner, the light bar will light and begin to move. A handheld scanner will be armed and ready to acquire data when the "go" button is pressed on the scanner. Other devices may respond differently but they all will either begin acquisition immediately or be armed to begin acquiring data as soon as the user interacts with the device.

Capability Negotiation is Essential when the Source's User Interface is not Displayed

- Since the Source's user interface is not displayed, the Source will not be giving the user the opportunity to select the information to be acquired, etc. Unless default values are acceptable, current values for all image acquisition and control parameters must be negotiated before the Source is enabled, i.e. while the session is in State 4.

When TW_USERINTERFACE.ShowUI is set to FALSE:

- The application is still required to pass all events to the Source (via the DG_CONTROL / DAT_EVENT / MSG_PROCESSEVENT operation) while the Source is enabled.
- The Source must display the minimum possible user interface containing only those controls required to make the device useful in context. In general, this means that no user interface is displayed, however certain devices may still require a trigger to initiate the scan.
- The Source still displays a progress indicator during the acquisition. The application can suppress this by setting CAP_INDICATORS to FALSE, if the Source specified CAP_UICONTROLLABLE as TRUE.
- The Source still displays errors and other messages related to the operation of its device. The application can suppress this by setting CAP_INDICATORS to FALSE, if the Source specified CAP_UICONTROLLABLE as TRUE..
- The Source still sends the application a MSG_XFERREADY notice when the data is ready to be transferred.
- The Source may or may not send a MSG_CLOSEDREQ to the application asking to be closed since this is often user-initiated. Therefore, after the Source has returned to State 5 (following the DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER operation and the

TW_PENDINGXFERS.Count = 0), the application can send the DG_CONTROL / DAT_USERINTERFACE / MSG_DISABLED operation.

Note: Some Sources may display the UI even when ShowUI is set to FALSE. An application can determine whether ShowUI can be set by interrogating the CAP_UICONTROLLABLE capability. If CAP_UICONTROLLABLE returns FALSE but the ShowUI input value is set to FALSE in an activation of DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLED, the enable DS operation returns TWRC_CHECKSTATUS but displays the UI regardless. Therefore, an application that requires that the UI be disabled should interrogate CAP_UICONTROLLABLE before issuing MSG_ENABLED.

Modal Versus Modeless User Interfaces

The Source Manager's user interface is a modal interface but the Source may provide a modeless or modal interface. Here are the differences:

Modeless

When a Source uses a modeless user interface, although the Source's interface is displayed, the user is still able to access the application by clicking on the application's window and making it active.

The user is expected to click on a Close button on the Source's user interface when they are ready for that display to go away. The application must NOT automatically close a modeless Source after the first (or any subsequent) transfer, even if the application is only interested in receiving a single transfer. If the application closes the Source before the user requests it, the user is likely to become confused about why the window disappeared. Wait until the user indicates the desire to close the Source's window and the Source sends this request (MSG_CLOSEDREQ) to the application before closing the Source.

Modal

A Source using a modal user interface prevents the user from accessing other windows.

For Windows only, if the interface is application modal, the user cannot access other applications but can still access system utilities. If the interface is system modal (which is rare), the user cannot access anything else at an application or system level. A system modal dialog might be used to display a serious error message, like a UAE.

If using a modal interface, the Source can perform only one acquire during a session although there may be multiple frames per acquisition. The Source will send a close request to the application following the completion of the data transfer. Again, the application waits to receive this request.

The Source indicates if it is using a modeless or modal interface after the application enables it using the DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLED operation. The data structure used in the operation (TW_USERINTERFACE) contains a field, ShowUI, which is set by the application to indicate whether the Source should display its user interface. If the application requests the user interface be shown, it may also set the ModalUI field to indicate if it wishes the Source's GUI to run modal (TRUE) or modeless (FALSE).

When requested by the Source, the application uses the DG_CONTROL / DAT_USERINTERFACE / MSG_DISABLED operation to remove the Source's user interface.

Grayscale and Color Information for an Image

There are operation triplets in TWAIN that allow the application developer to interact with and influence the grayscale or color aspect of the images that a Source transfers to the application. The following operations provide these abilities:

- CIE Color Descriptors
DG_IMAGE / DAT_CIECOLOR / MSG_GET
- Grayscale Changes
DG_IMAGE / DAT_GRAYRESPONSE / MSG_RESET
DG_IMAGE / DAT_GRAYRESPONSE / MSG_SET
- Palette Color Data
DG_IMAGE / DAT_PALETTE8 / MSG_GET
DG_IMAGE / DAT_PALETTE8 / MSG_GETDEFAULT
DG_IMAGE / DAT_PALETTE8 / MSG_RESET
DG_IMAGE / DAT_PALETTE8 / MSG_SET
- RGB Response Curve Data
DG_IMAGE / DAT_RGBRESPONSE / MSG_RESET
DG_IMAGE / DAT_RGBRESPONSE / MSG_RESET

CIE Color Descriptors

The CIE XYZ approach is a method for storing color data which simplifies doing mathematical manipulations on the data. (The topic of CIE XYZ color space is discussed thoroughly in Appendix A.)

If your application wishes to receive the image data in this format:

1. You must ensure that the Source is able to provide data in CIE XYZ format. To check this, use the DG_CONTROL / DAT_CAPABILITY / MSG_GET operation and get information on the ICAP_PIXELTYPE. If TWPT_CIEXYZ is returned as one of the supported types, the Source can provide data in CIE XYZ format.
2. After verifying that the Source supports it, the application can specify that data transfers should use the CIE XYZ format by invoking a DG_CONTROL / DAT_CAPABILITY / MSG_SET operation on the ICAP_PIXELTYPE. Use a TW_ONEVALUE container whose value is TWPT_CIEXYZ.

To determine the parameters that were used by the Source in converting the color data into the CIE XYZ format, use the DG_IMAGE / DAT_CIECOLOR / MSG_GET operation following the transfer of the image.

Grayscale Changes

(The grayscale operations assume that the application has instructed the Source to provide grayscale data by setting its ICAP_PIXELTYPE to TWPT_GRAY and the Source is capable of this.)

The application can request that the Source apply a transfer curve to its grayscale data prior to transferring the data to the application. To do this, the application uses the `DG_IMAGE / DAT_GRAYRESPONSE / MSG_SET` operation. The desired transfer curve information is placed by the application within the `TW_GRAYRESPONSE` structure (the actual array is of type `TW_ELEMENT8`). The application must be certain to check the Return Code following this request. If the Return Code is `TWRC_FAILURE` and the Condition Code shows `TWCC_BADPROTOCOL`, this indicates the Source does not support grayscale response curves (despite supporting grayscale data).

If the Source allows the application to set the grayscale transfer curve, there must be a way to reset the curve to its original non-altered value. Therefore, the Source must have an “identity response curve” which does not alter grayscale data but transfers it exactly as acquired. When the application sends the `DG_IMAGE / DAT_GRAYRESPONSE / MSG_RESET` operation, the Source resets the grayscale response curve to its identity response curve.

Palette Color Data

(The palette8 operations assume that the application has instructed the Source to use the `TWPT_PALETTE` type for its `ICAP_PIXELTYPE` and that the Source has accepted this.)

The `DAT_PALETTE8` operations allow the application to inquire about a Source’s support for palette color data and to set up a palette color transfer. The operations are specialized for 8-bit data, whether grayscale or color (8-bit or 24-bit). The `MSG_GET` operation allows the application to learn what palette was used by the Source during the image acquisition. The application should always execute this operation immediately after an image transfer rather than before because the Source may optimize the palette during the acquisition process. Some Sources may allow an application to define the palette to be used during image acquisition via the `MSG_SET` operation. Be sure to check the Return Code to verify that it is `TWRC_SUCCESS` following a `MSG_SET` operation. That is the only way to be certain that your requested palette will actually be used during subsequent palette transfers.

RGB Response Curve Data

(The RGB Response curve operations assume that the application has instructed the Source to provide RGB data by setting its `ICAP_PIXELTYPE` to `TWPT_RGB` and the Source is capable of this.)

The application can request that the Source apply a transfer curve to its RGB data prior to transferring the data to the application. To do this, the application uses the `DG_IMAGE / DAT_RGBRESPONSE / MSG_SET` operation. The desired transfer curve information is placed by the application within the `TW_RGBRESPONSE` structure (the actual array is of type `TW_ELEMENT8`). The application must be certain to check the Return Code following this request. If the Return Code is `TWRC_FAILURE` and the Condition Code shows `TWCC_BADPROTOCOL`, this indicates the Source does not support RGB response curves (despite supporting RGB data).

If the Source allows the application to set the RGB response curve, there must be a way to reset the curve to its original non-altered value. Therefore, the Source must have an “identity response curve” which does not alter RGB data but transfers it exactly as acquired. When the application sends the `DG_IMAGE / DAT_RGBRESPONSE / MSG_RESET` operation, the Source resets the RGB response curve to its identity response curve.

Contrast, Brightness, and Shadow Values

There is considerable confusion about what is the appropriate way to present these actual features for a particular device. Anyone who has attempted to support these capabilities knows that the recommended ranges do not accurately reflect the capabilities of real world devices. Data source developers have tried many different methods of getting the correct response for their data source, and not all are consistent.

By providing a meaningful step size, or by providing a different container, a data source can provide the application with enough information to accurately model the actual ability of the device. For an application that wishes to present a custom User Interface for this type of capability, it is not really useful to the user if it provides 2000 steps from -1000 to +1000, especially if the device really only supports a small number of levels.

Since both data source developers and application developers read the same specification, it can be assumed that it is not acceptable to provide values that do not fit within the documented ranges for these types of capabilities.

The following suggestion is an example of how to follow the specification, and provide the most accurate values for the particular data source.

Example 1: ICAP_BRIGHTNESS Supporting Only Three Levels

The specification requirement stated in [Chapter 10, "Capabilities"](#) is as follows:

"Source should normalize the values into the range. Make sure that a '0' value is available as the Current Value when the Source starts up. If the Source's \pm range is asymmetric about the '0' value, set range maxima to ± 1000 and scale homogeneously from the '0' value in each direction. This will yield a positive range whose step size differs from the negative range's step size."

Note: It should be expanded in this statement that for a step size that differs in the negative and positive range, a TW_ENUMERATION container must be used. A TW_RANGE container is not suitable for representing a non-linear step size).

Assume the actual device simply supports the options normal, lighten, and darken. These can fit into the constraints by mapping actual values to required values:

Normal = 0

Lighten = -1000

Darken = 1000

These values can be placed in a TW_RANGE container with a step size of 1000, or into a TW_ENUMERATION containing only the 3 values. { -1000, 0, 1000 }, the current and default values are 0.

5

Source Implementation

Chapter Contents

The Structure of a Source	5-2
Operation Triplets	5-3
Sources and the Event Loop	5-4
User Interface Guidelines	5-7
Capability Negotiation	5-10
Data Transfers	5-12
Error Handling	5-15
Memory Management	5-17
Requirements for a Source to be TWAIN-Compliant	5-18
Other Topics	5-22

Companies that produce image-acquisition devices, and wish to gain the benefits of being TWAIN-compliant, must develop TWAIN-compliant Source software to drive their device. The Source software is the interface between TWAIN's Source Manager and the company's physical (or logical) device. To write effective Source software, the developer must be familiar with the application's expectations as discussed in the other chapters of this document.

Mac OS X includes two high-level native development environments that you can use for your application's graphical user interface: Carbon, and Cocoa. These environments are full-featured development environments in their own right, and you can write TWAIN applications and TWAIN Data Sources in any one of these environments.

Because both Carbon and Cocoa change the event handling mechanism (no `WaitNextEvent` loops), these paragraphs update and extend the section of the previous specification that describes how to modify the application event loop to support TWAIN.

Carbon and Cocoa-based Mac OS X TWAIN applications are required to supply an event handler callback function that the TWAIN DSM will call. Carbon applications using the Classic Event Manager (`WaitNextEvent`) should continue to route all events through the Data Source. However, Data Sources on Mac OS X can no longer use the Classic Event Manager.

The Structure of a Source

The following sections describe the structure of a source.

On Windows

Implementation

The Source is implemented as a Dynamic Link Library (DLL). Sources should link to `TWAIN.LIB` at link time. The Source will not run stand-alone. The DLL typically runs within the (first) calling application's heap although DLLs may be able to allocate their own heap and stack space. There is only one copy of the DLL's code and data loaded at run-time, even if more than one application accesses the Source. For more information regarding DLLs on Win32s, Windows95, and Windows NT please refer to Microsoft documents.

Naming and Location

The DLL's file name must end with a `.DS` extension. The Source Manager recursively searches for your Source in the TWAIN sub-directory of the Windows directory (typically `C:\WINDOWS` on Windows 95/98, or `C:\WINNT` on Windows NT). To reduce the chance for naming collisions, each Source should create a sub-directory beneath TWAIN, giving it a name relevant to their product. The Source DLLs are placed there. Supporting files may be placed there as well, but since this is a system directory which may only be modifiable by the System Administrator, Sources must not write any information into this directory after the installation.

Entry Points and Segment Attributes

- Every Source is required to have a single entry point called `DS_Entry` (see [Chapter 6, "Entry Points and Triplet Components"](#)). For 16-bit sources only, in order to speed up the Source Manager's ability to identify Sources, the Source entry point `DS_Entry()` and the code to respond to the `DG_CONTROL / DAT_IDENTITY / MSG_GET` operation must reside in a segment marked as `PRELOAD`. All other segments should be marked as `LOADONCALL` (with the exception of any interrupt handler that may exist in the Source which needs to be in a `FIXED` code segment).

Resources

- **Version Information** - The Microsoft `VER.DLL` is included with the TWAIN toolkit for use by your installation program, if you have one, to validate the version of the currently installed Source Manager. Sources should be marked with the Version information capability defined in Microsoft Windows 3.1. To do this, you can use the resource compiler from the version 3.1 SDK. `VER.DLL` and the version stamping are also compatible with Microsoft Windows version 3.0.
- **Icon Id** - Future versions of the TWAIN Source Manager may display the list of available Sources using a combination of the `ProductName` (in the Source's `TW_IDENTITY` structure) and an Icon (as the Macintosh version currently does). Therefore, it is recommended that you add this icon into your Source resource file today. This will allow your Source to be immediately compatible with any upcoming changes. The icon should be identified using `TWON_ICONID` from the `TWAIN.H` file.

General Notes

- **GlobalNotify** - Microsoft Windows allows only one GlobalNotify handler per task. As the Source resides in the application heap, the Source should **not** use the GMEM_NOTIFY flag on the memory blocks allocated as this may disrupt the correct behavior of the application that uses GlobalNotify.
- **Windows Exit Procedure (WEP)** - During the WEP, the Source is being unloaded by Microsoft Windows. The Source should make sure all the resources it allocated and owns get released whether or not the Source was terminated properly.

On Macintosh

Implementation

A Source on a Macintosh is implemented as a bundle. The Source will not run standalone. A separate copy of the Source's code will be made for each application that opens the Source.

Naming and Location

The extension for a Source is ds. The Source Manager will search for bundles with this extension in the /Library/Image Capture/TWAIN Data Sources/ folder. It is recommended that each Source bundle contains any other files it may require.

Compatibility with Older Data Sources

Pre Mac OS X Data Source are not compatible with the TWAIN implementation on Mac OS X.

Operation Triplets

In Chapter 3, "Application Implementation," we introduced all of the triplets that an application can send to the Source Manager or ultimately to a Source. There are several other triplet operations which do not originate from the application. Instead, they originate from the Source Manager or Source and are introduced in this chapter. All defined operation triplets are listed in detail in Chapter 7, "Operation Triplets."

Triplets from the Source Manager to the Source

There are three operation triplets that are originated by the Source Manager. They are:

DG_CONTROL / DAT_IDENTITY

MSG_GET	Returns the Source's identity structure
MSG_OPENDS	Opens and initializes the Source
MSG_CLOSEDS	Closes and unloads the Source

The DG_CONTROL / DAT_IDENTITY / MSG_GET operation is used by the Source Manager to identify available Sources. It may send this operation to the Source **at any time** and the Source **must be prepared** to respond informatively to it. That means, the Source must be able to return its identity structure before being opened by the Source Manager (with the MSG_OPENDS command). The Source's initially loaded code segment must be able to perform this function

without loading any additional code segments. This allows quick identification of all available Sources and is the only operation a Source must support before it is formally opened.

The TW_IDENTITY structure looks like this:

```
typedef struct {
    TW_UINT32      Id;
    TW_VERSION      Version;
    TW_UINT16       ProtocolMajor;
    TW_UINT16       ProtocolMinor;
    TW_UINT32       SupportedGroups;
    TW_STR32        Manufacturer;
    TW_STR32        ProductFamily;
    TW_STR32        ProductName;
} TW_IDENTITY, FAR *pTW_IDENTITY;
```

The ProductName field in the Source's TW_IDENTITY structure should uniquely identify the Source. This string will be placed in the Source Manager's Select Source... dialog for the user. (The file name of the Source should also approximate the ProductName, if possible, to add clarity for the user at installation time.) Fill in all fields except the Id field which will be assigned by the Source Manager. The unique Id number that identifies your Source during its current session will be passed to your Source when it is opened by the MSG_OPENDS operation. Sources on Windows must save this TW_IDENTITY.Id information for use when sending notifications from the Source to the application.

Sources and the Event Loop

Handling Events

On Windows, when a Source is enabled (i.e. States 5, 6, and 7), the application must pass all events (messages) to the Source. Since the Source runs subservient to the application, this ensures that the Source will receive all events for its window. The event will be passed in the TW_EVENT data structure that is referenced by a DG_CONTROL / DAT_EVENT / MSG_PROCESSEVENT command.

On Mac OS X, the Data source either uses Carbon or Cocoa. A Carbon based Data Source has to install Carbon Event Handler for all UI elements. A Cocoa Data Source gets the UI event handling for free.

Note: Starting with TWAIN 1.8, it is now possible for events to be managed in State 4 only to support CAP_DEVICEEVENTS. This is a fundamental change from previous TWAIN behavior that has been added to allow the Source to notify the Application of important changes in the state of the Source even while in State 4. Note also that the default value for CAP_DEVICEEVENTS (if supported) must be an empty TW_ARRAY, indicating the

event reporting is turned off. This is essential to allow backward compatibility with pre-1.8 Applications.

Routing all messages to all connected Sources while they are enabled places a burden on the application and creates a potential performance bottleneck. Therefore, the Source must process the incoming events as quickly as possible. The Source should examine each incoming operation before doing anything else. Only one operation's message field says MSG_PROCESSEVENT so always look at the message field first. If it indicates MSG_PROCESSEVENT then:

Immediately determine if the event belongs to the Source.

If it does

Set the Return Code for the operation to TWRC_DSEVENT

Set the TWMessage field to MSG_NULL

Process the event

Else

Set the Return Code to TWRC_NOTDSEVENT

Set the TWMessage field to MSG_NULL

Return to the application immediately

If the Source developer fails to process events with this high priority, the user may see degraded performance whenever the Source is frontmost which reflects poorly on the Source.

On Windows, the code fragment looks like the following:

```
TW_UINT16 CALLBACK DS_Entry(pTW_IDENTITY pSrc,
                             TW_UINT32 DG,
                             TW_UINT16 DAT,
                             TW_UINT16 MSG,
                             TW_MEMREF pData)
{
    TWMSG      twMsg;
    TW_UINT16 twRc;
    //Valid states 5 - 7 (or 4 - 7 if CAP_DEVICEEVENTS has been
    // negotiated to anything other than its default value of an empty
    // TW_ARRAY). As soon as the application has enabled the
    // Source it must be sending the Source events. This allows the
    // Source to receive events to update its user interface and to
    // return messages to the application. The app sends down ALL
    // message, the Source decides which ones apply to it.
    if (MSG == MSG_PROCESSEVENT)
```

```

    {
        if (hImageDlg && IsDialogMessage(hImageDlg,
            (LPMSG)((pTW_EVENT)pData)->pEvent))
        {
            twRc = TWRC_DSEVENT;

            // The source should, for proper form, return a MSG_NULL for
            // all Windows messages processed by the Data Source

            ((pTW_EVENT)pData)->TWMessage = MSG_NULL;
        }
        else
        {
            // notify the application that the source did not
            // consume this message
            twRc = TWRC_NOTDSEVENT;
            ((pTW_EVENT)pData)->TWMessage = MSG_NULL;
        }
    }
    else
    {
        // This is a Twain message, process accordingly.
        // The remainder of the Source's code follows...
    }
}

return twRc;
}

```

The Windows `IsDialogMessage()` call is used in this example. Sources can also use other Windows calls such as `TranslateAccelerator()` and `TranslateMDISYSAccel()`.

Communicating to the Application

As explained in [Chapter 3, "Application Implementation"](#), there are four instances where the Source must originate and transmit a notice to the application:

- When it has data ready to transfer (`MSG_XFERREADY`)
- The Source must send this message when the user clicks the "GO" button on the Source's user interface or when the application sends a `DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLEDS` operation with `ShowUI = FALSE`. The Source will transition from State 5 to State 6. The application should now perform their inquiries regarding `TW_IMAGEINFO` and capabilities. Then, the application issues a `DG_IMAGE / DAT_IMAGExxxxXFER / MSG_GET`

operation to begin the transfer process. Typically, though it is not required, it is at this time that a flatbed scanner (for example) will begin *simultaneously* to acquire and transfer the data using the specified transfer mode.

When it needs to have its user interface disabled (MSG_CLOSEDREQ)

- Typically, the Source will send this only when the user clicks on the **CLOSE** button on the Source's user interface or when an error occurs which is serious enough to require terminating the session with the application. The Source should be in (or transition to) State 5. The application should respond by sending a DG_CONTROL / DAT_USERINTERFACE / MSG_DISABLED operation to transition the session back to State 4.
- When the user has pressed the OK button in a Source's dialog that was brought up with DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLEDONLY (MSG_CLOSEDOK).
- Applications should use this event as the indicator that the user has set all the desired attributes from the Source's GUI.
- **When the Source needs to report a Device Event.** Note that the application must explicitly request the Source to supply Device Events (MSG_DEVICEEVENT). Sources must only provide those Device Events requested by a Source through the CAP_DEVICEEVENT capability. The default for this capability when the Source starts up is an empty TW_ARRAY, indicating that no Device Events are being reported. Applications that turn on Device Events must issue a DG_CONTROL / DAT_DEVICEEVENT / MSG_GET command as soon as possible after receiving a Device Event.

These notices are sent differently on Windows versus Macintosh systems.

On Windows

The Source creates a call to DSM_Entry (the entry point in the Source Manager) and fills the destination with the TW_IDENTITY structure of the application. The Source uses one of the following triplets:

DG_CONTROL / DAT_NULL / MSG_XFERREADY

DG_CONTROL / DAT_NULL / MSG_CLOSEDREQ

The Source Manager, on Windows, recognizes the notice and makes sure the message is received correctly by the application.

On Macintosh

Please refer to the callback mechanism described in [Chapter 3, "Application Implementation."](#)

User Interface Guidelines

Each TWAIN-compliant Source provides a user interface to assist the user in acquiring data from their device. Although each device has its own unique needs, the following guidelines are provided to increase consistency among TWAIN-compliant devices.

Displaying the User Interface

The application issues `DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLEDS` to transition the session from State 4 to 5.

The `TW_USERINTERFACE` data structure contains these fields:

- **ShowUI** - If set to `TRUE`, the Source displays its user interface. If `FALSE`, the application will be providing its own.
- **hParent** - Used by Sources on Windows only. It indicates the application's window handle. This is to be designated as the Source's parent for the dialog so it is a proper child of its parent application.
- **ModalUI** - To be set by the Application to `TRUE` or `FALSE`.

Sources are not required to allow themselves to be enabled without showing their user interface (`ShowUI = FALSE`) but it is strongly recommended that they allow this. If your Source cannot be used without its user interface, it should enable showing the user interface (just as if `ShowUI = TRUE`) and return `TWRC_CHECKSTATUS`. All Sources, however, must report whether or not they honor `ShowUI` set to `FALSE` via the `CAP_UICONTROLLABLE` capability. This allows applications to know whether the Source-supplied user interface can be suppressed before it is displayed.

When the user interface is disabled (by `DG_CONTROL / DAT_USERINTERFACE / MSG_DISABLED`), a pointer to a `TW_USERINTERFACE` is included in the `pData` parameter.

Modal versus Modeless Interfaces

As stated in [Chapter 4, "Advanced Application Implementation"](#), the Source's user interface may be modal or modeless. The modeless approach gives the user more control and is recommended whenever practical. Refer to the information following this table for specifics about Windows and Macintosh implementation.

Error and Device Control Indicators

The Source knows what is happening with the device it controls. Therefore, the Source is responsible for determining when and what information regarding errors and device controls (ex. "place paper in document feeder") should be presented to the user. Error information should be placed by the Source on top of either the application's or Source's user interface. Do not present error messages regarding capability negotiation to the user since this should be transparent.

Progress Indicators

The Source should display appropriate progress indicators for the user regarding the acquisition and/or transfer processes. The Source must provide this information regardless of whether or not its user interface is displayed (`ShowUI` equals `TRUE` or `FALSE`). To suppress the indicators when the user interface is not displayed, the application should negotiate the `CAP_INDICATORS` capability to be `FALSE`.

Impact of Capability Negotiation

If the Source has agreed to limit the Available Values and/or to set the Current Value, the interface should reflect the negotiation. However, if a capability has not been negotiated by the application, the interface should not be modified (don't gray out a control because it wasn't negotiated.)

Advanced Topics

If a Source can acquire from more than one device, the Source should allow the user to choose which device they wish to acquire from. Provide the user with a selection dialog that is similar to the one presented by the Source Manager's `Select Source...` dialog.

Implementing Modal and Modeless User Interfaces

On Windows

You cannot use the modal dialog creation call `DialogBox()` to create the Source's user interface main window. To allow event processing by both the application and the Source, this call cannot be used. Modal user interfaces in Source are not inherently bad, however. If a modal user interface makes sense for your Source, use either the `CreateDialog()` or `CreateWindow()` call.

Modal (App Modal)

It is recommended that the Source's main user interface window be created with a modeless mechanism. Source writers can still decide to make their user interface behave modally if they choose. It is even appropriate for a very simple "click and go" interface to be implemented this way.

This is done by first specifying the application's window handle (`hWndParent`) as the parent window when creating the Source's dialog/window and second by enabling/disabling the parent window during the `MSG_ENABLEDS / MSG_DISABLEDS` operations. Use `EnableWindow(hWndParent, FALSE)` to disable the application window and `EnableWindow(hWndParent, TRUE)` to re-enable it.

Modeless

If implementing a modeless user interface, specify `NULL` as the parent window handle when creating the Source's dialog/window. Also, it is suggested that you call `BringWindowToTop()` whenever a second request is made by the same application or another application requesting access to a Source that supports multiple application connections.

On Macintosh

It is recommended that the Source's main user interface window be created with a modeless mechanism. Source writers can still decide to make their user interface behave modally if they choose. It is even appropriate for a very simple "click and go" interface to be implemented this way.

Capability Negotiation

Capability negotiation is a critical area for a Source because it allows the application to understand and influence the images that it receives from your Source.

Inquiries From the Application

While the Source is open but not yet enabled (from `DG_CONTROL / DAT_IDENTITY / MSG_OPENDS` until `DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLEDS`), the application can inquire the values of all supported capabilities, and request to set those values.

Once the Source is enabled, the application may only **inquire** about capabilities. An attempt to set a capability should fail with `TWRC_FAILURE` and `TWCC_SEQERROR` (unless `CAP_EXTENDEDCAPS` was negotiated).

Responding to Inquiries

Sources must be able to respond to capability inquiries with current values at any time the Source is open (i.e. from `MSG_OPENDS` until `MSG_CLOSED`s or before posting a `MSG_CLOSEDREQ`).

A Source should respond with information to any capability that applies to your device. Only if a capability has no match with your device's features should you respond with `TWRC_FAILURE / TWCC_BADCAP`.

Refer to [Chapter 10, "Capabilities"](#) for the complete list of TWAIN-defined capabilities.

Responding to Requests to Set Capabilities

If the requested value is invalid or the Source does not support the capability, then return `TWRC_FAILURE / TWCC_CAPUNSUPPORTED`. If the requested operation (`MSG_SET`, `MSG_RESET`, etc.) is not supported, then return `TWRC_FAILURE / TWCC_CAPBADOPERATION`. If the capability is unavailable because of a dependency on another capability (i.e., `ICAP_CCITTKFACTOR` is not available unless `ICAP_COMPRESSION` is `TWCP_GROUP32D`), then return `TWCC_CAPSEQERROR`. Returning these condition codes makes it possible for an application using its own UI to intelligently make dependent capabilities available or unavailable for user access.

If the request was fulfilled, return `TWRC_SUCCESS`.

If the requested value is close to an acceptable value but doesn't match exactly, set it as closely as possible and then return `TWRC_CHECKSTATUS`.

A Source support `MSG_SET` operations using the same containers it returns through `MSG_GET`, `MSG_GETCURRENT` and `MSG_GETDEFAULT` operations.

- Example #1, a call to `DG_CONTROL / DAT_CAPABILITY / MSG_GET` returns a `TW_ENUMERTION` container. The application changes the Current Index and uses `DG_CONTROL / DAT_CAPABILITY / MSG_SET` to update the capability.

- Example #2, a call to `DG_CONTROL / DAT_CAPABILITY / MSG_GET` returns a `TW_RANGE` container. The application changes the `CurrentValue` and uses `DG_CONTROL / DAT_CAPABILITY / MSG_SET` to update the capability.

This does not imply or require support for constraining capabilities, the Source is only obligated to update the current value of the capability. If the Source does not support constraints for a capability, and the constraining values have been changed by the application, then the Source should apply the current value according to its own constraints, and if that value is valid, return `TWRC_CHECKSTATUS` to alert that application that it needs to do a `MSG_GET` to validate its changes.

- Example #3, if a Source supports the following range for `ICAP_BRIGHTNESS`: -1000.0 to -1000.0 in steps of 20.0, and if the current value is 0.0, then a call to `DG_CONTROL / DAT_CAPABILITY / MSG_SET` results in the following:

```
twrange.ItemType      = TWTY_FIX32
twrange.MinValue      = -1000.0
twrange.MaxValue      = 1000.0
twrange.StepSize      = 20.0
twrange.DefaultValue  = 0.0
twrange.CurrentValue  = 0.0
```

If the application sets `twrange.CurrentValue` to 900.0 and sends this structure to the Source using `DG_CONTROL / DAT_CAPABILITY / MSG_SET`, the call succeeds and returns `TWRC_SUCCESS`.

If the application sets both `twrange.CurrentValue` and `twrange.MaxValue` to 900.0, then the status return depends on the Source. A Source that supports constraints accepts the new value and limits `MaxValue` to 900.0. A Source that does not support constraints accepts the value 900.0, because it falls in the range of -1000 to 1000, step 20; but it returns `TWRC_CHECKSTATUS` because it was unable to accept the request to limit `MaxValue` to 900.0.

Memory Allocation

The `TW_CAPABILITY` structure used in capability negotiation is both allocated and deallocated by the application. The Container structure pointed to by the `hContainer` field in `TW_CAPABILITY` is allocated by the Source for “get” operations (`MSG_GET`, `MSG_GETCURRENT`, `MSG_GETDEFAULT`, `MSG_RESET`) and by the application for the `MSG_SET` operation. Regardless of which one allocates the container, the application is responsible for deallocating it when it is done with it.

Limitations Imposed by the Negotiation

If a Source agrees to allow an application to restrict a capability, it is critical that the Source abide by that agreement. If at all possible, the Source’s user interface should reflect the agreement and not offer invalid options. The Source should never transfer data that violates the agreement reached during capability negotiation. In that situation, the Source can decide to fail the transfer or somehow adjust the values.

Data Transfers

Transfer Modes

All Sources must support Native and Buffered Memory data transfers. It is strongly suggested that they support Disk File mode, too. The default mode is Native. To select one of the other modes, the application must negotiate the `ICAP_XFERMECH` capability (whose default is `TWSX_NATIVE`). Sources must support negotiation of this capability. The native format for Microsoft Windows is DIB. For Macintosh, the native format is a `PICT`. The version of `PICT` to be transferred is the latest version available on the machine on which the application is running (usually `PICT II` for machines running 32-bit/color QuickDraw and `PICT I` for machines running black and white QuickDraw).

Initiating a Transfer

Transfers are initiated by the application (using the `DG_IMAGE` / `DAT_IMAGExxxxxFER` / `MSG_GET` operations). A successful transfer transitions the session to State 7. If the transfer fails, the Source returns `TWRC_FAILURE` with the appropriate Condition Code and remains in State 6.

Concluding a Successful Transfer

To signal that the transfer is complete (i.e. the file is completed or the last buffer filled), the Source should return `TWRC_XFERDONE`. In response, the application must send a `DG_CONTROL` / `DAT_PENDINGXFERS` / `MSG_ENDXFER` operation. Only then may the Source transition from State 7 back to State 6 or to State 5 if no more images are ready to be transferred.

If more images are pending transfer, the Source must wait in State 6 until the application either requests the transfer or aborts the transfers. The Source may not “time-out” on any TWAIN transaction.

Aborting a Transfer

Either the application or Source can originate the termination of a transfer (although the application cannot do this in the middle of a Native or Disk File mode transfer). The Source generally terminates the transfer if the user cancels the transfer or a device error occurs which the Source determines is fatal to the transfer or the connection with the application. If the user canceled the transfer, the Source should return `TWRC_CANCEL` to signal the premature termination. The session remains in State 7 until the application sends the `DG_CONTROL` / `DAT_PENDINGXFERS` / `MSG_ENDXFER` operation. If the Source aborts the transfer, it returns `TWRC_FAILURE` and the session typically remains in State 6. (If the failure occurs during the second buffer, or a later buffer, of a Buffered Memory transfer, the session remains in State 7.)

Native Mode Transfers

On Native mode transfers, the data parameter in the `DSM_Entry` call is a pointer to a variable of type `TW_UINT32`.

On Windows

The low word of this 32-bit integer is a handle variable to a DIB (Device Independent Bitmap) located in memory.

On Macintosh

This 32-bit integer is a handle to a Picture (a PicHandle). It is a Quick Draw picture located in memory.

Native transfers require the data to be transferred to a single large block of RAM. Therefore, they always face the risk of having an inadequate amount of RAM available to perform the transfer successfully.

If inadequate memory prevents the transfer, the Source has these options:

- Fail the transfer operation- Return `TWRC_FAILURE / TWCC_LOWMEMORY`
- Allow the user to clip the data to fit into available memory - Return `TWRC_XFERDONE`
- Allow the user to cancel the operation - Return `TWRC_CANCEL`

If the operation fails, the session remains in State 6. If the operation is canceled, the session remains in State 7 awaiting the `DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER` or `MSG_RESET` from the application. The application can return the session to State 4 and attempt to renegotiate the transfer mechanism (`ICAP_XFERMECH`) to Disk File or Buffered Memory mode.

The Source cannot be interrupted by the application when it is acquiring an image through Native Mode Transfer. The Source's user interface may allow the user to abort the transfer, but the application will not be able to do so even if the application presents its own acquisition user interface.

Disk File Mode Transfers

The Source selects a default file format and file name (typically, `TWAIN.TMP` in the current directory). It reports this information to the application in response to the `DG_CONTROL / DAT_SETUPFILEXFER / MSG_GET`.

The application may determine all of the Source's supported file formats by using the `ICAP_IMAGEFILEFORMAT` capability. Based on this information, the application can request a particular file format and define its own choice of file name for the transfer. The desired file format and file name will be communicated to the Source in a `DG_CONTROL / DAT_SETUPFILEXFER / MSG_SET`.

When the Source receives the `DG_IMAGE / DAT_IMAGEFILEXFER / MSG_SET` operation, it should transfer the data into the designated file. The following conditions may exist:

Condition	How to Handle
No file name and/or file format was specified by the application during setup	Use either the Source's default file name or the last file information given to the Source by the application. Create the file.

Condition	How to Handle
The application specified a file but failed to create it	Create the application's defined file.
The application's specified file exists but has data in it	Overwrite the existing data.

The Source cannot be interrupted by the application when it is acquiring a file. The Source's user interface may allow the user to abort the transfer, but the application will not be able to do so even if the application presents its own acquisition user interface.

Buffered Memory Mode Transfers

When the Source transfers strips of data, the application allocates and deallocates buffers used for a Buffered Memory mode transfer. However, the Source must recommend appropriate sizes for those buffers and should check that the application has followed its recommendations.

When the Source transfers tiles of data, the Source allocates the buffers. The application is responsible for deallocating the memory.

To determine the Source's recommendations for buffer sizes, the application performs a `DG_CONTROL / DAT_SETUPMEMXFER / MSG_GET` operation. The Source fills in the `MinBufSize`, `MaxBufSize`, and `Preferred` fields to communicate its buffer recommendations. Buffers must be double-word aligned and padded with zeros per raster line.

When an application issues a `DG_IMAGE / DAT_IMAGEMEMXFER / MSG_GET` operation, check the `TW_IMAGEMEMXFER.Memory.Length` field to determine the size of the buffer being presented to you. If it does not fit the recommendations, fail the operation with `TWRC_FAILURE / TWCC_BADVALUE`.

If the buffer is an appropriate size, fill in the required information.

- Sources must write one or more complete lines of image data (the full width of a strip or tile) into the buffer. Partial lines of image data are not allowed. If some of the buffer is unused, fill it in with zeros. Additionally, each line must be aligned to a 32-bit boundary. Return `TWRC_SUCCESS` after each successful buffer except for the last one (return `TWRC_XFERDONE` after that one).
- If the Source is transferring data whose bit depth is not 8 bits, it should fill the buffer without padding the data. If a 5-bit device wants the application to interpret its data as 8-bit data, it should report that it is supplying 8-bit data, make the valid data bits the most significant bits in the data byte, and pad the least significant bits with bits of whichever sense is "lightest". Otherwise, the Source should pack the data bits together. For a 5-bit R-G-B device, that means the data for the green channel should immediately follow the last bit of the red channel. The application is responsible for "unpacking" the data. The Source reports how many bits it is providing per pixel in the `BitsPerPixel` field of the `TW_IMAGEINFO` data structure.

Error Handling

Operation Triplet and State Verification

- Sources support all defined TWAIN triplets. A Source must verify every operation triplet they receive. If the operation is not recognized, the Source should return `TWRC_FAILURE` and `TWCC_BADPROTOCOL`.
- Sources must also maintain an awareness of what state their session is in. If an application invokes an operation that is invalid in the current state, the Source should fail the operation and return `TWRC_FAILURE` and `TWCC_SEQERROR`. Valid states for each operation are listed in [Chapter 7, "Operation Triplets."](#)
- Anytime a Source fails an operation that would normally cause the session to transition to another state, the session should not transition but should remain in the original state.
- Each triplet operation has its own set of valid Return and Condition Codes as listed in [Chapter 7, "Operation Triplets"](#). The Source must return a valid Return Code and set a valid Condition Code, if applicable, following every operation.
- All Return Codes and Condition Codes in the Source should be cleared upon the next call to `DS_Entry()`. Clearing is delayed when a `DG_CONTROL` / `DAT_STATUS` / `MSG_GET` operation is received. In this case, the Source will fill the `TW_STATUS` structure with the current condition information and then clear that information.
- If an application attempts to connect to a Source that only supports single connection (or a multiply-connected Source that can't establish any new connections), the Source should respond with `TWRC_FAILURE` and `TWCC_MAXCONNECTIONS`.
- For Windows Sources only, the DLL implementation makes it possible to be connected to more than one application. Unless the operation request is to open the Source, the Source must verify the application originating an operation is currently connected to the Source. To do this:

The Source must maintain a list containing the Id value for each connected application. (The Id value comes from the application's `TW_IDENTITY` structure which is referenced by the `pOrigin` parameter in the `DS_Entry()` call.)

The Source should check the `TW_IDENTITY.Id` information of the application sending the operation and verify that it appears in the Source's list of connected applications.

- For Windows only, if connected to multiple applications, the Source is responsible for maintaining a separate, current Condition Code for each application it is connected to. The Source writer should also maintain a temporary, and separate, Condition Code for any application that is attempting to establish a connection with the Source. This is true both for Sources that support only a single connection or have reached the maximum connections.

Unrecoverable Error Situations

The Source is solely responsible for determining whether an error condition within the Source is recoverable or not. The Source must determine when, and what, error condition information to present to the user. The application relies on the Source to specify when a failure occurs. If a Source is in an unrecoverable error situation, it may send a `MSG_CLOSEDSREQ` to the application to request to have its user interface disabled and have an opportunity to begin again.

DAT_EVENT Handling Errors

One of the most common problems between a data source and application is the management of `DG_CONTROL` / `DAT_EVENT` / `MSG_PROCESSEVENT`. The symptoms are not immediately obvious, so it is worth mentioning them to assist new developers in quickly identifying and solving the problem.

Cannot use TAB or Keyboard Shortcuts to Navigate TWAIN Dialog

The cause of this can be one of two things. Either the application is not forwarding all messages to TWAIN through the `DAT_EVENT` mechanism, or the data source is not properly processing the `DAT_EVENT` messages. (Windows: calling `IsDialogMessage` for each forwarded message with TWAIN Dialog handle)

TWAIN Dialog Box Combo Boxes cannot be opened, Edit boxes produce multiple chars per keystroke

This case is caused by processing TWAIN Dialog Messages twice. Either the data source has not returned the proper return code in response to `DAT_EVENT` calls (Windows: `TWRC_DSEVENT` when `IsDialogMessage` returns `TRUE`), or the application is ignoring the return code.

This is not a problem when data source operates through TWAIN Thunker

Problems with the application handling of these messages are not often detected if the data source is operating through the TWAIN Thunking mechanism. This is because the Thunker process has a separate Window and Message pump that properly dispatch DAT_EVENT messages to the data source. Any mistake in application handling will pass without notice since all DAT_EVENT calls will return TWRC_NOTDSEVENT. (with the exception of important messages such as MSG_XFERREADY.)

Problem seems erratic, keyboard shortcuts and Tab key work for Message Boxes, but not TWAIN Dialog

This observation often further confuses the issue. In Windows, a standard Message box is Modal, and operates from a local message pump until the user closes it. All messages are properly dispatched to the message box since it does not rely on the application message pump. The TWAIN Dialog is slightly different since it is implemented Modeless. There is no easy way to duplicate Modal behavior for the TWAIN Dialog.

Memory Management

Windows Specifics

On 16-bit Windows systems, a single copy of the Source Manager and Source(s) services all applications wishing to access TWAIN functionality. If the Source can connect to more than one application, it will probably need to maintain a separate execution frame for each connected application. The Source does not have unlimited memory available to it so be conservative in its use.

On 32-bit Windows systems, a new in-memory copy of the Source Manager and Source(s) is created in the Application's calling space. In addition, a call may be made to the Windows On Windows (WOW) system, to support the thunking mechanism. For more information on the thunker, refer to [Chapter 3, "Application Implementation."](#)

It is valid for an application to open a Source and leave it open between several acquires. Therefore, Sources should minimize the time and resources required to load and remain open (in State 4). Also, Sources should allow a reasonable number of connections to ensure they can handle more than one application using the Source in this manner (leaving it open between acquires).

Macintosh Specifics

Each application that loads the Source Manager has a private copy of the Source. Each Source that is connected also runs as a private copy. It is important for the Source writer to recognize that their Source will be using the memory heap of the host application, not in its own heap. Therefore, the Source should be conscientious with allocation and deallocation of memory.

General Guidelines

The following are some general guidelines:

- Check, when the Source is launched, to assure that enough memory space is available for adequate execution.
- Always verify that allocations were successful.
- Work with relocatable objects whenever possible - the heap you fragment is not your own.
- Deallocate temporary memory objects as soon as they are no longer needed.
- Maintain as small a non-operating memory footprint as can prudently be done - the Source will be “compatible” with more applications on more machines.
- Clean up after yourself. When about to be closed, deallocate all locally allocated RAM, eliminate any other objects on the heap, and prepare as appropriate to terminate.

Local Variables

- The Source may allocate and maintain local variables and buffers. Remember that you are borrowing RAM from the application so be efficient about how much RAM is allocated simultaneously.

Instances Where the Source Allocates Memory

In general, the application allocates all necessary structures and passes them to the Source. There are a few exceptions to this rule:

- The Source must create the container, pointed to by the `hContainer` field, needed to hold capability information on `DG_CONTROL` / `DAT_CAPABILITY` / `MSG_GET`, `MSG_GETCURRENT`, `MSG_GETDEFAULT`, or `MSG_RESET` operations. The application deallocates the container.
- The Source allocates the buffer for Native mode data transfers. The application deallocates the buffer.
- Normally, the application creates the buffers used in a Buffered Memory transfer (`DG_IMAGE` / `DAT_IMAGEMEMXFER` / `MSG_GET`). However, if the Source is transferring tiled data, rather than strips of data, it is responsible for allocating the buffers. The application deallocates the buffers.

See the `DG_IMAGE` / `DAT_JPEGCOMPRESSION` operations.

Requirements for a Source to be TWAIN-Compliant

The following lists of triplets and capabilities map out the minimum required set of features that a Source must offer programmatically to be TWAIN compliant. Sources, though, are strongly encouraged to go beyond this list and implement as many of their capabilities as possible for programmatic access.

This list is organized by versions of TWAIN to help Source writers decide which version they wish to support. It is also intended for Applications writers, who can use this information to

identify the real level of TWAIN support provided by a Source if its reported version is not matched by the items in this list.

Requirements

TWAIN 1.91 Sources must support all TWAIN 1.9 required features and the following:

Operations

DG_CONTROL / DAT_CAPABILITY / MSG_RESETEALL

TWAIN 1.9 Sources must support all TWAIN 1.8 required features and the following:

Operations

To be compliant with TWAIN 1.9 and higher, all Sources must support both UI and programmatic control. UI control is the traditional method of control used when an Application enables a Source with DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLEDS (ShowUI == TRUE). Programmatic control implies that an Application will not use a Source's UI, but will control it directly (ShowUI == FALSE). Application writers have long requested the ability to programmatically control Sources, so that they can present their own UI's, offering the user a common look and feel no matter what Source is currently in use.

DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLEDSUIONLY – this operation is only required for mid- and high-volume scanners. It is strongly recommended for other devices since it allows a way for an application to create predefined session setups for devices that also include settings for custom features. Note that applications that support this operation must also support DAT_CUSTOMSDATA.

DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT – This triplet was introduced in 1.7, and is now a required operation .

If DG_CONTROL / DAT_EXTIMAGEINFO is supported, then the following TWEI_ values must be reported:

TWEI_DOCUMENTNUMBER

TWEI_PAGENUMBER

TWEI_CAMERA

TWEI_FRAMENUMBER

TWEI_FRAME

TWEI_PIXELFLAVOR

If DG_AUDIO is supported, then ACAP_XFERMECH must be available.

Capabilities

CAP_UICONTROLLABLE – Sources must provide the ability to run without their internal GUI, which means that this capability must report TRUE.

TWAIN 1.8 Sources must support all TWAIN 1.7 required features and the following:

No new requirements were added in this version.

TWAIN 1.7 Sources must support all TWAIN 1.6 required features and the following:

Operations

DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT – This triplet was introduced in 1.7, and should have been made mandatory, but was not. Sources that support 1.7 are strongly encouraged to support this operation, but it is not a mandatory requirement.

TWAIN 1.6 Sources must support all TWAIN 1.5 required features and the following:

Capabilities

CAP_DEVICEONLINE – This capability is required to physically prove that the device is powered up and available.

TWAIN 1.5 Sources must support the following:

Operations

DG_CONTROL / DAT_CAPABILITY / MSG_GET
 DG_CONTROL / DAT_CAPABILITY / MSG_GETCURRENT
 DG_CONTROL / DAT_CAPABILITY / MSG_GETDEFAULT
 DG_CONTROL / DAT_CAPABILITY / MSG_RESET
 DG_CONTROL / DAT_CAPABILITY / MSG_SET
 DG_CONTROL / DAT_EVENT / MSG_PROCESSEVENT
 DG_CONTROL / DAT_IDENTITY / MSG_GET
 DG_CONTROL / DAT_IDENTITY / MSG_OPENS
 DG_CONTROL / DAT_IDENTITY / MSG_CLOSEDS
 DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER
 DG_CONTROL / DAT_PENDINGXFERS / MSG_GET
 DG_CONTROL / DAT_PENDINGXFERS / MSG_RESET
 DG_CONTROL / DAT_SETUPMEMXFER / MSG_GET
 DG_CONTROL / DAT_STATUS / MSG_GET
 DG_CONTROL / DAT_USERINTERFACE / MSG_DISABLED
 DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLED
 DG_CONTROL / DAT_XFERGROUP / MSG_GET
 DG_IMAGE / DAT_IMAGEINFO / MSG_GET
 DG_IMAGE / DAT_IMAGELAYOUT / MSG_GET
 DG_IMAGE / DAT_IMAGELAYOUT / MSG_GETDEFAULT
 DG_IMAGE / DAT_IMAGELAYOUT / MSG_RESET
 DG_IMAGE / DAT_IMAGELAYOUT / MSG_SET

DG_IMAGE / DAT_IMAGEMEMXFER / MSG_GET

DG_IMAGE / DAT_IMAGENATIVEXFER / MSG_GET

Capabilities

CAP_SUPPORTEDCAPS	MSG_GET required
CAP_UICONTROLLABLE	MSG_GET required
CAP_XFERCOUNT	All MSG_* operations required
ICAP_COMPRESSION	All MSG_GET* operations required
ICAP_BITDEPTH	All MSG_* operations required
ICAP_BITORDER	All MSG_* operations required
ICAP_PLANARCHUNKY	All MSG_GET* operations required
ICAP_PHYSICALHEIGHT	All MSG_GET* operations required
ICAP_PHYSICALWIDTH	All MSG_GET* operations required
ICAP_PIXELFLAVOR	All MSG_GET* operations required
ICAP_PIXELTYPE	All MSG_* operations required
ICAP_UNITS	All MSG_* operations required
ICAP_XFERMECH	All MSG_* operations required
ICAP_XRESOLUTION	All MSG_* operations required
ICAP_YRESOLUTION	All MSG_* operations required

All Sources must implement the advertised features supported by their devices. They must make these features available to applications via the TWAIN protocol. For example, a Source that's connected to a device that has an ADF must support DG_CONTROL / DAT_CAPABILITY / MSG_GET, MSG_GETCURRENT, MSG_GETDEFAULT on:

CAP_FEEDERENABLED

CAP_FEEDERLOADED

and DG_CONTROL / DAT_CAPABILITY / MSG_GET,
MSG_GETCURRENT, MSG_GETDEFAULT, MSG_RESET and MSG_SET on:

CAP_AUTOFEED

If the ADF also supports ejecting and rewinding of pages, then the Source should also support DG_CONTROL / DAT_CAPABILITY / MSG_GET, MSG_GETCURRENT, MSG_GETDEFAULT, MSG_RESET and MSG_SET on:

CAP_CLEARPAGE

CAP_REWINDPAGE

Application requirements for TWAIN-compliance are presented in [Chapter 5, "Source Implementation."](#)

Other Topics

Custom Operations

Manufacturers may add custom operations to their Sources. These can also be made known to application manufacturers. This mechanism allows an application to access functionality not normally available from a generic TWAIN Source.

One use of this mechanism might be to implement device-specific diagnostics for a hardware diagnostic program. These custom operations should be used sparingly and never in place of pre-defined TWAIN operations.

Custom operations are defined by specifying special values for Data Groups (DGs), Data Argument Types (DATs), Messages (MSGs), and Capabilities (CAPs). The following areas have been reserved for custom definitions:

Data Groups	Top 8 bit flags (bits 24 - 31) in the DG identifiers reserved for custom use.
DATs	Designators with values greater than 8000 hex.
Messages	Designators with values greater than 8000 hex.
Capabilities	Designators with values greater than 8000 hex.

The responsibility for naming and managing the use of custom designators lies wholly upon the TWAIN element originating the designator and the element consuming it. Prior to interpreting a custom designator, the consuming element must check the originating element's `ProductName` string from its `TW_IDENTITY` structure. Since custom operation numbers may overlap, this is the only way to insure against confusion.

Networking

If a Source supports connection to a remote device over a network, the Source is responsible for hiding the network dependencies of that device's operation from the application. The Source Manager does not know anything about networks.

In a networking situation, the Source will probably be built in two segments: One running on the machine local to the application, the other running remotely across the network. Sources are required to handle all the network interfacing with remote devices (real or logical) through local Source "stubs" that understand how to access both the network and the remote Source while interacting logically with the Source Manager.

The segment running on the local machine will probably be a "stub" Source. That is, the local stub will translate all operations received from the application and Source Manager into a form the remote source understands (that is, not necessarily TWAIN-defined operations). The stub also:

- Converts the information returned from the remote source into TWAIN-compliant results
- Handles local memory management for data copies and data transferring

- Isolates the network from the Source Manager and application
- Manages the connection with the remote Source
- Provides any needed code to handle local hardware (such as interface hardware)
- Provides the local user interface to control the remote Source

6

Entry Points and Triplet Components

Chapter Contents

Entry Points	6-1
Data Groups	6-4
Data Argument Types.....	6-4
Messages	6-6
Custom Components of Triplets	6-7

Entry Points

TWAIN has two entry points:

- **DSM_Entry()** - located in the Source Manager and typically called by applications, with the following exceptions where a Windows Source calls the Source Manager to communicate with an Application:

DG_CONTROL / DAT_NULL / MSG_XFERREADY
DG_CONTROL / DAT_NULL / MSG_CLOSEDREQ
DG_CONTROL / DAT_NULL / MSG_CLOSEDOK
DG_CONTROL / DAT_NULL / MSG_DEVICEEVENT
- **DS_Entry()** - located in the Source and called only by the Source Manager.

Programming Basics

- Upon entry, the parameters must be ordered on the stack in Pascal form. Be sure that your code expects this ordering rather than the reverse order that C uses.
- The keyword FAR is included in the entry point syntax to accommodate the 16-bit Windows segmented addressing scheme. It has no value for any other operating system, and is defined as an empty value for everything, except 16-bit Windows.

Data Flags and Data Groups

Versions of the TWAIN Specification up to and including TWAIN 2.0 indicate that the high 8-bits (24 - 31) in the TW_IDENTITY.SupportedGroups are reserved for custom use.

TWAIN 2.0 has taken these bits for use by the Data Flags (DF_APP2, DF_DSM2 and DF_DS2). This breaks backwards capability with previous versions of the Specification. The risk is considered to be very low, since very few Sources or Applications work with these bits. However, the conflict can be managed in the following ways.

- Avoid the use of 0x10000000, 0x20000000 and 0x40000000, these correspond to DF_DSM2, DF_APP2 and DF_DS2. The remaining bits: 0x01000000, 0x02000000, 0x04000000, 0x08000000 and 0x80000000 are still in the custom space for Applications and Sources, and they will remain free for that use in all subsequent versions of TWAIN.
- Applications can modify their code to recognize when these bits are in use by a particular Source, which has always been a necessary pre-requisite for custom features, since the bits are guaranteed to have different meaning for different vendors.
- These flags are of most interest to the Data Source Manager, which is now open source (they dictate when DAT_ENTRYPOINT is called). If a legacy driver is using one of the custom bits, then propose a possible work-around to the TWAIN Working Group.

Declaration of DSM_Entry()

Written in C code form, the declaration looks like this:

On Windows

```
TW_UINT16 FAR PASCAL DSM_Entry
( pTW_IDENTITY  pOrigin,    // source of message
  pTW_IDENTITY  pDest,      // destination of message
  TW_UINT32     DG,         // data group ID: DG_xxxx
  TW_UINT16     DAT,        // data argument type: DAT_xxxx
  TW_UINT16     MSG,        // message ID: MSG_xxxx
  TW_MEMREF     pData       // pointer to data
);
```

On Macintosh

```
FAR PASCAL TW_UINT16 DSM_Entry
( pTW_IDENTITY  pOrigin,    // source of message
  pTW_IDENTITY  pDest,      // destination of message
  TW_UINT32     DG,         // data group ID: DG_xxxx
  TW_UINT16     DAT,        // data argument type: DAT_xxxx
  TW_UINT16     MSG,        // message ID: MSG_xxxx
  TW_MEMREF     pData       // pointer to data
);
```

Parameters of DSM_Entry()

pOrigin

This points to a TW_IDENTITY structure, allocated by the application, that describes the application making the call. One of the fields in this structure, called Id, is an arbitrary and unique identifier assigned by the Source Manager to tag the application as a unique TWAIN entity. The Source Manager maintains a copy of the application's identity structure, so the application must not modify that structure unless it first breaks its connection with the Source Manager, then reconnects to cause the Source Manager to store the new, modified identity.

pDest

This is set either to NULL if the application is aiming the operation at the Source Manager or to the TW_IDENTITY structure of the Source that the application is attempting to reach. The application allocated the space for the Source's identity structure when it decided which Source was to be connected. The Source's TW_IDENTITY.Id is also uniquely set by the Source Manager when the Source is opened and should not be modified by the Source. The application should not count on the value of this field being consistent from one session to the next because the Source Manager reallocates these numbers every time it is opened. The Source Manager keeps a copy of the Source's identity structure as should the application and the Source.

DG

The Data Group of the operation triplet. Currently, only DG_CONTROL, DG_IMAGE, and DG_AUDIO are defined.

DAT

The Data Argument Type of the operation triplet. A complete list appears later in this chapter.

MSG

The Message of the operation triplet. A complete list appears later in this chapter.

pData

The pData parameter is of type TW_MEMREF and is a pointer to the data (a variable or, more typically, a structure) that will be used according to the action specified by the operation triplet.

Declaration of DS_Entry()

DS_Entry is only called by the Source Manager. Written in C code form, the declaration looks like this:

On Windows

```
TW_UINT16 FAR PASCAL DS_Entry
( pTW_IDENTITY pOrigin,    // source of message
  TW_UINT32    DG,         // data group ID: DG_xxxx
  TW_UINT16    DAT,        // data argument type: DAT_xxxx
  TW_UINT16    MSG,        // message ID: MSG_xxxx
  TW_MEMREF    pData       // pointer to data
);
```

On Macintosh

```
FAR PASCAL TW_UINT16 DS_Entry
( pTW_IDENTITY pOrigin,    // source of message
  TW_UINT32    DG,         // data group ID: DG_xxxx
  TW_UINT16    DAT,        // data argument type: DAT_xxxx
  TW_UINT16    MSG,        // message ID: MSG_xxxx
)
```

```

        TW_MEMREF    pData    // pointer to data
    );

```

Data Groups

TWAIN operations can be broadly classified into three data groups:

Control Oriented (DG_CONTROL)

Controls the TWAIN session. Consumed by both Source Manager and Source. It is always available, no matter what the current setting of DG_CONTROL / DAT_XFERGROUP.

Image Data Oriented (DG_IMAGE)

Indicates the kind of data to be transferred. Change between DG_AUDIO and DG_IMAGE as needed using DG_CONTROL / DAT_XFERGROUP / MSG_SET. The default at startup is for a Source to be ready to transfer DG_IMAGE data.

Audio Data Oriented (DG_AUDIO)

Indicates the kind of data to be transferred. Change between DG_AUDIO and DG_IMAGE as needed using DG_CONTROL / DAT_XFERGROUP / MSG_SET.

Currently, only image and audio data are supported but this could be expanded to include text, etc. This has several future implications. If more than one data type exists, an application and a Source will need to decide what type(s) of data the *Source* can, and will be allowed to, produce before a transfer can occur. Further, if multiple transfers are being generated from a single acquisition—such as when image and text are intermixed and captured from the same page—it must be unambiguous which type of data is being returned from each data transfer.

Programming Basics

Note the following:

- Data Group designators are 32-bit, unsigned values. The actual values that are assigned are powers of two (bit flags) so that the DGs can be easily masked.
- There are 24 DGs designated as *reserved* for pre-defined DGs. Four are currently in use. The top 8 bits are reserved for custom DGs.

Data Argument Types

Data Argument Types, or DATs, are used to allow programmatic identification of the TWAIN type for the structure of status variable referenced by the entry point parameter `pData`. `pData` will always point to a variable or data structure defined by TWAIN. If the consuming application or Source switches (cases, etc.) on the DAT specified in the formal parameter list of the entry point call, it can handle the form of the referenced data correctly.

Data Type	Used by	Associated structure or type
DAT_NULL	ANY DG	Null structure. No data required for the operation
DAT_CUSTOMBASE	n/a	Not a DAT in itself, but the baseline a Source must use when creating a custom DAT.
DAT_AUDIOFILEXFER	DG_AUDIO	Operates on null data. Filename / Format already negotiated.
DAT_AUDIONATIVEXFER	DG_AUDIO	TW_UINT32 On Windows - low word = WAV handle On Macintosh - audio handle
DAT_CAPABILITY	DG_CONTROL	TW_CAPABILITY structure
DAT_ENTRYPOINT	DG_CONTROL	TW_ENTRYPOINT structure
DAT_EVENT	DG_CONTROL	TW_EVENT structure
DAT_FILESYSTEM	DG_CONTROL	TW_FILESYSTEM structure
DAT_IDENTITY	DG_CONTROL	TW_IDENTITY structure
DAT_PARENT	DG_CONTROL	TW_INT32 On Windows - low word=Window handle On Macintosh - Set to NULL
DAT_PASSTHRU	DG_CONTROL	TW_PASSTHRU structure
DAT_PENDINGXFERS	DG_CONTROL	TW_PENDINGXFERS structure
DAT_SETUPFILEXFER	DG_CONTROL	TW_SETUPFILEXFER structure
DAT_SETUPMEMXFER	DG_CONTROL	TW_SETUPMEMXFER structure
DAT_STATUS	DG_CONTROL	TW_STATUS structure
DAT_USERINTERFACE	DG_CONTROL	TW_USERINTERFACE structure
DAT_XFERGROUP	DG_CONTROL	TW_UINT32 A DG designator describing data to be transferred (currently only image data is supported)
DAT_CIECOLOR	DG_IMAGE	TW_CIECOLOR structure
DAT_GRAYRESPONSE	DG_IMAGE	TW_GRAYRESPONSE structure
DAT_IMAGEFILEXFER	DG_IMAGE	Operates on NULL data. Filename/Format already negotiated
DAT_IMAGEINFO	DG_IMAGE	TW_IMAGEINFO structure
DAT_IMAGELAYOUT	DG_IMAGE	TW_IMAGELAYOUT structure
DAT_IMAGEMEMXFER	DG_IMAGE	TW_IMAGEMEMXFER structure
DAT_IMAGEMEMFILEXFER	DG_IMAGE	TW_IMAGEMEMXFER structure

Data Type	Used by	Associated structure or type
DAT_IMAGENATIVEXFER	DG_IMAGE	TW_UINT32; On Windows - low word=DIB handle On Macintosh - PicHandle
DAT_JPEGCOMPRESSION	DG_IMAGE	TW_JPEGCOMPRESSION structure
DAT_PALETTE8	DG_IMAGE	TW_PALETTE8 structure
DAT_RGBRESPONSE	DG_IMAGE	TW_RGBRESPONSE structure

Messages

A Message, or MSG, is used to communicate between TWAIN elements what action is to be taken upon a particular piece of data, or for a data-less operation, what action to perform. If an application wants to make anything happen in, or inquire any information from, a Source or the Source Manager, it must make a call to `DSM_Entry()` with the proper MSG as one parameter of the operation triplet. The data to be acted upon is also specified in the parameter list of this call.

A MSG is always associated with a Data Group (DG) identifier and a Data Argument Type (DAT) identifier in an operation triplet. This operation unambiguously specifies what action is to be taken on what data. Refer to [Chapter 7, "Operation Triplets"](#) for the list of defined operation triplets.

Message ID	Valid DAT(s)	Description of Specified Action
MSG_AUTOMATICCAPTURE DIRECTORY	DAT_FILESYSTEM	Place to store images acquired during automatic capture
MSG_CHANGEDIRECTORY	DAT_FILESYSTEM	Change device, domain, host, or image directory
MSG_CLOSED	DAT_IDENTITY	Close the specified Source
MSG_CLOSEDDSM	DAT_PARENT	Close the Source Manager
MSG_CLOSEDREQ	DAT_NULL	Source requests for application to close Source
MSG_COPY	DAT_FILESYSTEM	Copy images across storage devices
MSG_CREATEDIRECTORY	DAT_FILESYSTEM	Create an image directory
MSG_CUSTOMBASE	n/a	Not a message in itself, but the baseline a Source must use when creating a custom message
MSG_DELETE	DAT_FILESYSTEM	Delete an image or an image directory
MSG_DEVICEEVENT	DAT_NULL	Report an event from the Source to the Source Manager
MSG_DISABLED	DAT_USERINTERFACE	Disable data transfer in the Source
MSG_ENABLED	DAT_USERINTERFACE	Enable data transfer in the Source

Message ID	Valid DAT(s)	Description of Specified Action
MSG_ENDXFER	DAT_PENDINGXFERS	Application tells Source that transfer is over
MSG_FORMATMEDIA	DAT_FILESYSTEM	Format a storage device
MSG_GET	various DATs	Get all Available Values including Current & Default
MSG_GETCLOSE	DAT_FILESYSTEM	Close a file context created by MSG_GETFIRSTFILE
MSG_GETCURRENT	various DATs	Get Current value
MSG_GETDEFAULT	various DATs	Get Source's preferred default value
MSG_GETFIRST	DAT_IDENTITY	Get first element from a "list"
MSG_GETFIRSTFILE	DAT_FILESYSTEM	Get the first file in a directory
MSG_GETINFO	DAT_FILESYSTEM	Get information about the current file
MSG_GETNEXT	DAT_IDENTITY	Get next element from a "list"
MSG_GETNEXTFILE	DAT_FILESYSTEM	Get the next file in a directory
MSG_NULL	None	No action to be taken
MSG_OPENDS	DAT_IDENTITY	Open and Initialize the specified Source
MSG_OPENDSM	DAT_PARENT	Open the Source Manager
MSG_PASSTHRU	DAT_PASSTHRU	For use by Source Vendors only
MSG_PROCESSEVENT	DAT_EVENT	Tells Source to check if event/message belongs to it
MSG_RENAME	DAT_FILESYSTEM	Rename an image or an image directory
MSG_RESET	various DATs	Return specified item to power-on (TWAIN default) condition
MSG_SET	various DATs	Set one or more values
MSG_USERSELECT	DAT_IDENTITY	Presents dialog of all Sources to select from
MSG_XFERREADY	DAT_NULL	The Source has data ready for transfer to the application

Custom Components of Triplets

Custom Data Groups

A manufacturer may choose to implement custom data descriptors that require a new Data Group. This would be needed if someone decides to extend TWAIN to, say, satellite telemetry.

- The top 8 bits of every DG_xxxx identifier are reserved for use as custom DGs. Custom DG identifiers must use one of the upper 8 bits of the DG_xxxx identifier. Remember, DGs are bit flags.

- The originator of the custom DG must fill the `ProductName` field in the application or Source's `TW_IDENTITY` structure with a uniquely descriptive name. The consumer will look at this field to determine whose custom DG is being used.
- TWAIN provides no formal allocation (or vendor-specific “identifier blocks”) for custom data group identifiers nor does it do any coordination to avoid collisions.
- The `DG_CUSTOMBASE` value resides in the `TWAIN.H` file. All custom IDs must be numerically greater than this base. A similar custom base “address” is defined for Data Argument Types, Messages, Capabilities, Return Codes, and Condition Codes. The only difference in concept is that DGs are the only designators defined as bit flags. All other custom values can be any integer value larger than the `xxxx_CUSTOMBASE` defined for that type of designator.

Custom Data Argument Types

`DAT_CUSTOMBASE` is defined in the `TWAIN.H` file to allow a Source vendor to define “custom” DATs for their particular device(s). The application can recognize the Source by checking the `TW_IDENTITY.ProductName` and the `TW_IDENTITY.TW_VERSION` structure. If an application is aware that this particular Source offers custom DATs, it can use them. No changes to TWAIN or the Source Manager are required to support such identifiers (or the data structures which they imply).

Refer to the `TWAIN.H` file for the value of `DAT_CUSTOMBASE` for custom DATs. All custom values must be numerically greater than this constant.

Custom Messages

As with the DATs, `MSG_CUSTOMBASE` is included in `TWAIN.H` so that the Source writer can create custom messages specific to their Source. If the applications understand these custom messages, actions beyond those defined in this specification can be performed through the normal TWAIN mechanism. No modifications to TWAIN or the Source Manager are required.

Remember that the consumer of these custom values will look in your `TW_IDENTITY.ProductName` field to clarify what the identifier's value means – there is no other protection for overlapping custom definitions. Refer to the `TWAIN.H` file for the value of `MSG_CUSTOMBASE` for custom Messages. All custom values must be numerically greater than this value.

7

Operation Triplets

Chapter Contents

Triplet Overview	7-1
Format of the Operation Triplet Descriptions	7-5
Operation Triplets	7-7

Triplet Overview

From Application to Source Manager (Control Information)

Data Group	Data Argument Type	Message	Page
DG_CONTROL	DAT_IDENTITY	MSG_CLOSED	7-59
		MSG_GETDEFAULT	7-62
		MSG_GETFIRST	7-63
		MSG_GETNEXT	7-65
		MSG_OPENS	7-67
		MSG_SET	7-71
		MSG_USERSELECT	7-72
DG_CONTROL	DAT_PARENT	MSG_CLOSEDM	7-79
		MSG_OPENM	7-80
DG_CONTROL	DAT_STATUS	MSG_GET	7-99

From Application to Source (Control Information)

Data Group	Data Argument Type	Message	Page
DG_CONTROL	DAT_CAPABILITY	MSG_GET	7-12
		MSG_GETCURRENT	7-15
		MSG_GETDEFAULT	7-18
		MSG_GETHELP	7-21
		MSG_GETLABEL	7-22
		MSG_GETLABELENUM	7-23
		MSG_QUERY SUPPORT	7-25
		MSG_RESET	7-27
		MSG_RESETALL	7-30
		MSG_SET	7-32
DG_CONTROL	DAT_CUSTOM DSDATA	MSG_GET	7-36
		MSG_SET	7-37
DG_CONTROL	DAT_DEVICE EVENT	MSG_GET	7-38
DG_CONTROL	DAT_FILESYSTEM	MSG_AUTOMATIC CAPTURE DIRECTORY	7-43
		MSG_CHANGEDIRECTORY	7-44
		MSG_COPY	7-46
		MSG_CREATEDIRECTORY	7-47
		MSG_DELETE	7-49
		MSG_FORMATMEDIA	7-51
		MSG_GETCLOSE	7-52
		MSG_GETFIRSTFILE	7-53
		MSG_GETINFO	7-55
		MSG_GETNEXTFILE	7-56
		MSG_RENAME	7-58
DG_CONTROL	DAT_EVENT	MSG_PROCESSEVENT	7-41
DG_CONTROL	DAT_PASSTHRU	MSG_PASSTHRU	7-81
DG_CONTROL	DAT_PENDING XFERS	MSG_ENDXFER	7-82
		MSG_GET	7-84
		MSG_RESET	7-86
		MSG_STOPFEEDER	7-88

Data Group	Data Argument Type	Message	Page
DG_CONTROL	DAT_SETUPFILEXFER	MSG_GET	7-89
		MSG_GETDEFAULT	7-91
		MSG_RESET	7-93
		MSG_SET	7-95
DG_CONTROL	DAT_SETUPMEMXFER	MSG_GET	7-97
DG_CONTROL	DAT_STATUS	MSG_GET	7-99
DG_CONTROL	DAT_STATUSUTF8	MSG_GET	7-101
DG_CONTROL	DAT_USERINTERFACE	MSG_DISABLED	7-102
		MSG_ENABLED	7-104
		MSG_ENABLEDSUIONLY	7-107
		MSG_ENABLED	7-104
DG_CONTROL	DAT_XFERGROUP	MSG_ENABLEDSUIONLY	7-107
		MSG_GET	7-108
		MSG_SET	7-109

From Application to Source (Image Information)

Data Group	Data Argument Type	Message	Page #
DG_IMAGE	DAT_CIECOLOR	MSG_GET	7-110
DG_IMAGE	DAT_EXTIMAGEINFO	MSG_GET	7-112
DG_IMAGE	DAT_GRAYRESPONSE	MSG_RESET	7-114
		MSG_SET	7-115
DG_IMAGE	DAT_ICCPROFILE	MSG_GET	7-116
DG_IMAGE	DAT_IMAGEFILEXFER	MSG_GET	7-118
DG_IMAGE	DAT_IMAGEINFO	MSG_GET	7-120
DG_IMAGE	DAT_IMAGELAYOUT	MSG_GET	7-122
		MSG_GETDEFAULT	7-124
		MSG_RESET	7-125
		MSG_SET	7-126
DG_IMAGE	DAT_IMAGEMEMFILEXFER	MSG_GET	7-118
DG_IMAGE	DAT_IMAGEMEMXFER	MSG_GET	7-128
DG_IMAGE	DAT_IMAGEFILEXFER	MSG_GET	7-128
DG_IMAGE	DAT_IMAGENATIVEXFER	MSG_GET	7-134

Data Group	Data Argument Type	Message	Page #
DG_IMAGE	DAT_JPEGCOMPRESSION	MSG_GET	7-137
		MSG_GETDEFAULT	7-139
		MSG_RESET	7-140
		MSG_SET	7-141
DG_IMAGE	DAT_PALETTE8	MSG_GET	7-142
		MSG_GETDEFAULT	7-144
		MSG_RESET	7-145
		MSG_SET	7-146
DG_IMAGE	DAT_RGBRESPONSE	MSG_RESET	7-147
		MSG_SET	7-149

From Application to Source (Audio Information)

Data Group	Data Argument Type	Message	Page #
DG_AUDIO	DAT_AUDIOFILEXFER	MSG_GET	7-7
DG_AUDIO	DAT_AUDIOINFO	MSG_GET	7-8
DG_AUDIO	DAT_AUDIONATIVEXFER	MSG_GET	7-9

From Source Manager to Source (Control Information)

Data Group	Data Argument Type	Message	Page #
DG_CONTROL	DAT_IDENTITY	MSG_CLOSEDS	7-59
		MSG_GET	7-60
		MSG_OPENDS	7-61

From Source to Application (Control Information via the Source Manager) (Used by Windows Sources only)

Data Group	Data Argument Type	Message	Page #
DG_CONTROL	DAT_NULL	MSG_CLOSEDOK	
		MSG_CLOSEDREQ	7-74
		MSG_DEVICEEVENT	7-76
		MSG_XFERREADY	7-77

TWAIN 2.0 (Entry Points)

Data Group	Data Argument Type	Message	Page #
DG_CONTROL	DAT_ENTRYPOINT	MSG_GET	7-39
		MSG_SET	7-40

Format of the Operation Triplet Descriptions

The following pages describe the operation triplets. They are all included and are arranged in alphabetical order using the Data Group, Data Argument Type, and Message identifier list.

There are three operations that are duplicated because that have a different originator and/or destination in each case. They are:

- DG_CONTROL / DAT_IDENTITY / MSG_CLOSEDS
 - ✓ from Application to Source Manager
 - ✓ from Source Manager to Source
- DG_CONTROL / DAT_IDENTITY / MSG_OPENDS
 - ✓ from Application to Source Manager
 - ✓ from Source Manager to Source
- DG_CONTROL / DAT_STATUS / MSG_GET
 - ✓ from Application to Source Manager
 - ✓ from Application to Source

The format of each page is:

Triplet - The Concise DG / DAT / MSG Information

Call

Actual format of the routine call (parameter list) for the operation. Identification of the data structure used for the `pData` parameter is included.

Valid States

The states in which the application, Source Manager, or Source may legally invoke the operation.

Description

General description of the operation.

Origin of the Operation (Application, Source Manager or, Source)

The action(s) the application, Source Manager, or Source should take before invoking the operation.

Destination of the Operation (Source Manager or Source)

The action that the destination element (Source Manager or Source) of the operation will take.

Return Codes

The Return Codes and Condition Codes that are defined and valid for this operation.

See Also

Lists other related operation triplets, capabilities, constants, etc.

Operation Triplets

DG_AUDIO / DAT_AUDIOFILEXFER / MSG_GET

Call

```
DSM_Entry (pOrigin, pDest, DG_AUDIO, DAT_AUDIOFILEXFER, MSG_GET, NULL);
```

Valid States

6 (transitions to state 7)

Description

(Similar operation to DAT_IMAGEFILEXFER).

This operation is used to initiate the transfer of audio from the Source to the application via the disk-file transfer mechanism. It causes the transfer to begin.

No special set up or action required. Application should have already invoked the DG_CONTROL / DAT_SETUPFILEXFER / MSG_SET operation, unless the Source's default transfer format and file name (typically, TWAINAUD.TMP) are acceptable to the application. The application need only invoke this operation once per image transferred.

Source should acquire the audio data, format it, create any appropriate header information, and write everything into the file specified by the previous DG_CONTROL / DAT_SETUPFILEXFER / MSG_SET operation, and close the file.

Audio transfers are optional. If an application transfers only the images and never changes to **DG_AUDIO**, then the audio snippets will be automatically discarded or skipped by the Source.

Return Codes

```
TWRC_CANCEL  
TWRC_XFERDONE  
TWRC_FAILURE  
TWCC_BADPROTOCOL.  
TWCC_OPERATIONERROR  
TWCC_SEQERROR - not state 6.
```

See Also

[ACAP_XFERMECH](#)

DG_AUDIO / DAT_AUDIOINFO / MSG_GET

Call

```
DSM_Entry (pOrigin, pDest, DG_AUDIO, DAT_AUDIOINFO, MSG_GET,  
           pSourceAudioInfo);
```

pSourceAudioInfo = A pointer to a TW_AUDIOINFO structure

Valid States

6 and 7

Description

Used to get the information of the current audio data ready to transfer. (Similar operation to DAT_IMAGEINFO)

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL

TWCC_SEQERROR

See Also

-

DG_AUDIO / DAT_AUDIONATIVEXFER / MSG_GET

Call

```
DSM_Entry (pOrigin, pDest, DG_AUDIO, DAT_AUDIONATIVEXFER, MSG_GET,
pHandle);
```

pHandle = A pointer to a variable of type TW_UINT32

On Windows - This 32 bit integer is a handle variable to WAV data located in memory.

On Macintosh - This 32-bit integer is a handle to AIFF data

Valid States

6 (transitions to state 7)

Description

(Similar operation to DAT_IMAGENATIVEXFER).

Causes the transfer of an audioÆs data from the Source to the application, via the Native transfer mechanism, to begin. The resulting data is stored in main memory in a single block. The data is stored in AIFF format on the Macintosh and as a WAV format under Microsoft Windows. The size of the audio snippet that can be transferred is limited to the size of the memory block that can be allocated by the Source.

Note: This is the default transfer mechanism. All Sources support this mechanism if DG_AUDIO is supported. The Source will use this mechanism unless the application explicitly negotiates a different transfer mechanism with ACAP_XFERMECH.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL.

TWCC_SEQERROR - not state 6.

See Also

[ACAP_XFERMECH](#)

DG_CONTROL / DAT_CALLBACK / MSG_INVOKE_CALLBACK

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_CALLBACK,
MSG_INVOKE_CALLBACK, (TW_MEMREF)&callback);
```

Valid States

4, 5, 7 (depending on the message)

Description

This triplet is sent by the DS to the DSM, which in turn calls the application's registered callback function. The last argument is a pointer to an initialized TW_CALLBACK structure, which contains the message to be processed.

The TW_CALLBACK structure should be initialized as follows:

Msg Initialized to any valid DG_CONTROL / DAT_NULL message.

The message specified will be processed in the same manner as the DAT_NULL mechanism employed by the Windows version. These are:

```
MSG_XFERREADY
MSG_CLOSEDREQ
MSG_CLOSEDOK
MSG_DEVICEEVENT
```

MSG_INVOKE_CALLBACK is the **only** way for a Mac OS X DS to inform the application of these events.

Return Codes

```
TWRC_FAILURE
```

See Also

[DG_CONTROL](#) / [DAT_CALLBACK](#) / [MSG_REGISTER_CALLBACK](#)

DG_CONTROL / DAT_CALLBACK / MSG_REGISTER_CALLBACK

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_CALLBACK,
MSG_REGISTER_CALLBACK, (TW_MEMREF)&callback);
```

Valid States

4

Description

This triplet is sent to the DSM by the Application to register the application’s entry point with the DSM, so that the DSM can use callbacks to inform the application of events generated by the DS.

The last argument is a pointer to an initialized TW_CALLBACK structure. The TW_CALLBACK structure should be initialized as follows:

CallbackProc	The callback function’s entry point, used by MSG_REGISTER_CALLBACK
RefCon	An application defined reference constant

Return Codes

TWRC_FAILURE

See Also

DG_CONTROL / DAT_CALLBACK / MSG_INVOKE_CALLBACK

DG_CONTROL / DAT_CAPABILITY / MSG_GET

Call

```
DSM_Entry(pOrigin, pDest, DG_CONTROL, DAT_CAPABILITY, MSG_GET,
pCapability);
```

pCapability = A pointer to a TW_CAPABILITY structure.

Valid States

4 through 7

Description

Returns the Source's Current, Default and Available Values for a specified capability.

These values reflect previous MSG_SET operations on the capability, or Source's automatic changes. (See MSG_SET).

Note: This operation does not change the Current or Available Values of the capability.

Application

Set the pCapability fields as follows:

```
pCapability->Cap = the CAP_xxxx or ACAP_xxxx or ICAP_xxxx identifier
pCapability->ConType = TWON_DONTCARE16
pCapability->hContainer = NULL
```

The Source will allocate the memory for the necessary container structure but the application must free it when the operation is complete and the application no longer needs to maintain the information.

Use MSG_GET:

- As the first step in negotiation of a capability's Available Values.
- To check the results if a MSG_SET returns TWRC_CHECKSTATUS.
- To check the Available, Current and Default Values with one command.

This operation may fail for a low memory condition. Either recover from a TWCC_LOWMEMORY failure by freeing memory for the Source to use so it can continue, or terminating the acquisition and notifying the user of the low memory problem.

Source

If the application requests this operation on a capability your Source does not recognize (and you're sure you've implemented all the capabilities that you're required to), disregard the operation, but return TWRC_FAILURE with TWCC_BADCAP.

If you support the capability, fill in the fields listed below and allocate the container structure and place its handle into pCapability->hContainer. The container should be referenced by a "handle" of type TW_HANDLE.

Fill the fields in pCapability as follows:

```
pCapability->ConType = TWON_ARRAY,
TWON_ONEVALUE,
TWON_ENUMERATION, or
TWON_RANGE
```

```
pCapability->hContainer = TW_HANDLE referencing a container of ConType
```

Set ConType to the container type your Source uses for this capability. For container types of TWON_ARRAY and TWON_ONEVALUE provide the Current Value. For container types TWON_ENUMERATION and TWON_RANGE provide the Current, Default and Available Values.

This is a memory allocation operation. It is possible for this operation to fail due to a low memory condition. Be sure to verify that the allocation is successful. If it is not, attempt to reduce the amount of memory occupied by the Source. If the allocation cannot be made, return TWRC_FAILURE with TWCC_LOWMEMORY to the application and set the pCapability->hContainer handle to NULL.

Note: The Source *must* be able to respond to an inquiry about any of its capabilities at *any time* that the Source is open.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

```
TWCC_BADCAP    /* Unknown capability--Source does not recognize */
               /* this capability. This code should not be used */
               /* by sources after 1.6. Applications still need */
               /* to test for it for backward compatibility.      */

TWCC_CAPUNSUPPORTED /* Capability not supported by source. Sources*/
                   /* 1.6 and newer must use this instead of    */
                   /* using TWCC_BADCAP.                        */

TWCC_CAPBADOPERATION /* Operation not supported by capability.*/
                    /* Sources 1.6 and newer must use this    */
                    /* instead of using TWCC_BADCAP.           */

TWCC_CAPSEQERROR    /* Capability has dependency on other      */
                   /* capability. Sources 1.6 and newer must */
                   /* use this instead of using TWCC_BADCAP.  */

TWCC_BADDEST        /* No such Source in session with          */
                   /* application                                */

TWCC_LOWMEMORY       /* Not enough memory to complete the      */
                   /* operation                                */

TWCC_SEQERROR        /* Operation invoked in invalid state      */
```

See Also

DG_CONTROL / DAT_CAPABILITY / MSG_GETCURRENT, MSG_GETDEFAULT,
MSG_RESET, and MSG_SET

“Capability Constants” on page 8-74.

“Capability Containers” on page 2-17 and TW_ONEVALUE, TW_ENUMERATION,
TW_RANGE, TW_ARRAY.

“The Capability Listings” on page 10-10.”

DG_CONTROL / DAT_CAPABILITY / MSG_GETCURRENT

Call

```
DSM_Entry(pOrigin, pDest, DG_CONTROL, DAT_CAPABILITY, MSG_GETCURRENT,
pCapability);
```

pCapability = A pointer to a TW_CAPABILITY structure.

Valid States

4 through 7

Description

Returns the Source's Current Value for the specified capability.

The Current Value reflects previous MSG_SET operations on the capability, or Source's automatic changes. (See MSG_SET).

Note: This operation does not change the Current Values of the capability.

Application

Set the pCapability fields as follows:

```
pCapability->Cap = the CAP_xxxx or ACAP_xxxx or ICAP_xxxx identifier
pCapability->ConType = TWON_DONTCARE16
pCapability->hContainer = NULL
```

The Source will allocate the memory for the necessary container structure but the application must free it when the operation is complete and the application no longer needs to maintain the information.

Use MSG_GETCURRENT:

- To check the Source's power-on Current Values (see [Chapter 10, "Capabilities"](#) for TWAIN-defined defaults for each capability).
- To check just the Current Value (in place of using MSG_GET).
- In State 6 to determine the settings. They could have been set by the user (if TW_USERINTERFACE.ShowUI = TRUE) or be the results of automatic processes used by the Source.

This operation may fail for a low memory condition. Either recover from a TWCC_LOWMEMORY failure by freeing memory for the Source to use so it can continue, or terminating the acquisition and notifying the user of the low memory problem.

Source

If the application requests this operation on a capability your Source does not recognize (and you're sure you've implemented all the capabilities that you're required to), disregard the operation, but return `TWRC_FAILURE` with `TWCC_BADCAP`.

If you support the capability, fill in the fields listed below and allocate the container structure and place its handle into `pCapability->hContainer`. The container should be referenced by a "handle" of type `TW_HANDLE`.

Fill the fields in `pCapability` as follows:

```
pCapability->ConType = TWON_ARRAY or TWON_ONEVALUE
```

```
pCapability->hContainer = TW_HANDLE referencing a container of ConType
```

Set `ConType` to the container type that matches the type for this capability. Fill the fields in the container structure with the Current Value of the capability.

This is a memory allocation operation. It is possible for this operation to fail due to a low memory condition. Be sure to verify that the allocation is successful. If it is not, attempt to reduce the amount of memory occupied by the Source. If the allocation cannot be made, return `TWRC_FAILURE` with `TWCC_LOWMEMORY` to the application and set the `pCapability->hContainer` handle to `NULL`.

Note that the Source **must** be able to respond to an inquiry about any of its capabilities at **any time** that the Source is open.

Return Codes

`TWRC_SUCCESS`

`TWRC_FAILURE`

```

TWCC_BADCAP          /* Unknown capability--Source does not recognize */
                      /* this capability. This code should not be used */
                      /* by sources after 1.6. Applications still need */
                      /* to test for it for backward compatibility.    */

TWCC_CAPUNSUPPORTED  /* Capability not supported by source. Sources*/
                      /* 1.6 and newer must use this instead of      */
                      /* using TWCC_BADCAP.                          */

TWCC_CAPBADOPERATION /* Operation not supported by capability.    */
                      /* Sources 1.6 and newer must use this instead*/
                      /* of using TWCC_BADCAP.                      */

TWCC_CAPSEQERROR     /* Capability has dependency on other          */
                      /* capability. Sources 1.6 and newer must use */
                      /* this instead of using TWCC_BADCAP.          */

TWCC_BADDEST         /* No such Source in-session with              */
                      /* application                                */

TWCC_LOWMEMORY       /* Not enough memory to complete the          */
                      /* operation                                */

TWCC_SEQERROR        /* Operation invoked in invalid state.        */

```

See Also

DG_CONTROL / DAT_CAPABILITY / MSG_GET, MSG_GETDEFAULT, MSG_RESET, and MSG_SET

Capability Constants (in [Chapter 8, "Data Types and Data Structures"](#))

Capability Containers: TW_ONEVALUE, TW_ENUMERATION, TW_RANGE, TW_ARRAY (in [Chapter 8, "Data Types and Data Structures"](#))

Listing of all capabilities (in [Chapter 10, "Capabilities"](#)).

DG_CONTROL / DAT_CAPABILITY / MSG_GETDEFAULT

Call

```
DSM_Entry(pOrigin, pDest, DG_CONTROL, DAT_CAPABILITY, MSG_GETDEFAULT,
pCapability);
```

pCapability = A pointer to a TW_CAPABILITY structure.

Valid States

4 through 7

Description

Returns the Source's Default Value. This is the Source's preferred default value.

The Source's Default Value cannot be changed.

Application

Set the pCapability fields as follows:

```
pCapability->Cap = the CAP_xxxx or ACAP_xxxx or ICAP_xxxx identifier
pCapability->ConType = TWON_DONTCARE16
pCapability->hContainer = NULL
```

The Source will allocate the memory for the necessary container structure but the application must free it when the operation is complete and the application no longer needs to maintain the information.

Use MSG_GETDEFAULT:

- To check the Source's preferred Values. Using the Source's preferred default as the Current Value may increase performance in some Sources.

This operation may fail for a low memory condition. Either recover from a TWCC_LOWMEMORY failure by freeing memory for the Source to use so it can continue, or terminating the acquisition and notifying the user of the low memory problem.

Source

If the application requests this operation on a capability your Source does not recognize (and you are sure you have implemented all the capabilities that you're required to), disregard the operation, but return TWRC_FAILURE with TWCC_BADCAP.

If you support the capability, fill in the fields listed below and allocate the container structure and place its handle into pCapability->hContainer. The container should be referenced by a "handle" of type TW_HANDLE.

- Fill the fields in pCapability as follows:

```
pCapability->ConType = TWON_ARRAY or TWON_ONEVALUE
```

pCapability->hContainer = TW_HANDLE referencing a container of ConType

Set ConType to the container type that matches for this capability. Fill the fields in the container with the Default Value of this capability.

The Default Value is the preferred value for the Source. This value is used as the power-on value for capabilities if TWAIN does not specify a default.

This is a memory allocation operation. It is possible for this operation to fail due to a low memory condition. Be sure to verify that the allocation is successful. If it is not, attempt to reduce the amount of memory occupied by the Source. If the allocation cannot be made return TWRC_FAILURE with TWCC_LOWMEMORY to the application and set the pCapability->hContainer handle to NULL.

Note that the Source **must** be able to respond to an inquiry about any of its capabilities at **any time** that the Source is open.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADCAP	/* Unknown capability--Source does not recognize */ /* this capability. This code should not be used */ /* by sources after 1.6. Applications still need */ /* to test for it for backward compatibility. */
TWCC_CAPUNSUPPORTED	/* Capability not supported by source. Sources*/ /* 1.6 and newer must use this instead of */ /* using TWCC_BADCAP. */
TWCC_CAPBADOPERATION	/* Operation not supported by capability. */ /* Sources 1.6 and newer must use this instead*/ /* of using TWCC_BADCAP.
TWCC_CAPSEQERROR	/* Capability has dependency on other */ /* capability. Sources 1.6 and newer must use */ /* this instead of using TWCC_BADCAP. */
TWCC_BADDEST	/* No such Source in-session with */ /* application */
TWCC_LOWMEMORY	/* Not enough memory to complete the */ /* operation */
TWCC_SEQERROR	/* Operation invoked in invalid state */

See Also

DG_CONTROL / DAT_CAPABILITY / MSG_GET, MSG_GETCURRENT, MSG_RESET, and MSG_SET

Capability Constants (in [Chapter 10, "Capabilities"](#))

Capability Containers: TW_ONEVALUE, TW_ENUMERATION, TW_RANGE, TW_ARRAY (in [Chapter 8, "Data Types and Data Structures"](#))

Listing of all capabilities (in [Chapter 10, "Capabilities"](#))

DG_CONTROL / DAT_CAPABILITY / MSG_GETHELP

Call

```
DSM_Entry(pOrigin, NULL, DG_CONTROL, DAT_CAPABILITY, MSG_GETHELP,  
pTwCapability);
```

pTwCapability = A pointer to a TW_CAPABILITY structure.

Valid States

4

Description

Returns help text suitable for use in a GUI; for instance: "Specify the amount of detail in an image. Higher values result in more detail." for ICAP_XRESOLUTION.

Source

The Source returns a TW_ONEVALUE container with a TW_STR4096 item type. The string data is UTF-8 encoded. The language is determined by the TW_IDENTITY.TW_VERSION.Language reported back by the Source, unless overridden by CAP_LANGUAGE.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_CAPUNSUPPORTED

See Also

DG_CONTROL / DAT_CAPABILITY / MSG_GETLABEL

DG_CONTROL / DAT_CAPABILITY / MSG_GETLABEL

Call

```
DSM_Entry(pOrigin, NULL, DG_CONTROL, DAT_CAPABILITY, MSG_GETLABEL,  
pTwCapability);
```

pTwCapability = A pointer to a TW_CAPABILITY structure.

Valid States

4

Description

Returns a label suitable for use in a GUI, for instance "Resolution:" for ICAP_XRESOLUTION.

Source

The Source returns a TW_ONEVALUE container with a TW_STR255 item type. The string data is UTF-8 encoded. The language is determined by the TW_IDENTITY.TW_VERSION.Language reported back by the Source, unless overridden by CAP_LANGUAGE.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_CAPUNSUPPORTED

See Also

DG_CONTROL / DAT_CAPABILITY / MSG_GETHELP

DG_CONTROL / DAT_CAPABILITY / MSG_GETLABLENUM

Call

```
DSM_Entry(pOrigin, NULL, DG_CONTROL, DAT_CAPABILITY, MSG_GETLABLENUM,
pTwCapability);
```

pTwCapability = A pointer to a TW_CAPABILITY structure.

Valid States

4

Description

Return all of the labels for a capability of type TW_ARRAY or TW_ENUMERATION, for example "US Letter" for ICAP_SUPPORTEDSIZES' TWSS_USLETTER.

Application

The Application receives a TW_ARRAY with a TW_STR255 type. Each index in the array corresponds to the same index of a TW_ARRAY or a TW_ENUMERATION returned by a MSG_GET for that same capability.

For example, if ICAP_SUPPORTEDSIZES returns the following for MSG_GET:

```
ptwenumeration->ItemType = TWTY_UINT16
ptwenumeration->NumItems = 3
ptwenumeration->CurrentIndex = 0
ptwenumeration->DefaultIndex = 0
((TW_UINT16*)&ptwenumeration->ItemList)[0] = TWSS_USLETTER
((TW_UINT16*)&ptwenumeration->ItemList)[1] = TWSS_A4LEDGER
((TW_UINT16*)&ptwenumeration->ItemList)[2] = TWSS_USEXECUTIVE
```

It should return something like the following for MSG_GETLABLENUM:

```
ptwarray->ItemType = TWTY_STR255
ptwarray ->NumItems = 3
((char*)&ptwarray->ItemList)[0*sizeof(TW_STR255)] is "US Letter"
((char*)&ptwarray->ItemList)[1*sizeof(TW_STR255)] is "A4 Letter"
((char*)&ptwarray->ItemList)[2*sizeof(TW_STR255)] is "US Executive"
```

Source

The Source returns a TW_ARRAY container with a TW_STR255 item type. The string data is UTF-8 encoded. The language is determined by the TW_IDENTITY.TW_VERSION.Language reported back by the Source, unless overridden by CAP_LANGUAGE.

This feature is only supported for capabilities that return TW_ARRAY or TW_ENUMERATION for MSG_GET. Other capabilities (like TW_RANGE or TW_ONEVALUE) return TWRC_FAILURE / TWCC_BADPROTOCOL.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_CAPUNSUPPORTED

TWCC_BADPROTOCOL

See Also

DG_CONTROL / DAT_CAPABILITY / MSG_GETLABEL

DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT

Call

```
DSM_Entry(pOrigin, pDest, DG_CONTROL, DAT_CAPABILITY,  
MSG_QUERY SUPPORT, pCapability);
```

pCapability = A pointer to a TW_CAPABILITY structure.

Valid States

4 through 7

Description

Returns the Source's support status of this capability.

Application

Set the pCapability fields as follows:

```
pCapability->Cap = the CAP_xxxx or ACAP_xxxx or ICAP_xxxx identifier  
pCapability->ConType = TWON_ONEVALUE  
pCapability->hContainer = NULL
```

The Source will allocate the memory for the necessary container structure but the application must free it when the operation is complete and the application no longer needs to maintain the information.

Use MSG_QUERY SUPPORT:

- To check the whether the Source supports a particular operation on the capability.

This operation may fail for a low memory condition. Either recover from a TWCC_LOWMEMORY failure by freeing memory for the Source to use so it can continue, or terminating the acquisition and notifying the user of the low memory problem.

Source

Fill the fields in pCapability as follows:

```
pCapability->ConType = TWON_ONEVALUE  
pCapability->hContainer = TW_HANDLE referencing a container of type  
TW_ONVALUE.
```

Fill the fields in TW_ONVALUE as follows:

1. ItemType = TWTW_INT32;
2. Item = Bit pattern representing the set of operation that are supported by the Data Source on this capability (TWQC_GET, TWQC_SET, TWQC_GETDEFAULT, TWQC_RESET);

If the application requests this operation on a capability your Source does not recognize (and you're sure you've implemented all the capabilities that you're required to), do not disregard the operation, but fill out the TWON_ONEVALUE container with a value of zero(0) for the Item field, indicating no support for any of the DAT CAPABILITY operations, and return a status of TWRC_SUCCESS.

This is a memory allocation operation. It is possible for this operation to fail due to a low memory condition. Be sure to verify that the allocation is successful. If it is not, attempt to reduce the amount of memory occupied by the Source. If the allocation cannot be made return TWRC_FAILURE with TWCC_LOWMEMORY to the application and set the pCapability->hContainer handle to NULL.

Note that the Source **must** be able to respond to an inquiry about any of its capabilities at **any time** that the Source is open.

Return Codes

```

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADDEST      /* No such Source in-session with      */
                  /* application                          */

TWCC_LOWMEMORY    /* Not enough memory to complete the */
                  /* operation                          */

```

See Also

DG_CONTROL / DAT_CAPABILITY / MSG_GET, MSG_GETCURRENT, MSG_RESET, and MSG_SET

Capability Constants (in [Chapter 8, "Data Types and Data Structures"](#))

Capability Container: TW_ONEVALUE (in [Chapter 8, "Data Types and Data Structures"](#)).

Listing of all capabilities (in [Chapter 10, "Capabilities"](#))

DG_CONTROL / DAT_CAPABILITY / MSG_RESET

Call

```
DSM_Entry(pOrigin, pDest, DG_CONTROL, DAT_CAPABILITY, MSG_RESET,  
pCapability);
```

pCapability = A pointer to a TW_CAPABILITY structure.

Valid States

4 only

Description

Change the Current Value of the specified capability back to its power-on value and return the new Current Value.

The power-on value is the Current Value the Source started with when it entered State 4 after a DG_CONTROL / DAT_IDENTITY / MSG_OPENS. These values are listed as TWAIN defaults (in [Chapter 10, "Capabilities"](#)). If "no default" is specified, the Source uses its preferred default value (returned from MSG_GETDEFAULT).

Application

Set the pCapability fields as follows:

```
pCapability->Cap = the CAP_xxxx or ACAP_xxxx or ICAP_xxxx identifier  
pCapability->ConType = TWON_DONTCARE16  
pCapability->hContainer = NULL
```

The Source will allocate the memory for the necessary container structure but the application must free it when the operation is complete and the application no longer needs to maintain the information.

Use MSG_RESET:

- To set the Current Value of the specified capability to the Source's mandatory or preferred value, and to remove any constants from the allowed values supported by the Source.

This operation may fail for a low memory condition. Either recover from a TWCC_LOWMEMORY failure by freeing memory for the Source to use so it can continue, or terminating the acquisition and notifying the user of the low memory problem.

Source

If the application requests this operation on a capability your Source does not recognize (and you're sure you've implemented all the capabilities that you're required to), disregard the operation, but return TWRC_FAILURE with TWCC_BADCAP.

If you support the capability, reset the Current Value of the capability back to its power-on value. This value must also match the TWAIN default listed in [Chapter 10, "Capabilities."](#)

Also return the new Current Value (just like in a MSG_GETCURRENT). Fill in the fields listed below and allocate the container structure and place its handle into pCapability->hContainer. The container should be referenced by a “handle” of type TW_HANDLE.

Fill the fields in pCapability as follows:

```
pCapability->ConType = TWON_ARRAY or TWON_ONEVALUE
pCapability->hContainer = TW_HANDLE referencing a container of ConType
```

Set ConType to the container type that matches the type for this capability. Fill the fields in the container structure with the Current Value of the capability (after resetting it as stated above).

This is a memory allocation operation. It is possible for this operation to fail due to a low memory condition. Be sure to verify that the allocation is successful. If it is not, attempt to reduce the amount of memory occupied by the Source. If the allocation cannot be made return TWRC_FAILURE with TWCC_LOWMEMORY to the application and set the pCapability->hContainer handle to NULL.

Note that this operation is **only** valid in State 4, unless CAP_EXTENDED CAPS was negotiated. Any attempt to invoke it in any other state should be disregarded, though the Source should return TWRC_FAILURE with TWCC_SEQERROR.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

```
TWCC_BADCAP      /* Unknown capability--Source does not recognize */
                  /* this capability. This code should not be used */
                  /* by sources after 1.6. Applications still need */
                  /* to test for it for backward compatibility.    */

TWCC_CAPUNSUPPORTED /* Capability not supported by source Sources*/
                  /* 1.6 and newer must use this instead of      */
                  /* using TWCC_BADCAP.                          */

TWCC_CAPBADOPERATION /* Operation not supported by capability.    */
                  /* Sources 1.6 and newer must use this instead*/
                  /* of using TWCC_BADCAP.                        */

TWCC_CAPSEQERROR    /* Capability has dependency on other          */
                  /* capability. Sources 1.6 and newer must use */
                  /* this instead of using TWCC_BADCAP.          */

TWCC_BADDEST        /* No such Source in-session with          */
                  /* application                                */

TWCC_LOWMEMORY       /* Not enough memory to complete the          */
                  /* operation                                */

TWCC_SEQERROR        /* Operation invoked in invalid state          */
```


See Also

DG_CONTROL / DAT_CAPABILITY / MSG_GET, MSG_GETCURRENT, MSG_GETDEFAULT, and MSG_SET

[“Capability Constants” on page 8-74.](#)

Capability Containers: TW_ONEVALUE, TW_ENUMERATION, TW_RANGE, TW_ARRAY (in [Chapter 8, "Data Types and Data Structures"](#))

Listing of all capabilities (in [Chapter 10, "Capabilities."](#))

DG_CONTROL / DAT_CAPABILITY / MSG_RESETEALL

Call

```
DSM_Entry(pOrigin, pDest, DG_CONTROL, DAT_CAPABILITY, MSG_RESETEALL,
pCapability);
```

pCapability = A pointer to a TW_CAPABILITY structure.

Valid States

4 only

Description

This command resets all of the current values and constraints to their defaults for all of the negotiable capabilities supported by the driver.

Application

Set the pCapability fields as follows:

```
pCapability->Cap = CAP_SUPPORTEDCAPS
pCapability->ConType = TWON_DONTCARE16
pCapability->hContainer = NULL
```

The Source will not allocate any memory as a part of this call. It will only return a status to indicate success or failure. If this call succeeds then the application must assume that all capabilities have been reset, as well as any DAT structures that are associated with capabilities (such as DAT_IMAGE_LAYOUT or DAT_JPEG_COMPRESSION).

Source

The TW_CAPABILITY structure has no special meaning for this call. It is not required that the application set the Cap field to CAP_SUPPORTEDCAPS, so do not test for it. Do not change the structure in any way. Do not allocate any memory for this call.

When this call is complete the driver should be restored to factory defaults, matching the settings it had when first installed on the user's machine.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

```
TWCC_BADCAP          /* Unknown capability--Source does not */
                      /* recognize this capability. This code */
                      /* should not be used by sources after */
                      /* 1.6. Applications still need to test */
                      /* for it for backward compatibility. */
```

```

TWCC_CAPUNSUPPORTED    /* Capability not supported by */
                        /* source. Sources 1.6 and newer */
                        /* must use this instead of */

/* using TWCC_BADCAP. */

TWCC_CAPBADOPERATION    /* Operation not supported by */
                        /* capability. Sources 1.6 and newer */
                        /* must use this instead of using */
                        /* TWCC_BADCAP.

TWCC_CAPSEQERROR        /* Capability has dependency on other */
                        /* capability. Sources 1.6 and newer */
                        /* must use this instead of using      */
                        /* TWCC_BADCAP. */

TWCC_BADDEST            /* No such Source in-session with */
                        /* application */

TWCC_LOWMEMORY           /* Not enough memory to complete the */
                        /* operation */

TWCC_SEQERROR           /* Operation invoked in invalid state */

```

See Also

DG_CONTROL / DAT_CAPABILITY / MSG_GET, MSG_GETDEFAULT, MSG_RESET, and MSG_SET

Capability Constants (in [Chapter 10, "Capabilities"](#))

Capability Containers: TW_ONEVALUE, TW_ENUMERATION, TW_RANGE, TW_ARRAY (in [Chapter 8, "Data Types and Data Structures"](#))

Listing of all capabilities (in [Chapter 10, "Capabilities"](#))

DG_CONTROL / DAT_CAPABILITY / MSG_SET

Call

```
DSM_Entry(pOrigin, pDest, DG_CONTROL, DAT_CAPABILITY, MSG_SET,
pCapability);
```

pCapability = A pointer to a TW_CAPABILITY structure.

Valid States

4 only (During State 4, applications can also negotiate with Sources for permission to set the value(s) of specific capabilities in States 5 and 6 through CAP_EXTENDED CAPS.)

Description

Changes the Current Value(s) and Available Values of the specified capability to those specified by the application.

Current Values are set when the container is a TW_ONEVALUE or TW_ARRAY. Available and Current Values are set when the container is a TW_ENUMERATION or TW_RANGE.

Note: Sources are not required to allow restriction of their Available Values, however, this is strongly recommended.

Application

An application will use the setting of a capability's Current and Available Values differently depending on how the Source was enabled (DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLEDS).

If TW_USERINTERFACE.ShowUI = TRUE

- In State 4, set the Current Value to be displayed to the user as the current value. This value will be used for acquiring the image unless changed by the user or an automatic process (such as ICAP_AUTOBRIGHT).
- In State 4, set the Available Values to restrict the settings displayed to the user and available for use by the Source.
- In State 6, get the Current Value which was chosen by the user or automatic process. This is the setting used in the upcoming transfer.

If TW_USERINTERFACE.ShowUI = FALSE

- In State 4, set the Current Value to the setting that will be used to acquire images (unless automatic settings are set to TRUE, for example: ICAP_AUTOBRIGHT).
- In State 6, get the Current Value which was chosen by any automatic processes. This is the setting used in the upcoming transfer.

If possible, use the same container type in a MSG_SET that the Source returned from a MSG_GET. Allocate the container structure. This is where you will place the value(s) you wish to have the

Source set. Store the handle into pCapability->hContainer. The container must be referenced by a "handle" of type TW_HANDLE.

Set the following:

```
pCapability->ConType = TWON_ARRAY,
                    TWON_ONEVALUE,
                    TWON_ENUMERATION, or
                    TWON_RANGE

pCapability->Cap      = CAP_xxxx designator of
                    capability of interest

pCapability->hContainer = TW_HANDLE referencing a
                    container of ConType
```

Place the value(s) that you wish the Source to use in the container. If successful, these values will supersede any previous negotiations for this capability.

The application must free the container it allocated when the operation is complete and the application no longer needs to maintain the information.

Source

Return TWRC_FAILURE / TWCC_BADCAP:

- If the application requests this operation on a capability your Source does not recognize (and you're sure you've implemented all the capabilities that you're required to). Disregard the operation.

Return TWRC_FAILURE / TWCC_BADVALUE:

- If the application requests that a value be set that lies outside the supported range of values for the capability (smaller than your minimum value or larger than your maximum value). Set the value to that which most closely approximates the requested value.
- If the application sends a container that you do not support, or do not support in a MSG_SET.
- If the application attempts to set the Available Values and the Source does not support restriction of this capability's Available Values.

Returns TRCC_CHECKSTATUS:

- If the application requests one or more values that lie within the supported range of values (but that value does not exactly match one of the supported values), set the value to the nearest supported value. The application should then do a MSG_GET to check these values.

Return TWRC_FAILURE / TWCC_SEQERROR:

- If the application sends the MSG_SET outside of State 4 and the capability has not been negotiated in CAP_EXTENDED CAPS.

If the request is acceptable, use the container structure referenced by pCapability->hContainer to set the Current and Available Values for the capability. If the container type is TWON_ONEVALUE or TWON_ARRAY, set the Current Value for the capability to that value. If the container type is TWON_RANGE or TWON_ENUMERATION, the Source will **optionally** limit the Available Values for the capability to match those provided by the application, masking all

other internal values so that the user cannot select them. Though this behavior is not mandatory, it is strongly encouraged.

Important: Sources should accommodate requests to limit Available Values. In the interest of adoptability for the breadth of Source manufacturers, such accommodation is not required. It is recommended, however, that the Sources do so, and that the Source's user interface be modified (from its power-on state, and when the user interface is raised) to reflect any limitation of choices implied by the newly negotiated settings.

Note: For example, if an application can only accept black and white image data, it tells the Source of this limitation by doing a MSG_SET on ICAP_PIXELTYPE with a TW_ENUMERATION or TW_RANGE container containing only TWPT_BW (black and white).

Note: If the Source disregards this negotiated value and fails to modify its user interface, the user may select to acquire a color image. Either the user's selection would fail (for reasons unclear to the user) or the transfer would fail (also for unclear reasons for the user). The Source should strive to prevent such situations.

Return Codes

```

TWRC_SUCCESS

TWRC_CHECKSTATUS      /* capability value(s) could not be */
                      /* matched exactly                               */

TWRC_FAILURE

    TWCC_BADCAP        /* Unknown capability--Source does not recognize */
                      /* this capability. This code should not be used */
                      /* by sources after 1.6. Applications still need */
                      /* to test for it for backward compatibility.  */

    TWCC_CAPUNSUPPORTED /* Capability not supported by source. */
                      /* Sources 1.6 and newer must use this */
                      /* instead of using TWCC_BADCAP. */

    TWCC_CAPBADOPERATION /* Operation not supported by capability. */
                      /* Sources 1.6 and newer must use this */
                      /* instead of using TWCC_BADCAP.

    TWCC_CAPSEQERROR    /* Capability has dependency on other */
                      /* capability. Sources 1.6 and newer must use */
                      /* this instead of using TWCC_BADCAP.

    TWCC_BADDEST        /* No such Source in-session with */
                      /* application */

    TWCC_BADVALUE       /* illegal value(s)--outside */
                      /* Source's range for capability

    TWCC_SEQERROR       /* Operation invoked in invalid */
                      /* state

```

See Also

DG_CONTROL / DAT_CAPABILITY / MSG_GET, MSG_GETCURRENT, **MSG_GETDEFAULT**, and MSG_RESET

Capability Constants (in [Chapter 8, "Data Types and Data Structures"](#))

Capability Containers: TW_ONEVALUE, TW_ENUMERATION, TW_RANGE, TW_ARRAY (in [Chapter 8, "Data Types and Data Structures"](#))

Listing of all capabilities (in [Chapter 10, "Capabilities"](#))

DG_CONTROL / DAT_CUSTOMDSDATA / MSG_GET

Call

```
DSM_Entry(  
    pOrigin, pDest, DG_CONTROL, DAT_CUSTOMDSDATA,  
    MSG_GET, pCustomData  
);  
  
pCustomData = A pointer to a TW_CUSTOMDSDATA structure.
```

Valid States

4 only

Description

This operation is used by the application to query the data source for its current settings, e.g. DPI, paper size, color format. The sources settings will be returned in a TW_CUSTOMDSDATA structure. The actual format of the data in this structure is data source dependent and not defined by TWAIN.

Application

pDest references the sources identity structure. pCustomData points to a TW_CUSTOMDSDATA structure.

Source

Fills the pCustomData pointer with source specific settings. If supported, CAP_ENABLEDSUIONLY and CAP_CUSTOMDSDATA *are required*.

Return Codes

```
TWRC_SUCCESS  
TWRC_FAILURE  
TWCC_SEQERROR
```

See Also

Capability CAP_CUSTOMDSDATA

DG_CONTROL / DAT_CUSTOMDSDATA / MSG_SET

Call

```
DSM_Entry(pOrigin, pDest, DG_CONTROL, DAT_CUSTOMDSDATA,  
MSG_SET, pCustomData);
```

pCustomData = A pointer to a TW_CUSTOMDSDATA structure.

Valid States

4 only

Description

This operation is used by the application to set the current settings for a data source to a previous state as defined by the data contained in the pCustomData data structure. The actual format of the data in this structure is data source dependent and not defined by TWAIN.

Application

pDest references the sources identity structure. pCustomData points to a TW_CUSTOMDSDATA structure.

Source

Changes its current settings to the values specified in the pCustomData structure.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_SEQERROR

See Also

Capability CAP_CUSTOMDSDATA

DG_CONTROL / DAT_DEVICEEVENT / MSG_GET

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_DEVICEEVENT, MSG_GET,
           pSourceDeviceEvent);
```

pSourceDeviceEvent = A pointer to a TW_DEVICEEVENT structure

Valid States

4 through 7

Description

Upon receiving a DG_CONTROL / DAT_NULL / MSG_DEVICEEVENT from the Source, the Application must immediately make this call to obtain the event information.

Sources must queue the data for each event so that it is available for this call.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL

Capability not supported.

TWCC_SEQERROR

No events in the queue, or not in States 4 through 7.

See Also

DG_CONTROL / DAT_NULL / MSG_DEVICEEVENT
CAP_DEVICEEVENT

DG_CONTROL / DAT_ENTRYPOINT / MSG_GET

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_ENTRYPOINT, MSG_GET,  
pEntryPoint);
```

pEntryPoint = A pointer to a TW_ENTRYPOINT structure

Valid States

3

Description

A TWAIN 2.0 Application examines the Source's TW_IDENTITY .SupportedGroups. If DF_DSM2 is set, then it must issue this call to get the entry points for the Source Manager. If the conditions are not met then the Source Manager will return TWRC_FAILURE / TWCC_BADPROTOCOL, and the Application must assume TWAIN 1.x behavior.

The Application gets five entry points in the TW_ENTRYPOINT structure:

- * the DSM_Entry function, this may be ignored
- * the DSM_MemAllocate function, used by the Application to allocate memory that will be freed by the Source
- * the DSM_MemFree function, used by the Application to free memory allocated by the Source
- * the DSM_MemLock function, used by the Application to get a usable pointer from a handle it got from the Source.
- * the DSM_MemUnlock function, used when the Application is done with the memory it got from the Source. This call is usually made just before DSM_MemFree.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL

TWCC_SEQERROR

See Also

Identifying TWAIN 2.0 Elements, in [Chapter 2, "Technical Overview."](#)

DG_CONTROL / DAT_ENTRYPOINT / MSG_SET

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_ENTRYPOINT, MSG_SET,
pEntryPoint);
```

pEntryPoint = A pointer to a TW_ENTRYPOINT structure

Valid States

The TWAIN 2.0 Source Manager issues this command to Sources (that set DF_DS2) prior of any other command sent by the Application. In most cases it will immediately precede the call to DG_CONTROL / DAT_IDENTITY / MSG_OPEN.

The Source gets five entry points in the TW_ENTRYPOINT structure:

- the pointer to the DSM_Entry function, used for any DAT_NULL operations such as DG_CONTROL / DAT_NULL / MSG_XFERREADY.
- the DSM_MemAllocate function, used by the Source to allocate memory that will be freed by the Application
- the DSM_MemFree function, used by the Source to free memory allocated by the Application
- *the DSM_MemLock function, used by the Source to get a usable pointer from a handle it got from the Application.
- the DSM_MemUnlock function, used when the Source is done with the memory it got from the Application. This call is usually made just before DSM_MemFree.

Note: TWAIN 1.x Sources must continue to find and load the Source Manager DSM_Entry on their own.

Return Codes

```
TWRC_SUCCESS
TWRC_FAILURE
TWCC_BADPROTOCOL
TWCC_SEQERROR
```

See Also

Identifying TWAIN 2.0 Elements, in [Chapter 2, "Technical Overview."](#)

DG_CONTROL/ DAT_EVENT / MSG_PROCESSEVENT

Call

```
DSM_Entry(pOrigin, pDest, DG_CONTROL, DAT_EVENT, MSG_PROCESSEVENT,
pEvent);
```

pEvent = A pointer to a TW_EVENT structure.

Valid States

5 through 7

Description

This operation supports the distribution of events from the application to Sources so that the Source can maintain its user interface and return messages to the application. Once the application has enabled the Source, it **must immediately** begin sending to the Source all events that enter the application's main event loop. This allows the Source to update its user interface in real-time and to return messages to the application which cause state transitions. Even if the application overrides the Source's user interface, it must forward all events once the Source has been enabled. The Source will tell the application whether or not each event belongs to the Source.

Note: Events only need to be forwarded to the Source while it is enabled.

The Source should be structured such that identification of the event's "owner" is handled before doing anything else. Further, the Source should return **immediately** if the Source isn't the owner. This convention should minimize performance concerns for the application (remember, these events are only sent while a Source is enabled – that is, just before and just after the transfer is taking place).

Application

On Windows: Make pEvent->pEvent point to the message structure.

On Macintosh: See [Chapter 3, "Application Implementation."](#)

Note: On return, the application should check the Return Code from `DSM_Entry()` for `TWRC_DSEVENT` or `TWRC_NOTDSEVENT`. If `TWRC_DSEVENT` is returned, the application should not process the event – it was consumed by the Source. If `TWRC_NOTDSEVENT` is returned, the application should process the event as it normally would.

With either of these Return Codes, the application should also check the `pEvent->TWMessage` and switch on the result. This is the mechanism used by the Source to notify the application that a data transfer is ready or that it should close the Source. The Source can return one of the following messages:

```
MSG_XFERREADY          /* Source has one or more images */
                        /* ready to transfer                */
```

```

MSG_CLOSEDREQ      /* Source wants to be closed,      */
                   /* usually initiated by a          */
                   /* user-generated event          */

MSG_NULL           /* no message for application */

```

Source

Process this operation **immediately** and return to the application **immediately** if the event doesn't belong to you. Be aware that the application will be sending *thousands* of messages to you. Consider in-line processing and global flags to speed implementation.

Return Codes

```

TWRC_DSEVENT       /* Source consumed event--application */
                   /* should not process it              */

TWRC_NOTDSEVENT     /* Event belongs to application -      */
                   /* process as usual                  */

TWRC_FAILURE

    TWCC_BADDEST     /* No such Source in-session          */
                   /* with application                  */

    TWCC_SEQERROR    /* Operation invoked in invalid      */
                   /* state                             */

```

See Also

```

DG_CONTROL / DAT_NULL / MSG_CLOSEDREQ
DG_CONTROL / DAT_NULL / MSG_XFERREADY

```

Event loop information (in [Chapter 7, "Operation Triplets."](#))

DG_CONTROL / DAT_FILESYSTEM / MSG_AUTOMATICCAPTUREDIRECTORY

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_FILESYSTEM,
           MSG_AUTOMATICCAPTUREDIRECTORY, pSourceFileSystem);

pSourceFileSystem = A pointer to a TW_FILESYSTEM structure
```

Valid States

4 only

Description

This operation selects the destination directory within the Source (camera, storage, etc), where images captured using CAP_AUTOMATICCAPTURE will be stored. This command only selects the destination directory (a file of type TWFT_DIRECTORY). The directory must exist and be accessible to the Source. The creation of images within the directory is at the discretion of the Source, and may result in the creation of additional sub-directories.

In all other regards the behavior of this operation is the same as DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY.

If the application does not specify a directory for automatic capture, then the destination of the images is left to the discretion of the Source. A directory named /Images is recommended, but not required.

Return Codes

```
TWRC_SUCCESS
TWRC_FAILURE
TWCC_BADPROTOCOL - capability not supported.
TWCC_DENIED - operation denied (device not ready).
TWCC_FILENOTFOUND - specified InputName does not exist.
TWCC_SEQERROR - not state 4.
```

See Also

```
DG_CONTROL / DAT_FILESYSTEM / MSG_COPY
DG_CONTROL / DAT_FILESYSTEM / MSG_CREATEDIRECTORY
DG_CONTROL / DAT_FILESYSTEM / MSG_DELETE
DG_CONTROL / DAT_FILESYSTEM / MSG_FORMATMEDIA
DG_CONTROL / DAT_FILESYSTEM / MSG_GETCLOSE
DG_CONTROL / DAT_FILESYSTEM / MSG_GETFIRSTFILE
DG_CONTROL / DAT_FILESYSTEM / MSG_GETINFO
DG_CONTROL / DAT_FILESYSTEM / MSG_GETNEXTFILE
DG_CONTROL / DAT_FILESYSTEM / MSG_RENAME
CAP_AUTOMATICCAPTURE
```

DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_FILESYSTEM,
           MSG_CHANGEDIRECTORY, pSourceFileSystem);
```

pSourceFileSystem = A pointer to a TW_FILESYSTEM structure

Valid States

4 only

Description

This operation selects the current device within the Source (camera, storage, etc). If the device is a TWFT_DOMAIN, then this command enters a directory that can contain TWFT_HOST files. If the device is a TWFT_HOST, then this command enters a directory that can contain TWFT_DIRECTORY files. If the device is a TWFT_DIRECTORY, then this command enters a directory that can contain TWFT_DIRECTORY or TWFT_IMAGE files.

Sources can support part or all of the storage hierarchy that is one of the following:

```
/Domain/Host/Directory/
/Host/Directory/...
/Directory/...
(Storage not supported)
```

It is permitted to mix domain, host, and directory names in the root file system of the Source. To help resolve any potential name conflict, Applications should set TW_FILESYSTEM->FileType to the appropriate value for the topmost file. If this is not done and there is a name conflict, the Source's default behavior must be to use the file of type TWFT_DIRECTORY or TWFT_HOST, in that order.

For example, consider two files named "abc" in the root of a Source:

```
/abc/123 (abc is a domain)
/abc/789 (abc is a directory)
```

Change directory to the first one by setting FileType to TWFT_DOMAIN, or to the second one by setting FileType to TWFT_DIRECTORY. The FileType for each will be discovered while browsing the directory using DAT_GETFILEFIRST and DAT_GETFILENEXT. If the FileType is not specified, then the Source must change to the "/abc/789" directory.

Example:

A Source supports two devices: /Camera and /Disk. If an application changes directory to /Camera, then it can negotiate imaging parameters and transfer images in a traditional fashion. If an application changes directory to /Disk/abc/xyz, then it cannot negotiate imaging

parameters (the images have already been captured); all it can do is browse the directory tree and transfer the images it finds.

The Application sets the new current working directory by placing in the InputName field an absolute or relative path. The Source returns the absolute path and name of the new directory in the OutputName field. The special filename dot "." can be used to retrieve the name of the current directory. The special filename dot-dot ".." can be used to change to the parent directory. Refer to the section on File Systems for more information.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL - capability not supported.

TWCC_DENIED - operation denied (device not ready).

TWCC_FILENOTFOUND - specified InputName does not exist.

TWCC_SEQERROR - not state 4.

See Also

DG_CONTROL / DAT_FILESYSTEM / MSG_AUTOMATICCAPTUREDDIRECTORY
DG_CONTROL / DAT_FILESYSTEM / MSG_COPY
DG_CONTROL / DAT_FILESYSTEM / MSG_CREATEDIRECTORY
DG_CONTROL / DAT_FILESYSTEM / MSG_DELETE
DG_CONTROL / DAT_FILESYSTEM / MSG_FORMATMEDIA
DG_CONTROL / DAT_FILESYSTEM / MSG_GETCLOSE
DG_CONTROL / DAT_FILESYSTEM / MSG_GETFIRSTFILE
DG_CONTROL / DAT_FILESYSTEM / MSG_GETINFO
DG_CONTROL / DAT_FILESYSTEM / MSG_GETNEXTFILE
DG_CONTROL / DAT_FILESYSTEM / MSG_RENAME

DG_CONTROL / DAT_FILESYSTEM / MSG_COPY

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_FILESYSTEM,
           MSG_COPY, pSourceFileSystem);
```

pSourceFileSystem = A pointer to a TW_FILESYSTEM structure

Valid States

4 only

Description

This operation copies a file or directory. Absolute and relative pathnames are supported. A file may not be overwritten with this command. If an Application wishes to do this, it must first delete the unwanted file and then reissue the Copy command.

The Application specifies the path and name of the entry to be copied in InputName. The Application specifies the new path and name in OutputName.

It is not permitted to copy files into the root directory.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL - capability not supported.

TWCC_DENIED - file cannot be deleted (root file, or protected by Source).

TWCC_FILEEXISTS - specified OutputName already exists.

TWCC_FILENOTFOUND - InputName not found or OutputName invalid.

TWCC_SEQERROR - not state 4.

See Also

DG_CONTROL / DAT_FILESYSTEM / MSG_AUTOMATICCAPTUREDDIRECTORY
 DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY
 DG_CONTROL / DAT_FILESYSTEM / MSG_CREATEDIRECTORY
 DG_CONTROL / DAT_FILESYSTEM / MSG_DELETE
 DG_CONTROL / DAT_FILESYSTEM / MSG_FORMATMEDIA
 DG_CONTROL / DAT_FILESYSTEM / MSG_GETCLOSE
 DG_CONTROL / DAT_FILESYSTEM / MSG_GETFIRSTFILE
 DG_CONTROL / DAT_FILESYSTEM / MSG_GETINFO
 DG_CONTROL / DAT_FILESYSTEM / MSG_GETNEXTFILE
 DG_CONTROL / DAT_FILESYSTEM / MSG_RENAME

DG_CONTROL / DAT_FILESYSTEM / MSG_CREATEDIRECTORY

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_FILESYSTEM,  
           MSG_CREATEDIRECTORY, pSourceFileSystem);
```

pSourceFileSystem = A pointer to a TW_FILESYSTEM structure

Valid States

4 only

Description

This operation creates a new directory within the current directory. Pathnames are not allowed, only the name of the new directory can be specified.

Example:

“abc” is valid.

“/Disk/abc” is not valid.

The Application specifies the name of the new directory in InputName.

On success, the Source returns the absolute path and name of the new directory in OutputName.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL - capability not supported.

TWCC_DENIED - cannot create directory in current directory, directories may not be created in root, or the Source may opt to prevent the creation of new directories in some instances, for instance if the new directory would be too deep in the tree.

TWCC_FILEEXISTS - the specified InputName already exists.

TWCC_SEQERROR - not state 4.

See Also

DG_CONTROL / DAT_FILESYSTEM / MSG_AUTOMATICCAPTUREDIRECTIONS
DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY
DG_CONTROL / DAT_FILESYSTEM / MSG_COPY
DG_CONTROL / DAT_FILESYSTEM / MSG_DELETE
DG_CONTROL / DAT_FILESYSTEM / MSG_FORMATMEDIA
DG_CONTROL / DAT_FILESYSTEM / MSG_GETCLOSE

DG_CONTROL / DAT_FILESYSTEM / MSG_GETFIRSTFILE
DG_CONTROL / DAT_FILESYSTEM / MSG_GETINFO
DG_CONTROL / DAT_FILESYSTEM / MSG_GETNEXTFILE
DG_CONTROL / DAT_FILESYSTEM / MSG_RENAME

DG_CONTROL / DAT_FILESYSTEM / MSG_DELETE

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_FILESYSTEM,  
           MSG_DELETE, pSourceFileSystem);
```

pSourceFileSystem = A pointer to a TW_FILESYSTEM structure

Valid States

4 only

Description

This operation deletes a file or directory on the device. Pathnames are not allowed, only the name of the file or directory to be deleted can be specified. Recursive deletion can be specified by setting the pSourceFileSystem->Recursive to TRUE.

Example:

"abc" is valid.

"/Disk/abc" is not valid.

The Application specifies the name of the entry to be deleted in InputName. There is no return in OutputName on success.

The Application cannot delete entries in the root directory. The Application cannot delete directories unless they are empty.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL - capability not supported.

TWCC_DENIED - file cannot be deleted (root file, or protected by Source).

TWCC_FILENOTFOUND - filename not found.

TWCC_NOTEMPTY - directory is not empty, and cannot be deleted.

TWCC_SEQERROR - not state 4.

See Also

DG_CONTROL / DAT_FILESYSTEM / MSG_AUTOMATICCAPTUREDIRECTORY
DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY
DG_CONTROL / DAT_FILESYSTEM / MSG_CREATEDIRECTORY
DG_CONTROL / DAT_FILESYSTEM / MSG_FORMATMEDIA
DG_CONTROL / DAT_FILESYSTEM / MSG_GETCLOSE
DG_CONTROL / DAT_FILESYSTEM / MSG_GETFIRSTFILE

DG_CONTROL / DAT_FILESYSTEM / MSG_GETINFO
DG_CONTROL / DAT_FILESYSTEM / MSG_GETNEXTFILE
DG_CONTROL / DAT_FILESYSTEM / MSG_RENAME

DG_CONTROL / DAT_FILESYSTEM / MSG_FORMATMEDIA

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_FILESYSTEM,
           MSG_FORMATMEDIA, pSourceFileSystem);
```

pSourceFileSystem = A pointer to a TW_FILESYSTEM structure

Valid States

4 only

Description

This operation formats the specified storage. This operation destroys all images and sub-directories under the selected device. Use with caution.

The Application specifies the name of the device to be deleted in InputName. There is no data returned by this call.

The Application cannot format the root directory. Sources may opt to protect their media from this command, so Applications must check return and condition codes.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL - capability not supported.

TWCC_DENIED - format denied (root directory, or protected by Source).

TWCC_FILENOTFOUND - filename not found.

TWCC_SEQERROR - not state 4.

See Also

DG_CONTROL / DAT_FILESYSTEM / MSG_AUTOMATICCAPTUREDIRECTORY
DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY
DG_CONTROL / DAT_FILESYSTEM / MSG_CREATEDIRECTORY
DG_CONTROL / DAT_FILESYSTEM / MSG_DELETE
DG_CONTROL / DAT_FILESYSTEM / MSG_GETCLOSE
DG_CONTROL / DAT_FILESYSTEM / MSG_GETFIRSTFILE
DG_CONTROL / DAT_FILESYSTEM / MSG_GETINFO
DG_CONTROL / DAT_FILESYSTEM / MSG_GETNEXTFILE
DG_CONTROL / DAT_FILESYSTEM / MSG_RENAME

DG_CONTROL / DAT_FILESYSTEM / MSG_GETCLOSE

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_FILESYSTEM,
           MSG_GETCLOSE, pSourceFileSystem);
```

pSourceFileSystem = A pointer to a TW_FILESYSTEM structure

Valid States

4 through 6

Description

The operation frees the Context field in pSourceFileSystem.

Every call to DG_CONTROL / DAT_FILESYSTEM / MSG_GETFIRSTFILE must be matched by a call to MSG_GETCLOSE to release the Context field in the pSourceFileSystem structure.

An Application may (erroneously) issue this operation at any time (even if a MSG_GETFIRSTFILE has not been issued yet). Sources must protect themselves from such uses. See the section on File Systems for more information on why and how this must be done.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL - capability not supported.

TWCC_SEQERROR - not state 4, 5 or 6.

See Also

DG_CONTROL / DAT_FILESYSTEM / MSG_AUTOMATICCAPTUREDIRECTORY
 DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY
 DG_CONTROL / DAT_FILESYSTEM / MSG_CREATEDIRECTORY
 DG_CONTROL / DAT_FILESYSTEM / MSG_DELETE
 DG_CONTROL / DAT_FILESYSTEM / MSG_FORMATMEDIA
 DG_CONTROL / DAT_FILESYSTEM / MSG_GETFIRSTFILE
 DG_CONTROL / DAT_FILESYSTEM / MSG_GETINFO
 DG_CONTROL / DAT_FILESYSTEM / MSG_GETNEXTFILE
 DG_CONTROL / DAT_FILESYSTEM / MSG_RENAME

DG_CONTROL / DAT_FILESYSTEM / MSG_GETFIRSTFILE

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_FILESYSTEM,
           MSG_GETFIRSTFILE, pSourceFileSystem);
```

pSourceFileSystem = A pointer to a TW_FILESYSTEM structure

Valid States

4 through 6

Description

This operation gets the first filename in a directory, and returns information about that file (the same information that can be retrieved with MSG_GETINFO).

The Source positions the Context to point to the first filename. InputName is ignored. OutputName contains the absolute path and name of the file. If the Application enables the Source at this time, and the PendingXfers.Count is non-zero, the Application will immediately receive a MSG_XFERREADY, and the current image will be transferred.

Applications must not assume any ordering of the files delivered by the Source, with one exception: if MSG_GETFIRSTFILE is issued in the root directory, then the operation must return a TWFT_CAMERA device.

NB: "." and ".." are NEVER reported by this command.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL - capability not supported.

TWCC_DENIED - file exists, but information about it has not been returned.

TWCC_FILENOTFOUND - directory is empty.

TWCC_SEQERROR - not state 4, 5 or 6.

See Also

DG_CONTROL / DAT_FILESYSTEM / MSG_AUTOMATICCAPTUREDIRECTIONS
DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY
DG_CONTROL / DAT_FILESYSTEM / MSG_CREATEDIRECTORY
DG_CONTROL / DAT_FILESYSTEM / MSG_DELETE
DG_CONTROL / DAT_FILESYSTEM / MSG_FORMATMEDIA
DG_CONTROL / DAT_FILESYSTEM / MSG_GETCLOSE
DG_CONTROL / DAT_FILESYSTEM / MSG_GETINFO

DG_CONTROL / DAT_FILESYSTEM / MSG_GETNEXTFILE
DG_CONTROL / DAT_FILESYSTEM / MSG_RENAME

DG_CONTROL / DAT_FILESYSTEM / MSG_GETINFO

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_FILESYSTEM,  
           MSG_GETINFO, pSourceFileSystem);
```

pSourceFileSystem = A pointer to a TW_FILESYSTEM structure

Valid States

4 through 7

Description

This operation fills the information fields in pSourceFileSystem.

InputName contains the absolute or relative path and filename of the requested file.
OutputName returns the absolute path to the file.

Example *InputName*:

"abc" is valid.

"/Disk/abc" is valid.

The empty string "" returns information about the current file (if any).

"." returns information about the current directory.

".." returns information about the parent directory.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL - capability not supported.

TWCC_DENIED - file exists, but information about it has not
been returned.

TWCC_FILENOTFOUND - specified file does not exist.

TWCC_SEQERROR - not state 4 - 7, or no current file.

See Also

DG_CONTROL / DAT_FILESYSTEM / MSG_AUTOMATICCAPTUREDDIRECTORY
DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY
DG_CONTROL / DAT_FILESYSTEM / MSG_CREATEDIRECTORY
DG_CONTROL / DAT_FILESYSTEM / MSG_DELETE
DG_CONTROL / DAT_FILESYSTEM / MSG_FORMATMEDIA
DG_CONTROL / DAT_FILESYSTEM / MSG_GETCLOSE
DG_CONTROL / DAT_FILESYSTEM / MSG_GETFIRSTFILE
DG_CONTROL / DAT_FILESYSTEM / MSG_RENAME

DG_CONTROL / DAT_FILESYSTEM / MSG_GETNEXTFILE

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_FILESYSTEM,
           MSG_GETNEXTFILE, pSourceFileSystem);
```

pSourceFileSystem = A pointer to a TW_FILESYSTEM structure

Valid States

4 through 6

Description

This operation gets the next filename in a directory, and returns information about that file (the same information that can be retrieved with MSG_GETINFO).

The Source positions the Context to point to the next filename. InputName is ignored. OutputName contains the absolute path and name of the file. If the Application enables the Source at this time, and the PendingXfers.Count is non-zero, the Application will immediately receive a MSG_XFERREADY, and the current image will be transferred.

A call to MSG_GETFIRSTFILE must be issued on a given directory before the first call to MSG_GETNEXTFILE.

NB: The "." and ".." entries are NEVER reported by this command

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL - capability not supported.

TWCC_DENIED - file exists, but information about it has not been returned.

TWCC_FILENOTFOUND - directory is empty.

TWCC_SEQERROR - not state 4, 5 or 6, or invalid context (must issue MSG_GETFILEFIRST before calling MSG_GETNEXTFILE).

See Also

DG_CONTROL / DAT_FILESYSTEM / MSG_AUTOMATICCAPTUREDIRECTORY
 DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY
 DG_CONTROL / DAT_FILESYSTEM / MSG_CREATEDIRECTORY
 DG_CONTROL / DAT_FILESYSTEM / MSG_DELETE
 DG_CONTROL / DAT_FILESYSTEM / MSG_FORMATMEDIA
 DG_CONTROL / DAT_FILESYSTEM / MSG_GETCLOSE
 DG_CONTROL / DAT_FILESYSTEM / MSG_GETFIRSTFILE

DG_CONTROL / DAT_FILESYSTEM / MSG_GETINFO
DG_CONTROL / DAT_FILESYSTEM / MSG_RENAME

DG_CONTROL / DAT_FILESYSTEM / MSG_RENAME

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_FILESYSTEM,
           MSG_RENAME, pSourceFileSystem);
```

pSourceFileSystem = A pointer to a TW_FILESYSTEM structure

Valid States

4 only

Description

This operation renames (and optionally moves) a file or directory. Absolute and relative path names are supported. A file may not be overwritten with this command. If an Application wishes to do this it must first delete the unwanted file, then issue the rename command.

The Application specifies the path and name of the entry to be renamed in InputName. The Application specifies the new path and name in OutputName.

Filenames in the root directory cannot be moved or renamed.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL - capability not supported.

TWCC_DENIED - file cannot be deleted (root file, or protected by Source).

TWCC_FILEEXISTS - specified OutputName already exists.

TWCC_FILENOTFOUND - InputName not found or OutputName invalid.

TWCC_SEQERROR - not state 4.

See Also

DG_CONTROL / DAT_FILESYSTEM / MSG_AUTOMATICCAPTUREDDIRECTORY
 DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY
 DG_CONTROL / DAT_FILESYSTEM / MSG_CREATEDIRECTORY
 DG_CONTROL / DAT_FILESYSTEM / MSG_DELETE
 DG_CONTROL / DAT_FILESYSTEM / MSG_FORMATMEDIA
 DG_CONTROL / DAT_FILESYSTEM / MSG_GETCLOSE
 DG_CONTROL / DAT_FILESYSTEM / MSG_GETFIRSTFILE
 DG_CONTROL / DAT_FILESYSTEM / MSG_GETINFO
 DG_CONTROL / DAT_FILESYSTEM / MSG_GETNEXTFILE

DG_CONTROL / DAT_IDENTITY / MSG_CLOSED

(from Application to Source Manager)

Call

```
DSM_Entry(pOrigin, NULL, DG_CONTROL, DAT_IDENTITY, MSG_CLOSED,  
pSourceIdentity);
```

pSourceIdentity = A pointer to a TW_IDENTITY structure.

Valid States

4 only (Transitions to State 3, if successful)

Description

When an application is finished with a Source, it must formally close the session between them using this operation. This is necessary in case the Source only supports connection with a single application (many desktop scanners will behave this way). A Source such as this cannot be accessed by other applications until its current session is terminated.

Application

Reference pSourceIdentity to the application's copy of the TW_IDENTITY structure for the Source whose session is to be ended. The application needs to unload the Source from memory after it is closed. The process for unloading the Source is similar to that used to unload the Source Manager.

Source Manager

On Macintosh only – Closes the Source and removes it from memory, following receipt of TWRC_SUCCESS from the Source.

On Windows only – Checks its internal counter to see whether any other applications are accessing the specified Source. If so, the Source Manager takes no other action. If the closing application is the last to be accessing this Source, the Source Manager closes the Source (forwards this triplet to it) and removes it from memory, following receipt of TWRC_SUCCESS from the Source.

Upon receiving the request from the Source Manager, the Source *immediately* prepares to terminate execution.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_SEQERROR /* Operation invoked in invalid state */

See Also

DG_CONTROL / DAT_IDENTITY / MSG_OPENS

DG_CONTROL / DAT_IDENTITY / MSG_CLOSED

(from Source Manager to Source)

Call

```
DS_Entry(pOrigin, DG_CONTROL, DAT_IDENTITY, MSG_CLOSED,
pSourceIdentity);
```

pSourceIdentity = A pointer to a TW_IDENTITY structure.

Valid States

4 only (Transitions Source back to the “loaded but not open” State - approximately State 3.5)

Description

Closes the Source so it can be unloaded from memory. The Source responds by doing its shutdown and clean-up activities needed to ensure the heap will be “clean” after the Source is unloaded. Under Windows, the Source will only be unloaded if the connection with the last application accessing it is about to be broken. The Source will know this by its internal “connect count” that should be maintained by any Source that supports multiple application connects.

Source Manager

pSourceIdentity is filled from a previous MSG_OPENS operation.

Source

Perform all necessary housekeeping in anticipation of being unloaded. Be sure to dispose of any memory buffers that the Source has allocated locally, or that may have become the Source’s responsibility during the course of the TWAIN session. The Source exists in a shared memory environment. It is therefore critical that all remnants of the Source, except the entry point (initial) code, be removed as the Source prepares to be unloaded.

Return Codes

```
TWRC_SUCCESS
TWRC_FAILURE
TWCC_OPERATIONERROR    /* Internal Source error; */
                        /* handled by the Source */
```

See Also

DG_CONTROL / DAT_IDENTITY / MSG_OPENS

DG_CONTROL / DAT_IDENTITY / MSG_GET (from Source Manager to Source)

Call

```
DS_Entry(pOrigin, DG_CONTROL, DAT_IDENTITY, MSG_GET, pSourceIdentity);  
  
pSourceIdentity = A pointer to a TW_IDENTITY structure.
```

Valid States

3 through 7 (Yes, the Source must be able to return the identity *before* it is opened.)

Description

This operation triplet is generated only by the Source Manager and is sent to the Source. It returns the identity structure for the Source.

Source Manager

No special set up or action required.

Source

Fills in all fields of pSourceIdentity except the Id field which is only modified by the Source Manager. This structure was allocated by either the application or the Source Manager depending on which one initiated the MSG_OPENDS operation for the Source.

Note: Sources should locate the code that handles initialization of the Source (responding to MSG_OPENDS) and identification (DAT_IDENTITY / MSG_GET) in the segment first loaded when the DLL/code resource is invoked. Responding to the identification operation should not cause any other segments to be loaded. Code to handle all other operations and to support the user interface should be located in code segments that will be loaded upon demand. Remember, the Source is a “guest” of the application and needs to be sensitive to use of available memory and other system resources. The Source Manager’s perceived performance may be adversely affected unless the Source efficiently handles identification requests.

Return Codes

```
TWRC_SUCCESS    /* This operation must succeed. */
```

DG_CONTROL / DAT_IDENTITY / MSG_GETDEFAULT

Call

```
DSM_Entry(pOrigin, NULL, DG_CONTROL, DAT_IDENTITY, MSG_GETDEFAULT,
pSourceIdentity);
```

pSourceIdentity = A pointer to a TW_IDENTITY structure.

Valid States

3 through 7

Description

Gets the identification information of the system default Source.

Application

No special set up or action required.

Source Manager

Fills the structure pointed to by pSourceIdentity with identifying information about the system default Source.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_NODS	/* no Sources found matching	*/
	/* application's SupportedGroups	*/
TWCC_LOWMEMORY	/* not enough memory to perform	*/
	/* this operation	*/

See Also

DG_CONTROL / DAT_IDENTITY / MSG_GETFIRST
 DG_CONTROL / DAT_IDENTITY / MSG_GETNEXT
 DG_CONTROL / DAT_IDENTITY / MSG_OPENDS
 DG_CONTROL / DAT_IDENTITY / MSG_USERSELECT

DG_CONTROL / DAT_IDENTITY / MSG_GETFIRST

Call

```
DSM_Entry(pOrigin, NULL, DG_CONTROL, DAT_IDENTITY, MSG_GETFIRST,  
pSourceIdentity);
```

pSourceIdentity = A pointer to a TW_IDENTITY structure.

Valid States

3 through 7

Description

The application may obtain a list of all Sources that are currently available on the system which match the application's supported groups (DGs, that the application specified in the SupportedGroups field of its TW_IDENTITY structure). To obtain the complete list of all available Sources requires invocation of a series of operations. The first operation uses MSG_GETFIRST to find the first Source on "the list" (whichever Source the Source Manager finds first). All the following operations use DG_CONTROL / DAT_IDENTITY / MSG_GETNEXT to get the identity information, one at a time, of all remaining Sources.

Note: The application must invoke the MSG_GETFIRST operation before a MSG_GETNEXT operation. If the MSG_GETNEXT is invoked first, the Source Manager will fail the operation (TWRC_ENDOFLIST).

If the application wants to cause a specific Source to be opened, one whose ProductName the application knows, it must first establish the existence of the Source using the MSG_GETFIRST/MSG_GETNEXT operations. Once the application has verified that the Source is available, it can request that the Source Manager open the Source using DG_CONTROL / DAT_IDENTITY / MSG_OPENDS. The application must not execute this operation without first verifying the existence of the Source because the results may be unpredictable.

Application

No special set up or action required.

Source Manager

Fills the TW_IDENTITY structure pointed to by pSourceIdentity with the identity information of the first Source found by the Source Manager within the TWAIN directory/folder.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_NODS /* No Sources can be found */

```
TWCC_LOWMEMORY      /* Not enough memory to perform */  
                    /* this operation                */
```

See Also

```
DG_CONTROL / DAT_IDENTITY / MSG_GETDEFAULT  
DG_CONTROL / DAT_IDENTITY / MSG_GETNEXT  
DG_CONTROL / DAT_IDENTITY / MSG_OPENDS  
DG_CONTROL / DAT_IDENTITY / MSG_USERSELECT
```

DG_CONTROL / DAT_IDENTITY / MSG_GETNEXT

Call

```
DSM_Entry(pOrigin, NULL, DG_CONTROL, DAT_IDENTITY, MSG_GETNEXT,  
pSourceIdentity);
```

pSourceIdentity = A pointer to a TW_IDENTITY structure.

Valid States

3 through 7

Description

The application may obtain a list of all Sources that are currently available on the system which match the application's supported groups (DGs, that the application specified in the SupportedGroups field of its TW_IDENTITY structure). To obtain the complete list of all available Sources requires invocation of a series of operations. The first operation uses DG_CONTROL / DAT_IDENTITY / MSG_GETFIRST to find the first Source on "the list" (whichever Source the Source Manager finds first). All the following operations use MSG_GETNEXT to get the identity information, one at a time, of all remaining Sources.

Note: The application must invoke the MSG_GETFIRST operation before a MSG_GETNEXT operation. If the MSG_GETNEXT is invoked first, the Source Manager will fail the operation (TWRC_ENDOFLIST).

If the application wants to cause a specific Source to be opened, one whose ProductName the application knows, it must first establish the existence of the Source using the MSG_GETFIRST/MSG_GETNEXT operations. Once the application has verified that the Source is available, it can request that the Source Manager open the Source using DG_CONTROL / DAT_IDENTITY / MSG_OPENDS. The application must not execute this operation without first verifying the existence of the Source because the results may be unpredictable.

Application

No special set up or action required.

Source Manager

Fills the TW_IDENTITY structure pointed to by pSourceIdentity with the identity information of the next Source found by the Source Manager within the TWAIN directory/folder.

Return Codes

TWRC_SUCCESS

TWRC_ENDOFLIST /* after MSG_GETNEXT if no more */
 /* Sources */

TWRC_FAILURE

```
TWCC_LOWMEMORY      /* not enough memory to perform */  
                    /* this operation                */
```

See Also

```
DG_CONTROL / DAT_IDENTITY / MSG_GETDEFAULT  
DG_CONTROL / DAT_IDENTITY / MSG_GETFIRST  
DG_CONTROL / DAT_IDENTITY / MSG_OPENDS  
DG_CONTROL / DAT_IDENTITY / MSG_USERSELECT
```

DG_CONTROL / DAT_IDENTITY / MSG_OPENDS (from Application to Source Manager)

Call

```
DSM_Entry(pOrigin, NULL, DG_CONTROL, DAT_IDENTITY, MSG_OPENDS,  
pSourceIdentity);
```

pSourceIdentity = A pointer to a TW_IDENTITY structure.

Valid States

3 only (Transitions to State 4, if successful)

Description

Loads the specified Source into main memory and causes its initialization.

Application

The application may specify any available Source's TW_IDENTITY structure in pSourceIdentity. That structure may have been obtained using a MSG_GETFIRST, MSG_GETNEXT, or MSG_USERSELECT operation. If the session with the Source Manager was closed since the identity structure being used was obtained, the application must set the Id field to 0. This will cause the Source Manager to issue the Source a new Id. The application can have the Source Manager open the default Source by setting the ProductName field to "\0" (Null string) and the Id field to zero.

Source Manager

Opens the Source specified by pSourceIdentity and creates a unique Id value for this Source (under Microsoft Windows, this assumes that the Source hadn't already been opened by another application). This value is recorded in pSourceIdentity->Id. The Source Manager passes the triplet on to the Source to have the remaining fields in pSourceIdentity filled in.

Upon receiving the request from the Source Manager, the Source fills in all the fields in pSourceIdentity except for Id. If an application tries to connect to a Source that is already connected to its maximum number of applications, the Source returns TWRC_FAILURE/TWCC_MAXCONNECTIONS.

Warning: The Source and application **must** not assume that the value written into pSourceIdentity.Id will remain constant between sessions. This value is used internally by the Source Manager to uniquely identify applications and Sources and to manage the connections between them. During a different session, this value may still be valid but might be assigned to a different application or Source! Don't use this value directly.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_LOWMEMORY	/* not enough memory to */ /* open the Source */
TWCC_MAXCONNECTIONS	/* Source cannot support*/ /* another connection */
TWCC_NODS	/* specified Source was */ /* not found */
TWCC_OPERATIONERROR	/* internal Source error;*/ /* handled by the Source */

See Also

DG_CONTROL / DAT_IDENTITY / MSG_CLOSED
 DG_CONTROL / DAT_IDENTITY / MSG_GET
 DG_CONTROL / DAT_IDENTITY / MSG_GETDEFAULT
 DG_CONTROL / DAT_IDENTITY / MSG_GETFIRST
 DG_CONTROL / DAT_IDENTITY / MSG_GETNEXT
 DG_CONTROL / DAT_IDENTITY / MSG_USERSELECT

DG_CONTROL / DAT_IDENTITY / MSG_OPENDS (from Source Manager to Source)

Call

```
DS_Entry(pOrigin, DG_CONTROL, DAT_IDENTITY, MSG_OPENDS,  
pSourceIdentity);
```

pSourceIdentity = A pointer to a TW_IDENTITY structure.

Valid States

Source is loaded but not yet open (approximately State 3.5, session transitions to State 4, if successful).

Description

Opens the Source for operation.

Source Manager

pSourceIdentity is filled in from a previous DG_CONTROL / DAT_IDENTITY / MSG_GET and the Id field should be filled in by the Source Manager.

Source

Initializes any needed internal structures, performs necessary checks, and loads all resources needed for normal operation.

Windows only: Source should record a copy of *pOrigin, the application's TW_IDENTITY structure, whose Id field maintains a unique number identifying the application that is calling. Sources that support only a single connection should examine pOrigin->Id for each operation to verify they are being called by the application they acknowledge being connected with. All requests from other applications should fail (TWRC_FAILURE / TWCC_MAXCONNECTIONS). The Source is responsible for managing this, not the Source Manager (the Source Manager does not know in advance how many connections the Source will support).

Macintosh Note: Since the Source(s) and the Source Manager connected to a particular application live within that application's heap space, and are not shared with any other application, the discussion about multiply-connected Sources and verifying which application is invoking an operation is not relevant. A Source or Source Manager on the Macintosh can only be connected to a single application, though multiple copies of a Source or the Source Manager may be active on the same host simultaneously. These instances simply exist in different applications' heaps. If the instances need to communicate with one another, they might use a special file, Gestalt selector, or other IPC mechanism.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

```
TWCC_LOWMEMORY          /* not enough memory to */
                        /* open the Source      */

TWCC_MAXCONNECTIONS     /* Source cannot support */
                        /* another connection   */

TWCC_OPERATIONERROR      /* internal Source error;*/
                        /* handled by the Source */
```

See Also

```
DG_CONTROL / DAT_IDENTITY / MSG_CLOSED
DG_CONTROL / DAT_IDENTITY / MSG_GET
```

DG_CONTROL / DAT_IDENTITY / MSG_SET

Call

```
DSM_Entry(pOrigin, NULL, DG_CONTROL, DAT_IDENTITY, MSG_SET,  
pTwIdentity);
```

`pTwIdentity` = A pointer to a TW_IDENTITY structure containing a valid TW_IDENTITY for a Data source.

Valid States

3

Description

This operation triplet is generated by the application and is consumed by the Data Source Manager. It allows an application to set the default TWAIN driver, which is reported back by [DG_CONTROL / DAT_IDENTITY / MSG_GETDEFAULT](#).

Application

The application must specify an available Source's TW_IDENTITY structure in `pTwIdentity`. That structure must have been obtained using a `MSG_GETFIRST`, `MSG_GETNEXT`, or `MSG_USERSELECT` operation since the Source Manager was last opened.

Source Manager

Sets a new default TWAIN driver.

Return Codes

`TWRC_SUCCESS`

`TWRC_FAILURE`

`TWCC_BADVALUE` `/* Invalid DS in TW_IDENTITY */`

See Also

[DG_CONTROL / DAT_IDENTITY / MSG_GETDEFAULT](#)

DG_CONTROL / DAT_IDENTITY / MSG_USERSELECT

Call

```
DSM_Entry(pOrigin, NULL, DG_CONTROL, DAT_IDENTITY, MSG_USERSELECT,
pSourceIdentity);
```

pSourceIdentity = A pointer to a TW_IDENTITY structure.

Valid States

3 through 7

Description

This operation should be invoked when the user chooses **Select Source...** from the application's **File** menu (or an equivalent user action). This operation causes the Source Manager to display the Select Source dialog. This dialog allows the user to pick which Source will be used during subsequent **Acquire** operations. The Source selected becomes the system default Source. This default persists until a different Source is selected by the user. The system default Source may be overridden by an application (the override is local to only that application). Only Sources that can supply data matching one or more of the application's SupportedGroups (from the application's identity structure) will be selectable. All others will be unavailable for selection.

Application

If the application wants a particular Source, other than the system default, to be highlighted in the Select Source dialog, it should set the `ProductName` field of the structure pointed to by `pSourceIdentity` to the `ProductName` of that Source. This information should have been obtained from an earlier operation using `DG_CONTROL / DAT_IDENTITY / MSG_GETFIRST`, `MSG_GETNEXT`, or `MSG_USERSELECT`. Otherwise, the application should set the `ProductName` field in `pSourceIdentity` to the null string (""). In either case, the application should set the `Id` field in `pSourceIdentity` to zero.

If the Source Manager can't find a Source whose `ProductName` matches that specified by the application, it will select the system default Source (the default that matches the SupportedGroups of the application). This is not considered to be an error condition. No error will be reported. The application should check the `ProductName` field of `pSourceIdentity` following this operation to verify that the Source it wanted was opened.

Source Manager

The Source Manager displays the Select Source dialog and allows the user to select a Source. When the user clicks the "OK" button ("Select" button in the Microsoft Windows Source Manager) in the Select Source dialog, the system default Source (maintained by the Source Manager) will be changed to the selected Source. This Source's identifying information will be written into `pSourceIdentity`.

The "Select" button ("OK" button in the Macintosh Source Manager) will be grayed out if there are no Sources available matching the SupportedGroups specified in the application's identity structure, `pOrigin`. The user must click the "Cancel" button to exit the Select Source dialog. The application cannot discern from this Return Code whether the user simply canceled the

selection or there were no Sources for the user to select. If the application really wants to know whether any Sources are available that match the specified SupportedGroups it can invoke a MSG_GETFIRST operation and check for a successful result.

It copies the TW_IDENTITY structure of the selected Source into pSourceIdentity.

Suggestion for Source Developers: The string written in the Source's TW_IDENTITY.ProductName field should clearly and unambiguously identify your product or the Source to the user (if the Source can be used to control more than one device). ProductName contains the string that will be placed in the Select Source dialog (accompanied, on the Macintosh, with an icon from the Source's resource file representing the Source). It is further suggested that the Source's disk file name approximate the ProductName to assist the user in equating the two.

Return Codes

```
TWRC_SUCCESS

TWRC_CANCEL          /* User clicked cancel button - maybe there    */
                     /* were no Sources                                   */

TWRC_FAILURE

    TWCC_LOWMEMORY    /* not enough memory to perform this    */
                     /* operation                               */
```

See Also

```
DG_CONTROL / DAT_IDENTITY / MSG_GETDEFAULT
DG_CONTROL / DAT_IDENTITY / MSG_GETFIRST
DG_CONTROL / DAT_IDENTITY / MSG_GETNEXT
DG_CONTROL / DAT_IDENTITY / MSG_OPENDS
```

DG_CONTROL / DAT_NULL / MSG_CLOSEDREQ (from Source to Application - Windows only)

Call

```
DSM_Entry(pOrigin, pDest, DG_CONTROL, DAT_NULL, MSG_CLOSEDREQ, NULL);
```

This operation requires no data (NULL).

Valid States

5 through 7 (This operation causes the session to transition to State 5.)

Description

While the Source is enabled, the application is sending all events/messages to the Source. The Source will use one of these events/messages to indicate to the application that it needs to be closed.

On Windows, the Source sends this DG_CONTROL / DAT_NULL / MSG_CLOSEDREQ to the Source Manager to cause the Source Manager to post a private message to the application's event/message loop. This guarantees that the application will have an event/message to pass to the Source Manager so it will be able to communicate the Source's Close request back to the application.

On Macintosh, refer to [Chapter 3, "Application Implementation."](#)

Source (on Windows only)

Source creates this triplet with NULL data and sends it to the Source Manager via the Source Manager's DSM_Entry point.

pDest is the TW_IDENTITY structure of the application.

Source Manager (on Windows only)

Upon receiving this triplet, the Source Manager posts a private message to the application's event/message loop. Since the application is forwarding all events/messages to the Source while the Source is enabled, this creates a communication device needed by the Source. When this private message is received by the Source Manager (via the DG_CONTROL / DAT_EVENT / MSG_PROCESSEVENT operation), the Source Manager will insert a MSG_CLOSEDREQ into the TWMessage field on behalf of the Source.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

```
TWCC_SEQERROR    /* Operation invoked in invalid state */
TWCC_BADDEST     /* No such application in session with*/
                  /* Source                               */
```

See Also

DG_CONTROL / DAT_EVENT / MSG_PROCESSEVENT
DG_CONTROL / DAT_USERINTERFACE / MSG_DISABLED

DG_CONTROL / DAT_NULL / MSG_DEVICEEVENT (from Source to Application)

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_NULL, MSG_DEVICEEVENT,  
NULL) ;
```

This operation requires no data (NULL)

Valid States

4 through 7

Description

When enabled the source sends this message to the Application to alert it that some event has taken place. Upon receiving this message, the Application must immediately issue a call to DG_CONTROL / DAT_DEVICEEVENT / MSG_GET to obtain the event information.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_SEQERROR - operation invoked in invalid state.

TWCC_BADDEST - no such application in session with Source.

See Also

DG_CONTROL / DAT_DEVICEEVENT / MSG_GET

Capability - CAP_DEVICEEVENT

DG_CONTROL / DAT_NULL / MSG_XFERREADY (from Source to Application - applies to Windows only)

Call

```
DSM_Entry(pOrigin, pDest, DG_CONTROL, DAT_NULL, MSG_XFERREADY, NULL);
```

This operation requires no data (NULL).

Valid States

5 only (This operation causes the transition to State 6.)

Description

While the Source is enabled, the application is sending all events/messages to the Source. The Source will use one of these events/ messages to indicate to the application that the data is ready to be transferred.

On Windows, the Source sends this DG_CONTROL / DAT_NULL / MSG_XFERREADY to the Source Manager to cause the Source Manager to post a private message to the application's event/message loop. This guarantees that the application will have an event/message to pass to the Source and the Source will be able to communicate its "transfer ready" announcement back to the application.

On Macintosh, refer to [Chapter 3, "Application Implementation."](#)

Source (on Windows only)

Source creates this triplet with NULL data and sends it to the Source Manager via the Source Manager's DSM_Entry point.

pDest is the TW_IDENTITY structure of the application.

Source Manager

Upon receiving this triplet, the Source Manager posts a private message to the application's event/message loop. Since the application is forwarding all events/messages to the Source while the Source is enabled, this creates a communication device needed by the Source. When this private message is received by the Source Manager (via the DG_CONTROL / DAT_EVENT / MSG_PROCESSEVENT operation), the Source Manager will insert the MSG_XFERREADY into the TWMessage field on behalf of the Source.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

```
TWCC_SEQERROR      /* Operation invoked in invalid state */
TWCC_BADDEST       /* No such application in session with*/
                   /* Source                               */
```

See Also

DG_CONTROL / DAT_EVENT / MSG_PROCESSEVENT
DG_IMAGE / DAT_IMAGEFILEXFER / MSG_GET
DG_IMAGE / DAT_IMAGEMEMFILEXFER / MSG_GET
DG_IMAGE / DAT_IMAGEMEMXFER / MSG_GET
DG_IMAGE / DAT_IMAGENATIVEXFER / MSG_GET

DG_CONTROL / DAT_PARENT / MSG_CLOSEDM

Call

```
DSM_Entry(pOrigin, NULL, DG_CONTROL, DAT_PARENT, MSG_CLOSEDM,  
pParent);
```

On Windows - pParent = points to the window handle (hWnd) that will act as the Source's "parent". The variable is of type TW_INT32 and the low word of this variable must contain the window handle.

On Macintosh - pParent = should be a 32-bit NULL value.

Valid States

3 **only** (causes transition back to State 2, if successful)

Description

When the application has closed all the Sources it had previously opened, and is finished with the Source Manager (the application plans to initiate no other TWAIN sessions), it must close the Source Manager. The application should unload the Source Manager DLL or code resource after the Source Manager is closed – unless the application has immediate plans to use the Source Manager again.

Application

References the same pParent parameter that was used during the "open Source Manager" operation. If the operation returns TWRC_SUCCESS, the application should unload the Source Manager from memory.

Source Manager

Does any housekeeping needed to prepare for being unloaded from memory. This housekeeping is transparent to the application.

Windows only – If the Source Manager is open to at least one other application, it will clean up just activities relative to the closing application, then return TWRC_SUCCESS. The application will attempt to unload the Source Manager DLL. Windows will tell the application that the unload was successful, but the Source Manager will remain active and connected to the other application(s).

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_SEQERROR /* Operation invoked in invalid state */

See Also

DG_CONTROL / DAT_PARENT / MSG_OPENDSM

DG_CONTROL / DAT_PARENT / MSG_OPENDSM

Call

```
DSM_Entry(pOrigin, NULL, DG_CONTROL, DAT_PARENT, MSG_OPENDSM, pParent);
```

On Windows - pParent = points to the window handle (hWnd) that will act as the Source's "parent". The variable is of type TW_INT32 and the low word of this variable must contain the window handle.

On Macintosh - pParent = should be a 32-bit NULL value.

Valid States

2 **only** (causes transition to State 3, if successful)

Description

Causes the Source Manager to initialize itself. This operation **must** be executed before any other operations will be accepted by the Source Manager.

Application

Windows only – The application should set the pParent parameter to point to a window handle (hWnd) of an open window that will remain open until the Source Manager is closed. If application can't open the Source Manager DLL, Windows displays an error box (this error box can be disabled by a prior call to SetErrorMode (SET_NOOPENFILEERRORBOX)).

Macintosh only – Set pParent to NULL.

Source Manager

Initializes and prepares itself for subsequent operations. Maintains a copy of pParent.

Windows only – If Source Manager is already open, Source Manager won't reinitialize but will retain a copy of pParent.

Return Codes

```
TWRC_SUCCESS
TWRC_FAILURE
    TWCC_LOWMEMORY          /* not enough memory to perform */
                             /* this operation                      */
    TWCC_SEQERROR           /* Operation invoked in invalid */
                             /* state                          */
```

See Also

DG_CONTROL / DAT_PARENT / MSG_CLOSEDM

DG_CONTROL / DAT_PASSTHRU / MSG_PASSTHRU

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_PASSTHRU,MSG_PASSTHRU,  
           pSourcePassthru);
```

pSourcePassthru = A pointer to a TW_PASSTHRU structure

Valid States

4 through 7

Description

PASSTHRU is intended for the use of Source writers writing diagnostic applications. It allows raw communication with the currently selected device in the Source.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL - capability not supported.

TWCC_SEQERROR - command could not be completed in this state.

See Also

CAP_PASSTHRU

DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_PENDINGXFERS, MSG_ENDXFER,
           pPendingXfers);
```

pPendingXfers = A pointer to a TW_PENDINGXFERS structure

Valid States

6 and 7

When DAT_XFERGROUP is set to DG_IMAGE:

(Transitions to State 5 if this was the last transfer (pPendingXfers->Count == 0).
Transitions to State 6 if there are more transfers pending (pPendingXfers->Count != 0). To abort all remaining transfers and transition from State 6 to State 5, use DG_CONTROL / DAT_PENDINGXFERS / MSG_RESET.

When DAT_XFERGROUP is set to DG_AUDIO:

Transitions to State 6 no matter what the value of pPendingXfers->Count.

Description

This triplet is used to cancel or terminate a transfer. Issued in state 6, this triplet cancels the next pending transfer, discards the transfer data, and decrements the pending transfers count. In state 7, this triplet terminates the current transfer. If any data has not been transferred (this is only possible during a memory transfer) that data is discarded.

The application can use this operation to cancel the next pending transfer (Source writers take note of this). For example, after the application checks TW_IMAGEINFO (or TW_AUDIOINFO, if transferring audio snippets), it may decide to not transfer the next image. The operation must be sent prior to the beginning of the transfer, otherwise the Source will simply abort the current transfer. The Source decrements the number of pending transfers.

Application

The application must invoke this operation at the end of every transfer to signal the Source that the application has received all the data it expected. The application should send this after receiving a TWRC_XFERDONE or TWRC_CANCEL.

No special set up or action required. Be sure to correctly track which state the Source will be in as a result of your action. Be aware of the value in pPendingXfers->Count both before and after the operation. Invoking this operation causes the loss of data that your user may not expect to be lost. Be very careful and prudent when using this operation.

Source

Option #1) Fill `pPendingXfers->Count` with the number of transfers the Source is ready to supply to the application, upon demand. If `pPendingXfers->Count > 0` (or equals -1), transition to State 6 and await initiation of the next transfer by the application. If `pPendingXfers->Count == 0`, transition all the way back to State 5 and await the next acquisition.

Option #2) Preempt the acquired data that is next in line for transfer to the application (pending transfers can be thought of as being pushed onto a FIFO queue as acquired and popped off the queue when transferred). Decrement `pPendingXfers->Count`. If already acquired, discard the data for the preempted transfer. Update `pPendingXfers->Count` with the new number of pending transfers. If this value is indeterminate, leave the value in this field at -1. Note: -1 is not a valid value for the number of audio snippets.

Option #3) Cancel the current transfer. Discard any local buffers or data involved in the transfer. Prepare the Source and the device for the next transfer. Decrement `pPendingXfers->Count` (don't decrement if already zero or -1). If there is a transfer pending, return to State 6 and prepare the Source to begin the next transfer. If no transfer is pending, return to State 5 and await initiation of the next acquisition from the application or the user. Note: when `DAT_XFERGROUP` is set to `DG_AUDIO`, the Source will not go lower than State 6 based on the value of `pPendingXfers->Count`.

Note: If a Source supports simultaneous connections to more than one application, the Source should maintain a separate `pPendingXfers` structure for each application it is in-session with.

Return Codes

`TWRC_SUCCESS`

`TWRC_FAILURE`

`TWCC_BADDEST` /* No such Source in-session with application */

`TWCC_SEQERROR` /* Operation invoked in invalid state */

See Also

`DG_AUDIO` / `DAT_AUDIOFILEXFER` / `MSG_GET`
`DG_AUDIO` / `DAT_AUDIONATIVEXFER` / `MSG_GET`
`DG_CONTROL` / `DAT_PENDINGXFERS` / `MSG_GET`
`DG_CONTROL` / `DAT_PENDINGXFERS` / `MSG_RESET`
`DG_CONTROL` / `DAT_PENDINGXFERS` / `MSG_STOPFEEDER`
`DG_CONTROL` / `DAT_XFERGROUP` / `MSG_SET`
`DG_IMAGE` / `DAT_IMAGEFILEXFER` / `MSG_GET`
`DG_IMAGE` / `DAT_IMAGEMEMFILEXFER` / `MSG_GET`
`DG_IMAGE` / `DAT_IMAGEMEMXFER` / `MSG_GET`
`DG_IMAGE` / `DAT_IMAGENATIVEXFER` / `MSG_GET`

Capability - `CAP_XFERCOUNT`

DG_CONTROL / DAT_PENDINGXFERS / MSG_GET

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_PENDINGXFERS,
           MSG_GET, pPendingXfers);
```

pPendingXfers = A pointer to a TW_PENDINGXFERS structure

Valid States

4 through 7

Description

Returns the number of transfers the Source is ready to supply to the application, upon demand. If DAT_XFERGROUP is set to DG_IMAGE, this is the number of images. If DAT_XFERGROUP is set to DG_AUDIO, this is the number of audio snippets for the current image. If there is no current image, this call must return TWRC_FAILURE / TWCC_SEQERROR.

Application

No special set up or action required.

Source

Fill pPendingXfers->Count with the number of transfers the Source is ready to supply to the application, upon demand. This value should reflect the number of complete data blocks that have already been acquired or are in the process of being acquired.

When DAT_XFERGROUP is set to DG_IMAGE:

If the Source is not sure how many transfers are pending, but is sure that the number is at least one, set pPendingXfers->Count to -1. A Source connected to a device with an automatic document feeder that cannot determine the number of pages in the feeder, or how many selections the user may make on each page, would respond in this way. A Source providing access to a series of images from a video camera or a data base may also respond this way.

When DAT_XFERGROUP is set to DG_AUDIO:

-1 is not a valid value for pPendingXfers->Count .

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADDEST /* No such Source in-session with application */

TWCC_SEQERROR /* Operation invoked in invalid state */

See Also

DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER
DG_CONTROL / DAT_PENDINGXFERS / MSG_RESET
DG_CONTROL / DAT_PENDINGXFERS / MSG_STOPFEEDER
DG_CONTROL / DAT_XFERGROUP / MSG_SET

Capability - CAP_XFERCOUNT

DG_CONTROL / DAT_PENDINGXFERS / MSG_RESET

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_PENDINGXFERS,
           MSG_RESET, pPendingXfers);
```

pPendingXfers = A pointer to a TW_PENDINGXFERS structure

Valid States

When DAT_XFERGROUP is set to DG_IMAGE:

6 only (Transitions to State 5, if successful)

When DAT_XFERGROUP is set to DG_AUDIO:

6 only (State remains at 6)

Description

Sets the number of pending transfers in the Source to zero.

Application

When DAT_XFERGROUP is set to DG_IMAGE:

No special set up or action required. Be aware of the state transition caused by this operation. Invoking this operation causes the loss of data that your user may not expect to be lost. Be very careful and prudent when using this operation. The application may need to use this operation if an error occurs within the application that necessitates breaking off all TWAIN sessions. This will get the application, Source Manager, and Source back to State 5 together.

When DAT_XFERGROUP is set to DG_AUDIO:

The available audio snippets are discarded, but the Source remains in State 6.

Source

Set pPendingXfers->Count to zero. Discard any local buffers or data involved in any of the pending transfers.

When DAT_XFERGROUP is set to DG_IMAGE:

Return to State 5 and await initiation of the next acquisition from the application or the user.

When DAT_XFERGROUP is set to DG_AUDIO:

Remain in State 6.

Note: If a Source supports simultaneous sessions with more than one application, the Source should maintain a separate pPendingXfers structure for each application it is in-session with.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADDEST /* No such Source in-session with application */

TWCC_SEQERROR /* Operation invoked in invalid state */

See Also

DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER

DG_CONTROL / DAT_PENDINGXFERS / MSG_GET

DG_CONTROL / DAT_PENDINGXFERS / MSG_STOPFEEDER

DG_CONTROL / DAT_XFERGROUP / MSG_SET

Capability - CAP_XFERCOUNT

DG_CONTROL / DAT_PENDINGXFERS / MSG_STOPFEEDER

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_PENDINGXFERS,
           MSG_STOPFEEDER, pPendingXfers);
```

pPendingXfers = A pointer to a TW_PENDINGXFERS structure

Valid States

6 only

Description

If CAP_AUTOSCAN is TRUE, this command will stop the operation of the scanner's automatic feeder. No other action is taken.

Application

The DG_CONTROL / DAT_PENDINGXFERS / MSG_RESET command stops a session (returning to State 5), but it also discards any images that have been captured by the scanner. The MSG_STOPFEEDER command solves this problem by stopping the feeder, but remaining in State 6. The application may then continue to transfer images, until pPendingXfers->Count goes to zero.

Source

This command should only perform successfully if CAP_AUTOSCAN is TRUE. If CAP_AUTOSCAN is FALSE, this command should return TWRC_FAILURE / TWCC_SEQERROR.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADDEST - no such Source in session with application.

TWCC_BADPROTOCOL - Source does not support operation.

TWCC_SEQERROR - Operation invoked in invalid state.

See Also

DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER

DG_CONTROL / DAT_PENDINGXFERS / MSG_GET

DG_CONTROL / DAT_PENDINGXFERS / MSG_RESET

Capabilities - CAP_AUTOSCAN

DG_CONTROL / DAT_SETUPFILEXFER / MSG_GET

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_SETUPFILEXFER,  
           MSG_GET, pSetupFile);
```

pSetupFile = A pointer to a TW_SETUPFILEXFER structure

Valid States

4 through 6

Description

Returns information about the file into which the Source has or will put the acquired DG_IMAGE or DG_AUDIO data.

Application

No special set up or action required.

Source

Set the following:

```
pSetupFile->Format = format of destination file  
                    (DG_IMAGE Constants: TWFF_TIFF, TWFF_PICT, TWFF_BMP, etc.)  
                    (DG_AUDIO Constants: TWAF_WAV, TWAF_AIFF, TWAF_AU, etc.)  
pSetupFile->FileName = name of file  
                    (on Windows, include the complete path name)  
pSetupFile->VRefNum = volume reference number  
                    (Macintosh only)
```

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

```
TWCC_BADDEST      /* No such Source in-session with application */  
TWCC_BADPROTOCOL /* Source does not support file transfer      */  
TWCC_SEQERROR     /* Operation invoked in invalid state      */
```

See Also

```
DG_CONTROL / DAT_SETUPFILEXFER / MSG_GETDEFAULT  
DG_CONTROL / DAT_SETUPFILEXFER / MSG_RESET  
DG_CONTROL / DAT_SETUPFILEXFER / MSG_SET
```

DG_IMAGE / DAT_IMAGEFILEXFER / MSG_GET
DG_IMAGE / DAT_IMAGEMEMFILEXFER / MSG_GET

Capabilities -ICAP_XFERMECH, ICAP_IMAGEFILEFORMAT,
ACAP_XFERMECH

DG_CONTROL / DAT_SETUPFILEXFER / MSG_GETDEFAULT

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_SETUPFILEXFER,  
           MSG_GETDEFAULT, pSetupFile);
```

pSetupFile = A pointer to a TW_SETUPFILEXFER structure

Valid States

4 through 6

Description

Returns information for the default DG_IMAGE or DG_AUDIO file.

Application

No special set up or action required.

Source

Set the following:

pSetupFile->Format = format of destination file

(DG_IMAGE Constants: TWFF_TIFF, TWFF_PICT, TWFF_BMP, etc.)

(DG_AUDIO Constants: TWAF_WAV, TWAF_AIFF, TWAF_AU, etc.)

pSetupFile->FileName = name of file

(on Windows, include the complete path name)

pSetupFile->VRefNum = volume reference number

(Macintosh only)

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADDEST /* No such Source in-session with application */

TWCC_BADPROTOCOL /* Source does not support file transfer */

TWCC_SEQERROR /* Operation invoked in invalid state */

See Also

DG_CONTROL / DAT_SETUPFILEXFER / MSG_GET
DG_CONTROL / DAT_SETUPFILEXFER / MSG_RESET
DG_CONTROL / DAT_SETUPFILEXFER / MSG_SET
DG_IMAGE / DAT_IMAGEFILEXFER / MSG_GET
DG_IMAGE / DAT_IMAGEMEMFILEXFER / MSG_GET

Capabilities -ICAP_XFERMECH, ICAP_IMAGEFILEFORMAT,
ACAP_XFERMECH

DG_CONTROL / DAT_SETUPFILEXFER / MSG_RESET

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_SETUPFILEXFER,  
           MSG_RESET, pSetupFile);
```

pSetupFile = A pointer to a TW_SETUPFILEXFER structure

Valid States

4 only

Description

Resets the current file information to the DG_IMAGE or DG_AUDIO default file information and returns that default information..

Application

No special set up or action required.

Source

Set the following:

pSetupFile->Format = format of destination file

(DG_IMAGE Constants: TWFF_TIFF, TWFF_PICT, TWFF_BMP, etc.)

(DG_AUDIO Constants: TWAF_WAV, TWAF_AIFF, TWAF_AU, etc.)

pSetupFile->FileName = name of file

(on Windows, include the complete path name)

pSetupFile->VRefNum = volume reference number

(Macintosh only)

Note: VRefNum should be set to reflect the default file only if it already exists). Otherwise, set this field to NULL.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADDEST /* No such Source in-session with application */

TWCC_BADPROTOCOL /* Source does not support file transfer */

```

TWCC_SEQERROR      /* Operation invoked in invalid state      */

```

See Also

```

DG_CONTROL / DAT_SETUPFILEXFER / MSG_GET
DG_CONTROL / DAT_SETUPFILEXFER / MSG_GETDEFAULT
DG_CONTROL / DAT_SETUPFILEXFER / MSG_SET
DG_IMAGE / DAT_IMAGEFILEXFER / MSG_GET
DG_IMAGE / DAT_IMAGEMEMFILEXFER / MSG_GET

Capabilities -ICAP_XFERMECH, ICAP_IMAGEFILEFORMAT,
              ACAP_XFERMECH

```

DG_CONTROL / DAT_SETUPFILEXFER / MSG_SET

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_SETUPFILEXFER,  
           MSG_SET, pSetupFile);
```

pSetupFile = A pointer to a TW_SETUPFILEXFER structure

Valid States

4 through 6

Description

Sets the file transfer information for the next file transfer. The application is responsible for verifying that the specified file name is valid and that the file either does not currently exist (in which case, the Source is to create the file), or that the existing file is available for opening and read/write operations. The application should also assure that the file format it is requesting can be provided by the Source (otherwise, the Source will generate a TWRC_FAILURE / TWCC_BADVALUE error).

Application

Set the following:

```
pSetupFile->Format = format of destination file  
                    (DG_IMAGE Constants: TWFF_TIFF, TWFF_PICT, TWFF_BMP, etc.)  
                    (DG_AUDIO Constants: TWAF_WAV, TWAF_AIFF, TWAF_AU, etc.)  
pSetupFile->FileName = name of file  
                    (on Windows, include the complete path name)  
pSetupFile->VRefNum = volume reference number  
                    (Macintosh only)
```

Note: ICAP_XFERMECH or ACAP_XFERMECH (depending on the value of DAT_XFERGROUP) must have been set to TWSXdata) and return TWRC_FAILURE with TWCC_BADVALUE. If the format and file name are OK, but a file error occurs when trying to open the file (other than "file does not exist"), return TWCC_BADVALUE and set up to use the default file. If the specified file does not exist, create it. If the file exists and has data in it, overwrite the existing data starting with the first byte of the file.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADDEST /* No such Source in-session with application */

TWCC_BADPROTOCOL /* Source does not support file transfer */

```

TWCC_BADVALUE      /* Source cannot comply with one of the      */
                   /* settings                                */
TWCC_SEQERROR      /* Operation invoked in invalid state                        */

```

See Also

```

DG_CONTROL / DAT_SETUPFILEXFER / MSG_GET
DG_CONTROL / DAT_SETUPFILEXFER / MSG_GETDEFAULT
DG_CONTROL / DAT_SETUPFILEXFER / MSG_RESET
DG_IMAGE / DAT_IMAGEFILEXFER / MSG_GET
DG_IMAGE / DAT_IMAGEMEMFILEXFER / MSG_GET

```

Capabilities -ICAP_XFERMECH, ICAP_IMAGEFILEFORMAT,
ACAP_XFERMECH

DG_CONTROL / DAT_SETUPMEMXFER / MSG_GET

Call

```
DSM_Entry(pOrigin, pDest, DG_CONTROL, DAT_SETUPMEMXFER, MSG_GET,
pSetupMem);
```

pSetupMem = A pointer to a TW_SETUPMEMXFER structure.

Valid States

4 through 6

Description

Returns the Source's preferred, minimum, and maximum allocation sizes for transfer memory buffers. The application using buffered memory transfers must use a buffer size between MinBufSize and MaxBufSize in their TW_IMAGEMEMXFER.Memory.Length when using the DG_IMAGE / DAT_IMAGEMEMXFER / MSG_GET operation. Sources may return a more efficient preferred value in State 6 after the image size, etc. has been specified.

Application

No special set up or action required.

Source

Set the following:

pSetupMem->MinBufSize = minimum usable buffer size,
in bytes

pSetupMem->MaxBufSize = maximum usable buffer size,
in bytes (-1 means an indeterminately large buffer is acceptable)

pSetupMem->Preferred = preferred transfer buffer size, in bytes

If the Source doesn't care about the size of any of these specifications, set the field(s) to TWON_DONTCARE32. This signals the application that any value for that field is OK with the Source.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADDEST	/* No such Source in-session with */	/*
	/* application	*/
TWCC_SEQERROR	/* Operation invoked in invalid */	/*
	/* state	*/

See Also

DG_IMAGE / DAT_IMAGEMEMFILEXFER / MSG_GET
DG_IMAGE / DAT_IMAGEMEMXFER / MSG_GET

Capabilities - ICAP_COMPRESSION, ICAP_XFERMECH

DG_CONTROL / DAT_STATUS / MSG_GET

(from Application to Source Manager)

Call

```
DSM_Entry(pOrigin, NULL, DG_CONTROL, DAT_STATUS, MSG_GET,  
pSourceStatus);
```

pSourceStatus = A pointer to a TW_STATUS structure.

Valid States

2 through 7

Description

Returns the current Condition Code for the Source Manager.

Application

NULL references the operation to the Source Manager.

Source Manager

Fills pSourceStatus->ConditionCode with its current Condition Code. Then, it will clear its internal Condition Code so you cannot issue a status inquiry twice for the same error (the information is lost after the first request).

Return Codes

```
TWRC_SUCCESS          /* This operation must succeed      */  
TWRC_FAILURE  
    TWCC_BADDEST      /* No such Source in-session with */  
                      /* application                  */
```

See Also

Return Codes and Condition Codes ([Chapter 11, "Return Codes and Condition Codes"](#))

DG_CONTROL / DAT_STATUS / MSG_GET (from Application to Source)

Call

```
DSM_Entry(pOrigin, pDest, DG_CONTROL, DAT_STATUS, MSG_GET,
pSourceStatus);
```

pSourceStatus = A pointer to a TW_STATUS structure.

Valid States

4 through 7

Description

Returns the current Condition Code for the specified Source.

Application

pDest references a copy of the targeted Source's identity structure.

Source

Fills pSourceStatus->ConditionCode with its current Condition Code. Then, it will clear its internal Condition Code so you cannot issue a status inquiry twice for the same error (the information is lost after the first request).

Fills pSourceStatus->Data with its current custom code. If there is no custom code, the value must be 0.

Return Codes

```
TWRC_SUCCESS          /* This operation must succeed      */
TWRC_FAILURE
    TWCC_BADDEST      /* No such Source in-session with */
                      /* application                  */
```

See Also

Return Codes and Condition Codes ([Chapter 11, "Return Codes and Condition Codes"](#))

DG_CONTROL / DAT_STATUSUTF8 / MSG_GET

Call

```
DSM_Entry(pOrigin, NULL, DG_CONTROL, DAT_STATUSUTF8, MSG_GET,  
pStatusUtf8);
```

pStatusUtf8 = pointer to a TW_STATUSUTF8 structure.

Valid States

3 through 7

Description

Translate the contents of a TW_STATUS structure received from a Source into a localized UTF-8 encoded string.

Application

This operation can be called at anytime, with the contents of any TW_STATUS structure that it has received from the Source. The Source returns a value indicating the number of bytes (not characters) of data, including the terminating NUL byte. It also returns a handle to a UTF-8 encoded string, which the Application must lock before accessing, and which it must unlock and free when it is done.

Source

Translates the full contents of a TW_STATUS structure into a localized UTF-8 encode string, returning back a handle to that string, and the number of bytes (not characters) in the string, including the terminating NUL byte.

The Source returns a generic message if it is asked to return a string for a status code that it does not recognize.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADVALUE// something is wrong with &StatusUtf8

See Also

[DG_CONTROL](#) / [DAT_STATUS](#) / [MSG_GET](#)

DG_CONTROL / DAT_USERINTERFACE / MSG_DISABLED

Call

```
DSM_Entry(pOrigin, pDest, DG_CONTROL, DAT_USERINTERFACE, MSG_DISABLED,
pUserInterface);
```

pUserInterface = A pointer to a TW_USERINTERFACE structure.

Valid States

5 only (Transitions to State 4, if successful)

Description

This operation causes the Source's user interface, if displayed during the DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLED operation, to be lowered. The Source is returned to State 4, where capability negotiation can again occur. The application can invoke this operation either because it wants to shut down the current session, or in response to the Source "posting" a MSG_CLOSEDREQ event to it. Rarely, the application may need to close the Source because an error condition was detected.

Application

References the same pUserInterface structure as during the MSG_ENABLED operation. This implies that the application keep a copy of this structure locally as long as the Source is enabled.

If the application did not display the Source's built-in user interface, it will most likely invoke this operation either when all transfers have been completed or aborted (TW_PENDINGXFERS.Count = 0).

Source

If the Source's user interface is displayed, it should be lowered. The Source returns to State 4 and is again available for capability negotiation.

Return Codes

```
TWRC_SUCCESS
TWRC_FAILURE
    TWCC_BADDEST      /* No such Source in-session */
                      /* with application */
    TWCC_SEQERROR     /* Operation invoked in */
                      /* invalid state */
```

See Also

```
DG_CONTROL / DAT_NULL / MSG_CLOSEDREQ
DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLED
```

Event loop information (in [Chapter 3, "Application Implementation"](#))

DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLEDS

Call

```
DSM_Entry(pOrigin, pDest, DG_CONTROL, DAT_USERINTERFACE, MSG_ENABLEDS,
pUserInterface);
```

pUserInterface = A pointer to a TW_USERINTERFACE structure

Valid States

4 only (Transitions to State 5, if successful)

Description

This operation causes three responses in the Source:

- Places the Source into a “ready to acquire” condition. If the application raises the Source’s user interface (see #2, below), the Source will wait to assert MSG_XFERREADY until the “GO” button in its user interface or on the device is clicked. If the application bypasses the Source’s user interface, this operation causes the Source to become immediately “armed”. That is, the Source should assert MSG_XFERREADY as soon as it has data to transfer.
- The application can choose to raise the Source’s built-in user interface, or not, using this operation. The application signals the Source’s user interface should be displayed by setting pUserInterface->ShowUI to TRUE. If the application does not want the Source’s user interface to be displayed, or wants to replace the Source’s user interface with one of its own, it sets pUserInterface->ShowUI to FALSE. If activated, the Source’s user interface will remain displayed until it is closed by the user or explicitly disabled by the application (see Note).
- Terminates Source’s acceptance of “set capability” requests from the application. Capabilities can only be negotiated in State 4 (unless special arrangements are made using the CAP_EXTENDED CAPS capability). Values of capabilities can still be inquired in States 5 through 7.

Note: Once the Source is enabled, the application **must** begin sending the Source every event that enters the application’s main event loop. The application must continue to send the Source events until it disables (MSG_DISABLED) the Source. This is true even if the application chooses not to use the Source’s built-in user interface.

Application

Set pUserInterface->ShowUI to TRUE to display the Source’s built-in user interface, or to FALSE to place the Source in an “armed” condition so that it is immediately prepared to acquire data for transfer. Set ShowUI to FALSE only if bypassing the Source’s built-in user interface – that is, only if the application is prepared to handle all user interaction necessary to acquire data from the selected Source.

Sources are not required to be enabled without showing their User Interface (i.e. TW_USERINTERFACE.ShowUI = FALSE). If a Source does not support ShowUI = FALSE, they will continue to be enabled just as if ShowUI = TRUE, but return TWRC_CHECKSTATUS. The application can check for this Return Code and continue knowing the Source’s User Interface is being displayed.

Watch the value of `pUserInterface->ModalUI` after the operation has completed to see if the Source's user interface is modal or modeless.

The application must maintain a local copy of `pUserInterface` while the Source is enabled.

Windows only – The application should place a handle (`hWnd`) to the window acting as the Source's parent into `pUserInterface->hParent`.

Macintosh only – Set `pUserInterface->hParent` to `NULL`.

Note: Application should establish that the Source can supply compatible `ICAP_PIXELTYPES` and `ICAP_BITDEPTHS` prior to enabling the Source. The application **must** verify that the Source can supply data of a type it can consume. If this operation fails, the application should notify the user that the device and application are incompatible due to data type mismatch. If the application diligently sets `SupportedGroups` in its identity structure before it tries to open the Source, the Source Manager will, in the Select Source dialog or through the `MSG_GETFIRST/MSG_GETNEXT` mechanism, filter out the Sources that don't match these `SupportedGroups`.

Source

If `pUserInterface->ShowUI` is `TRUE`, the Source should display its user interface and wait for the user to initiate an acquisition. If `pUserInterface->ShowUI` is `FALSE`, the Source should immediately begin acquiring data based on its current configuration (a device that requires the user to push a button on the device, such as a hand-scanner, will be "armed" by this operation and will assert `MSG_XFERREADY` as soon as the Source has data ready for transfer). The Source should fail any attempt to set a capability value (`TWRC_FAILURE` / `TWCC_SEQERROR`) until it returns to State 4 (unless an exception approval exists via a `CAP_EXTENDEDCAPS` agreement).

Set `pUserInterface->ModalUI` to `TRUE` if your built-in user interface is modal. Otherwise, set it to `FALSE`.

Note: Note: While the Source's user interface is raised, the Source is responsible for presenting the user with appropriate progress indicators regarding the acquisition and transfer processes unless the application has set `CAP_INDICATORS` to `FALSE`.

Note: It is strongly recommended that all Sources support being enabled without their User Interface if the application requests (`TW_USERINTERFACE.ShowUI = FALSE`). But if your Source cannot be used without its User Interface, it should enable showing the Source User Interface (just as if `ShowUI = TRUE`) but return `TWRC_CHECKSTATUS`. All Sources, however, must support the `CAP_UICONTROLLABLE`. This capability reports whether or not a Source allows `ShowUI = FALSE`. An application can use this capability to know whether the Source-supplied user interface can be suppressed before it is displayed.

Return Codes

`TWRC_SUCCESS`

```
TWRC_CHECKSTATUS          /* Source cannot enable    */
                           /* without User Interface  */
```

```

/* so it enabled with the */
/* User Interface. */

TWRC_FAILURE

    TWCC_BADDEST /* No such Source in-session */
                /* with application */

    TWCC_LOWMEMORY /* Not enough memory to open */
                  /* the Source */

    TWCC_OPERATIONERROR /* Internal Source error; */
                        /* handled by the Source */

    TWCC_SEQERROR /* Operation invoked in */
                  /* invalid state */

    TWCC_NOMEDIA /* Source has nothing to capture */

```

See Also

DG_CONTROL / DAT_NULL / MSG_CLOSEDREQ
 DG_CONTROL / DAT_USERINTERFACE / MSG_DISABLED

Capability - CAP_INDICATORS

Event loop information (in [Chapter 3, "Application Implementation"](#))

DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLEDSUIONLY

Call

```
DSM_Entry(pOrigin, pDest, DG_CONTROL, DAT_USERINTERFACE,  
MSG_ENABLEDSUIONLY, pUserInterface);
```

pUserInterface = A pointer to a TW_USERINTERFACE structure.

Valid States

4 only (transitions to State 5, if successful)

Description

This operation is very similar to DG_CONTROL/ DAT_USERINTERFACE/ MSG_ENABLEDS operation except that no image transfer will take place. This operation is used by applications that wish to display the source user interface to allow the user to manipulate the sources current settings for DPI, paper size, etc. but not acquire an image. The ShowUI member of the TW_USERINTERFACE structure is ignored since this operations only purpose is to display the source UI. The other members of the TW_USERINTERFACE structure have the same meaning as in the DG_CONTROL/ DAT_USERINTERFACE/ MSG_ENABLEDS operation.

This operation has the following effects.

- The source transitions from state 4 to state 5. The source will display its user interface dialog but will not have a scan button (unless its only purpose is to preview the image).
- The application must begin sending the Source every event that enters the applications main event loop. This mechanism is the same as in the MSG_ENABLEDS operation.
- When the user hits OK or cancel from the source user interface dialog the source will send either MSG_CLOSEDOK or MSG_CLOSEDREQ Message.
- To close the source the application will respond back by sending a DG_CONTROL / DAT_USERINTERFACE / MSG_DISABLED. This source closes the dialog and then transitions from state 5 back to state 4 .

DG_CONTROL / DAT_XFERGROUP / MSG_GET

Call

```
DSM_Entry(pOrigin, pDest, DG_CONTROL, DAT_XFERGROUP, MSG_GET,
pXferGroup);
```

pXferGroup = A pointer to a TW_UINT32 value.

Valid States

4 through 6

Description

Returns the Data Group (the type of data) for the upcoming transfer. The Source is required to only supply one of the DGs specified in the SupportedGroups field of pOrigin.

Application

Should have previously (during a DG_CONTROL / DAT_PARENT / MSG_OPENDSM) set pOrigin.SupportedGroups to reflect the DGs the application is interested in receiving from a Source. Since DG_xxxx identifiers are bit flags, the application can perform a bitwise OR of DG_xxxx constants of interest to build the SupportedGroups field (this is appropriate when more kinds of data than DG_IMAGE are available).

Note: Version 1.x of the Toolkit defines DG_IMAGE and DG_AUDIO as the sole Data Groups (DG_CONTROL is masked from any processing of SupportedGroups). Future versions of TWAIN may define support for other DGs.

Source

Set pXferGroup to the DG_xxxx constant that identifies the type of data that is ready for transfer from the Source (DG_IMAGE is the only non-custom Data Group defined in TWAIN version 1.x).

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADDEST	/* No such Source in-session with */
	/* application */
TWCC_SEQERROR	/* Operation invoked in invalid */
	/* state */

See Also

DG_CONTROL / DAT_XFERGROUP / MSG_SET

DG_CONTROL / DAT_XFERGROUP / MSG_SET

Call

```
DSM_Entry (pOrigin, pDest, DG_CONTROL, DAT_XFERGROUP,  
           MSG_SET, pXFerGroup);
```

pXFerGroup = A pointer to a TW_UINT32 value.

Valid States

6 only

Description

The transfer group determines the kind of data being passed from the Source to the Application. By default a TWAIN Source must default to DG_IMAGE. Currently the only other data group supported is DG_AUDIO, which is a feature supported by some digital cameras.

An Application changes the data group in State 6 to indicate that it wants to transfer any audio data associated with the current image. The transfers follow the typical TWAIN State 6 – State 7 – State 6 pattern for each audio snippet transferred. When the application is done transferring audio data it must change back to DG_IMAGE in order to move on to the next image or to end the transfers and return to State5.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADDEST - no such Source in session with application.

TWCC_BADPROTOCOL - capability not supported.

TWCC_SEQERROR - not state 6.

See Also

DG_CONTROL / DAT_XFERGROUP / MSG_GET

DG_IMAGE / DAT_CIECOLOR / MSG_GET

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_CIECOLOR,
          MSG_GET, pCIEColor);
```

pCIEColor = A pointer to a TW_CIECOLOR structure.

Valid States

4 through 6

Description

Background - The DAT_CIECOLOR data argument type is used to communicate the parametrics for performing a transformation from any arbitrary set of tri-stimulus values into CIE XYZ color space. Color data stored in this format is more readily manipulated mathematically than some other spaces. See Appendix A for more information about the definitions and data structures used to describe CIE color data within TWAIN.

This operation causes the Source to report the currently active parameters to be used in converting acquired color data into CIE XYZ.

Application

Prior to invoking this operation, the application should establish that the Source can provide data in CIE XYZ form. This can be determined by invoking a MSG_GET on ICAP_PIXELTYPE. If TWPT_CIEXYZ is one of the supported types, then these operations are valid. The application can specify that transfers should use the CIE XYZ space by invoking a MSG_SET operation on ICAP_PIXELTYPE using a TW_ONEVALUE container structure whose value is TWPT_CIEXYZ.

No special set up is required. Invoking this operation following the transfer (after the Source is back in State 6) will guarantee that the exact parameters used to convert the image are reported.

Source

Fill pCIEColor with the current values applied in any conversion of image data to CIE XYZ. If no values have been set by the application, fill the structure with either the values calculated for this image or the Source's default values, whichever most accurately reflect the state of the Source.

Return Codes

```
TWRC_SUCCESS
TWRC_FAILURE
TWCC_BADPROTOCOL      /* Source does not support the */
                      /* CIE descriptors                */
TWCC_SEQERROR          /* Operation invoked in invalid */
                      /* state                          */
```

See Also

Capability - ICAP_PIXELTYPE

[Appendix A, "TWAIN Articles "](#)

DG_IMAGE / DAT_EXTIMAGEINFO / MSG_GET

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_EXTIMAGEINFO,
MSG_GET, pExtImageInfo);
```

pExtImageInfo = A pointer to a TW_EXTIMAGEINFO structure.

Valid States

7 only, after receiving TWRC_XFERDONE

Description

This operation is used by the application to query the data source for extended image attributes, .e.g. bar codes found on a page. The extended image information will be returned in a TW_EXTIMAGEINFO structure.

Application

To query extended image information, set the pExtImageInfo fields as follows:

The Application will allocate memory for the necessary container structure, the source will fill the values, and then application will free it up.

```
pExtImageInfo->NumInfos = Desired number of information;
pExtImageInfo->Info[0].InfoID = TWEI_xxxx;
pExtImageInfo->Info[1].InfoID = TWEI_xxxx;
```

Source

If the application requests information that the Source does not recognize, the Source should put TWRC_INFONOTSUPPORTED in the RetCode field of TW_INFO structure.

```
pExtImageInfo->Info[0].RetCode = TWRC_INFONOTSUPPORTED;
```

If you support the capability, fill in the fields allocating extra memory if necessary. For example, for TWEI_BARCODEX:

```
pExtImageInfo->Info[0].RetCode = TWRC_SUCCESS;
pExtImageInfo->Info[0].ItemType = TWTY_UINT32;
pExtImageInfo->Info[0].NumItems = 1;
pExtImageInfo->Info[0].Item = 20;
```

For TWEI_FORMTEMPLATEMATCH:

```
pExtImageInfo->Info[0].RetCode = TWRC_SUCCESS;
pExtImageInfo->Info[0].ItemType = TWTY_STR255;
```

```
pExtImageInfo->Info[0].NumItems = 1;
```

For handle (Application set TWMF_HANDLE),

```
pExtImageInfo->Info[0].Item = GlobalAlloc( GHND, sizeof(TW_STR255) );
```

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

```
    TWCC_BADPROTOCOL /* Source does not support extended image */
                      /* information                               */
```

```
    TWCC_SEQERROR    /* Not State 7, or in State 7 but TWRC_XFERDONE */
                      /* has not been received yet                      */
```

```
    TWCC_NOMEDIA     /* Source has nothing to capture */
```

See Also

Capability ICAP_EXTIMAGEINFO, ICAP_SUPPORTEDEXTIMAGEINFO

DG_IMAGE / DAT_GRAYRESPONSE / MSG_RESET

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_GRAYRESPONSE, MSG_RESET,
pResponse);
```

pResponse = A pointer to a TW_GRAYRESPONSE structure.

Valid States

4 only

Description

Background - The two DAT_GRAYRESPONSE operations allow the application to specify a transfer curve that the Source should apply to the grayscale it acquires. This curve should be applied to the data prior to transfer. The Source should maintain an “identity response curve” to be used when it is MSG_RESET.

The MSG_RESET operation causes the Source to use its “identity response curve.” The identity curve causes no change in the values of the captured data when it is applied.

Application

No special action.

Source

Apply the identity response curve to all future grayscale transfers. This means that the Source will transfer the grayscale data exactly as acquired.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL	/* Source does not support	*/
	/* grayscale response curves	*/
TWCC_SEQERROR	/* Operation invoked in invalid	*/
	/* state	*/

See Also

DG_IMAGE / DAT_GRAYRESPONSE / MSG_SET

Capability - ICAP_PIXELTYPE

DG_IMAGE / DAT_GRAYRESPONSE / MSG_SET

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_GRAYRESPONSE, MSG_SET,  
pResponse);
```

pResponse = A pointer to a TW_GRAYRESPONSE structure.

Valid States

4 only

Description

Background - The two DAT_GRAYRESPONSE operations allow the application to specify a transfer curve that the Source should apply to the grayscale it acquires. This curve should be applied to the data prior to transfer. The Source should maintain an “identity response curve” to be used when it is MSG_RESET. This identity curve should cause no change in the values of the data it is applied to.

This operation causes the Source to transform any grayscale data according to the response curve specified.

Application

All three elements of the response curve for any given index should hold the same value (the curve is stored in a TW_ELEMENT8 which contains three “channels” of data). The Source may not support this operation. The application should be diligent to examine the return code from this operation.

Source

Apply the specified response curve to all future grayscale transfers. The transformation should be applied before the data is transferred.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL	/* Source does not support	*/
	/* grayscale response curves	*/
TWCC_SEQERROR	/* Operation invoked in invalid	*/
	/* state	*/

See Also

DG_IMAGE / DAT_GRAYRESPONSE / MSG_RESET

Capability - ICAP_PIXELTYPE

DG_IMAGE / DAT_ICCPROFILE / MSG_GET

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_ICCPROFILE,  
MSG_GET, pICCPProfile);
```

pICCPProfile = A pointer to a TW_MEMORY structure.

Valid States

6 or 7

Description

This operation provides the application with the ICC profile associated with the image which is about to be transferred (state 6) or is being transferred (state 7).

Application

The application can use the operation to retrieve an ICC profile associated with image data. This profile could then be used to transform the image to sRGB or to embed into a JPEG or TIFF file that the application is writing. If the application is having the source write the file (ICAP_XFERMECH of TWSX_FILE), then there is no need to call this triplet and the capability ICAP_ICCPROFILE should be used. It is important that the application **not** allocate the memory itself. Although a TW_MEMORY structure is used, the memory is **always** allocated by the source. The application should set the entire structure to zero. Note that not all sources will have profiles and some might have profiles for color data but not for grayscale data.

The profile returned always applies to the current data being transferred and not the image being currently scanned. This distinction is important for scanners that buffer pages since the data being transferred is most likely not the image being currently scanned.

For optimization, it is recommended that applications attempt to only call this on an as needed basis. In general, the application calls this once for each batch. However, it is important to note any changes in the pixeltype during a batch because changes in pixeltype will mandata a change in profile. While most scanners will not change the pixeltype int eh middle of a batch, those with job control sheets may do so.

Source

Allocates the TheMem member and sets the Flags member to have TWFM_DSOWNS. Fills in the Length member.

It is recommended that sources obey platform specific rules about locations for profile files. When possible, it is desirable to store the profiles in the platform specific location and then to read that profile and send the data back to the location.

See Also

Capability ICAP_ICCPROFILE

The new ICAP_PIXELTYPE values are:

TWPT_CIELAB

TWPT_SRGB Specifies that the data coming back has been calibrated to sRGB

If a source supports TWPT_SRGB, it must also support TWPT_RGB for backwards compatibility. If it only has sRGB data, then it should still support TWPT_RGB and pass back its sRGB data in that mode.

DG_IMAGE / DAT_IMAGEFILEXFER / MSG_GET

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_IMAGEFILEXFER, MSG_GET, NULL);
```

This operation acts on NULL data. File information can be set with the DG_CONTROL / DAT_SETUPFILEXFER / MSG_SET operation.

Valid States

6 only (Transitions to State 7, if successful. Remains in State 7 until MSG_ENDXFER operation.)

Description

This operation is used to initiate the transfer of an image from the Source to the application via the disk-file transfer mechanism. It causes the transfer to begin.

Application

No special set up or action required. Application should have already invoked the DG_CONTROL / DAT_SETUPFILEXFER / MSG_SET operation unless the Source's default transfer format and file name (typically, TWAIN.TMP) are acceptable to the application. The application need only invoke this operation once per image transferred.

Note: If the application is planning to receive multiple images from the Source while using the Source's default file name, the application should plan to pause between transfers and copy the file just written. The Source will overwrite the file unless it is instructed to write to a different file.

Note: Applications can specify a unique file for each transfer using DG_CONTROL / DAT_SETUPFILEXFER / MSG_SET operation in State 6 or 5 (and 4, of course).

Source

Acquire the image data, format it, create any appropriate header information, and write everything into the file specified by the previous DG_CONTROL / DAT_SETUPFILEXFER / MSG_SET operation, and close the file.

Handling Possible File Conditions:

- If the application did not set conditions up using the DAT_SETUPFILEXFER / MSG_SET operation during this session, use your own default file name, file format, and location for the created file.
- If the specified file already exists, overwrite the file in place.
- If the specified file does not exist, create the file.
- If the specified file exists and cannot be accessed, or a system error occurs while writing the file, report the error to the user and return TWRC_FAILURE with TWCC_OPERATIONERROR.

Stay in State 6. The file contents are invalid. The image whose transfer failed is still a pending transfer so do not decrement TW_PENDINGXFERS.Count.

- If the file is written successfully, return TWRC_XFERDONE.
- If the user cancels the transfer, return TWRC_CANCEL.

Return Codes

TWRC_XFERDONE

TWRC_CANCEL

TWRC_FAILURE

TWCC_BADDEST	/* No such Source in-session */
	/* with application */
TWCC_OPERATIONERROR	/* Failure in the Source -- */
	/* transfer invalid */
TWCC_SEQERROR	/* Operation invoked in */
	/* invalid state */
/* The following introduced for 2.0 or higher */	
TWCC_INTERLOCK	/* Cover or door is open */
TWCC_DAMAGEDCORNER	/* Document has a damaged corner */
TWCC_FOCUSERROR	/* Focusing error during document capture */
TWCC_DOCTOOLIGHT	/* Document is too light */
TWCC_DOCTOODARK	/* Document is too dark */
TWCC_NOMEDIA	/* Source has nothing to capture */

See Also

DG_CONTROL / DAT_SETUPFILEXFER / MSG_SET
DG_IMAGE / DAT_IMAGEMEMFILEXFER / MSG_GET
DG_IMAGE / DAT_IMAGEINFO / MSG_GET
DG_IMAGE / DAT_IMAGELAYOUT / MSG_GET,

Capabilities - ICAP_XFERMECH, ICAP_IMAGEFILEFORMAT

DG_IMAGE / DAT_IMAGEINFO / MSG_GET

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_IMAGEINFO, MSG_GET, pImageInfo);
```

pImageInfo = A pointer to a TW_IMAGEINFO structure.

Valid States

6 and 7 (State 7 only after receiving TWRC_XFERDONE)

Description

When called in State 6, this operation provides to the application general image description information about the image about to be transferred.

When called in State 7, this operation provides the Application with specific image description information about the current image that has just been transferred. It is important during a Memory transfer to call this triplet only after TWRC_XFERDONE is received, since that is the only time the Source will know all the final image information.

The same data structure type is used regardless of the mechanism used to transfer the image (Native, Disk File, or Buffered Memory transfer).

Application

The Application can use this operation to check the parameters of the image before initiating the transfer during State 6, or to clarify image parameters during State 7 after the transfer is complete.

Applications may inform Sources that they accept -1 value for ImageHeight/ImageWidth by setting the ICAP_UNDEFINEDIMAGESIZE capability to TRUE.

Should the Application decide to invoke any Source features that allow the image description information to change during scanning (such as ICAP_UNDEFINEDIMAGESIZE) and still wish to transfer in Buffered memory mode, a DG_CONTROL/DAT_IMAGEINFO/MSG_GET call must be made in State 7 after receiving TWRC_XFERDONE to properly interpret the image data. This is not the default behavior of the Source.

Note that the speed at which the Application supplies buffers may determine the scanning speed.

Source

During State 6 - Fills in all fields in pImageInfo. All fields are filled in as you would expect with the following exceptions:

XResolution or YResolution

Set to -1 if the device creates data with no inherent resolution (such as a digital camera).

ImageWidth

Set to -1 if the image width to be acquired is unknown (such as when using a hand-held scanner and dragging left-to-right) , and the Application has set ICAP_UNDEFINEDIMAGESIZE to TRUE. In this case the Source must transfer the image in tiles.

ImageLength

ImageLength—Set to -1 if the image length to be acquired is unknown (such as when using a hand-held scanner and dragging top-to-bottom), and the Application has set ICAP_UNDEFINEDIMAGESIZE to TRUE.

During State 7 - Fills in all fields in pImageInfo. All fields are filled in as during State 6, except ImageWidth and ImageLength MUST be valid. Source shall return TWRC_SEQERROR if call is made before TWRC_XFERDONE is sent.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

```
TWCC_BADDEST      /* No such Source in-session with */
                  /* application          */
TWCC_SEQERROR      /* Operation invoked in invalid    */
                  /* state                          */
```

See Also

DG_IMAGE / DAT_IMAGEFILEXFER / MSG_GET
DG_IMAGE / DAT_IMAGEMEMFILEXFER / MSG_GET
DG_IMAGE / DAT_IMAGEMEMXFER / MSG_GET
DG_IMAGE / DAT_IMAGENATIVEXFER / MSG_GET

Capabilities - ICAP_BITDEPTH, ICAP_COMPRESSION, ICAP_PIXELTYPE,
ICAP_PLANARCHUNKY, ICAP_XRESOLUTION, ICAP_YRESOLUTION

DG_IMAGE / DAT_IMAGELAYOUT / MSG_GET

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_IMAGELAYOUT, MSG_GET,
pImageLayout);
```

pImageLayout = A pointer to a TW_IMAGELAYOUT structure.

Valid States

4 through 6

Description

The DAT_IMAGELAYOUT operations control information on the physical layout of the image on the acquisition platform of the Source (e.g. the glass of a flatbed scanner, the size of a photograph, etc.).

The MSG_GET operation describes both the size and placement of the image on the original “page”. The coordinates on the original page and the extents of the image are expressed in the unit of measure currently negotiated for ICAP_UNITS (default is inches).

The outline of the image is expressed by a “frame.” The Left, Top, Right, and Bottom edges of the frame are stored in pImageLayout->Frame. These values place the frame within the original page. All measurements are relative to the page’s “upper-left” corner. Define “upper-left” by how the image would appear on the computer’s screen before any rotation or other position transform is applied to the image data. This origin point will be apparent for most Sources (although folks working with satellites or radio telescopes may be at a bit of a loss).

Finally pImageLayout optionally includes information about which frame on the page, which page within a document, and which document the image belongs to. These fields were included mostly for future versions which could merge more than one type of data. A more immediate use might be for an application that needs to keep track of which frame on the page an image came from while acquiring from a Source that can supply more than one image from the same page at the same time. The information in this structure always describes the current image. To set multiple frames for any page simultaneously, reference ICAP_FRAMES.

Application

No special set up or action required, unless the current units of measure are unacceptable. In that case, the application must re-negotiate ICAP_UNITS prior to invoking this operation. Remember to do this in State 4 – the only state wherein capabilities can be set or reset.

Beyond supplying possibly interesting position information on the image to be transferred, the application can use this structure to constrain the final size of the image and to relate the image within a series of pages or documents (see the DG_IMAGE / DAT_IMAGELAYOUT / MSG_SET operation).

Source

Fill all fields of `pImageLayout`. Most Sources will set `FrameNumber`, `PageNumber`, and `DocumentNumber` to 1.

Return Codes

`TWRC_SUCCESS`

`TWRC_FAILURE`

```
TWCC_BADDEST      /* No such Source in-session */
                  /* with application */
TWCC_SEQERROR     /* Operation invoked in invalid */
                  /* state */
```

See Also

`DG_IMAGE / DAT_IMAGELAYOUT / MSG_GETDEFAULT`

`DG_IMAGE / DAT_IMAGELAYOUT / MSG_RESET`

`DG_IMAGE / DAT_IMAGELAYOUT / MSG_SET`

Capabilities - Many such as `ICAP_FRAMES`, `ICAP_MAXFRAMES`, `ICAP_UNITS`

DG_IMAGE / DAT_IMAGELAYOUT / MSG_GETDEFAULT

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_IMAGELAYOUT, MSG_GETDEFAULT,
pImageLayout);
```

pImageLayout = A pointer to a TW_IMAGELAYOUT structure.

Valid States

4 through 6

Description

The DAT_IMAGELAYOUT operations control information on the physical layout of the image on the acquisition platform of the Source (e.g. the glass of a flatbed scanner, the size of a photograph, etc.).

This operation returns the default information on the layout of an image. This is the size and position of the image that will be acquired from the Source if the acquisition is started with the Source (and the device it is controlling) in its power-on state (for instance, most flatbed scanners will capture the entire bed).

Application

No special set up or action required.

Source

Fill in all fields of pImageLayout with the device's power-on origin and extents. Most Sources will set FrameNumber, PageNumber, and DocumentNumber to 1.

Return Codes

```
TWRC_SUCCESS
TWRC_FAILURE
    TWCC_BADDEST      /* No such Source in-session */
                      /* with application */
    TWCC_SEQERROR     /* Operation invoked in invalid */
                      /* state */
```

See Also

```
DG_IMAGE / DAT_IMAGELAYOUT / MSG_GET
DG_IMAGE / DAT_IMAGELAYOUT / MSG_GETDEFAULT
DG_IMAGE / DAT_IMAGELAYOUT / MSG_SET
```

Capabilities - ICAP_FRAMES, ICAP_MAXFRAMES, ICAP_UNITS

DG_IMAGE / DAT_IMAGELAYOUT / MSG_RESET

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_IMAGELAYOUT, MSG_RESET,
pImageLayout);
```

pImageLayout = A pointer to a TW_IMAGELAYOUT structure.

Valid States

4 only

Description

The DAT_IMAGELAYOUT operations control information on the physical layout of the image on the acquisition platform of the Source (e.g. the glass of a flatbed scanner, the size of a photograph, etc.).

This operation sets the image layout information for the next transfer to its default settings.

Application

No special set up or action required. Ascertain the current settings of ICAP_ORIENTATION, ICAP_PHYSICALWIDTH, and ICAP_PHYSICALHEIGHT if you don't already know this device's power-on default values.

Source

Reset all the fields of the structure pointed at by pImageLayout to the device's power-on origin and extents. There is an implied resetting of ICAP_ORIENTATION, ICAP_PHYSICALWIDTH, and ICAP_PHYSICALHEIGHT to the device's power-on default values.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

```
TWCC_BADDEST      /* No such Source in-session */
                  /* with application */
TWCC_SEQERROR     /* Operation invoked in invalid */
                  /* state */
```

See Also

DG_IMAGE / DAT_IMAGELAYOUT / MSG_GET
DG_IMAGE / DAT_IMAGELAYOUT / **MSG_GETDEFAULT**
DG_IMAGE / DAT_IMAGELAYOUT / MSG_SET

Capabilities - ICAP_FRAMES, ICAP_MAXFRAMES, ICAP_UNITS

DG_IMAGE / DAT_IMAGELAYOUT / MSG_SET

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_IMAGELAYOUT, MSG_SET,
pImageLayout);
```

pImageLayout = A pointer to a TW_IMAGELAYOUT structure.

Valid States

4 only

Description

The DAT_IMAGELAYOUT operations control information on the physical layout of the image on the acquisition platform of the Source (e.g. the glass of a flatbed scanner, the size of a photograph, etc.).

This operation sets the layout for the next image transfer. This allows the application to specify the physical area to be acquired during the next image transfer (for instance, a frame-based application would pass to the Source the size of the frame the user selected within the application – the helpful Source would present a selection region already sized to match the layout frame size).

If the application and Source have negotiated one or more frames through ICAP_FRAMES, the frame set with this operation will only persist until the transfer following this one. Otherwise, the frame will persist as the current frame for the remainder of the session (unless superseded by negotiation on ICAP_FRAMES or another operation on DAT_IMAGELAYOUT overrides it).

The application writer should note that setting these values is a *request*. The Source should first try to match the requested values exactly. Failing that, it should approximate the requested values as closely as it can – extents of the approximated frame should at least equal the requested extents unless the device cannot comply. The Source should return TWRC_CHECKSTATUS if the actual values set in pImageLayout->Frame are greater than or equal to the requested values in both extents. If one or both of the requested values exceed the Source's available values, the Source should return TWRC_FAILURE with TWCC_BADVALUE. The application should check for these return codes and perform a MSG_GET to verify that the values set by the Source are acceptable. The application may choose to cancel the transfer if Source could not set the layout information closely enough to the requested values.

Application

Fill in all fields of pImageLayout. Especially important is the Frame field whose values are expressed in ICAP_UNITS. If the application doesn't care about one or more of the other fields, be sure to set them to -1 to prevent confusion. If the application only cares about the extents of the Frame, and not about the origin on the page, set the Frame.Top and Frame.Left to zero. Otherwise, the application can specify the location on the page where the Source should begin acquiring the image, in addition to the extents of the acquired image.

Source

Use the values in `pImageLayout` as the Source's current image layout information. If you are unable to set the device exactly to the values requested in the `Frame` field, set them as closely as possible, always snapping to a value that will result in a larger frame, and return `TWRC_CHECKSTATUS` to the application.

If the application has set `Frame.Top` and `Frame.Left` to a non-zero value, set the origin for the image to be acquired accordingly. If possible, the Source should consider reflecting these settings in the user interface when it is raised. For instance, if your Source presents a pre-scan image, consider showing the selection region in the proper location and with the proper size suggested by the settings from this operation.

If the requested values exceed the maximum size the Source can acquire, set the `pImageLayout->Frame` values used within the Source to the largest extent possible within the axis of the offending value. Return `TWRC_FAILURE` with `TWCC_BADVALUE`.

Return Codes

```
TWRC_SUCCESS

TWRC_CHECKSTATUS      /* Source approximated the requested*/
                      /* values                      */

TWRC_FAILURE

    TWCC_BADDEST      /* No such Source in-session      */
                      /* with application                */

    TWCC_BADVALUE     /* Specified Layout values illegal */
                      /* for Source                      */

    TWCC_SEQERROR     /* Operation invoked in invalid    */
                      /* state                          */
```

See Also

```
DG_IMAGE / DAT_IMAGE_LAYOUT / MSG_GET
DG_IMAGE / DAT_IMAGE_LAYOUT / MSG_GETDEFAULT
DG_IMAGE / DAT_IMAGE_LAYOUT / MSG_RESET
```

Capabilities - `ICAP_FRAMES`, `ICAP_MAXFRAMES`, `ICAP_UNITS`

DG_IMAGE / DAT_IMAGEMEMFILEXFER / MSG_GET

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_IMAGEMEMFILEXFER, MSG_GET,
          pImageMemXfer);
```

pImageMemXfer = A pointer to a TW_IMAGEMEMXFER structure.

File format information can be set with the DG_CONTROL / DAT_SETUPFILEXFER / MSG_SET operation.

Valid States

6 only (Transitions to State 7, if successful. Remains in State 7 until MSG_ENDXFER operation.)

Description

This operation is used to initiate the transfer of an image from the Source to the application via the Memory-File transfer mechanism.

This operation supports the transfer of successive blocks of an image file from the Source into one or more main memory transfer buffers. These buffers are allocated and owned by the application. The application should repeatedly invoke this operation while TWRC_SUCCESS is returned by the Source.

Application

No special set up is required. The application should have already invoked the DG_CONTROL / DAT_SETUPFILEXFER / MSG_SET operation unless the Source's default file format is acceptable to the application (the filename is not used, since this transfer is being done in memory). The DG_CONTROL / DAT_SETUPMEMXFER / MSG_GET operation should be used to determine the valid range of sizes for transferring the image. The application only needs to invoke both of these operations once per image transferred.

The application will allocate one or more memory buffers to contain the data being transferred from the Source. The application may allocate enough buffer space to contain the entire image being transferred or, more commonly, use the transfer buffer(s) as a temporary holding area while the complete image is assembled elsewhere (on disk, for instance).

If the application sets up buffers that are either too small or too large, the Source will fail the operation returning TWRC_FAILURE/TWCC_BADVALUE.

Once the buffers have been set up, the application should fill pImageMemXfer->Memory.Length with the actual size (in bytes) of each memory buffer (which are, of course, all the same size).

Notes: Applications can specify a unique file format for each transfer using DG_CONTROL / DAT_SETUPFILEXFER / MSG_SET in State 6 or 5 (and 4 also). Also note that although the images are being transferred in complete image formats, they are memory transfers, and will be chunked just like a DG_IMAGE / DAT_IMAGEMEMXFER / MSG_GET operation.

The size of the allocated buffer(s) should be homogeneous (don't change buffer sizes during transfer). The size the application selects should be based on the information returned by the Source from the `DG_CONTROL / DAT_SETUPMEMXFER / MSG_GET` operation. The application should do its best to allocate transfer buffers of the size "preferred" by the Source. This will enhance the chances for superior transfer performance. The buffer size must be between `MinBufSize` and `MaxBufSize` as reported by the Source.

There is no concept of striping or tiling when using this operation. Data is transferred in generic chunks, which, depending on the file format, may result in partial header or footer information being sent in any given transfer. Applications are advised to avoid parsing the image format data until all of the blocks have been transferred

Source

If the application did not set up the conditions via the `DAT_SETUPFILEXFER / MSG_SET` operation during this session, use the Source's default file format for the transfer.

Prior to writing the first buffer, check `pImageMemXfer->Memory.Length` for the size of the buffer(s) the application has allocated. If the size lies outside the maximum or minimum buffer size communicated to the application during the `DG_CONTROL / DAT_SETUPMEMXFER / MSG_GET` operation, return `TWRC_FAILURE/TWCC_BADVALUE` and remain in State 6.

If the buffer is of an acceptable size, fill in all fields of `pImageMemXfer` except `pImageMemXfer->Memory`. The Source must write the data block into the buffer referenced by `pImageMemXfer->Memory`. TheMem and store the actual number of bytes written into the buffer in `pImageMemXfer->BytesWritten`. Compressed and tiled data effects how the Source fills in these values.

Return `TWRC_SUCCESS` after successfully writing each buffer. Return `TWRC_CANCEL` if the Source needs to terminate the transfer before the last buffer is written (as when the user aborts the transfer from the Source's user interface). Return `TWRC_XFERDONE` to signal that the last buffer has been written. Following completion of the transfer, either after all the data has been written or the transfer has been canceled, remain in State 7 until explicitly transitioned back to State 6 by the application (`DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER`).

If `TWRC_FAILURE` occurred on the first buffer, the session remains in State 6. If failing on a subsequent buffer, the session remains in State 7. The strip whose transfer failed is still pending.

Notes on Memory Usage: Following a canceled transfer, the Source should dispose of the image that was being transferred and assure that any temporary variable and local buffer allocations are eliminated. The Source should be wary of allocating large temporary buffers or variables. Doing so may disrupt or even disable the transfer process. The application should be aware of the possible needs of the Source to allocate such space, however, and consider allocating all large blocks of RAM needed to support the transfer prior to invoking this operation. This may be especially important for devices that create image transfers of indeterminate size—such as hand-held scanners.

Return Codes

<code>TWRC_SUCCESS</code>	<code>/* Source done transferring</code>	<code>*/</code>
	<code>/* the specified block</code>	<code>*/</code>
<code>TWRC_XFERDONE</code>	<code>/* Source done transferring</code>	<code>*/</code>

```

/* the specified image */
TWRC_CANCEL /* User aborted the transfer from */
/* the Source */
TWRC_FAILURE
    TWCC_BADDEST /* No such Source in-session */
/* with application */
    TWCC_BADVALUE /* Size of buffer did not */
/* match TW_SETUPMEMXFER */
    TWCC_OPERATIONERROR /* Failure in the Source -- */
/* transfer invalid */
    TWCC_SEQERROR /* Operation invoked in */
/* invalid state */
/* The following introduced for 2.0 or higher */
    TWCC_INTERLOCK /* Cover or door is open */
    TWCC_DAMAGEDCORNER /* Document has a damaged corner */
    TWCC_FOCUSERROR /* Focusing error during document capture */
    TWCC_DOCTOOLIGHT /* Document is too light */
    TWCC_DOCTOODARK /* Document is too dark */
    TWCC_NOMEDIA /* Source has nothing to capture */

```

See Also

```

DG_CONTROL / DAT_SETUPFILEXFER / MSG_SET
DG_CONTROL / DAT_SETUPMEMXFER / MSG_GET
DG_IMAGE / DAT_IMAGEMEMXFER / MSG_GET
DG_IMAGE / DAT_IMAGEINFO / MSG_GET
DG_IMAGE / DAT_IMAGELAYOUT / MSG_GET

```

Capabilities - ICAP_COMPRESSION, ICAP_XFERMECH, ICAP_IMAGEFILEFORMAT

DG_IMAGE / DAT_IMAGEMEMXFER / MSG_GET

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_IMAGEMEMXFER, MSG_GET,  
pImageMemXfer);
```

pImageMemXfer = A pointer to a TW_IMAGEMEMXFER structure.

Valid States

6 and 7 (Transitions to State 7, if successful. Remains in State 7 until MSG_ENDXFER operation.)

Description

This operation is used to initiate the transfer of an image from the Source to the application via the Buffered Memory transfer mechanism.

This operation supports the transfer of successive blocks of image data (in strips or, optionally, tiles) from the Source into one or more main memory transfer buffers. These buffers (for strips) are allocated and owned by the application. For tiled transfers, the source allocates the buffers. The application should repeatedly invoke this operation while TWRC_SUCCESS is returned by the Source.

Application

The application will allocate one or more memory buffers to contain the data being transferred from the Source. The application may allocate enough buffer space to contain the entire image being transferred or, more commonly, use the transfer buffer(s) as a temporary holding area while the complete image is assembled elsewhere (on disk, for instance).

The size of the allocated buffer(s) should be homogeneous (don't change buffer sizes during transfer). The size the application selects should be based on the information returned by the Source from the DG_CONTROL / **DAT_SETUPMEMXFER** / MSG_GET operation. The application should do its best to allocate transfer buffers of the size "preferred" by the Source. This will enhance the chances for superior transfer performance. The buffer size must be between MinBufSize and MaxBufSize as reported by the Source. Further, the buffers must contain an even number of bytes. Memory buffers must be double-word aligned and should be padded with zeros at the end of each raster line.

If the application sets up buffers that are either too small or too large, the Source will fail the operation returning TWRC_FAILURE/TWCC_BADVALUE.

Once the buffers have been set up, the application should fill pImageMemXfer->Memory.Length with the actual size (in bytes) of each memory buffer (which are, of course, all the same size).

Windows only – The buffers should be allocated in global memory.

Source

Prior to writing the first buffer, check `pImageMemXfer->Memory.Length` for the size of the buffer(s) the application has allocated. If the size lies outside the maximum or minimum buffer size communicated to the application during the `DG_CONTROL / DAT_SETUPMEMXFER / MSG_GET` operation, return `TWRC_FAILURE/TWCC_BADVALUE` and remain in State 6.

If the buffer is of an acceptable size, fill in all fields of `pImageMemXfer` except `pImageMemXfer->Memory`. The Source must write the data block into the buffer referenced by `pImageMemXfer->Memory.TheMem`. Store the actual number of bytes written into the buffer in `pImageMemXfer->BytesWritten`. Compressed and tiled data effects how the Source fills in these values.

Return `TWRC_SUCCESS` after successfully writing each buffer. Return `TWRC_CANCEL` if the Source needs to terminate the transfer before the last buffer is written (as when the user aborts the transfer from the Source's user interface). Return `TWRC_XFERDONE` to signal that the last buffer has been written. Following completion of the transfer, either after all the data has been written or the transfer has been canceled, remain in State 7 until explicitly transitioned back to State 6 by the application (`DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER`).

If `TWRC_FAILURE` occurred on the first buffer, the session remains in State 6. If failing on a subsequent buffer, the session remains in State 7. The strip whose transfer failed is still pending.

Notes on Memory Usage: Following a canceled transfer, the Source should dispose of the image that was being transferred and assure that any temporary variable and local buffer allocations are eliminated. The Source should be wary of allocating large temporary buffers or variables. Doing so may disrupt or even disable the transfer process. The application should be aware of the possible needs of the Source to allocate such space, however, and consider allocating all large blocks of RAM needed to support the transfer prior to invoking this operation. This may be especially important for devices that create image transfers of indeterminate size – such as hand-held scanners.

Return Codes

<code>TWRC_SUCCESS</code>	<code>/* Source done transferring</code>	<code>*/</code>
	<code>/* the specified block</code>	<code>*/</code>
<code>TWRC_XFERDONE</code>	<code>/* Source done transferring</code>	<code>*/</code>
	<code>/* the specified image</code>	<code>*/</code>
<code>TWRC_CANCEL</code>	<code>/* User aborted the transfer from</code>	<code>*/</code>
	<code>/* the Source</code>	<code>*/</code>
<code>TWRC_FAILURE</code>		
<code>TWCC_BADDEST</code>	<code>/* No such Source in-session</code>	<code>*/</code>
	<code>/* with application</code>	<code>*/</code>
<code>TWCC_BADVALUE</code>	<code>/* Size of buffer did not</code>	<code>*/</code>
	<code>/* match TW_SETUPMEMXFER</code>	<code>*/</code>
<code>TWCC_OPERATIONERROR</code>	<code>/* Failure in the Source--</code>	<code>*/</code>
	<code>/* transfer invalid</code>	<code>*/</code>
<code>TWCC_SEQERROR</code>	<code>/* Operation invoked in</code>	<code>*/</code>
	<code>/* invalid state</code>	<code>*/</code>


```

/* The following introduced for 2.0 or higher
*/
TWCC_INTERLOCK          /* Cover or door is open      */
TWCC_DAMAGEDCORNER      /* Document has a damaged corner */
TWCC_FOCUSERROR         /* Focusing error during document capture */
TWCC_DOCTOOLIGHT        /* Document is too light          */
TWCC_DOCTOODARK         /* Document is too dark          */

```

See Also

```

DG_CONTROL / DAT_SETUPMEMXFER / MSG_GET
DG_IMAGE / DAT_IMAGEINFO / MSG_GET
DG_IMAGE / DAT_IMAGELAYOUT / MSG_GET
DG_IMAGE / DAT_IMAGEMEMFILEXFER / MSG_GET

```

Capabilities - ICAP_COMPRESSION, ICAP_TILES, ICAP_XFERMECH

DG_IMAGE / DAT_IMAGENATIVEXFER / MSG_GET

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_IMAGENATIVEXFER, MSG_GET,
pHandle);
```

pHandle = A pointer to a variable of type TW_UINT32.

Windows - This 32 bit integer is a handle variable to a DIB (Device Independent Bitmap) located in memory.

Macintosh - This 32-bit integer is a handle to a Picture (a PicHandle). It is a QuickDraw picture located in memory.

Valid States

6 only (Transitions to State 7, if successful. Remains in State 7 until MSG_ENDXFER operation).

Description

Causes the transfer of an image's data from the Source to the application, via the Native transfer mechanism, to begin. The resulting data is stored in main memory in a single block. The data is stored in Picture (PICT) format on the Macintosh and as a device-independent bitmap (DIB) under Microsoft Windows. The size of the image that can be transferred is limited to the size of the memory block that can be allocated by the Source.

Note: This is the default transfer mechanism. All Source's support this mechanism. The Source will use this mechanism unless the application explicitly negotiates a different transfer mechanism with ICAP_XFERMECH.

Application

The application need only invoke this operation once per image. The Source allocates the largest block available and transfers the image into it. If the image is too large to fit, the Source may resize the image. Read the DIB header or check the picFrame in the Picture to determine if this happened. The application is responsible for deallocating the memory block holding the Native-format image.

Windows only — Set pHandle pointing to a handle to a device-independent bit map (DIB) in memory. The Source will allocate the image buffer and return the handle to the address specified..

Macintosh only — Set pHandle pointing to a handle to a Picture in memory. The Source will allocate the image buffer at the memory location referenced by the handle.

Note: This odd combination of pointer and handle to reference the image data block was used to assure that the allocated memory object would be relocatable under Microsoft Windows, Macintosh, and UNIX. A handle was required for this task on both the Macintosh and under Microsoft Windows; though pointers are inherently relocatable under UNIX. Rather than disturb the entry points convention that the data object is

always referenced by a pointer, it was decided to have that pointer reference the relocatable handle. A handle in UNIX is typecast to a pointer.

Source

Allocate a single block of memory to hold the image data and write the image data into it using the appropriate format for the operating environment. The source must assure that the allocated block will be accessible to the application. Place the handle of the allocated block in the `TW_UINT32` pointed to by `pHandle`.

Microsoft Windows: Format the data block as a DIB. Use `GlobalAlloc` or equivalent under windows. Under 16 bit Microsoft Windows, place the handle in the low word of the `TW_UINT32`. The following assignment will work in either Win16 or Win32:

```
(HGLOBAL FAR *) pHandle = hDIB;
```

See the Windows SDK documentation under Structures: `BMAPINFO`, `BITMAPINFOHEADER`, `RGBQUAD`. See also "DIBs and their use" by Ron Gery, in the Microsoft Development Library (MSDN CD).

Notes:

- Do not use `BITMAPCOREINFO` or `BITMAPCOREHEADER` as these are for OS/2 compatibility only.
- Always follow the `BITMAPINFOHEADER` with the color table and only save 1, 4, or 8 bit DIBs
- Color table entries are `RGBQUAD`s, which are stored in memory as BGR not RGB.
- For 24 bit color DIBs, the "pixels" are also stored in BGR order, not RGB.
- DIBs are stored 'upside-down' - the first pixel in the DIB is the lower-left corner of the image, and the last pixel is the upper-right corner.
- DIBs can be larger than 64K, but be careful, a 24 bit pixel can straddle a 64K boundary!
- Pixels in 1, 4, and 8 bit DIBs are "always" color table indices, you must index through the color table to determine the color value of a pixel.

Macintosh: Format the data block as a PICT, preferably using standard system calls.

Microsoft Windows and Macintosh: If the allocation fails, it is recommended that you allow the user the option to re-size the image to fit within available memory or to cancel the transfer (assuming that the Source user interface is displayed). If the user chooses to cancel the transfer, return `TWRC_CANCEL`. If the user wants to re-size the image, the Source might choose to blindly crop the image, clip a selection region to the maximum supported size for the current memory configuration, or allow the user to re-acquire the image altogether. The user will usually feel more in control if you provide one or both of the last two options, but the first may make the most sense for your Source.

If the allocation fails and the image cannot be clipped, return `TWRC_FAILURE` and remain in State 6. Set the `pHandle` to `NULL`. The image whose transfer failed is still pending transfer. Do not decrement `TW_PENDINGXFERS.Count`.

Return Codes

```

TWRC_XFERDONE          /* Source done transferring the */
                        /* specified block */

TWRC_CANCEL            /* User aborted the transfer */
                        /* within the Source */

TWRC_FAILURE

    TWCC_BADDEST        /* No such Source in session */
                        /* with application */

    TWCC_LOWMEMORY      /* Not enough memory for */
                        /* image--cannot crop to fit */

    TWCC_OPERATIONERROR /* Failure in the Source-- */
                        /* transfer invalid */

    TWCC_SEQERROR       /* Operation invoked in */
                        /* invalid state */

/* The following introduced for 2.0 or higher */

    TWCC_INTERLOCK      /* Cover or door is open */

    TWCC_DAMAGEDCORNER  /* Document has a damaged corner */

    TWCC_FOCUSERROR     /* Focusing error during document capture */

    TWCC_DOCTOOLIGHT    /* Document is too light */

    TWCC_DOCTOODARK     /* Document is too dark */

    TWCC_NOMEDIA        /* Source has nothing to capture */

```

See Also

```

DG_IMAGE / DAT_IMAGEINFO / MSG_GET
DG_IMAGE / DAT_IMAGELAYOUT / MSG_GET

```

Capability - ICAP_XFERMECH

DG_IMAGE / DAT_JPEGCOMPRESSION / MSG_GET

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_JPEGCOMPRESSION, MSG_GET,
pCompData);
```

pCompData = A pointer to a TW_JPEGCOMPRESSION structure.

Valid States

4 through 6

Description

Causes the Source to return the parameters that will be used during the compression of data using the JPEG algorithms.

All the information that is reported by the MSG_GET operation will be available in the header portion of the JPEG data. Transferring JPEG-compressed data through memory buffers is slightly different than other types of buffered transfers. The difference is that the JPEG-compressed image data will be prefaced by a block of uncompressed information – the JPEG header. This header information contains all the information that is returned from the MSG_GET operation. The compressed image information follows the header. The Source should return the header information in the first transfer. The compressed image data will then follow in the second through the final buffer. If the application is allocating the buffers, it should assure that the buffer size for transfer of the header is large enough to contain the complete header.

Application

The application allocates the TW_JPEGCOMPRESSION structure.

Source

Fill pCompData with the parameters that will be applied to the next JPEG-compression operation. The Source must allocate memory for the contents of the pointer fields pointed to within the structure (i.e. QuantTable, HuffmanDC, and HuffmanAC).

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL	/* Source does not support JPEG */
	/* data compression */
TWCC_SEQERROR	/* Operation invoked in invalid */
	/* state */

See Also

DG_IMAGE / DAT_JPEGCOMPRESSION / MSG_GETDEFAULT
DG_IMAGE / DAT_JPEGCOMPRESSION / MSG_RESET
DG_IMAGE / DAT_JPEGCOMPRESSION / MSG_SET

Capability - ICAP_COMPRESSION

DG_IMAGE / DAT_JPEGCOMPRESSION / MSG_GETDEFAULT

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_JPEGCOMPRESSION,  
MSG_GETDEFAULT, pCompData);
```

pCompData = A pointer to a TW_JPEGCOMPRESSION structure.

Valid States

4 through 6

Description

Causes the Source to return the power-on default values applied to JPEG-compressed data transfers.

Application

The application allocates the TW_JPEGCOMPRESSION structure.

Source

Fill in pCompData with the power-on default values. The Source must allocate memory for the contents of the pointer fields pointed to within the structure (i.e. QuantTable, HuffmanDC and HuffmanAC). The Source should maintain meaningful default values.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL	/* Source does not support JPEG */
	/* data compression */
TWCC_SEQERROR	/* Operation invoked in invalid */
	/* state */

See Also

DG_IMAGE / DAT_JPEGCOMPRESSION / MSG_GET
DG_IMAGE / DAT_JPEGCOMPRESSION / MSG_RESET
DG_IMAGE / DAT_JPEGCOMPRESSION / MSG_SET

Capabilities - ICAP_COMPRESSION and ICAP_JPEGQUALITY

DG_IMAGE / DAT_JPEGCOMPRESSION / MSG_RESET

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_JPEGCOMPRESSION, MSG_RESET,
pCompData);
```

pCompData = A pointer to a TW_JPEGCOMPRESSION structure.

Valid States

4 only

Description

Return the Source to using its power-on default values for JPEG-compressed transfers.

Application

No special action. May want to perform a MSG_GETDEFAULT if you're curious what the new values might be.

Source

Use your power-on default values for all future JPEG-compressed transfers. The Source should maintain meaningful default values for all parameters.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL	/* Source does not support JPEG */
	/* data compression */
TWCC_SEQERROR	/* Operation invoked in invalid */
	/* state */

See Also

DG_IMAGE / DAT_JPEGCOMPRESSION / MSG_GET
 DG_IMAGE / DAT_JPEGCOMPRESSION / MSG_GETDEFAULT
 DG_IMAGE / DAT_JPEGCOMPRESSION / MSG_SET

Capabilities - ICAP_COMPRESSION and ICAP_JPEGQUALITY

DG_IMAGE / DAT_JPEGCOMPRESSION / MSG_SET

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_JPEGCOMPRESSION, MSG_SET,
pCompData);
```

pCompData = A pointer to a TW_JPEGCOMPRESSION structure.

Valid States

4 only

Description

Allows the application to configure the compression parameters to be used on all future JPEG-compressed transfers during the current session. The application should have already established that the requested values are supported by the Source.

Application

Fill pCompData. Write TWON_DONTCARE16 into the numeric fields that don't matter to the application. Write NULL into the table fields that should use the default tables as defined by the JPEG specification.

Source

Adopt the requested values for use with all future JPEG-compressed transfers. If a value does not exactly match an available value, match the value as closely as possible and return TWRC_CHECKSTATUS. If the value is beyond the range of available values, clip to the nearest value and return TWRC_FAILURE/TWCC_BADVALUE.

Return Codes

TWRC_SUCCESS

TWRC_CHECKSTATUS

TWRC_FAILURE

TWCC_BADPROTOCOL	/* Source does not support JPEG */	/*
	/* data compression	*/
TWCC_BADVALUE	/* illegal value specified	*/
TWCC_SEQERROR	/* Operation invoked in invalid	/*
	/* state	*/

See Also

DG_IMAGE / DAT_JPEGCOMPRESSION / MSG_GET
DG_IMAGE / DAT_JPEGCOMPRESSION / MSG_GETDEFAULT
DG_IMAGE / DAT_JPEGCOMPRESSION / MSG_RESET

Capabilities - ICAP_COMPRESSION and ICAP_JPEGQUALITY

DG_IMAGE / DAT_PALETTE8 / MSG_GET

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_PALETTE8, MSG_GET, pPalette);
```

pPalette = A pointer to a TW_PALETTE8 structure.

Valid States

4 through 6

Description

This operation causes the Source to report its current palette information. The application should assure that the Source can provide palette information by invoking a MSG_GET operation on ICAP_PIXELTYPE and checking for TWPT_PALETTE. If this pixel type has not been established as the type to be used for future acquisitions, the Source should respond with its default palette.

To assure that the palette information is wholly accurate, the application should invoke this operation immediately after completion of the image transfer. The Source may perform palette optimization during acquisition of the data and the palette it reports before the transfer will differ from the one available afterwards.

(In general, the DAT_PALETTE8 operations are specialized to deal with 8-bit data, whether grayscale or color (8-bit or 24-bit). Most current devices provide data with this bit depth. These operations allow the application to inquire a Source's support for palette color data and set up a palette color transfer. See [Chapter 8, "Data Types and Data Structures"](#) for the definitions and data structures used to describe palette color data within TWAIN.)

Application

The application should allocate the pPalette structure for the Source.

Source

Fill pPalette with the current palette. If no palette has been specified or calculated, use the Source's default palette (which may coincidentally be the current or default system palette).

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL	/* Source does not support	*/
	/* palette color transfers	*/
TWCC_SEQERROR	/* Operation invoked in invalid	*/
	/* state	*/

See Also

DG_IMAGE / DAT_PALETTE8 / MSG_GETDEFAULT

DG_IMAGE / DAT_PALETTE8 / MSG_RESET

DG_IMAGE / DAT_PALETTE8 / MSG_SET

Capability - ICAP_PIXELTYPE

DG_IMAGE / DAT_PALETTE8 / MSG_GETDEFAULT

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_PALETTE8, MSG_GETDEFAULT,
pPalette);
```

pPalette = A pointer to a TW_PALETTE8 structure.

Valid States

4 through 6

Description

This operation causes the Source to report its power-on default palette.

Application

The application should allocate the pPalette structure for the Source.

Source

Fill pPalette with the default palette.

Return Codes

```
TWRC_SUCCESS
TWRC_FAILURE
    TWCC_BADPROTOCOL      /* Source does not support      */
                          /* palette color transfers      */
    TWCC_SEQERROR         /* Operation invoked in invalid */
                          /* state                         */
```

See Also

```
DG_IMAGE / DAT_PALETTE8 / MSG_GET
DG_IMAGE / DAT_PALETTE8 / MSG_RESET
DG_IMAGE / DAT_PALETTE8 / MSG_SET
```

Capability - ICAP_PIXELTYPE

DG_IMAGE / DAT_PALETTE8 / MSG_RESET

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_PALETTE8, MSG_RESET, pPalette);
```

pPalette = A pointer to a TW_PALETTE8 structure.

Valid States

4 only

Description

This operation causes the Source to dispose of any current palette it has and to use its default palette for the next palette transfer. A Source that always performs palette optimization may not use the default palette for the next transfer, but should dispose of its current palette and adopt the default palette for the moment, anyway. The application can check the actual palette information by invoking a MSG_GET operation immediately following the image transfer.

Application

The application should allocate the pPalette structure for the Source.

Source

Fill pPalette with the default palette and use the default palette for the next palette transfer.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL	/* Source does not support	*/
	/* palette color transfers	*/
TWCC_SEQERROR	/* Operation invoked in invalid	*/
	/* state	*/

See Also

DG_IMAGE / DAT_PALETTE8 / MSG_GET
DG_IMAGE / DAT_PALETTE8 / **MSG_GETDEFAULT**
DG_IMAGE / DAT_PALETTE8 / MSG_SET

Capability - ICAP_PIXELTYPE

DG_IMAGE / DAT_PALETTE8 / MSG_SET

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_PALETTE8, MSG_SET, pPalette);
```

pPalette = A pointer to a TW_PALETTE8 structure.

Valid States

4 only

Description

This operation requests that the Source adopt the specified palette for use with all subsequent palette transfers. The application should be careful to supply a palette that matches the bit depth of the Source. The Source is not required to adopt this palette. The application should be careful to check the return value from this operation.

Application

Fill pPalette with the desired palette. If writing grayscale information, write the same data into the Channel1, Channel2, and Channel3 fields of the Colors array. If NumColors != 256, fill the unused array elements with minimum ("black") values.

Source

The Source should not return TWRC_SUCCESS unless it will actually use the requested palette. The Source should not modify the palette in any way until the transfer is complete. The palette should be used for all remaining palette transfers for the duration of the session.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL	/* Source does not support	*/
	/* palette color transfers	*/
TWCC_SEQERROR	/* Operation invoked in invalid	*/
	/* state	*/

See Also

DG_IMAGE / DAT_PALETTE8 / MSG_GET
 DG_IMAGE / DAT_PALETTE8 / MSG_GETDEFAULT
 DG_IMAGE / DAT_PALETTE8 / MSG_RESET

Capability - ICAP_PIXELTYPE

DG_IMAGE / DAT_RGBRESPONSE / MSG_RESET

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_RGBRESPONSE, MSG_RESET,
pResponse);
```

pResponse = A pointer to a TW_RGBRESPONSE structure.

Valid States

4 only

Description

Causes the Source to use its “identity” response curves for future RGB transfers. The identity curve causes no change in the values of the captured data when it is applied. (Note that resetting the curves for RGB data **does not** reset any MSG_SET curves for other pixel types).

Note: The DAT_RGBRESPONSE operations allow the application to specify the transfer curves that the Source should apply to the RGB data it acquires. The Source should not support these operations unless it can provide data of pixel type TWPT_RGB. The Source need not maintain actual “identity response curves” for use with the MSG_RESET operation—once reset, the Source should transfer the RGB data as acquired from the Source. The application should be sure that the Source supports these operations before invoking them. The operations should only be invoked when the active pixel type is RGB (TWPT_RGB). See [Chapter 8, "Data Types and Data Structures"](#) for information about the definitions and data structures used to describe the RGB response curve within TWAIN.

Application

No special action.

Source

Apply the identity response curve to all future RGB transfers. This means that the Source will transfer the RGB data exactly as acquired from the device.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL	/* Source does not support RGB */ /* response curves */
TWCC_BADVALUE	/* Current pixel type is not */ /* TWPT_RGB */
TWCC_SEQERROR	/* Operation invoked in invalid */ /* state */

See Also

DG_IMAGE / DAT_RGBRESPONSE / MSG_SET

Capability - ICAP_PIXELTYPE

DG_IMAGE / DAT_RGBRESPONSE / MSG_SET

Call

```
DSM_Entry(pOrigin, pDest, DG_IMAGE, DAT_RGBRESPONSE, MSG_SET,  
pResponse);
```

pResponse = A pointer to a TW_RGBRESPONSE structure.

Valid States

4 only

Description

Causes the Source to transform any RGB data according to the response curves specified by the application.

Application

Fill all three elements of the response curve with the response curve data you want the Source to apply to future RGB transfers. The application should consider writing the same values into each element of the same index to minimize color shift problems.

The Source may not support this operation. The application should ensure that the current pixel type is TWPT_RGB and examine the return code from this operation.

Source

Apply the specified response curves to all future RGB transfers.

Return Codes

TWRC_SUCCESS

TWRC_FAILURE

TWCC_BADPROTOCOL	/* Source does not support color */
	/* response curves */
TWCC_BADVALUE	/* Current pixel type is not RGB */
TWCC_SEQERROR	/* Operation invoked in invalid */
	/* state */

See Also

DG_IMAGE / DAT_RGBRESPONSE / MSG_RESET

Capability - ICAP_PIXELTYPE

8

Data Types and Data Structures

Chapter Contents

Naming Conventions	8-1
Platform Dependent Definitions and Typedefs	8-3
Definitions of Common Types.....	8-7
Data Structure Definitions	8-7
Data Argument Types that Don't Have Associated TW_Structures	8-63
Data Argument Types that Don't Have Associated TW_Structures	8-63
Constants.....	8-65

This section of the Specification is definitive and authoritative in its description of the TWAIN namespace and the numeric ids that go with each name in that space. If a discrepancy is found between this chapter and any C/C++ TWAIN.H definition file then the TWAIN.H file must be corrected.

A TWAIN.H definition file is provided with this toolkit, this file is specific to C/C++ solutions.

If a definition file for a previously unsupported language is submitted to the TWAIN Working Group, and if it passes review, then the salient points needed to recreate it will be added to this chapter. A definition file cannot be called TWAIN or said to support TWAIN unless it can be completely created following the information in this chapter.

Naming Conventions

Data Structures, Variables, Pointers and Handles

Data structures referenced by pData parameter in DSM_Entry calls

Are prefixed by TW_ and followed by a descriptive name, in upper case. The name typically matches the call's DAT parameter.

Example: TW_USERINTERFACE

Fields in data structures (not containing pointers or handles)

Typically, begin with a capital letter followed by mixed upper and lower case letters.

Example: The MinBufSize, MaxBufSize, and Preferred fields in which are in the TW_SETUPMEMXFER structure.

Fields in data structures that contain pointers or handles

Name starts with lower case “p” or “h” for pointer or handle followed by a typical field name with initial capital then mixed case characters.

Example: pData, hContainer

Constants and Types

General-use constants

Are prefixed by TWON_ followed by the description of the constant’s meaning.

Example: TWON_ARRAY, TWON_ONEVALUE

Specific-use constants

Are prefixed with TWxx_ where xx are two letters identifying the group to which the constant belongs.

Example: TWTY_INT16, TWTY_STR32 are constants of the group TW Types

Common data types

Rather than use the int, char, long, and other. types with their variations between compilers, TWAIN defines a group of types that are used to cast each data item used by the protocol. Types are prefixed and named exactly the same as TWAIN data structures, TW_ followed by a descriptive name, all in upper case characters.

Example: TW_UINT32, TW_HANDLE

TWAIN.H internal constants

Starting with TWAIN 2.0 internal constants that are of special interest to TWAIN.H itself are used to improve the readability and maintainability of the file. They are prefixed with TWH_.

Custom Constants

Applications and Sources may define their own private (custom) constant identifiers for any existing constant group by assigning the constant a value greater than or equal to 0x8000. They may also define any new desired custom constant group. The consuming entity should check the originating entity’s TW_IDENTITY.ProductName when encountering a constant value greater than or equal to 0x8000 to see whether it can be recognized as a custom constant. Sources and applications should not assume that all entities will have such error checking built in, however.

The following are operation identifiers:

Data Groups	Prefixed with DG_
Data Argument Types	Prefixed with DAT_
Messages	Prefixed with MSG_
Return codes	Prefixed with TWRC_
Condition codes	Prefixed with TWCC_
General capabilities	Prefixed with CAP_

Image-specific capabilities	Prefixed with ICAP_
Audio-specific capabilities	Prefixed with ACAP_

As a general note, whenever the application or the Source allocates a TWAIN data structure, it should fill all the fields it is instructed to fill and write the default value (if one is specified) into any field it is not filling. If no default is specified, fill the field with the appropriate TWON_DONTCARExx constant where xx describes the size of the field in bits (bytes, in the case of strings). The TWON_ constants are described at the end of this chapter and defined in the TWAIN.H file.

Some fields return a value of -1 when the data to be returned is ambiguous or unknown. Applications and Sources must look for these special cases, especially when allocating memory. Examples of Fields with -1 values are found in TW_PENDINGXFERS (Count), TW_SETUPMEMXFER (MaxBufSize) and TW_IMAGEINFO (ImageWidth and ImageLength).

Platform Dependent Definitions and Typedefs

Single Compile

The TWAIN include file must only be referenced once for any compiled module. This is achieved by bracketing the contents of the entire file with the following:

```
#ifndef TWAIN
#define TWAIN
    ...contents of the TWAIN include file...
#endif /* TWAIN */
```

Platform Identification Macros

TWAIN supports multiple operating system platforms; it also can run with multiple compilers. The following macros are intended to help organize these combinations. Note that they focus more on the compilers than the platforms (cf: for the purposes of TWAIN GNU works the same on all operating systems).

```
/* Microsoft C/C++ Compiler */
#if defined(WIN32) || defined(WIN64) || defined (_WINDOWS)
#define TWH_CMP_MSC
    #if defined(_WIN64) || defined(WIN64)
        #define TWH_64BIT
    #elif defined(WIN32) || defined(_WIN32)
        #define TWH_32BIT
    #endif
#endif
```

```

/* Apple Compiler (which is GNU now) */
#elif defined(__APPLE__)
    #define TWH_CMP_XCODE
    #define TWH_32BIT

/* GNU C/C++ Compiler */
#elif defined(__GNUC__)
    #define TWH_CMP_GNU
    #if defined(__alpha__)\
        ||defined(__ia64__)\
        ||defined(__ppc64__)\
        ||defined(__s390x__)\
        ||defined(__x86_64__)\
    #define TWH_64BIT
    #else
        #define TWH_32BIT
    #endif

/* Borland C/C++ Compiler */
#elif defined(__BORLAND__)
    #define TWH_CMP_BORLAND
    #define TWH_32BIT

/* Unrecognized */
#else
    #error Unrecognized compiler
#endif

```

Platform Specific Typedefs

These definitions and typedefs are dependent on the compiler.

```

/* Win32 and Win64 systems */
#if defined(TWH_CMP_MSC) | defined(TWH_CMP_BORLAND)
    typedef HANDLE TW_HANDLE;
    typedef LPVOID TW_MEMREF;
    typedef UINT_PTR TW_UINTPTR;

/* MacOS/X... */

```

```

#elif defined(TWH_CMP_XCODE)
    #define PASCAL    pascal
    #define FAR
    typedef Handle    TW_HANDLE;
    typedef char      *TW_MEMREF;

    #ifdef TWH_32BIT
        //32 bit GNU
        typedef unsigned long      TW_UINTPTR;
    #else
        //64 bit GNU
        typedef unsigned long long TW_UINTPTR;
    #endif

/* Everything else... */
#else
    #define PASCAL
    #define FAR
    typedef void* TW_HANDLE;
    typedef void* TW_MEMREF;
    typedef unsigned char BYTE;

    #ifdef TWH_32BIT
        //32 bit GNU
        typedef unsigned long      TW_UINTPTR;
    #else
        //64 bit GNU
        typedef unsigned long long TW_UINTPTR;
    #endif
#endif

```

Platform Specific Byte Packing (Alignment)

In addition to the dependent definitions and typedefs TWAIN requires that the data alignment of all structures occurs on an agreed upon boundary. This prevents mismatches in the alignment of the data between the driver, the source manager and the application.

```
/* Set the packing: this occurs before any structures are defined */
```

```

#ifdef TWH_CMP_MSC
    #pragma pack (push, before_twain)
    #pragma pack (2)
#elif TWH_CMP_GNU
    #pragma pack (push, before_twain)
    #pragma pack (2)
#elif TWH_CMP_BORLAND
    #pragma option -a2
#elif TWH_CMP_XCODE
    #if PRAGMA_STRUCT_ALIGN
        #pragma options align=mac68k
    #elif PRAGMA_STRUCT_PACKPUSH
        #pragma pack (push, 2)
    #elif PRAGMA_STRUCT_PACK
        #pragma pack (2)
    #endif
#elif
/* Restore the previous packing alignment: this occurs after all
structures are defined */
#ifdef TWH_CMP_MSC
    #pragma pack (pop, before_twain)
#elif TWH_CMP_GNUC
    #pragma pack (pop, before_twain)
#elif TWH_CMP_BORLANDC
    #pragma option -a.
#elif TWH_CMP_XCODE
    #if PRAGMA_STRUCT_ALIGN
        #pragma options align=reset
    #elif PRAGMA_STRUCT_PACKPUSH
        #pragma pack (pop)
    #elif PRAGMA_STRUCT_PACK
        #pragma pack()
    #endif
#endif
#endif

```

Definitions of Common Types

String types

```
typedef unsigned char    TW_STR32[34],        FAR *pTW_STR32;
typedef unsigned char    TW_STR64[66],        FAR *pTW_STR64;
typedef unsigned char    TW_STR128[130],      FAR *pTW_STR128;
typedef unsigned char    TW_STR255[256],      FAR *pTW_STR255;
```

On Windows: These include room for the strings and a NULL character.

On Macintosh: These include room for a length byte followed by the string.

Note: The TW_STR255 must hold less than 256 characters so the length fits in the first byte on Macintosh.

Numeric types

```
typedef char              TW_INT8FAR *pTW_INT8;
typedef short             TW_INT16    FAR *pTW_INT16;
typedef long              TW_INT32    FAR *pTW_INT32;
typedef unsigned char     TW_UINT8    FAR *pTW_UINT8;
typedef unsigned short    TW_UINT16   FAR *pTW_UINT16;
typedef unsigned long     TW_UINT32   FAR *pTW_UINT32;
typedef unsigned short    TW_BOOL     FAR *pTW_BOOL;
```

Fixed point structure type

```
typedef struct {
                                TW_INT16Whole;
                                TW_UINT16Frac;
} TW_FIX32, FAR *_pTW_FIX32;
```

Note: In cases where the data type is smaller than TW_UINT32, the data resides in the lower word.

Data Structure Definitions

This section provides descriptions of the data structure definitions.

TW_ARRAY

```
typedef struct {
    TW_UINT16      ItemType;
    TW_UINT32      NumItems;
    TW_UINT8       ItemList[1];
} TW_ARRAY, FAR * pTW_ARRAY;
```

Used by

TW_CAPABILITY structure (when ConType field specifies TWON_ARRAY)

Description

This structure stores a group of associated individual values which, when taken as a whole, describes a single “value” for a capability. The values need have no relationship to one another aside from being used to describe the same “value” of the capability. Such an array of values is useful to describe the CAP_SUPPORTEDCAPS list. This structure is used as a member of TW_CAPABILITY structures. Since this structure does not, therefore, exist “stand-alone” it is identified by a TWON_xxxx constant rather than a DAT_xxxx. This structure is related in function and purpose to TW_ENUMERATION, TW_ONEVALUE, and TW_RANGE.

Field Descriptions

ItemType	The type of items in the array. The type is indicated by the constant held in this field. The constant is of the kind TWTY_xxxx. All items in the array have the same size.
NumItems	How many items are in the array.
ItemList[1]	This is the array. One value resides within each element of the array. Space for the array is not allocated inside this structure. The ItemList value is simply a placeholder for the start of the actual array, which must be allocated when the container is allocated. Remember to typecast the allocated array, as well as references to the elements of the array, to the type indicated by the constant in ItemType.

Ex:

```
To set an item in a CAP_SUPPORTEDCAPS array...
((TW_UINT16*)twarray.ItemList)[2] = ICAP_XFERMECH;
```

TW_AUDIOINFO

```
typedef struct {
    TW_STR255      Name;
    TW_UINT32      Reserved;
} TW_AUDIOINFO, FAR * pTW_AUDIOINFO;
```

Used by

The DG_AUDIO / DAT_AUDIOINFO / MSG_GET operation

Description

-

Field Descriptions

Name	Name of audio data
Reserved	Reserved space

TW_CAPABILITY

```
typedef struct {
    TW_UINT16      Cap;
    TW_UINT16      ConType;
    TW_HANDLE      hContainer;
} TW_CAPABILITY, FAR * pTW_CAPABILITY;
```

Used by

```
DG_CONTROL / DAT_CAPABILITY / MSG_GET
DG_CONTROL / DAT_CAPABILITY / MSG_GETCURRENT
DG_CONTROL / DAT_CAPABILITY / MSG_GETDEFAULT
DG_CONTROL / DAT_CAPABILITY / MSG_RESET
DG_CONTROL / DAT_CAPABILITY / MSG_RESETALL
DG_CONTROL / DAT_CAPABILITY / MSG_SET
```

Description

Used by an application either to get information about, or control the setting of a capability. The first field identifies the capability being negotiated (e.g., ICAP_BRIGHTNESS). The second specifies the format of the container (e.g., TWON_ONEVALUE). The third is a handle (HGLOBAL under Microsoft Windows) to the container itself.

The application always sets the Cap field. On MSG_SET, the application also sets the ConType and hContainer fields. On MSG_RESET, MSG_RESETALL, MSG_GET, MSG_GETCURRENT, and MSG_GETDEFAULT, the source fills in the ConType and hContainer fields.

It is always the application’s responsibility to free the container when it is no longer needed. On a MSG_GET, MSG_GETCURRENT, or MSG_GETDEFAULT, the source allocates the container but ownership passes to the application. On a MSG_SET, the application provides the container either by allocating it or by re-using a container created earlier.

On a MSG_SET, the Source must not modify the container and it must copy any data that it wishes to retain.

Field Descriptions

Cap	The numeric designator of the capability (of the form CAP_XXXX, ICAP_XXXX, or ACAP_XXXX). e.g. ICAP_BRIGHTNESS. A list of these can be found in Chapter 9, "Capabilities" and in the TWAIN.H file.
ConType	The type of the container referenced by hContainer. The container structure will be one of four types: TWON_ARRAY, TWON_ENUMERATION, TWON_ONEVALUE, or TWON_RANGE. One of these values, which types the container, should be entered into this field by whichever TWAIN entity fills in the container. When the application wants to set (MSG_SET) the Source’s capability, the application must fill in this field. When the application wants to get (MSG_GET) capability information from the Source, the Source must fill in this field.

hContainer	References the container structure where detailed information about the capability is stored. When the application wants to set (MSG_SET) the Source's capability, the application must provide the hContainer. When the application wants to get (MSG_GET) the Source's capability information, the Source must allocate the space for the container. In either case, the application must release this space.
------------	---

TW_CIECOLOR

```
typedef struct {
    TW_UINT16      ColorSpace
    TW_INT16       LowEndian;
    TW_INT16       DeviceDependent;
    TW_INT32       VersionNumber;
    TW_TRANSFORMSTAGE  StageABC;
    TW_TRANSFORMSTAGE  StageLMN;
    TW_CIEPOINT     WhitePoint;
    TW_CIEPOINT     BlackPoint;
    TW_CIEPOINT     WhitePaper;
    TW_CIEPOINT     BlackInk;
    TW_FIX32        Samples[1];
} TW_CIECOLOR, FAR * pTW_CIECOLOR;
```

Used by

```
DG_IMAGE / DAT_CIECOLOR / MSG_GET
```

Description

Defines the mapping from an RGB color space device into CIE 1931 (XYZ) color space. For more in-depth information, please reference the PostScript Language Reference Manual, Second Edition, pp. 173-193. Note that the field names do not follow the conventions used elsewhere within TWAIN. This breach allows the identifiers shown here to exactly match those described in Appendix A, which was not written specifically for this Toolkit. Please also note that ColorSpace has been redefined from its form in Appendix A to use TWPT_xxxx constants defined in the TWAIN.H file.

This structure closely parallels the TCIEBasedColorSpace structure definition in [Chapter A, "TWAIN Articles."](#) Note that the field names are slightly different and that two new fields have been added (WhitePaper and BlackInk) to describe the reflective characteristics of the page from which the image was acquired.

If the Source can provide TWPT_CIEXYZ, it must support all operations on this structure.

Field Descriptions

ColorSpace	Defines the original color space that was transformed into CIE XYZ. Use a constant of type TWPT_xxxx. This value is not set-able by the application. Application should write TWON_DONTCARE16 into this on a MSG_SET.
LowEndian	Used to indicate which data byte is taken first. If zero, then high byte is first. If non-zero, then low byte is first.
DeviceDependent	If non-zero then color data is device-dependent and only ColorSpace is valid in this structure.
VersionNumber	Version of the color space descriptor specification used to define the transform data. The current version is zero.

StageABC	Describes parametrics for the first stage transformation of the Postscript Level 2 CIE color space transform process.
StageLMN	Describes parametrics for the first stage transformation of the Postscript Level 2 CIE color space transform process.
WhitePoint	Values that specify the CIE 1931 (XYZ space) tri-stimulus value of the diffused white point.
BlackPoint	Values that specify the CIE 1931 (XYZ space) tri-stimulus value of the diffused black point.
WhitePaper	Values that specify the CIE 1931 (XYZ space) tri-stimulus value of ink-less “paper” from which the image was acquired.
BlackInk	Values that specify the CIE 1931 (XYZ space) tri-stimulus value of solid black ink on the “paper” from which the image was acquired.
Samples[1]	Optional table look-up values used by the decode function. Samples are ordered sequentially and end-to-end as A, B, C, L, M, and N.

TW_CIEPOINT

```
typedef struct {
    TW_FIX32      X;
    TW_FIX32      Y;
    TW_FIX32      Z;
} TW_CIEPOINT, FAR * pTW_CIEPOINT;
```

Used by

Embedded in the TW_CIECOLOR structure

Description

Defines a CIE XYZ space tri-stimulus value. This structure parallels the TCIEPoint structure definition in [Appendix A, "TWAIN Articles."](#)

Field Descriptions

X	First tri-stimulus value of the CIE space representation.
Y	Second tri-stimulus value of the CIE space representation.
Z	Third tri-stimulus value of the CIE space representation.

TW_CUSTOMDSDATA

```
typedef struct {
    TW_UINT32      InfoLength; /* Length (in bytes) of data */
    TW_HANDLE      hData;      /* Handle to data */
} TW_CUSTOMDSDATA, FAR *_pTW_CUSTOMDSDATA;
```

Used by

```
DG_CONTROL / DAT_CUSTOMDSDATA / MSG_GET
DG_CONTROL / DAT_CUSTOMDSDATA / MSG_SET
```

Description

Allows for a data source and application to pass custom data to each other.

The format of the data contained in InfoData will be data source specific and will not be defined by the TWAIN API. This structure will be used by an application to query the data source for its current settings, and to archive them to disk. Although the format for this custom data is not defined by TWAIN, source implementers are encouraged to use a ASCII representation for the custom data to be used for settings archival. A Windows INI style format would be easy to implement and allow for additional features to be added without breaking backwards compatibility.

It is also recommended that source vendors embed basic source revision and vendor ID information in the InfoData body so they can determine if the structure being based to the data source is correct.

Note: 1.x versions of the specification have shown the following structure.

```
typedef struct {
    TW_UINT32      InfoLength; /* Length (in bytes) of data */
    TW_UINT8      InfoData[1]; /* Array (Length) bytes long */
} TW_CUSTOMDSDATA, FAR *_pTW_CUSTOMDSDATA;
```

Starting with TWAIN 2.0 only the structure with hData is considered correct. If both a driver and an application are reporting version 2 by examining the TW_IDENTITY.SupportedGroups for DF_APP2 and DF_DS2, then both may assume that hData is in use. It is not sufficient to check the TW_IDENTITY.ProtocolMajor field for a value greater than or equal to 2.

For older drivers and applications it's expected that most developers have followed the use of hData from the TWAIN.H file, however, good defensive programming recommends at least attempting to anticipate both forms. On Window systems the developer can use GlobalSize() to test if the TW_CUSTOMDSDATA structure is greater than sizeof(TW_CUSTOMDSDATA), which would suggest that hData isn't a pointer, but is the actual beginning of the data. Other calls like GlobalLock() and IsBadReadPtr() can be used to check the validity of the pointer in hData. No system is perfect, but it should be possible to cover most drivers and applications this way.

Field Descriptions

InfoLength	Length, in bytes, of data
hData	Handle to memory containing InfoLength bytes of data

TW_DECODEFUNCTION

```
typedef struct {
    TW_FIX32      StartIn;
    TW_FIX32      BreakIn;
    TW_FIX32      EndIn;
    TW_FIX32      StartOut;
    TW_FIX32      BreakOut;
    TW_FIX32      EndOut;
    TW_FIX32      Gamma;
    TW_FIX32      SampleCount;
} TW_DECODEFUNCTION, FAR * pTW_DECODEFUNCTION;
```

Used by



Embedded in the TW_TRANSFORMSTAGE structure that is embedded in the TW_CIECOLOR structure

Description

Defines the parameters used for channel-specific transformation. The transform can be described either as an extended form of the gamma function or as a table look-up with linear interpolation. This structure parallels the TDecodeFunction structure definition in [Appendix A, "TWAIN Articles."](#)

Field Descriptions

StartIn	Starting input value of the extended gamma function. Defines the minimum input value of channel data.
BreakIn	Ending input value of the extended gamma function. Defines the maximum input value of channel data.
EndIn	The input value at which the transform switches from linear transformation/interpolation to gamma transformation.
StartOut	Starting output value of the extended gamma function. Defines the minimum output value of channel data.
BreakOut	Ending output value of the extended gamma function. Defines the maximum output value of channel data.
EndOut	The output value at which the transform switches from linear transformation/interpolation to gamma transformation.
Gamma	Constant value. The exponential used in the gamma function.
SampleCount	The number of samples in the look-up table. Includes the values of StartIn and EndIn. Zero-based index (actually, number of samples - 1). If zero, use extended gamma, otherwise use table look-up.

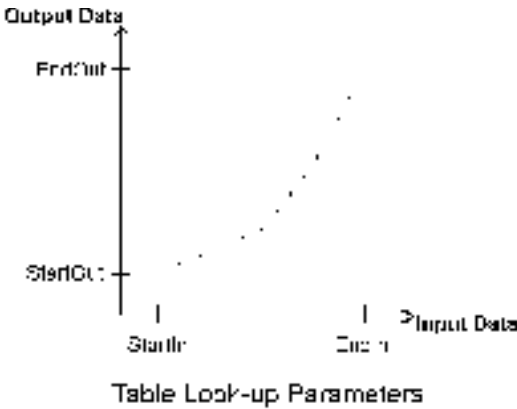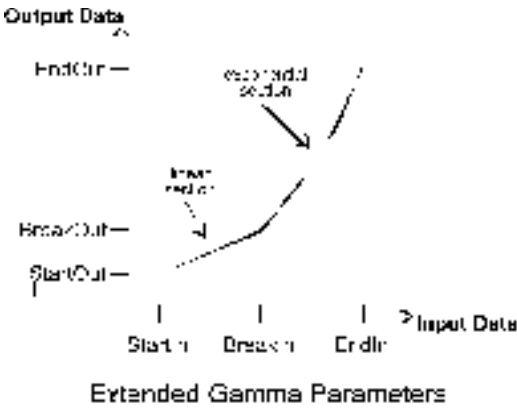

TW_DEVICEEVENT

```
typedef struct {
    TW_UINT32      Event;
    TW_STR255      DeviceName;
    TW_UINT32      BatteryMinutes;           // Battery Minutes Remaining
    TW_INT16       BatteryPercentage;        // Battery Percentage Remaining
    TW_INT32       PowerSupply;              // Power Supply
    TW_FIX32       XResolution;              // Resolution
    TW_FIX32       YResolution;              // Resolution
    TW_UINT32      FlashUsed2;               // Flash Used2
    TW_UINT32      AutomaticCapture;         // Automatic Capture
    TW_UINT32      TimeBeforeFirstCapture;   // Automatic Capture
    TW_UINT32      TimeBetweenCaptures;    // Automatic Capture
} TW_DEVICEEVENT, FAR * pTW_DEVICEEVENT;
```

Used by

DG_CONTROL / DAT_DEVICEEVENT / MSG_GET

Description

Provides information about the Event that was raised by the Source. The Source should only fill in those fields applicable to the Event. The Application must only read those fields applicable to the Event.

Field Descriptions

Event	One of the TWDE_XXXX values. Defines event that has taken place.
DeviceName	The name of the device that generated the event.
Valid for TWDE_BATTERYCHECK only	
BatteryMinutes	Minutes of battery power remaining.
BatteryPercentage	Percentage of battery power remaining.
Valid for TWDE_POWERSUPPLY only	
PowerSupply	Current power supply in use.
Valid for TWDE_RESOLUTION only	
XResolution	Current X Resolution.
YResolution	Current Y Resolution.
Valid for TWDE_FLASHUSED2 only	
FlashUsed2	Current flash setting.
Valid for TWDE_AUTOMATICCAPTURE only	

AutomaticCapture	Number of images camera will capture.
TimeBeforeFirstCapture	Number of seconds before first capture.
TimeBetweenCaptures	Hundredths of a second between captures.

TW_ENTRYPOINT

```
typedef struct {
    TW_UINT32 Size;
    DSM_ENTRY DSM_Entry;
    DSM_MEMALLOCATE DSM_MemAllocate;
    DSM_MEMFREE DSM_MemFree;
    DSM_MEMLOCK DSM_MemLock;
    DSM_MEMUNLOCK DSM_MemUnlock;
} TW_ENTRYPOINT, FAR * pTW_ENTRYPOINT;
```

Used by

DG_CONTROL / DAT_ENTRYPOINT / MSG_GET
DG_CONTROL / DAT_ENTRYPOINT / MSG_SET

Description

Provides entry points required by TWAIN 2.0 Applications and Sources.

Field Descriptions

Size	Size of the structure in bytes. The application must set this before calling MSG_GET. The Source should examine this when processing a MSG_SET.
DSM_Entry	A pointer to the DSM_Entry function. TWAIN 2.0 Sources must use this value instead of getting it themselves.
DSM_MemAllocate	A pointer to the memory allocation function, taking the form TW_HANDLE PASCAL DSM_MemAllocate (TW_UINT32).
DSM_MemFree	A pointer to the memory free function, taking the form void PASCAL DSM_MemAllocate (TW_HANDLE)
DSM_MemLock	A pointer to the memory lock function, taking the form TW_MEMREF PASCAL DSM_MemAllocate (TW_HANDLE)
DSM_MemUnlock	A pointer to the memory unlock function, taking the form void PASCAL DSM_MemUnlock (TW_HANDLE)

TW_ELEMENT8

```
typedef struct {
    TW_UINT8      Index;
    TW_UINT8      Channel1;
    TW_UINT8      Channel2;
    TW_UINT8      Channel3;
} TW_ELEMENT8, FAR * pTW_ELEMENT8;
```

Used by

Embedded in the TW_GRAYRESPONSE, TW_PALETTE8 and TW_RGBRESPONSE structures

Description

This structure holds the tri-stimulus color palette information for TW_PALETTE8 structures. The order of the channels shall match their alphabetic representation. That is, for RGB data, R shall be channel 1. For CMY data, C shall be channel 1. This allows the application and Source to maintain consistency. Grayscale data will have the same values entered in all three channels.

Field Descriptions

Index	Value used to index into the color table. Especially useful on the Macintosh.
Channel1	First tri-stimulus value (e.g. Red).
Channel2	Second tri-stimulus value (e.g. Green).
Channel3	Third tri-stimulus value (e.g. Blue).

TW_ENUMERATION

```
typedef struct {
    TW_UINT16    ItemType;
    TW_UINT32    NumItems;
    TW_UINT32    CurrentIndex;
    TW_UINT32    DefaultIndex;
    TW_UINT8     ItemList[1];
} TW_ENUMERATION, FAR * pTW_ENUMERATION;
```

Used by

TW_CAPABILITY structure (when ConType field specifies TWON_ENUMERATION)

Description

Stores a group of individual values describing a capability. The values are ordered from lowest to highest values, but the step size between each value is probably not uniform. Such a list would be useful to describe the discreet resolutions of a capture device supporting, say, 75, 150, 300, 400, and 800 dots per inch.

This structure is related in function and purpose to TW_ARRAY, TW_ONEVALUE, and TW_RANGE.

Field Descriptions

ItemType	The type of items in the enumerated list. The type is indicated by the constant held in this field. The constant is of the kind TWTY_XXXX. All items in the array have the same size.
NumItems	How many items are in the enumeration.
CurrentIndex	The item number, or index (zero-based) into ItemList[], of the “current” value for the capability.
DefaultIndex	The item number, or index (zero-based) into ItemList[], of the “power-on” value for the capability.
ItemList[1]	The enumerated list: one value resides within each array element. Space for the list is not allocated inside this structure. The ItemList value is simply a placeholder for the start of the actual array, which must be allocated when the container is allocated. Remember to typecast the allocation to ItemType, as well as references to the elements of the array.

Ex:

```
Second element of ICAP XFERMECH (assuming >= 2 NumItems)
value = ((TW_UINT16*)twenum.ItemList)[1];
```

TW_EVENT

```
typedef struct {
    TW_MEMREF      pEvent;
    TW_UINT16      TWMessage;
} TW_EVENT, FAR * pTW_EVENT;
```

Used by

DG_CONTROL / DAT_EVENT / MSG_PROCESSEVENT

Description

Used to pass application events/messages from the application to the Source. The Source is responsible for examining the event/message, deciding if it belongs to the Source, and returning an appropriate return code to indicate whether or not the Source owns the event/message. This process is covered in more detail in the Event Loop section of [Chapter 3, "Application Implementation."](#)

Field Descriptions

pEvent	A pointer to the event/message to be examined by the Source. Under Microsoft Windows, pEvent is a pMSG (pointer to a Microsoft Windows MSG struct). That is, the message the application received from GetMessage (). On the Macintosh, pEvent is a pointer to an EventRecord.
TWMessage	Any message (MSG_xxxx) the Source needs to send to the application in response to processing the event/message. The messages currently defined for this purpose are MSG_NULL, MSG_XFERREADY and MSG_CLOSEDREQ.

TW_EXTIMAGEINFO

```
typedef struct {
    TW_UINT32      NumInfos;
    TW_INFO        Info[1];
} TW_EXTIMAGEINFO, FAR * pTW_EXTIMAGEINFO;
```

Used by

DG_IMAGE / DAT_EXTIMAGEINFO / MSG_GET

Description

This structure is used to pass extended image information from the data source to application at the end of State 7. The application creates this structure at the end of State 7, when it receives XFERDONE. Application fills NumInfos for Number information it needs, and array of extended information attributes in Info[] array. Application, then, sends it down to the source using the above operation triplet. The data source then examines each Info, and fills the rest of data with information allocating memory when necessary.

The design of extended image information allows for two methods of passing multiple InfoID types. For instance, assume it is possible for a Source to generate more than one barcode off an image. An Application can request to acquire the data in one of two ways. The first way is as follows:

Applications asks for:

```
TW_EXTIMAGEINFO
NumInfos = 4
TW_INFO[0]
    InfoID = TWEI_BARCODECOUNT
    ItemType = TW_UNINT32
    NumItems = 0
    CondCode = 0
    Item = 0
TW_INFO[1]
    InfoID = TWEI_BARCODETYPE
    ItemType = TW_UNINT32
    NumItems = 0
    CondCode = 0
    Item = 0
TW_INFO[2]
    InfoID = TWEI_BARCODETEXTLENGTH
    ItemType = TW_UNINT32
    NumItems = 0
    CondCode = 0
    Item = 0
```

```

TW_INFO[3]
    InfoID = TWEI_BARCODETEXT
    ItemType = 0
    NumItems = 0
    CondCode = 0
    Item = 0

```

The Source returns...

```

TW_EXTIMAGEINFO
    NumInfos = 4
    TW_INFO[0]
        InfoID = TWEI_BARCODECOUNT
        ItemType = TW_UINT32
        NumItems = 1
        CondCode = TWCC_SUCCESS
        Item = 2
    TW_INFO[1]
        InfoID = TWEI_BARCODETYPE
        ItemType = TW_UINT32
        NumItems = 2
        CondCode = TWCC_SUCCESS
        Item = TW_HANDLE-0
    TW_INFO[2]
        InfoID = TWEI_BARCODETEXTLENGTH
        ItemType = TW_UINT32
        NumItems = 2
        CondCode = TWCC_SUCCESS
        Item = TW_HANDLE-1
    TW_INFO[3]
        InfoID = TWEI_BARCODETEXT
        ItemType = TW_HANDLE
        NumItems = 2
        CondCode = TWCC_SUCCESS
        Item = TW_HANDLE-2

((TW_UINT32*)TW_HANDLE-0)[0]    TWBT_3OF9
((TW_UINT32*)TW_HANDLE-0)[1]    TWBT_2OF5INTERLEAVED
((TW_UINT32*)TW_HANDLE-1)[0]    16

```

```

((TW_UINT32*)TW_HANDLE-1)[1]      32
((TW_UINT8*)TW_HANDLE-2)[0]      Barcode Text 0
((TW_UINT8*)TW_HANDLE-2)[ ((TW_UINT32*)TW_HANDLE-1)[0]]
                                   Barcode Text 1

```

Note that Item is a pointer to the first datum for this TW_INFO. The Item field must be a TW_HANDLE to the data if the value if the following is true:

```
(SizeOfSpecifiedItem * NumItems) > sizeof(TW_HANDLE)
```

It is the responsibility of the Application to free both the TW_EXTIMAGEINFO structure and any Item values that are TW_HANDLE, based on this calculation.

The reason for this design is so that the Source and Application can easily index through the TW_INFO structures (ex: TW_EXTIMAGEINFO->Item[0])

Note that the above structure could also be requested by the Application as follows:

```

TW_EXTIMAGEINFO
    NumInfos = 5
    TW_INFO[0]
        InfoID = TWEI_BARCODECOUNT
        ItemType = TW_UNINT32
        NumItems = 0
        CondCode = 0
        Item = 0
    TW_INFO[1]
        InfoID = TWEI_BARCODETYPE
        ItemType = TW_UNINT32
        NumItems = 0
        CondCode = 0
        Item = 0
    TW_INFO[2]
        InfoID = TWEI_BARCODETEXTLENGTH
        ItemType = TW_UNINT32
        NumItems = 0
        CondCode = 0
        Item = 0
    TW_INFO[3]
        InfoID = TWEI_BARCODETEXT
        ItemType = 0
        NumItems = 0
        CondCode = 0

```

```

        Item = 0
TW_INFO[4]
    InfoID = TWEI_BARCODETEXT
    ItemType = 0
    NumItems = 0
    CondCode = 0
    Item = 0

```

If the Source detects multiple occurrences of a tag, then it must distribute the data as best it can across the applicable TW_INFO fields. NumItems must be equal to one, and if there are not enough TW_INFOS supplied for the specified InfoID, then any remaining data is discarded by the Source. In this instance the return structure is big enough, and would look like the following...

```

TW_EXTIMAGEINFO
NumInfos = 5
TW_INFO[0]
    InfoID = TWEI_BARCODECOUNT
    ItemType = TW_UINT32
    NumItems = 1
    CondCode = TWCC_SUCCESS
    Item = 2
TW_INFO[1]
    InfoID = TWEI_BARCODETYPE
    ItemType = TW_UINT32
    NumItems = 2
    CondCode = TWCC_SUCCESS
    Item = TW_HANDLE-0
TW_INFO[2]
    InfoID = TWEI_BARCODETEXTLENGTH
    ItemType = TW_UINT32
    NumItems = 2
    CondCode = TWCC_SUCCESS
    Item = TW_HANDLE-1
TW_INFO[3]
    InfoID = TWEI_BARCODETEXT
    ItemType = TW_HANDLE
    NumItems = 1
    CondCode = TWCC_SUCCESS

```

```

        Item = TW_HANDLE-2
TW_INFO[4]
        InfoID = TWEI_BARCODETEXT
        ItemType = TW_HANDLE
        NumItems = 1
        CondCode = TWCC_SUCCESS
        Item = TW_HANDLE-3

((TW_UINT32*)TW_HANDLE-0)[0]    TWBT_3OF9
((TW_UINT32*)TW_HANDLE-0)[1]    TWBT_2OF5INTERLEAVED

((TW_UINT32*)TW_HANDLE-1)[0]    16
((TW_UINT32*)TW_HANDLE-1)[1]    32
((TW_UINT8*)TW_HANDLE-2)[0]     Barcode Text 0
((TW_UINT8*)TW_HANDLE-3)[ 0]    Barcode Text 1

```

Field Descriptions

NumInfos	Number of information that application is requesting. This is filled by the application. If positive, then the application is requesting specific extended image information. The application should allocate memory and fill in the attribute tag for image information.
Info[1]	Array of information. See TW_INFO structure.

TW_FILESYSTEM

```
typedef struct {
    // DG_CONTROL / DAT_FILESYSTEM / MSG_xxxx fields...
    TW_STR255    InputName;
    TW_STR255    OutputName;
    TW_MEMREF    Context;
    // DG_CONTROL / DAT_FILESYSTEM / MSG_COPY
    // DG_CONTROL / DAT_FILESYSTEM / MSG_DELETE field...
    int          Recursive;
    // DG_CONTROL / DAT_FILESYSTEM / MSG_GETINFO fields...
    TW_INT32     FileType;
    TW_UINT32    Size;
    TW_STR32     CreateTimeDate;
    TW_STR32     ModifiedTimeDate;
    TW_UINT32    FreeSpace;
    TW_INT32     NewImageSize;
    TW_UINT32    NumberOfFiles;
    TW_UINT32    NumberOfSnippets;
    TW_UINT32    DeviceGroupMask;
    char         Reserved[508];
} TW_FILESYSTEM, FAR * pTW_FILESYSTEM;
```

Used by

```
DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY
DG_CONTROL / DAT_FILESYSTEM / MSG_COPY
DG_CONTROL / DAT_FILESYSTEM / MSG_CREATEDIRECTORY
DG_CONTROL / DAT_FILESYSTEM / MSG_DELETE
DG_CONTROL / DAT_FILESYSTEM / MSG_FORMATMEDIA
DG_CONTROL / DAT_FILESYSTEM / MSG_GETCLOSE
DG_CONTROL / DAT_FILESYSTEM / MSG_GETFIRSTFILE
DG_CONTROL / DAT_FILESYSTEM / MSG_GETINFO
DG_CONTROL / DAT_FILESYSTEM / MSG_GETNEXTFILE
DG_CONTROL / DAT_FILESYSTEM / MSG_RENAME
```

Description

Provides information about the currently selected device.

Field Descriptions

InputName	The name of the input or source file.	
OutputName	The result of an operation or the name of a destination file.	
Context	A pointer to Source specific data used to remember state information, such as the current directory.	
MSG_GETINFO / MSG_GETFILEFIRST / MSG_DELETE		
Recursive	When set to TRUE recursively apply the operation. (ex: deletes all subdirectories in the directory being deleted; or copies all sub-directories in the directory being copied.	
MSG_GETINFO / MSG_GETFILEFIRST / MSG_GETFILENEXT		
FileType	One of the TWFY_xxxx values.	
Size	TWFY_DIRECTORY-	Total size of media in bytes.
	TWFY_IMAGE-	Size of image in bytes.
	TWFY_xxxx-	All other file types return a value of 0.
CreateTimeDate	The create date of the file, in the form “YYYY/MM/DD HH:mm:SS:sss” where YYYY is the year, MM is the numerical month, DD is the numerical day, HH is the hour, mm is the minute, SS is the second, and sss is the millisecond.	
ModifyTimeDate	Last date the file was modified. Same format as <i>CreateTimeDate</i> .	
FreeSpace	The bytes of free space left on the current device.	
NewImageSize	An estimate of the amount of space a new image would take up, based on image layout, resolution and compression. Dividing this value into the <i>FreeSpace</i> will yield the approximate number of images that the Device has room for.	
NumberOfFiles	TWFY_IMAGE- Return 0 TWFY_xxxx- Return number of TWFY_IMAGE files on the file system including those in all sub-directories.	
NumberOfSnippets	The number of audio snippets associated with a file of type TWFY_IMAGE.	
DeviceGroupMask	A set of bits, with each bit uniquely identifying a device of type TWFY_CAMERA and any associated TWFY_CAMERATOP and/or TWFY_CAMERABOTTOM devices. See “File System” on pageA-11 of this specification for more information.	
Reserved	Space reserved for future expansion of this structure.	

TW_FIX32

```
typedef struct {
    TW_INT16    Whole;
    TW_UINT16   Frac;
} TW_FIX32, FAR * pTW_FIX32;
```

Used by

Embedded in the TW_CIECOLOR, TW_CIEPOINT, TW_DECODEFUNCTION, TW_FRAME, TW_IMAGEINFO, and TW_TRANSFORMSTAGE structures.

Used in TW_ARRAY, TW_ENUMERATION, TW_ONEVALUE, and TW_RANGE structures when ItemType is TWTY_FIX32.

Description

Stores a Fixed point number in two parts, a whole and a fractional part. The Whole part carries the sign for the number. The Fractional part is unsigned.

Field Descriptions

Whole	The Whole part of the floating point number. This number is signed.
Frac	The Fractional part of the floating point number. This number is unsigned.

The following functions convert TW_FIX32 to float and float to TW_FIX32:

```

/*****
* FloatToFix32
* Convert a floating point value into a FIX32.
*****/
TW_FIX32 FloatToFix32 (float floater)
{
    TW_FIX32 Fix32_value;
    TW_INT32 value =(TW_INT32) (floater * 65536.0 + 0.5);
    Fix32_value.Whole = value >> 16;
    Fix32_value.Frac = value & 0x0000ffffL;
    return (Fix32_value);
}
/*****
* Fix32ToFloat
* Convert a FIX32 value into a floating point value.
*****/
float FIX32ToFloat (TW_FIX32 fix32)
{
    float floater;
    floater = (float) fix32.Whole + (float) fix32.Frac / 65536.0;

    return floater;
}

```

TW_FRAME

```
typedef struct {
    TW_FIX32    Left;
    TW_FIX32    Top;
    TW_FIX32    Right;
    TW_FIX32    Bottom;
} TW_FRAME, FAR * pTW_FRAME;
```

Used by


Embedded in the TW_IMAGELAYOUT structure

Description

Defines a frame rectangle in ICAP_UNITS coordinates.

Field Descriptions

Left	Value of the left-most edge of the rectangle (in ICAP_UNITS).
Top	Value of the top-most edge of the rectangle (in ICAP_UNITS).
Right	Value of the right-most edge of the rectangle (in ICAP_UNITS).
Bottom	Value of the bottom-most edge of the rectangle (in ICAP_UNITS).

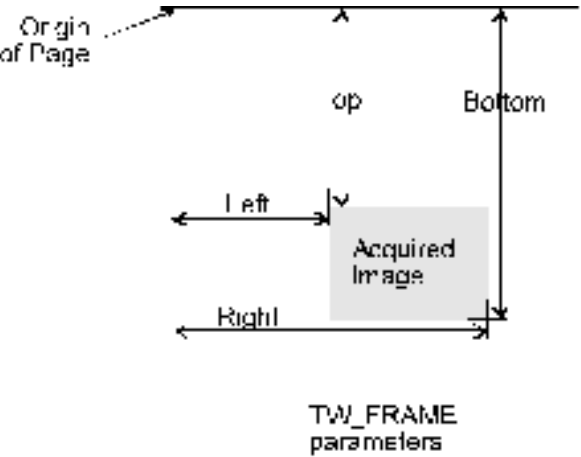

Frame Parameters

TW_GRAYRESPONSE

```
typedef struct {
    TW_ELEMENT8      Response[1];
} TW_GRAYRESPONSE, FAR * pTW_GRAYRESPONSE;
```

Used by

```
DG_IMAGE / DAT_GRAYRESPONSE / MSG_RESET
DG_IMAGE / DAT_GRAYRESPONSE / MSG_SET
```

Description

This structure is used by the application to specify a set of mapping values to be applied to grayscale data. Use this structure for grayscale data whose bit depth is up to and including 8-bits. This structure can only be used if TW_IMAGEINFO.PixelType is TWPT_GRAY. The number of elements in the array is determined by TW_IMAGEINFO.BitsPerPixel – the number of elements is 2 raised to the power of TW_IMAGEINFO.BitsPerPixel.

This structure is primarily intended for use by applications that bypass the Source’s built-in user interface.

Field Descriptions

Response[1]	Transfer curve descriptors. All three channels (Channel1, Channel2 and Channel3) must contain the same value for every entry.
-------------	---

TW_HANDLE

See “Platform Specific Typedefs” on page 8-4. for information on the actual mapping of this type.

Used by

Embedded in the TW_CAPABILITY and TW_USERINTERFACE structures

Description

The typedef of Handles are defined by the operating system. TWAIN defines TW_HANDLE to be the handle type supported by the operating system.

Field Descriptions

See definitions above

TW_IDENTITY

```
typedef struct {
    TW_UINT32      Id;
    TW_VERSION     Version;
    TW_UINT16      ProtocolMajor;
    TW_UINT16      ProtocolMinor;
    TW_UINT32      SupportedGroups;
    TW_STR32       Manufacturer;
    TW_STR32       ProductFamily;
    TW_STR32       ProductName;
} TW_IDENTITY, FAR * pTW_IDENTITY;
```

Used by

A large number of the operations because it identifies the application and the Source

Description

Provides identification information about a TWAIN entity. Used to maintain consistent communication between entities.

Field Descriptions

Id	A unique, internal identifier for the TWAIN entity. This field is only filled by the Source Manager. Neither an application nor a Source should fill this field. The Source uses the contents of this field to “identify” which application is invoking the operation sent to the Source.
Version	A TW_VERSION structure identifying the TWAIN entity.
ProtocolMajor	Major number of latest TWAIN version that this element supports (see TWON_PROTOCOLMAJOR).
ProtocolMinor	Minor number of latest TWAIN version that this element supports (see TWON_PROTOCOLMINOR).

SupportedGroups	<ul style="list-style-type: none"> •^:The application will normally set this field to specify which Data Group(s) it wants the Source Manager to sort Sources by when presenting the Select Source dialog, or returning a list of available Sources. The application sets this prior to invoking a MSG_USERSELECT operation. •^:The application may also set this field to specify which Data Group(s) it wants the Source to be able to acquire and transfer. The application must do this prior to sending the Source its MSG_ENABLEDS operation. •^:The Source must set this field to specify which Data Group(s) it can acquire. It will do this in response to a MSG_OPENDS. •^:Beginning with TWAIN 2.0 the Source Manager reserves the most significant two bytes in the SupportedGroups for the Data Flags (0x0001000 to 0xFFFF0000). <ul style="list-style-type: none"> DF_DSM2 - identifies the Source Manager as TWAIN 2.0 compliant DF_APP2 - is set by an Application that is TWAIN 2.0 compliant DF_DS2 - is set by a Source that is TWAIN 2.0 compliant
Manufacturer	String identifying the manufacturer of the application or Source. e.g. "Aldus".
ProductFamily	Tells an application that performs device-specific operations which product family the Source supports. This is useful when a new Source has been released and the application doesn't know about the particular Source but still wants to perform Custom operations with it. e.g. "ScanMan".
ProductName	A string uniquely identifying the Source. This is the string that will be displayed to the user at Source select-time. This string must uniquely identify your Source for the user, and should identify the application unambiguously for Sources that care. e.g. "ScanJet IIc".

TW_IMAGEINFO

```
typedef struct {
    TW_FIX32      XResolution;
    TW_FIX32      YResolution;
    TW_INT32      ImageWidth;
    TW_INT32      ImageLength;
    TW_INT16      SamplesPerPixel;
    TW_INT16      BitsPerSample[8];
    TW_INT16      BitsPerPixel;
    TW_BOOL       Planar;
    TW_INT16      PixelType;
    TW_UINT16     Compression;
} TW_IMAGEINFO, FAR * pTW_IMAGEINFO;
```

Used by

The DG_IMAGE / DAT_IMAGEINFO / MSG_GET operation

Description

Describes the “real” image data, that is, the complete image being transferred between the Source and application. The Source may transfer the data in a different format--the information may be transferred in “strips” or “tiles” in either compressed or uncompressed form. See the TW_IMAGEMEMXFER structure for more information.

The term “sample” is referred to a number of times in this structure. It holds the same meaning as in the TIFF specification. A sample is a contiguous body of image data that can be categorized by the channel or “ink color” it was captured to describe. In an R-G-B (Red-Green-Blue) image, such as on your TV or computer’s CRT, each color channel is composed of a specific color. There are 3 samples in an R-G-B; Red, Green, and Blue. A C-Y-M-K image has 4 samples. A Grayscale or Black and White image has a single sample.

Note: he value -1 in ImageWidth and ImageLength are special cases. It is possible for a Source to not know either its Width or Length. Applications need to consider this when allocating memory or otherwise dealing with the size of the Image.

Field Descriptions

XResolution	The number of pixels per ICAP_UNITS in the horizontal direction. The current unit is assumed to be “inches” unless it has been otherwise negotiated between the application and Source.
YResolution	The number of pixels per ICAP_UNITS in the vertical direction.
ImageWidth	How wide, <u>in pixels</u> , the entire image to be transferred is. If the Source doesn’t know, set this field to -1 (hand scanners may do this). --1 can only be used if the application has set ICAP_UNDEFINEDIMAGESIZE to TRUE.

ImageLength	How tall/long, <i>in pixels</i> , the image to be transferred is. If the Source doesn't know, set this field to -1 (hand scanners may do this). -1 can only be used if the application has set ICAP_UNDEFINEDIMAGESIZE to TRUE.
SamplesPerPixel	The number of samples being returned. For R-G-B, this field would be set to 3. For C-M-Y-K, 4. For Grayscale or Black and White, 1.
BitsPerSample[8]	For each sample, the number of bits of information. 24-bit R-G-B will typically have 8 bits of information in each sample (8+8+8). Some 8-bit color is sampled at 3 bits Red, 3 bits Green, and 2 bits Blue. Such a scheme would put 3, 3, and 2 into the first 3 elements of this array. The supplied array allows up to 8 samples. Samples are not limited to 8 bits. However, both the application and Source must simultaneously support sample sizes greater than 8 bits per color.
BitsPerPixel	The number of bits in each image pixel (or bit depth). This value is invariant across the image. 24-bit R-G-B has BitsPerPixel = 24. 40-bit C-M-Y-K has BitsPerPixel=40. 8-bit Grayscale has BitsPerPixel = 8. Black and White has BitsPerPixel = 1.
Planar	If SamplesPerPixel > 1, indicates whether the samples follow one another on a pixel-by-pixel basis (R-G-B-R-G-B-R-G-B...) as is common with a one-pass scanner or all the pixels for each sample are grouped together (complete group of R, complete group of G, complete group of B) as is common with a three-pass scanner. If the pixel-by-pixel method (also known as "chunky") is used, the Source should set Planar = FALSE. If the grouped method (also called "planar") is used, the Source should set Planar = TRUE.
PixelType	This is the highest categorization for how the data being transferred should be interpreted by the application. This is how the application can tell if the data is Black and White, Grayscale, or Color. Currently, the only color type defined is "tri-stimulus", or color described by three characteristics. Most popular color description methods use tri-stimulus descriptors. For simplicity, the constant used to identify tri-stimulus color is called TWPT_RGB, for R-G-B color. There is no default for this value. Fill this field with the appropriate TWPT_xxxx constant.
Compression	The compression method used to process the data being transferred. Default is no compression. Fill this field with the appropriate TWCP_xxxx constant.

TW_IMAGELAYOUT

```
typedef struct {
    TW_FRAME      Frame;
    TW_UINT32     DocumentNumber;
    TW_UINT32     PageNumber;
    TW_UINT32     FrameNumber;
} TW_IMAGELAYOUT, FAR * pTW_IMAGELAYOUT;
```

Used by

```
DG_IMAGE / DAT_IMAGELAYOUT / MSG_GET
DG_IMAGE / DAT_IMAGELAYOUT / MSG_GETDEFAULT
DG_IMAGE / DAT_IMAGELAYOUT / MSG_RESET
DG_IMAGE / DAT_IMAGELAYOUT / MSG_SET
```

Description

Involves information about the original size of the acquired image and its position on the original “page” relative to the “page’s” upper-left corner. **Default measurements are in inches** (units of measure can be changed by negotiating the ICAP_UNITS capability). This information may be used by the application to relate the acquired (and perhaps processed image) to the original. Further, the application can, using this structure, set the size of the image it wants acquired.

Another attribute of this structure is the included frame, page, and document indexing information. Most Sources and applications, at least at first, will likely set all these fields to one. For Sources that can acquire more than one frame from a page in a single acquisition, the FrameNumber field will be handy. Sources that can acquire more than one page from a document feeder will use PageNumber and DocumentNumber. These fields will be especially useful for forms-processing applications and other applications with similar document tracking requirements.

Field Descriptions

Frame	Defines the Left, Top, Right, and Bottom coordinates (in ICAP_UNITS) of the rectangle enclosing the original image on the original “page”. If the application isn’t interested in setting the origin of the image, set both Top and Left to zero. The Source will fill in the actual values following the acquisition. See also TW_FRAME.
DocumentNumber	The document number, assigned by the Source, that the acquired data originated on. Useful for grouping pages together. Usually a physical representation, this could just as well be a logical construct. Initial value is 1. Increment when a new document is placed into the document feeder (usually tell this has happened when the feeder empties). Reset when no longer acquiring from the feeder.
PageNumber	The page which the acquired data was captured from. Useful for grouping Frames together that are in some way related, usually Source. Usually a physical representation, this could just as well be a logical construct. Initial value is 1. Increment for each page fed from a page feeder. Reset when a new document is placed into the feeder.

FrameNumber	Usually a chronological index of the acquired frame. These frames are related to one another in some way; usually they were acquired from the same page. The Source assigns these values. Initial value is 1. Reset when a new page is acquired from.
-------------	---

TW_IMAGEMEMXFER

```
typedef struct {
    TW_UINT16    Compression;
    TW_UINT32    BytesPerRow;
    TW_UINT32    Columns;
    TW_UINT32    Rows;
    TW_UINT32    XOffset;
    TW_UINT32    YOffset;
    TW_UINT32    BytesWritten;
    TW_MEMORY    Memory;
} TW_IMAGEMEMXFER, FAR * pTW_IMAGEMEMXFER;
```

Used by

DG_IMAGE / DAT_IMAGEMEMXFER / MSG_GET

Description

Describes the form of the acquired data being passed from the Source to the application. When used in combination with a TW_IMAGEINFO structure, the application can correctly interpret the image.


This structure allows transfer of “chunks” from the acquired data. These portions may be either “strips” or “tiles.” Strips are tiles whose width matches that of the full image. Strips are always passed sequentially, from “top” to “bottom”. A tile’s position does not necessarily follow that of the previously passed tile. Most Sources will transfer strips.

Note: The application should remember what corner was contained in the first tile of a plane. When the opposite corner is delivered, the plane is complete. The dimensions of the memory transfers may vary.

Data may be passed either compressed or uncompressed. All Sources must pass uncompressed data. Sources are not required to support compressed data transfers. Compressed data transfers, and how the values are entered into the fields of this structure, are described in [Chapter 4, "Advanced Application Implementation."](#)

Following is a picture of some of the fields from a TW_IMAGEMEMXFER structure. **The large outline shows the entire image which was selected to be transferred.** The smaller rectangle shows the particular portion being described by this TW_IMAGEMEMXFER structure.

Note: Remember that for a “strip” transfer XOffset = 0, and Columns = TW_IMAGEINFO.ImageWidth.

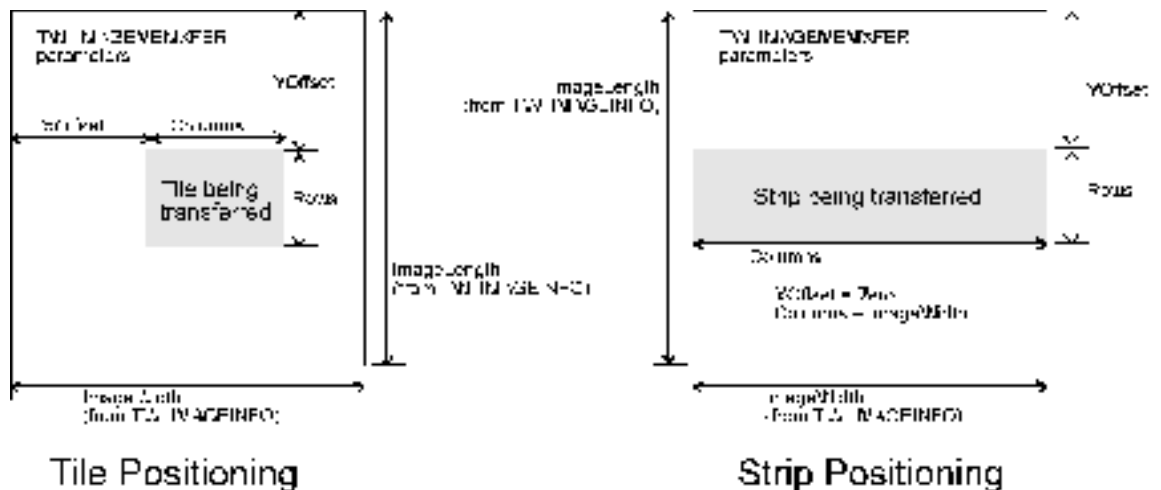

Field Descriptions

Compression	The compression method used to process the data being transferred. Write the constant (TWCP_xxxx) that precisely describes the type of compression used for the buffer. This may be different from the method reported in the TW_IMAGEINFO structure (if the user selected a different method before the actual transfer began, for instance). This is unlikely, but possible. The application can optionally abort the acquisition if the value in this field differs from the TW_IMAGEINFO value. Default is no compression (TWCP_NONE) and most transfers will probably be uncompressed. See the list of constants in the TWAIN.H file.
BytesPerRow	The number of uncompressed bytes in each row of the piece of the image being described in this buffer.
Columns	The number of uncompressed columns (in pixels) in this buffer.
Rows	The number of uncompressed rows (in pixels) in this buffer.
XOffset	How far, in pixels, the left edge of the piece of the image being described by this structure is inset from the "left" side of the original image. If the Source is transferring in "strips", this value will equal zero. If the Source is transferring in "tiles", this value will often be non-zero.
YOffset	Same idea as XOffset, but the measure is in pixels from the "top" of the original image to the upper edge of this piece.
BytesWritten	The number of bytes written into the transfer buffer. This field must always be filled in correctly, whether compressed or uncompressed data is being transferred.
Memory	A structure of type TW_MEMORY describing who must dispose of the buffer, the actual size of the buffer, in bytes, and where the buffer is located in memory.

TW_INFO

```
typedef struct {
    TW_UINT16      InfoID;
    TW_UINT16      ItemType;
    TW_UINT16      NumItems;
    TW_UINT16      CondCode;
    TW_UINTPTR      Item;
} TW_INFO, FAR * pTW_INFO;
```

Used by

Within TW_EXTIMAGEINFO structure.

Description

This structure is used to pass specific information between the data source and the application.

Field Descriptions

InfoID	Tag identifying an information. For TW_EXTIMAGEINFO, the information ID is defined as IACAP_xxxx. (Please refer to Extended Image capabilities).
ItemType	Item data type. It is one of TWTY_xxxx value as listed in the TW_INFO.ITEMTYPE below.
NumItems	Number of items for this field.
CondCode	This is condition code of availability of data for extended image attribute requested. Following is the list of possible condition codes: TWRC_INFONOTSUPPORTED TWRC_DATANOTAVAILABLE
Item	The TW_INFO.Item field contains either data or a handle to data. The field contains data if the total amount of data is less than or equal to four bytes. The field contains a handle of the total amount of data is more than four bytes. The amount of data is determined by multiplying TW_INFO.NumItems times the byte size of the data type specified by TW_INFO.ItemType. If the TW_INFO.Item field contains a handle to data, then the Application is responsible for freeing that memory.

TW_INFO.ITEMTYPE

ItemType	NumItems	Data/Pointer	Reason
TW_STR32	1	handle to data	(sizeof (TW_STR32) * 1) > 4
TW_INT32	1	data	(sizeof (TW_INT32) * 1) == 4
TW_INT8	3	data	(sizeof (TW_INT8) * 3) < 4
TW_INT8	5	handle to data	(sizeof (TW_INT8) * 5) > 4

TW_INFO Return Codes

Following is the list of added return codes.

TWRC_INFONOTSUPPORTED	Requested information is not supported.
TWRC_DATANOTAVAILABLE	Requested information is supported, but some unknown reason, information is not available.

TW_JPEGCOMPRESSION

```
typedef struct {
    TW_UINT16    ColorSpace;
    TW_UINT32    SubSampling;
    TW_UINT16    NumComponents;
    TW_UINT16    RestartFrequency;
    TW_UINT16    QuantMap[4];
    TW_MEMORY    QuantTable[4];
    TW_UINT16    HuffmanMap[4];
    TW_MEMORY    HuffmanDC[2];
    TW_MEMORY    HuffmanAC[2];
} TW_JPEGCOMPRESSION, FAR * pTW_JPEGCOMPRESSION;
```

Used by

```
DG_IMAGE / DAT_JPEGCOMPRESSION / MSG_GET
DG_IMAGE / DAT_JPEGCOMPRESSION / MSG_GETDEFAULT
DG_IMAGE / DAT_JPEGCOMPRESSION / MSG_RESET
DG_IMAGE / DAT_JPEGCOMPRESSION / MSG_SET
```

Description

Describes the information necessary to transfer a JPEG-compressed image during a buffered transfer. Images compressed in this fashion will be compatible with the JPEG File Interchange Format, version 1.1. For more information on JPEG and TWAIN, see [Chapter 4, "Advanced Application Implementation."](#) The TWAIN JPEG implementation is based on the JPEG Draft International Standard, version 10918-1. The sample tables found in Section K of the JPEG Draft International Standard, version 10918-1 are used as the default tables for QuantTable, HuffmanDC, and HuffmanAC.

Field Descriptions

ColorSpace	One of the TWPT_xxxx values. Defines the color space in which the compressed components are stored. Only spaces supported by the Source for ICAP_JPEGPIXELTYPE are valid.
SubSampling	Encodes the horizontal and vertical subsampling in the form ABCDEFGH, where ABCD are the high-order four nibbles which represent the horizontal subsampling and EFGH are the low-order four nibbles which represent the vertical subsampling. Each nibble may have a value of 0, 1, 2, 3, or 4. However, max(A,B,C,D) * max(E,F,G,H) must be less than or equal to 10. Subsampling is irrelevant for single component images. Therefore, the corresponding nibbles should be set to 1. e.g. To indicate subsampling two Y for each U and V in a YUV space image, where the same subsampling occurs in both horizontal and vertical axes, this field would hold 0x21102110. For a grayscale image, this field would hold 0x10001000. A CMYK image could hold 0x11111111.
NumComponents	Number of color components in the image to be compressed.

<code>RestartFrequency</code>	Number of MDUs (Minimum Data Units) between restart markers. Default is 0, indicating that no restart markers are used. An MDU is defined for interleaved data (i.e. R-G-B, Y-U-V, etc.) as a minimum complete set of 8x8 component blocks.
<code>QuantMap[4]</code>	Mapping of components to Quantization tables.
<code>QuantTable[4]</code>	Quantization tables.
<code>HuffmanMap[4]</code>	Mapping of components to Huffman tables. Null entries signify selection of the default tables.
<code>HuffmanDC[2]</code>	DC Huffman tables. Null entries signify selection of the default tables.
<code>HuffmanAC[2]</code>	AC Huffman tables. Null entries signify selection of the default tables.

TW_MEMORY

```
typedef struct {
    TW_UINT32    Flags;
    TW_UINT32    Length;
    TW_MEMREF    TheMem;
} TW_MEMORY, FAR * pTW_MEMORY;
```

Used by

Embedded in the TW_IMAGEMEMXFER and TW_JPEGCOMPRESSION structures

Description

Provides information for managing memory buffers. Memory for transfer buffers is allocated by the application--the Source is asked to fill these buffers. This structure keeps straight which entity is responsible for deallocation.

Field Descriptions

Flags	<p>Encodes which entity releases the buffer and how the buffer is referenced. The ownership flags must be used:</p> <ul style="list-style-type: none">• when transferring Buffered Memory data as tiles• when transferring Buffered Memory that is compressed• in the TW_JPEGCOMPRESSION structure <p>When transferring Buffered Memory data as uncompressed strips, the application allocates the buffers and is responsible for setting the ownership flags.</p> <p>This field is used to identify how the memory is to be referenced. The memory is always referenced by a Handle on the Macintosh and a Pointer under UNIX. It is referenced by a Handle or a pointer under Microsoft Windows.</p> <p>Use TWMF_XXXX constants, bit-wise OR'd together to fill this field.</p> <p>Flag Constants:</p> <table><tr><td>TWMF_APPOWNS</td><td>0x1</td></tr><tr><td>TWMF_DSMOWNS</td><td>0x2</td></tr><tr><td>TWMF_DSOWNS</td><td>0x4</td></tr><tr><td>TWMF_POINTER</td><td>0x8</td></tr><tr><td>TWMF_HANDLE</td><td>0x10</td></tr></table>	TWMF_APPOWNS	0x1	TWMF_DSMOWNS	0x2	TWMF_DSOWNS	0x4	TWMF_POINTER	0x8	TWMF_HANDLE	0x10
TWMF_APPOWNS	0x1										
TWMF_DSMOWNS	0x2										
TWMF_DSOWNS	0x4										
TWMF_POINTER	0x8										
TWMF_HANDLE	0x10										
Length	<p>The size of the buffer in bytes. Should always be an even number and word-aligned.</p>										
TheMem	<p>Reference to the buffer. May be a Pointer or a Handle (see Flags field to make this determination). You must typecast this field before referencing it in your code.</p>										

TW_MEMREF

See “Platform Specific Typedefs” on page 8-4. for information on the actual mapping of this type.

Used by

Embedded in the TW_EVENT and TW_MEMORY structures

Description

Memory references are specific to each operating system. TWAIN defines TW_MEMREF to be the memory reference type supported by the operating system.

Field Descriptions

See definitions above.

TW_UINTPTR

On Windows:

```
typedef UINT_PTR          TW_UINTPTR;
```

On Macintosh and Unix:

```
//32 bit GNU
typedef unsigned long      TW_UINTPTR;

//64 bit GNU
typedef unsigned long long  TW_UINTPTR;
```

Used by

Embedded in the TW_INFO structure.

Description

Integer pointer references are specific to each operating system. TWAIN defines TW_UINTPTR to be the integer pointer reference type supported by the operating system.

Field Descriptions

See definitions above

TW_ONEVALUE

```
typedef struct {
    TW_UINT16    ItemType;
    TW_UINT32    Item;
} TW_ONEVALUE, FAR * pTW_ONEVALUE;
```

Used by

TW_CAPABILITY structure (when ConType field specifies TWON_ONEVALUE)

Description

Stores a single value (item) which describes a capability. This structure is currently used only in a TW_CAPABILITY structure. Such a value would be useful to describe the current value of the device's contrast, or to set a specific contrast value. This structure is related in function and purpose to TW_ARRAY, TW_ENUMERATION, and TW_RANGE.

Note that in cases where the data type is TW_UINT16, the data should reside in the lower word.

Field Descriptions

ItemType	The type of the item. The type is indicated by the constant held in this field. The constant is of the kind TWTY_xxxx.
Item	The value.

TW_PALETTE8

```
typedef struct {
    TW_UINT16    NumColors;
    TW_UINT16    PaletteType;
    TW_ELEMENT8  Colors[256];
} TW_PALETTE8, FAR * pTW_PALETTE8;
```

Used by

```
DG_IMAGE / DAT_PALETTE8 / MSG_GET
DG_IMAGE / DAT_PALETTE8 / MSG_GETDEFAULT
DG_IMAGE / DAT_PALETTE8 / MSG_RESET
DG_IMAGE / DAT_PALETTE8 / MSG_SET
```

Description

This structure holds the color palette information for buffered memory transfers of type ICAP_PIXELTYPE = TWPT_PALETTE.

Field Descriptions

NumColors	Number of colors in the color table; maximum index into the color table should be one less than this (since color table indexes are zero-based).
PaletteType	TWPA_xxxx constant specifying the type of palette.
Colors[256]	Array of palette values.

TW_PASSTHRU

```
typedef struct {
    TW_MEMREF    pCommand;
    TW_UINT32    CommandBytes;
    TW_INT32     Direction;
    TW_MEMREF    pData;
    TW_UINT32    DataBytes;
    TW_UINT32    DataBytesXfered;
} TW_PASSTHRU, FAR * pTW_PASSTHRU;
```

Used by

DG_CONTROL / DAT_PASSTHRU / MSG_PASSTHRU

Description

Used to bypass the TWAIN protocol when communicating with a device. All memory must be allocated and freed by the Application. Use of this feature is limited to Source writers who require a standard entry point for specialized Applications, such as diagnostics.

Field Descriptions

pCommand	Pointer to Command buffer.
CommandBytes	Number of bytes in Command buffer.
Direction	One of the TWDR_xxxx values. Defines the direction of data flow.
pData	Pointer to Data buffer.
DataBytes	Number of bytes in Data buffer.
DataBytesXfered	Number of bytes successfully transferred.

TW_PENDINGXFERS

```
typedef struct {
    TW_UINT16 Count;
    union {
        TW_UINT32 EOJ;
        TW_UINT32 Reserved;
    };
} TW_PENDINGXFERS, FAR *pTW_PENDINGXFERS;
```

Used by

```
DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER
DG_CONTROL / DAT_PENDINGXFERS / MSG_GET
DG_CONTROL / DAT_PENDINGXFERS / MSG_RESET
```

Description

This structure tells the application how many more complete transfers the Source currently has available. The application should MSG_GET this structure at the conclusion of a transfer to confirm the Source’s current state. If the Source has more transfers pending it will remain in State 6 awaiting initiation of the next transfer by the application.

If it has no more image transfers pending, it will place zero into the Count and will have automatically transitioned to State 5 (audio transfers will remain in State 6, even when the Count goes to zero).

If the Source knows there are more transfers pending but is unsure of the actual number, it should place -1 into Count (for example, with document feeders or continuous video sources). Otherwise, the Source should place the actual number of pending transfers into Count.

Field Descriptions

Count	When DAT_XFERGROUP is set to DG_IMAGE The number of complete transfers a Source has available for the application it is connected to. If no more transfers are available, set to zero. If an unknown and non-zero number of transfers are available, set to -1. When DAT_XFERGROUP is set to DG_AUDIO The number of complete audio snippet transfers for a given image a Source has available for the application it is connected to. If no more transfers are available, set to zero. -1 is not a valid value.
EOJ	The application should check this field if the CAP_JOBCONTROL is set to other than TWJC_NONE. If the EOJ is not 0, the application should expect more data from the driver according to CAP_JOBCONTROL settings.
Reserved	Maintained so as not to cause compile time errors for pre-1.7 code.

TW_RANGE

```
typedef struct {
    TW_UINT16      ItemType;
    TW_UINT32      MinValue;
    TW_UINT32      MaxValue;
    TW_UINT32      StepSize;
    TW_UINT32      DefaultValue;
    TW_UINT32      CurrentValue;
} TW_RANGE, FAR * pTW_RANGE;
```

Used by

TW_CAPABILITY structure (when ConType field specifies TWON_RANGE)

Description

Stores a range of individual values describing a capability. The values are uniformly distributed between a minimum and a maximum value. The step size between each value is constant. Such a value is useful when describing such capabilities as the resolutions of a device which supports discreet, uniform steps between each value, such as 50 through 300 dots per inch in steps of 2 dots per inch (50, 52, 54, ..., 296, 298, 300). This structure is related in function and purpose to TW_ARRAY, TW_ENUMERATION, and TW_ONEVALUE.

Field Descriptions

ItemType	The type of items in the list. The type is indicated by the constant held in this field. The constant is of the kind TWTY_XXXX. All items in the list have the same size/type.
MinValue	The least positive/most negative value of the range.
MaxValue	The most positive/least negative value of the range.
StepSize	The delta between two adjacent values of the range. e.g. Item2 - Item1 = StepSize;
DefaultValue	The device's "power-on" value for the capability. If the application is performing a MSG_SET operation and isn't sure what the default value is, set this field to TWON_DONTCARE32.
CurrentValue	The value to which the device (or its user interface) is currently set to for the capability.

TW_RGBRESPONSE

```
typedef struct {
    ELEMENT8      Response[1];
} TW_RGBRESPONSE, FAR * pTW_RGBRESPONSE;
```

Used by

```
DG_IMAGE / DAT_RGBRESPONSE / MSG_RESET
DG_IMAGE / DAT_RGBRESPONSE / MSG_SET
```

Description

This structure is used by the application to specify a set of mapping values to be applied to RGB color data. Use this structure for RGB data whose bit depth is up to, and including, 8-bits. The number of elements in the array is determined by TW_IMAGEINFO.BitsPerPixel – the number of elements is 2 raised to the power of TW_IMAGEINFO.BitsPerPixel.

This structure is primarily intended for use by applications that bypass the Source’s built-in user interface.

Field Descriptions

Response[1]	Transfer curve descriptors. To minimize color shift problems, writing the same values into each channel is desirable.
-------------	---

TW_SETUPFILEXFER

```
typedef struct {
    TW_STR255      FileName;
    TW_UINT16      Format;
    TW_INT16       VRefNum;
} TW_SETUPFILEXFER, FAR * pTW_SETUPFILEXFER;
```

Used by

```
DG_CONTROL / DAT_SETUPFILEXFER / MSG_GET
DG_CONTROL / DAT_SETUPFILEXFER / MSG_GETDEFAULT
DG_CONTROL / DAT_SETUPFILEXFER / MSG_RESET
DG_CONTROL / DAT_SETUPFILEXFER / MSG_SET
```

Description

Describes the file format and file specification information for a transfer through a disk file.

Field Descriptions

FileName	A complete file specifier to the target file. On Windows, be sure to include the complete pathname.
Format	The format of the file the Source is to fill. Fill with the correct constant—as negotiated with the Source—of type TWFF_xxxx.
VRefNum	The volume reference number for the file. This applies to Macintosh only. On Windows, fill the field with TWON_DONTCARE16.

TW_SETUPMEMXFER

```
typedef struct {
    TW_UINT32    MinBufSize;
    TW_UINT32    MaxBufSize;
    TW_UINT32    Preferred;
} TW_SETUPMEMXFER, FAR * pTW_SETUPMEMXFER;
```

Used by

DG_CONTROL / DAT_SETUPMEMXFER / MSG_GET

Description

Provides the application information about the Source’s requirements and preferences regarding allocation of transfer buffer(s). The best applications will allocate buffers of the Preferred size. An application should never allocate a buffer smaller than MinBufSize. Some Sources may not be able to fill a buffer larger than MaxBufSize so a larger allocation is a waste of RAM (digital cameras or frame grabbers fit this category).

Sources should fill out all three fields as accurately as possible. If a Source can fill an indeterminately large buffer (hand scanners might do this), put a -1 in MaxBufSize.

Field Descriptions

MinBufSize	The size of the smallest transfer buffer, in bytes, that a Source can be successful with. This will typically be the number of bytes in an uncompressed row in the block to be transferred. An application should never allocate a buffer smaller than this.
MaxBufSize	The size of the largest transfer buffer, in bytes, that a Source can fill. If a Source can fill an arbitrarily large buffer, it might set this field to negative 1 to indicate this (a hand-held scanner might do this, depending on how long its cord is). Other Sources, such as frame grabbers, cannot fill a buffer larger than a certain size. Allocation of a transfer buffer larger than this value is wasteful.
Preferred	The size of the optimum transfer buffer, in bytes. A smart application will allocate transfer buffers of this size, if possible. Buffers of this size will optimize the Source’s performance. Sources should be careful to put reasonable values in this field. Buffers that are 10’s of kbytes will be easier for applications to allocate than buffers that are 100’s or 1000’s of kbytes.

TW_STATUS

```
typedef struct {
    TW_UINT16      ConditionCode;    // output
    union {
        TW_UINT16  Data;            // output (TWAIN 2.1 and newer)
        TW_UINT16  Reserved;        // output (TWAIN 2.0 and older)
    };
} TW_STATUS, FAR * pTW_STATUS;
```

Used by

```
DG_CONTROL / DAT_STATUS / MSG_GET
DG_CONTROL / DAT_STATUSUTF8 / MSG_GET (as part of TW_STATUSUTF8)
```

Description

Describes the status of a source.

Field Descriptions

ConditionCode	TWCC_xxxx Condition Code describing the status.
Data	Valid for TWAIN 2.1 and later. This field contains additional scanner-specific data. If there is no data, then this value must be zero.
Reserved	Only option for TWAIN 2.0 and earlier. If used it must be zero.

TW_STATUSUTF8

```
typedef struct {
    TW_STATUS    Status;// input
    TW_UINT32    Size;// output
    TW_HANDLE    UTF8string;// output
} TW_STATUSUTF8, FAR * pTW_STATUSUTF8;
```

Used by

DG_CONTROL / DAT_STATUSUTF8 / MSG_GET

Description

Translates the contents of Status into a localized UTF8string, with the total number of bytes in the string.

Field Descriptions

Status	TW_STATUS data received from a previous call to DG_CONTROL / DAT_STATUS / MSG_GET.
Size	Total number of bytes in the UTF8string, plus the terminating NUL byte. This is not the same as the total number of characters in the string.
UTF8string	TW_HANDLE to a UTF-8 encoded localized string (based on TW_IDENTITY.Language or CAP_LANGUAGE). The Source allocates it, the Application frees it.

TW_TRANSFORMSTAGE

```
typedef struct {
    TW_DECODEFUNCTION    Decode[3];
    TW_FIX32             Mix[3][3];
} TW_TRANSFORMSTAGE, FAR * pTW_TRANSFORMSTAGE;
```

Used by

Embedded in the TW_CIECOLOR structure

Description

Specifies the parametrics used for either the ABC or LMN transform stages. This structure parallels the TTransformStage structure definition in Appendix A.

Field Descriptions

Decode[3]	Channel-specific transform parameters.
Mix[3][3]	3x3 matrix that specifies how channels are mixed in

TW_USERINTERFACE

```
typedef struct {
    TW_BOOL      ShowUI;
    TW_BOOL      ModalUI;
    TW_HANDLE     hParent;
} TW_USERINTERFACE, FAR * pTW_USERINTERFACE;
```

Used by

```
DG_CONTROL / DAT_USERINTERFACE / MSG_DISABLED
DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLED
```

Description

This structure is used to handle the user interface coordination between an application and a Source.

Field Descriptions

ShowUI	Set to TRUE by the application if the Source should activate its built-in user interface. Otherwise, set to FALSE. Note that not all sources support ShowUI = FALSE. See the description of DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLED for more information.
ModalUI	If ShowUI is TRUE, then an application setting this to TRUE requests the Source to run Modal (no user access to the application's windows while the Source is running).
hParent	Microsoft Windows only: Application's window handle. The Source designates the hWnd as its parent when creating the Source dialog. NOTE: Window handle allows Source's user interface to be a proper child of the parent application.

TW_VERSION

```
typedef struct {  
    TW_UINT16    MajorNum;  
    TW_UINT16    MinorNum;  
    TW_UINT16    Language;  
    TW_UINT16    Country;  
    TW_STR32     Info;  
} TW_VERSION, FAR * pTW_VERSION;
```

Used by

This is embedded in the TW_IDENTITY data structure

Description

A general way to describe the version of software that is running.

Field Descriptions

MajorNum	This refers to your application or Source's major revision number. e.g. The "2" in "version 2.1".
MinorNum	The incremental revision number of your application or Source. e.g. The "1" in "version 2.1".
Language	The primary language for your Source or application. e.g. TWLG_GER.
Country	The primary country where your Source or application is intended to be distributed. e.g. Germany.
Info	General information string - fill in as needed. e.g. "1.0b3 Beta release".

Data Argument Types that Don't Have Associated TW_Structures

Most of the DAT_xxxx components of the TWAIN operation triplets have a corresponding data structure whose name begins with TW_ and then uses the same suffix as the DAT_name. However, the following do not use that pattern.

DAT_IMAGEFILEXFER

Acts on NULL data.

DAT_IMAGENATIVEXFER

Uses a TW_UINT32 variable.

On Windows: In Win 3.1, the low word of this 32-bit integer is a handle variable to a DIB (Device Independent Bitmap) located in memory. For Win 95 the handles fill the entire field.

On Macintosh: This 32-bit integer is a handle to a Picture (a PicHandle). It is a QuickDraw picture located in memory.

DAT_NULL

Used by the Source to signal the need for an event to announce MSG_XFERREADY or MSG_CLOSEDREQ. (Used on Windows only)

DAT_PARENT

Used by the DG_CONTROL / DAT_PARENT / MSG_OPENDSM and MSG_CLOSEDSM operations.

On Windows: They act on a variable of type TW_INT32. Prior to the operation, the application must write, a window handle to the application's window that acts as the "parent" for the Source's user interface. In Win 3.1 this would be in the low word, in Win 95 it will fill the entire field. (This must be done whether or not the Source's user interface will be used. The Source Manager uses this window handle to signal the application when data is ready for transfer (MSG_XFERREADY) or the Source needs to be closed (MSG_CLOSEDREQ)).

On Macintosh: These act on NULL data.

DAT_XFERGROUP

Used by the DG_CONTROL / DAT_XFERGROUP / MSG_GET operation. The data acted on by this operation is a variable of type TW_UINT32. (The same as a DG_xxxx designator.) The value of this variable is indeterminate prior to the operation. Following the operation, a single bit is set indicating the Data Group of the transfer.

Constants

Generic Constants

Constants

Defined as	Value
TWON_PROTOCOLMAJOR	2
TWON_PROTOCOLMINOR	1
TWON_ARRAY	3
TWON_ENUMERATION	4
TWON_ONEVALUE	5
TWON_RANGE	6
TWON_ICONID	962
TWON_DSMID	461
TWON_DSMLCODEID	63
TWON_DONTCARE8	0xff
TWON_DONTCARE16	0xffff
TWON_DONTCARE32	0xffffffff

Flags used in TW_MEMORY

Defined as	Value
TWMF_APPOWNS	0x0001
TWMF_DSMOWNS	0x0002
TWMF_DSOWNS	0x0004
TWMF_POINTER	0x0008
TWMF_HANDLE	0x0010

Palette types for TW_PALETTE8

Defined as	Value
TWPA_RGB	0
TWPA_GRAY	1
TWPA_CMY	2

Events for TW_DEVICEEVENT

See "CAP_DEVICEEVENT" on page 8-81.

File Types for TW_FILESYSTEM

Defined as	Value
TWIFY_CAMERA	0
TWIFY_CAMERATOP	1
TWIFY_CAMERABOTTOM	2
TWIFY_CAMERAPREVIEW	3
TWIFY_DOMAIN	4
TWIFY_HOST	5
TWIFY_DIRECTORY	6
TWIFY_IMAGE	7
TWIFY_UNKNOWN	8

Query Support Bits

Note: These are bits in a mask.

Defined as	Value
TWQC_GET	0x0001
TWQC_SET	0x0002
TWQC_GETDEFAULT	0x0004
TWQC_GETCURRENT	0x0008
TWQC_RESET	0x0010

ConType for Capability Container structures

Defined as	Value
TWON_ARRAY	3
TWON_ENUMERATION	4
TWON_ONEVALUE	5
TWON_RANGE	6

ItemType for Capability Container structures

Defined as	Value
TWTY_INT8	0x0000
TWTY_INT16	0x0001
TWTY_INT32	0x0002
TWTY_UINT8	0x0003
TWTY_UINT16	0x0004
TWTY_UINT32	0x0005
TWTY_BOOL	0x0006
TWTY_FIX32	0x0007
TWTY_FRAME	0x0008
TWTY_STR32	0x0009
TWTY_STR64	0x000A
TWTY_STR128	0x000B
TWTY_STR255	0x000C
TWTY_HANDLE	0x000F //Item is a TW_HANDLE

Direction for TW_PASSTHRU

Defined as	Value
TWDR_GET	1
TWDR_SET	2

Patch Codes for TW_PENDINGXFERS

Defined as	Value
TWEJ_NONE	0x0000
TWEJ_MIDSEPERATOR	0x0001
TWEJ_PATCH1	0x0002
TWEJ_PATCH2	0x0003
TWEJ_PATCH3	0x0004
TWEJ_PATCH4	0x0005
TWEJ_PATCH6	0x0006
TWEJ_PATCHT	0x0007

Triplet Constants

Data Groups (DG_)

Note: These are bits in a mask.

Data Group (DG_)	Numeric ID
DG_CONTROL	0x0001L
DG_IMAGE	0x0002L
DG_AUDIO	0x0004L

Data Argument Types (DAT_)

Version	Data Group (DG_)	Numeric ID
	DAT_NULL	0x0000
	DAT_CUSTOMBASE	0x8000
	DAT_CAPABILITY	0x0001
	DAT_EVENT	0x0002
	DAT_IDENTITY	0x0003
	DAT_PARENT	0x0004
	DAT_PENDINGXFERS	0x0005
	DAT_SETUPMEMXFER	0x0006
	DAT_SETUPFILEXFER	0x0007
	DAT_STATUS	0x0008
	DAT_USERINTERFACE	0x0009
	DAT_XFERGROUP	0x000A
	DAT_CUSTOMDSDATA	0x000C
	DAT_DEVICEEVENT	0x000D
	DAT_FILESYSTEM	0x000E
	DAT_PASSTHRU	0x000F
2.0	DAT_CALLBACK	0x0010
2.1	DAT_STATUSUTF8	0x0011
	DAT_IMAGEINFO	0x0101
	DAT_IMAGELAYOUT	0x0102
	DAT_IMAGEMEMXFER	0x0103
	DAT_IMAGENATIVEXFER	0x0104
	DAT_IMAGEFILEXFER	0x0105
	DAT_CIECOLOR	0x0106
	DAT_GRAYRESPONSE	0x0107
	DAT_RGBRESPONSE	0x0108
	DAT_JPEGCOMPRESSION	0x0109
	DAT_PALETTE8	0x010A
	DAT_EXTIMAGEINFO	0x010B
	DAT_AUDIOFILEXFER	0x0201
	DAT_AUDIOINFO	0x0202
	DAT_AUDIONATIVEXFER	0x0203
1.91	DAT_ICCPROFILE	0x0401
1.91	DAT_IMAGEMEMFILEXFER	0x0402

Message (MSG_)

Version	Data Group (DG_)	Numeric ID
	MSG_NULL	0x0000
	MSG_CUSTOMBASE	0x8000

Version	Data Group (DG_)	Numeric ID
	MSG_GET	0x0001
	MSG_GETCURRENT	0x0002
	MSG_GETDEFAULT	0x0003
	MSG_GETFIRST	0x0004
	MSG_GETNEXT	0x0005
	MSG_SET	0x0006
	MSG_RESET	0x0007
	MSG_QUERY SUPPORT	0x0008
2.1	MSG_GETHELP	0x0009
2.1	MSG_GETLABEL	0x000A
2.1	MSG_GETGETLABELENUM	0x000B
	MSG_XFERREADY	0x0101
	MSG_CLOSEDSREQ	0x0102
	MSG_CLOSEDSOK	0x0103
	MSG_DEVICEEVENT	0x0104
	MSG_OPENDSM	0x0301
	MSG_CLOSEDISM	0x0301
	MSG_OPENDS	0x0401
	MSG_CLOSEDS	0x0402
	MSG_USERSELECT	0x0403
	MSG_DISABLED	0x0501
	MSG_ENABLED	0x0502
	MSG_ENABLEDSUIONLY	0x0503
	MSG_PROCESSEVENT	0x0601
	MSG_ENDXFER	0x0701
	MSG_STOPFEEDER	0x0701
	MSG_CHANGEDIRECTORY	0x0801
	MSG_CREATEDIRECTORY	0x0802
	MSG_DELETE	0x0803
	MSG_FORMATMEDIA	0x0804
	MSG_GETCLOSE	0x0805
	MSG_GETFIRSTFILE	0x0806
	MSG_GETINFO	0x0807
	MSG_GETNEXTFILE	0x0808
	MSG_RENAME	0x0809
	MSG_COPY	0x080A
	MSG_AUTOMATICCAPTUREDIRECTORY	0x080B
	MSG_PASSTHRU	0x0901
1.91	MSG_RESETALL	0x0A01

Return Code and Condition Code Constants

Return Codes (TWRC_)

Return code	Numeric ID
TWRC_CUSTOMBASE	0x8000
TWRC_SUCCESS	0
TWRC_FAILURE	1
TWRC_CHECKSTATUS	2
TWRC_CANCEL	3
TWRC_DSEVENT	4
TWRC_NOTDSEVENT	5
TWRC_XFERDONE	6
TWRC_ENDOFLIST	7
TWRC_INFONOTSUPPORTED	8
TWRC_DATANOTAVAILABLE	9

Condition Codes (TWCC_)

Version	Return Code	Numeric ID
	TWCC_CUSTOMBASE	0x8000
	TWCC_SUCCESS	0
	TWCC_BUMMER	1
	TWCC_LOWMEMORY	2
	TWCC_NODS	3
	TWCC_MAXCONNECTIONS	4
	TWCC_OPERATIONERROR	5
	TWCC_BADCAP	6
	TWCC_BADPROTOCOL	9
	TWCC_BADVALUE	10
	TWCC_SEQERROR	11
	TWCC_BADDEST	12
	TWCC_CAPUNSUPPORTED	13
	TWCC_CAPBADOPERATION	14
	TWCC_CAPSEQERROR	15
1.8	TWCC_DENIED	16
1.8	TWCC_FILEEXISTS	17
1.8	TWCC_FILENOTFOUND	18
1.8	TWCC_NOTEMPTY	19
1.8	TWCC_PAPERJAM	20
1.8	TWCC_PAPERDOUBLEFEED	21
1.8	TWCC_FILEWRITEERROR	22
1.8	TWCC_CHECKDEVICEONLINE	23
2.0	TWCC_INTERLOCK	24
2.0	TWCC_DAMAGEDCORNER	25
2.0	TWCC_FOCUSERROR	26
2.0	TWCC_DOCTOOLIGHT	27
2.0	TWCC_DOCTOODARK	28
2.1	TWCC_NOMEDIA	29

Extended Image Information Constants**TWEI_Codes**

Version	Return Code	Numeric ID
	TWEI_BARCODEX	0x1200
	TWEI_BARCODEY	0x1201
	TWEI_BARCODETEXT	0x1202
	TWEI_BARCODETYPE	0x1203
	TWEI_DESHADETOP	0x1204
	TWEI_DESHADELEFT	0x1205
	TWEI_DESHADEHEIGHT	0x1206
	TWEI_DESHADEWIDTH	0x1207
	TWEI_DESHADESIZE	0x1208
	TWEI_SPECKLESREMOVED	0x1209
	TWEI_HORZLINEXCOORD	0x120A
	TWEI_HORZLINEYCOORD	0x120B
	TWEI_HORZLINELENGTH	0x120C
	TWEI_HORZLINETHICKNESS	0x120D
	TWEI_VERTLINEXCOORD	0x120E
	TWEI_VERTLINEYCOORD	0x120F
	TWEI_VERTLINELENGTH	0x1210
	TWEI_VERTLINETHICKNESS	0x1211
	TWEI_PATCHCODE	0x1212
	TWEI_ENDORSEDTEXT	0x1213
	TWEI_FORMCONFIDENCE	0x1214
	TWEI_FORMTEMPLATEMATCH	0x1215
	TWEI_FORMTEMPLATEPAGEMATCH	0x1216
	TWEI_FORMHORZDOCOFFSET	0x1217
	TWEI_FORMVERTDOCOFFSET	0x1218
	TWEI_BARCODECOUNT	0x1219
	TWEI_BARCODECONFIDENCE	0x121A
	TWEI_BARCODEROTATION	0x121B
	TWEI_BARCODETEXTLENGTH	0x121C
	TWEI_DESHADECOUNT	0x121D
	TWEI_DESHADEBLACKCOUNTOLD	0x121E
	TWEI_DESHADEBLACKCOUNTNEW	0x121F
	TWEI_DESHADEBLACKRLMIN	0x1220
	TWEI_DESHADEBLACKRLMAX	0x1221
	TWEI_DESHADEWHITECOUNTOLD	0x1222
	TWEI_DESHADEWHITECOUNTNEW	0x1223
	TWEI_DESHADEWHITERLMIN	0x1224
	TWEI_DESHADEWHITERLAVE	0x1225
	TWEI_DESHADEWHITERLMAX	0x1226

Version	Return Code	Numeric ID
	TWEI_BLACKSPECKLESREMOVED	0x1227
	TWEI_WHITESPECKLESREMOVED	0x1228
	TWEI_HORZLINECOUNT	0x1229
	TWEI_VERTLINECOUNT	0x122A
	TWEI_DESKEWSTATUS	0x122B
	TWEI_SKEWORIGINALANGLE	0x122C
	TWEI_SKEWFINALANGLE	0x122D
	TWEI_SKEWCONFIDENCE	0x122E
	TWEI_SKEWWINDOWX1	0x122F
	TWEI_SKEWWINDOWY1	0x1230
	TWEI_SKEWWINDOWX2	0x1231
	TWEI_SKEWWINDOWY2	0x1232
	TWEI_SKEWWINDOWX3	0x1233
	TWEI_SKEWWINDOWY3	0x1234
	TWEI_SKEWWINDOWX4	0x1235
	TWEI_SKEWWINDOWY4	0x1236
	TWEI_BOOKNAME	0x1238
	TWEI_CHAPTERNUMBER	0x1239
	TWEI_DOCUMENTNUMBER	0x123A
	TWEI_PAGENUMBER	0x123B
	TWEI_CAMERA	0x123C
	TWEI_FRAMENUMBER	0x123D
	TWEI_FRAME	0x123E
	TWEI_PIXELFLAVOR	0x123F
1.91	TWEI_ICCPROFILE	0x1240
1.91	TWEI_LASTSEGMENT	0x1241
1.91	TWEI_SEGMENTNUMBER	0x1242
2.0	TWEI_MAGDATA	0x1243
2.0	TWEI_MAGTYPE	0x1244
2.0	TWEI_PAGESIDE	0x1245
2.0	TWEI_FILESYSTEMSOURCE	0x1246
2.1	TWEI_IMAGEMERGED	0x1247
2.1	TWEI_MAGDATALENGTH	0x1248

TWEI_BARCODEROTATION

Return Code	Numeric ID
TWBCOR_ROT0	0
TWBCOR_ROT90	1
TWBCOR_ROT180	2
TWBCOR_ROT270	3
TWBCOR_ROT_X	4

TWEI_DESKEWSTATUS

Return Code	Numeric ID
TWDSK_SUCCESS	0
TWDSK_REPORTONLY	1
TWDSK_FAIL	2
TWDSK_DISABLED	3

TWEI_MAGTYPE

Version	Return Code	Numeric ID
2.0	TWMD_MICR	0
2.1	TWMD_RAW	1
2.1	TWMD_INVALID	2

TWEI_PATCHCODE

Return Code	Numeric ID
TWPCH_PATCH1	0
TWPCH_PATCH2	1
TWPCH_PATCH3	2
TWPCH_PATCH4	3
TWPCH_PATCH6	4
TWPCH_PATCHT	5

Capability Constants

Version	Constant	Numeric ID
	CAP_CUSTOMBASE	0x8000
	CAP_XFERCOUNT	0x0001
	ICAP_COMPRESSION	0x0101
	ICAP_PIXELTYPE	0x0102
	ICAP_UNITS	0x0103

Version	Constant	Numeric ID
	ICAP_XFERMECH	0x0104
	CAP_AUTHOR	0x1000
	CAP_CAPTION	0x1001
	CAP_FEEDERENABLED	0x1002
	CAP_FEEDERLOADED	0x1003
	CAP_TIMEDATE	0x1004
	CAP_SUPPORTEDCAPS	0x1005
	CAP_EXTENDED CAPS	0x1006
	CAP_AUTOFEED	0x1007
	CAP_CLEARPAGE	0x1008
	CAP_FEEDPAGE	0x1009
	CAP_REWINDPAGE	0x100A
	CAP_INDICATORS	0x100B
	CAP_PAPERDETECTABLE	0x100D
	CAP_UICONTROLABLE	0x100E
	CAP_DEVICEONLINE	0x100F
	CAP_AUTOSCAN	0x1010
	CAP_THUMBNAILENABLED	0x1011
	CAP_DUPLEX	0x1012
	CAP_DUPLEXENABLED	0x1013
	CAP_ENABLEDSUIONLY	0x1014
	CAP_CUSTOMEDSDATA	0x1015
	CAP_ENDORSER	0x1016
	CAP_JOBCONTROL	0x1017
	CAP_ALARMS	0x1018
	CAP_ALARMVOLUME	0x1019
	CAP_AUTOMATICCAPTURE	0x101A
	CAP_TIMEBEFOREFIRSTCAPTURE	0x101B
	CAP_TIMEBETWEENCAPTURES	0x101C
	CAP_CLEARBUFFERS	0x101D
	CAP_MAXBATCHBUFFERS	0x101E

Version	Constant	Numeric ID
	CAP_DEVICEDATETIME	0x101F
	CAP_POWERSUPPLY	0x1020
	CAP_CAMERAPREVIEWUI	0x1021
	CAP_DEVICEEVENT	0x1022
	CAP_SERIALNUMBER	0x1024
	CAP_PRINTER	0x1024
	CAP_PRINTERENABLED	0x1026
	CAP_PRINTERINDEX	0x1027
	CAP_PRINTERMODE	0x1028
	CAP_PRINTERSTRING	0x1029
	CAP_PRINTERSUFFIX	0x102A
	CAP_LANGUAGE	0x102B
	CAP_FEEDERALIGNMENT	0x102C
	CAP_FEEDERORDER	0x102D
	CAP_REACQUIREALLOWED	0x1030
	CAP_BATTERYMINUTES	0x1032
	CAP_BATTERYPERCENTAGE	0x1033
1.91	CAP_CAMERASIDE	0x1034
1.91	CAP_SEGMENTED	0x1035
2.0	CAP_CAMERAENABLED	0x1036
2.0	CAP_CAMERAORDER	0x1037
2.0	CAP_MICREENABLED	0x1038
2.0	CAP_FEEDERPREP	0x1039
2.0	CAP_FEEDERPOCKET	0x103A
2.1	CAP_AUTOMATICSENSEMEDIMUM	0x103B
2.1	CAP_CUSTOMINTERFACEGUID	0x103C
	ICAP_AUTOBRIGHT	0x1100
	ICAP_BRIGHTNESS	0x1101
	ICAP_CONTRAST	0x1103
	ICAP_CUSTHALFTONE	0x1104
	ICAP_EXPOSURETIME	0x1105

Version	Constant	Numeric ID
	ICAP_FILTER	0x1106
	ICAP_FLASHUSED	0x1107
	ICAP_GAMMA	0x1108
	ICAP_HALFTONES	0x1109
	ICAP_HIGHLIGHT	0x110A
	ICAP_IMAGEFILEFORMAT	0x110C
	ICAP_LAMPSTATE	0x110D
	ICAP_LIGHTSOURCE	0x110E
	ICAP_ORIENTATION	0x1110
	ICAP_PHYSICALWIDTH	0x1111
	ICAP_PHYSICALHEIGHT	0x1112
	ICAP_SHADOW	0x1113
	ICAP_FRAMES	0x1114
	ICAP_XNATIVERESOLUTION	0x1116
	ICAP_YNATIVERESOLUTION	0x1117
	ICAP_XRESOLUTION	0x1118
	ICAP_YRESOLUTION	0x1119
	ICAP_MAXFRAMES	0x111A
	ICAP_TILES	0x111B
	ICAP_BITORDER	0x111C
	ICAP_CCITTKFACTOR	0x111D
	ICAP_LIGHTPATH	0x111E
	ICAP_PIXELFLAVOR	0x111F
	ICAP_PLANARCHUNKY	0x1120
	ICAP_ROTATION	0x1121
	ICAP_SUPPORTEDSIZES	0x1122
	ICAP_THRESHOLD	0x1123
	ICAP_XSCALING	0x1124
	ICAP_YSCALING	0x1125
	ICAP_BITORDERCODES	0x1126
	ICAP_PIXELFLAVORCODES	0x1127

Version	Constant	Numeric ID
	ICAP_JPEGPIXELTYPE	0x1128
	ICAP_TIMEFILL	0x112A
	ICAP_BITDEPTH	0x112B
	ICAP_UNDEFINEDIMAGESIZE	0x112C
	ICAP_IMAGEDATASET	0x112D
	ICAP_EXTIMAGEINFO	0x112E
	ICAP_MINIMUMHEIGHT	0x112F
	ICAP_MINIMUMWIDTH	0x1130
	ICAP_FLIPROTATION	0x1131
	ICAP_AUTODISCARDBLANKPAGES	0x1134
	ICAP_BARCODEDETECTIONENABLED	0x1136
	ICAP_SUPPORTEDBARCODETYPES	0x1137
	ICAP_BARCODEMAXSEARCHPRIORITIES	0x1138
	ICAP_BARCODESEARCHPRIORITIES	0x1139
	ICAP_BARCODESEARCHMODE	0x113A
	ICAP_BARCODEMAXRETRIES	0x113B
	ICAP_BARCODETIMEOUT	0x113C
	ICAP_ZOOMFACTOR	0x113D
	ICAP_BITDEPTHREDUCTION	0x113E
	ICAP_PATCHCODEDETECTIONENABLED	0x113F
	ICAP_SUPPORTEDPATCHCODETYPES	0x1140
	ICAP_PATCHCODEMAXSEARCHPRIORITIE	0x1141
	ICAP_PATCHCODESEARCHPRIORITIES	0x1142
	ICAP_PATCHCODESEARCHMODE	0x1143
	ICAP_PATCHCODEMAXRETRIES	0x1144
	ICAP_PATCHCODETIMEOUT	0x1145
	ICAP_FLASHUSED2	0x1146
	ICAP_IMAGEFILTER	0x1147
	ICAP_NOISEFILTER	0x1148
	ICAP_OVERSCAN	0x1149
	ICAP_AUTOMATICBORDERDETECTION	0x1150

Version	Constant	Numeric ID
	ICAP_AUTOMATICDESKEW	0x1151
	ICAP_AUTOMATICROTATE	0x1152
	ICAP_JPEGQUALITY	0x1153
1.91	ICAP_FEEDERTYPE	0x1154
1.91	ICAP_ICCPROFILE	0x1155
2.0	ICAP_AUTOSIZE	0x1156
2.1	ICAP_AUTOMATICCROPUSESFRAME	0x1157
2.1	ICAP_AUTOMATICLENGTHDETECTION	0x1158
2.1	ICAP_AUTOMATICCOLORENABLED	0x1159
2.1	AUTOMATICCOLORNONCOLORPIXELTYPE	0x115A
2.1	ICAP_COLORMANAGEMENTENABLED	0x115B
2.1	ICAP_IMAGEMERGE	0x115C
2.1	ICAP_IMAGEMERGEHEIGHTTHRESHOLD	0x115D
2.1	ICAP_SUPPORTEDEXTIMAGEINFO	0x115E
0	ACAP_XFERMECH	0x1202

CAP_ALARMS

Constant	Numeric ID
TWAL_ALARM	0
TWAL_FEEDERERROR	1
TWAL_FEEDERWARNING	2
TWAL_BARCODE	3
TWAL_DOUBLEFEED	4
TWAL_JAM	5
TWAL_PATCHCODE	6
TWAL_POWER	7
TWAL_SKEW	8

CAP_CAMERASIDE

Version	Constant	Numeric ID
1.91	TWCS_BOTH	0
1.91	TWCS_TOP	1
1.91	TWCS_BOTTOM	2

CAP_CLEARBUFFERS

Constant	Numeric ID
TWCB_AUTO	0
TWCB_CLEAR	1
TWCB_NOCLEAR	2

CAP_DEVICEEVENT

Constant	Numeric ID
TWDE_CUSTOMEVENTS	0x8000
TWDE_CHECKAUTOMATICCAPTURE	0
TWDE_CHECKBATTERY	1
TWDE_CHECKDEVICEONLINE	2
TWDE_CHECKFLASH	3
TWDE_CHECKPOWERSUPPLY	4
TWDE_CHECKRESOLUTION	5
TWDE_DEVICEADDED	6
TWDE_DEVICEOFFLINE	7
TWDE_DEVICEREADY	8
TWDE_DEVICEREMOVED	9
TWDE_IMAGECAPTURED	10
TWDE_IMAGEDELETED	11
TWDE_PAPERDOUBLEFEED	12
TWDE_PAPERJAM	13
TWDE_LAMPFAILURE	14
TWDE_POWERSAVE	15
TWDE_POWERSAVENOTIFY	16

CAP_DUPLEX

Constant	Numeric ID
TWDX_NONE	0
TWDX_1PASSDUPLEX	1
TWDX_2PASSDUPLEX	2

CAP_FEEDERALIGNMENT

Constant	Numeric ID
TWFA_NONE	0
TWFA_LEFT	1
TWFA_CENTER	2
TWFA_RIGHT	3

CAP_FEEDERORDER

Constant	Numeric ID
TWFO_FIRSTPAGEFIRST	0
TWFO_LASTPAGEFIRST	1

CAP_FEEDERPOCKET

Constant	Numeric ID
TWFP_POCKETERROR	0
TWFP_POCKET1	1
TWFP_POCKET2	2
TWFP_POCKET3	3
TWFP_POCKET4	4
TWFP_POCKET5	5
TWFP_POCKET6	6
TWFP_POCKET7	7
TWFP_POCKET8	8
TWFP_POCKET9	9
TWFP_POCKET10	10
TWFP_POCKET11	11
TWFP_POCKET12	12
TWFP_POCKET13	13
TWFP_POCKET14	14
TWFP_POCKET15	15
TWFP_POCKET16	16

CAP_JOBCONTROL

Constant	Numeric ID
TWJC_NONE	0
TWJC_JSIC	1
TWJC_JSIS	2
TWJC_JSXC	3
TWJC_JSXS	4

CAP_LANGUAGE

See “Language Constants” on page 8-91.

CAP_POWERSUPPLY

Constant	Numeric ID
TWPS_EXTERNAL	0
TWPS_BATTERY	1

CAP_PRINTER

Constant	Numeric ID
TWPR_IMPRINTERTOPBEFORE	0
TWPR_IMPRINTERTOPAFTER	1
TWPR_IMPRINTERBOTTOMBEFORE	2
TWPR_IMPRINTERBOTTOMAFTER	3
TWPR_ENDORSERTOPBEFORE	4
TWPR_ENDORSERTOPAFTER	5
TWPR_ENDORSERBOTTOMBEFORE	6
TWPR_ENDORSERBOTTOMAFTER	7

CAP_PRINTERMODE

Constant	Numeric ID
TWPM_SINGLESTRING	0
TWPM_MULTISTRING	1
TWPM_COMPOUNDSTRING	2

CAP_SEGMENTED

Version	Constant	Numeric ID
1.91	TWSG_NONE	0
1.91	TWSG_AUTO	1

ICAP_AUTODISCARDBLANKPAGES

Constant	Numeric ID
TWBP_DISABLE	-2
TWBP_AUTO	-1

ICAP_AUTOSIZE

Version	Constant	Numeric ID
2.0	TWAS_NONE	0
2.0	TWAS_AUTO	1
2.0	TWAS_CURRENT	2

ICAP_BARCODESEARCHMODE

Constant	Numeric ID
TWBD_HORIZ	0
TWBD_VERT	1
TWBD_HORIZVERT	2
TWBD_VERTHORIZ	3

ICAP_SUPPORTEDBARCODETYPES

Constant	Numeric ID
TWBT_3OF9	0
TWBT_2OF5INTERLEAVED	1
TWBT_2OF5NONINTERLEAVED	2
TWBT_CODE93	3
TWBT_CODE128	4
TWBT_UCC128	5
TWBT_CODABAR	6
TWBT_UPCA	7
TWBT_UPCE	8
TWBT_EAN8	9
TWBT_EAN13	10
TWBT_POSTNET	11
TWBT_PDF417	12
TWBT_2OF5INDUSTRIAL	13
TWBT_2OF5MATRIX	14
TWBT_2OF5DATALOGIC	15
TWBT_2OF5IATA	16
TWBT_3OF9FULLASCII	17
TWBT_CODABARWITHSTARTSTOP	18
TWBT_MAXICODE	19

ICAP_BITDEPTHREDUCTION

Constant	Numeric ID
TWBR_THRESHOLD	0
TWBR_HALFTONE	1
TWBR_CUSTHALFTONE	2
TWBR_DIFFUSION	3

ICAP_BITORDER

Constant	Numeric ID
TWBO_LSBFIRST	0
TWBO_MSBFIRST	1

ICAP_COMPRESSION

Constant	Numeric ID
TWCP_NONE	0
TWCP_PACKBITS	1
TWCP_GROUP31D	2
TWCP_GROUP31DEOL	3
TWCP_GROUP32D	4
TWCP_GROUP4	5
TWCP_JPEG	6
TWCP_LZW	7
TWCP_JBIG	8
TWCP_PNG	9
TWCP_RLE4	10
TWCP_RLE8	11
TWCP_BITFIELDS	12

ICAP_FEEDERTYPE

Version	Constant	Numeric ID
1.91	TWFE_GENERAL	0
1.91	TWFE_PHOTO	1

ICAP_FILTER

Constant	Numeric ID
TWFT_RED	0
TWFT_GREEN	1
TWFT_BLUE	2
TWFT_NONE	3
TWFT_WHITE	4
TWFT_CYAN	5
TWFT_MAGENTA	6
TWFT_YELLOW	7
TWFT_BLACK	8

ICAP_FLASHUSED2

Constant	Numeric ID
TWFL_NONE	0
TWFL_OFF	1
TWFL_ON	2
TWFL_AUTO	3
TWFL_REDEYE	4

ICAP_FLIPROTATION

Constant	Numeric ID
TWFR_BOOK	0
TWFR_FANFOLD	1

ICAP_ICCPROFILE

	Constant	Numeric ID
1.91	TWIC_NONE	0
1.91	TWIC_LINK	1
1.91	TWIC_EMBED	2

ICAP_IMAGEFILEFORMAT

Version	Constant	Numeric ID
	TWFF_TIFF	0
	TWFF_PICT	1
	TWFF_BMP	2
	TWFF_XBM	3
	TWFF_JFIF	4
	TWFF_FPX	5
	TWFF_TIFFMULTI	6
	TWFF_PNG	7
	TWFF_SPIFF	8
	TWFF_EXIF	9
1.91	TWFF_PDF	10
1.91	TWFF_JP2	11
	removed	12
1.91	TWFF_JPX	13
1.91	TWFF_DEVAVU	14
2.0	TWFF_PDFA	15
2.1	TWFF_PDFA2	16

ICAP_IMAGEFILTER

Constant	Numeric ID
TWIF_NONE	0
TWIF_AUTO	1
TWIF_LOWPASS	2
TWIF_BANDPASS	3
TWIF_HIGHPASS	4
TWIF_TEXT	TWIF_BANDPASS
TWIF_FINELINE	TWIF_HIGHPASS

ICAP_IMAGEMERGE

Version	Constant	Numeric ID
2.1	TWIM_NONE	0
2.1	TWIM_FRONTONTOP	1
2.1	TWIM_FRONTONBOTTOM	2
2.1	TWIM_FRONTONLEFT	3
2.1	TWIM_FRONTONRIGHT	4

ICAP_JPEGQUALITY

Constant	Numeric ID
TWJQ_UNKNOWN	-4
TWJQ_LOW	-3
TWJQ_MEDIUM	-2
TWJQ_HIGH	-1

ICAP_LIGHTPATH

Constant	Numeric ID
TWLP_REFLECTIVE	0
TWLP_TRANSMISSIVE	1

ICAP_LIGHTSOURCE

Constant	Numeric ID
TWLS_RED	0
TWLS_GREEN	1
TWLS_BLUE	2
TWLS_NONE	3
TWLS_WHITE	4
TWLS_UV	5
TWLS_IR	6

ICAP_NOISEFILTER

Constant	Numeric ID
TWNF_NONE	0
TWNF_AUTO	1
TWNF_LONEPIXEL	2
TWNF_MAJORITYRULE	3

ICAP_ORIENTATION

Version	Constant	Numeric ID
	TWOR_ROT0	0
	TWOR_ROT90	1
	TWOR_ROT180	2
	TWOR_ROT270	3
	TWOR_PORTRAIT	TWOR_ROT0
	TWOR_LANDSCAPE	TWOR_ROT270
2.0	TWOR_AUTO	4
2.0	TWOR_AUTOTEXT	5
2.0	TWOR_AUTOPICTURE	6

ICAP_OVERSCAN

Constant	Numeric ID
TWOV_NONE	0
TWOV_AUTO	1
TWOV_TOPBOTTOM	2
TWOV_LEFTRIGHT	3
TWOV_ALL	4

ICAP_PLANARCHUNKY

Constant	Numeric ID
TWPC_CHUNKY	0
TWPC_PLANAR	1

ICAP_PIXELFLAVOR

Constant	Numeric ID
TWPF_CHOCOLATE	0
TWPF_VANILLA	1

ICAP_PIXELTYPE

Version	Constant	Numeric ID
	TWPT_BW	0
	TWPT_GRAY	1
	TWPT_RGB	2
	TWPT_PALETTE	3
	TWPT_CMY	4
	TWPT_CMYK	5
	TWPT_YUV	6
	TWPT_YUVK	7
	TWPT_CIEXYZ	8
	TWPT_LAB	9
1.91	TWPT_SRGB	10
1.91	TWPT_YCBCR	11
2.0	TWPT_INFRARED	16

ICAP_SUPPORTEDSIZES

Version	Constant	Numeric ID
	TWSS_NONE	0
	TWSS_A4	1
	TWSS_JISB5	2
	TWSS_USLETTER	3
	TWSS_USLEGAL	4
	TWSS_A5	5
	TWSS_ISOB4	6
	TWSS_ISOB6	7
	// removed	
	TWSS_USLEDGER	9
	TWSS_USEXECUTIVE	10
	TWSS_A3	11
	TWSS_ISOB3	12
	TWSS_A6	13
	TWSS_C4	14
	TWSS_C5	15
	TWSS_C6	16
	// 1.8 Additions	
	TWSS_4A0	17
	TWSS_2A0	18
	TWSS_A0	19
	TWSS_A1	20
	TWSS_A2	21
	TWSS_A7	22
	TWSS_A8	23
	TWSS_A9	24
	TWSS_A10	25

Version	Constant	Numeric ID
	TWSS_ISOB0	26
	TWSS_ISOB1	27
	TWSS_ISOB2	28
	TWSS_ISOB5	29
	TWSS_ISOB7	30
	TWSS_ISOB8	31
	TWSS_ISOB9	32
	TWSS_ISOB10	33
	TWSS_JISB0	34
	TWSS_JISB1	35
	TWSS_JISB2	36
	TWSS_JISB3	37
	TWSS_JISB4	38
	TWSS_JISB6	39
	TWSS_JISB7	40
	TWSS_JISB8	41
	TWSS_JISB9	42
	TWSS_JISB10	43
	TWSS_C0	44
	TWSS_C1	45
	TWSS_C2	46
	TWSS_C3	47
	TWSS_C7	48
	TWSS_C8	49
	TWSS_C9	50
	TWSS_C10	51
	TWSS_USEEXECUTIVE	52
	TWSS_BUSINESSCARD	53
2.1	TWSS_MAXSIZE	54

ICAP_XFERMECH

Version	Constant	Numeric ID
1.91	TWSX_NATIVE	0
	TWSX_FILE	1
	TWSX_MEMORY	2
	//removed	
	TWSX_MEMFILE	4

ICAP_UNITS

Version	Constant	Numeric ID
1.91	TWUN_INCHES	0
	TWUN_CENTIMETERS	1
	TWUN_PICAS	2
	TWUN_POINTS	3
	TWUN_TWIPS	4
	TWUN_PIXELS	5
	TWUN_MILLIMETERS	6

Language Constants

Language

Language	(defined as)
TWLG_USERLOCALE	-1
TWLG_DAN	0
TWLG_DUT	1
TWLG_ENG	2
TWLG_FCF	3
TWLG_FIN	4
TWLG_FRN	5
TWLG_GER	6
TWLG_ICE	7
TWLG_ITN	8
TWLG_NOR	9
TWLG_POR	10
TWLG_SPA	11
TWLG_SWE	12
TWLG_USA	13

Language	(defined as)
TWLG_AFRIKAANS	14
TWLG_ALBANIA	15
TWLG_ARABIC	16
TWLG_ARABIC_ALGERIA	17
TWLG_ARABIC_BAHRAIN	18
TWLG_ARABIC_EGYPT	19
TWLG_ARABIC_IRAQ	20
TWLG_ARABIC_JORDAN	21
TWLG_ARABIC_KUWAIT	22
TWLG_ARABIC_LEBANON	23
TWLG_ARABIC_LIBYA	24
TWLG_ARABIC_MOROCCO	25
TWLG_ARABIC_OMAN	26
TWLG_ARABIC_QATAR	27
TWLG_ARABIC_SAUDIARABIA	28
TWLG_ARABIC_SYRIA	29
TWLG_ARABIC_TUNISIA	30
TWLG_ARABIC_UAE	31
TWLG_ARABIC_YEMEN	32
TWLG_BASQUE	33
TWLG_BYELORUSSIAN	34
TWLG_BULGARIAN	35
TWLG_CATALAN	36
TWLG_CHINESE	37
TWLG_CHINESE_HONGKONG	38
TWLG_CHINESE_PRC	39
TWLG_CHINESE_SINGAPORE	40
TWLG_CHINESE_SIMPLIFIED	41
TWLG_CHINESE_TAIWAN	42
TWLG_CHINESE_TRADITIONAL	43
TWLG_CROATIA	44
TWLG_CZECH	45
TWLG_DANISH	TWLG_DAN
TWLG_DUTCH	TWLG_DUT
TWLG_DUTCH_BELGIAN	46
TWLG_ENGLISH	TWLG_ENG
TWLG_ENGLISH_AUSTRALIAN	47
TWLG_ENGLISH_CANADIAN	48
TWLG_ENGLISH_IRELAND	49
TWLG_ENGLISH_NEWZEALAND	50

Language	(defined as)
TWLG_ENGLISH_SOUTHAFRICA	51
TWLG_ENGLISH_UK	52
TWLG_ENGLISH_USA	TWLG_USA
TWLG_ESTONIAN	53
TWLG_FAEROESE	54
TWLG_FARSI	55
TWLG_FINNISH	TWLG_FIN
TWLG_FRENCH	TWLG_FRN
TWLG_FRENCH_BELGIAN	56
TWLG_FRENCH_CANADIAN	TWLG_FCF
TWLG_FRENCH_LUXEMBOURG	57
TWLG_FRENCH_SWISS	58
TWLG_GERMAN	TWLG_GER
TWLG_GERMAN_AUSTRIAN	59
TWLG_GERMAN_LUXEMBOURG	60
TWLG_GERMAN_LIECHTENSTEIN	61
TWLG_GERMAN_SWISS	62
TWLG_GREEK	63
TWLG_HEBREW	64
TWLG_HUNGARIAN	65
TWLG_ICELANDIC	TWLG_ICE
TWLG_INDONESIAN	66
TWLG_ITALIAN	TWLG_ITN
TWLG_ITALIAN_SWISS	67
TWLG_JAPANESE	68
TWLG_KOREAN	69
TWLG_KOREAN_JOHAB	70
TWLG_LATVIAN	71
TWLG_LITHUANIAN	72
TWLG_NORWEGIAN	TWLG_NOR
TWLG_NORWEGIAN_BOKMAL	73
TWLG_NORWEGIAN_NYNORSK	74
TWLG_POLISH	75
TWLG_PORTUGUESE	TWLG_POR
TWLG_PORTUGUESE_BRAZIL	76
TWLG_ROMANIAN	77
TWLG_RUSSIAN	78
TWLG_SERBIAN_LATIN	79
TWLG_SLOVAK	80
TWLG_SLOVENIAN	81
TWLG_SPANISH	TWLG_SPA
TWLG_SPANISH_MEXICAN	82
TWLG_SPANISH_MODERN	83
TWLG_SWEDISH	TWLG_SWE
TWLG_THAI	84
TWLG_TURKISH	85

Language	(defined as)
TWLG_UKRANIAN	86
TWLG_ASSAMESE	87
TWLG_BENGALI	88
TWLG_BIHARI	89
TWLG_BODO	90
TWLG_DOGRI	91
TWLG_GUJARATI	92
TWLG_HARYANVI	93
TWLG_HINDI	94
TWLG_KANNADA	95
TWLG_KASHMIRI	96
TWLG_MALAYALAM	97
TWLG_MARATHI	98
TWLG_MARWARI	99
TWLG_MEGHALAYAN	100
TWLG_MIZO	101
TWLG_NAGA	102
TWLG_ORISSI	103
TWLG_PUNJABI	104
TWLG_PUSHTU	105
TWLG_SERBIAN_CYRILLIC	106
TWLG_SIKKIMI	107
TWLG_SWEDISH_FINLAND	108
TWLG_TAMIL	109
TWLG_TELUGU	110
TWLG_TRIPURI	111
TWLG_URDU	112
TWLG_VIETNAMESE	113

Country

Country	Numeric ID
TWCY_AFGHANISTAN	1001
TWCY_ALGERIA	213
TWCY_AMERICANSAMOA	684
TWCY_ANDORRA	33
TWCY_ANGOLA	1002
TWCY_ANGUILLA	8090
TWCY_ANTIGUA	8091
TWCY_ARGENTINA	54
TWCY_ARUBA	297
TWCY_ASCENSIONI	247
TWCY_AUSTRALIA	61
TWCY_AUSTRIA	43
TWCY_BAHAMAS	8092
TWCY_BAHRAIN	973
TWCY_BANGLADESH	880
TWCY BARBADOS	8093
TWCY_BELGIUM	32
TWCY_BELIZE	501
TWCY_BENIN	229
TWCY_BERMUDA	8094
TWCY_BHUTAN	1003
TWCY_BOLIVIA	591
TWCY_BOTSWANA	267
TWCY_BRITAIN	6
TWCY_BRITVIRGINIS	8095
TWCY_BRAZIL	55
TWCY_BRUNEI	673
TWCY_BULGARIA	359
TWCY_BURKINAFASO	1004
TWCY_BURMA	1005
TWCY_BURUNDI	1006
TWCY_CAMAROON	237
TWCY_CANADA	2
TWCY_CAPEVERDEIS	238
TWCY_CAYMANIS	8096
TWCY_CENTRALAFREP	1007

Country	Numeric ID
TWCY_CHAD	1008
TWCY_CHILE	56
TWCY_CHINA	86
TWCY_CHRISTMASIS	1009
TWCY_COCOSIS	1009
TWCY_COLOMBIA	57
TWCY_COMOROS	1010
TWCY_CONGO	1011
TWCY_COOKIS	1012
TWCY_COSTARICA	506
TWCY_CUBA	5
TWCY_CYPRUS	357
TWCY_CZECHOSLOVAKIA	42
TWCY_DENMARK	45
TWCY_DJIBOUTI	1013
TWCY_DOMINICA	8097
TWCY_DOMINICANREP	8098
TWCY_EASTERIS	1014
TWCY_ECUADOR	593
TWCY_EGYPT	20
TWCY_ELSALVADOR	503
TWCY_EQGUINEA	1015
TWCY_ETHIOPIA	251
TWCY_FALKLANDIS	1016
TWCY_FAEROEIS	298
TWCY_FIJIISLANDS	679
TWCY_FINLAND	358
TWCY_FRANCE	33
TWCY_FRANTILLES	596
TWCY_FRGUIANA	594
TWCY_FRPOLYNEISA	689
TWCY_FUTANAIS	1043
TWCY_GABON	241
TWCY_GAMBIA	220
TWCY_GERMANY	49
TWCY_GHANA	233
TWCY_GIBRALTER	350
TWCY_GREECE	30

Country	Numeric ID
TWCY_GREENLAND	299
TWCY_GRENADA	8099
TWCY_GRENEDES	8015
TWCY_GUADELOUPE	590
TWCY_GUAM	671
TWCY_GUANTANAMOBAY	5399
TWCY_GUATEMALA	502
TWCY_GUINEA	224
TWCY_GUINEABISSAU	1017
TWCY_GUYANA	592
TWCY_HAITI	509
TWCY_HONDURAS	504
TWCY_HONGKONG	852
TWCY_HUNGARY	36
TWCY_ICELAND	354
TWCY_INDIA	91
TWCY_INDONESIA	62
TWCY_IRAN	98
TWCY_IRAQ	964
TWCY_IRELAND	353
TWCY_ISRAEL	972
TWCY_ITALY	39
TWCY_IVORYCOAST	225
TWCY_JAMAICA	8010
TWCY_JAPAN	81
TWCY_JORDAN	962
TWCY_KENYA	254
TWCY_KIRIBATI	1018
TWCY_KOREA	82
TWCY_KUWAIT	965
TWCY_LAOS	1019
TWCY_LEBANON	1020
TWCY_LIBERIA	231

Country	Numeric ID
TWCY_LIBYA	218
TWCY_LIECHTENSTEIN	41
TWCY_LUXENBOURG	352
TWCY_MACAO	853
TWCY_MADAGASCAR	1021
TWCY_MALAWI	265
TWCY_MALAYSIA	60
TWCY_MALDIVES	960
TWCY_MALI	1022
TWCY_MALTA	356
TWCY_MARSHALLIS	692
TWCY MAURITANIA	1023
TWCY MAURITIUS	230
TWCY_MEXICO	3
TWCY_MICRONESIA	691
TWCY_MIQUELON	508
TWCY_MONACO	33
TWCY_MONGOLIA	1024
TWCY_MONTSEERRAT	8011
TWCY_MOROCCO	212
TWCY_MOZAMBIQUE	1025
TWCY_NAMIBIA	264
TWCY_NAURU	1026
TWCY_NEPAL	977
TWCY_NETHERLANDS	31
TWCY_NETHANTILLES	599
TWCY_NEVIS	8012
TWCY_NEWCALEDONIA	687
TWCY_NEWZEALAND	64
TWCY_NICARAGUA	505
TWCY_NIGER	227
TWCY_NIGERIA	234
TWCY_NIUE	1027
TWCY_NORFOLKI	1028
TWCY_NORWAY	47

Country	Numeric ID
TWCY_OMAN	968
TWCY_PAKISTAN	92
TWCY_PALAU	1029
TWCY_PANAMA	507
TWCY_PARAGUAY	595
TWCY_PERU	51
TWCY_PHILLIPPINES	63
TWCY_PITCAIRNIS	1030
TWCY_PNEWGUINEA	675
TWCY_POLAND	48
TWCY_PORTUGAL	351
TWCY_QATAR	974
TWCY_REUNIONI	1031
TWCY_ROMANIA	40
TWCY_RWANDA	250
TWCY_SAIPAN	670
TWCY_SANMARINO	39
TWCY_SAOTOME	1033
TWCY_SAUDIARABIA	966
TWCY_SENEGAL	221
TWCY_SEYCHELLESIS	1034
TWCY_SIERRALEONE	1035
TWCY_SINGAPORE	65
TWCY_SOLOMONIS	1036
TWCY_SOMALI	1037
TWCY_SOUTHAFRICA	27
TWCY_SPAIN	34
TWCY_SRILANKA	94
TWCY_STHELENA	1032
TWCY_STKITTS	8013
TWCY_STLUCIA	8014
TWCY_STPIERRE	508
TWCY_STVINCENT	8015
TWCY_SUDAN	1038
TWCY_SURINAME	597
TWCY_SWAZILAND	268
TWCY_SWEDEN	46

Country	Numeric ID
TWCY_SWITZERLAND	41
TWCY_SYRIA	1039
TWCY_TAIWAN	886
TWCY_TANZANIA	255
TWCY_THAILAND	66
TWCY_TOBAGO	8016
TWCY_TOGO	228
TWCY_TONGAIS	676
TWCY_TRINIDAD	8016
TWCY_TUNISIA	216
TWCY_TURKEY	90
TWCY_TURKSCAICOS	8017
TWCY_TUVALU	1040
TWCY_UGANDA	256
TWCY_USSR	7
TWCY_UAEMIRATES	971
TWCY_UNITEDKINGDOM	44
TWCY_USA	1
TWCY_URUGUAY	598
TWCY_VANUATU	1041
TWCY_VATICANCITY	39
TWCY_VENEZUELA	58
TWCY_WAKE	1042
TWCY_WALLISIS	1043
TWCY_WESTERNSAHARA	1044
TWCY_WESTERNSAMOA	1045
TWCY_YEMEN	1046
TWCY_YUGOSLAVIA	38
TWCY_ZAIRE	243
TWCY_ZAMBIA	260
TWCY_ZIMBABWE	263
TWCY_ALBANIA	355
TWCY_ARMENIA	374
TWCY_AZERBAIJAN	994
TWCY_BELARUS	375
TWCY_BOSNIAHERZGO	387
TWCY_CAMBODIA	855
TWCY_CROATIA	385

Country	Numeric ID
TWCY_CZECHREPUBLIC	420
TWCY_DIEGOGARCIA	246
TWCY_ERITREA	291
TWCY_ESTONIA	372
TWCY_GEORGIA	995
TWCY_LATVIA	371
TWCY_LESOTHO	266
TWCY_LITHUANIA	370
TWCY_MACEDONIA	389
TWCY_MAYOTTEIS	269
TWCY_MOLDOVA	373
TWCY_MYANMAR	95
TWCY_NORTHKOREA	850
TWCY_PUERTORICO	787
TWCY_RUSSIA	7
TWCY_SERBIA	381
TWCY_SLOVAKIA	421
TWCY_SLOVENIA	386
TWCY_SOUTHKOREA	82
TWCY_UKRAINE	380
TWCY_USVIRGINIS	340
TWCY_VIETNAM	84

Deprecated Items

These items are maintained because after something is added to TWAIN both its name and numeric id (if any) cannot be reused for any other purpose. However, even though they should not be used in applications and drivers, they must be included in a depreciated section in any compliant TWAIN include file. This helps ensure compatibility among all versions of TWAIN drivers and applications, and prevents collisions as new names and numbers are added to the Specification.

At this time the most notable depreciation is the `DAT_SETUPFILEXFER2` and all related items. These were added in 1.9 to help with the Macintosh. It was subsequently decided that it wasn't very useful (and no one was using it), so to cut down on confusion it's been removed.

Platform Dependent Definitions and Typedefs

```
#ifdef WIN32
    #define TW_HUGE
```

```
#else

        #define TW_HUGE    huge

#endif

typedef BYTE TW_HUGE * HPBYTE;

typedef void TW_HUGE * HPVOID;
```

String types

```
typedef unsigned char    TW_STR1024[1026],    FAR *pTW_STR1026;
typedef wchar_t          TW_UNI512[512],      FAR *pTW_UNI512;
```

Constants

Note: For a description of these constants see the previous version of the TWAIN specification.

Capability Argument Constants

ACAP_AUDIOFILEFORMAT

Constant	Nnumeric ID
TWAF_WAV	0
TWAF_AIFF	1
TWAF_AU	2
TWAF_SND	3

Section		(defined as)
Data Argument Types (DAT_)	DAT_SETUPFILEXFER2	0x301
	DAT_TWUNKIDENTITY	0x000B
ItemTypes for Capability	TWTY_STR1024	0x000d
Container structures	TWTY_UNI512	0x000e
Capabilities	CAP_SUPPORTEDCAPSEXT	0x100c
	CAP_FILESYSTEM	0x????
Messages	MSG_INVOKE_CALLBACK	0x0903
	MSG_CHECKSTATUS	0x0201

Capability values	TWSX_FILE2	3
	TWFS_FILESYSTEM	0
	TWFS_RECURSIVEDELETE	1
	TWPT_BGR	12
	TWPT_CIELAB	13
	TWPT_CIELUV	14
	TWPT_YCBCR	15
	TWSS_B	8
	TWSS_B5LETTER	TWSS_JISB5
	TWSS_A4LETTER	TWSS_A4
	TWSS_B3	TWSS_ISO3
	TWSS_B4	TWSS_ISO4
	TWSS_B6	TWSS_ISO6
	<u>TWLG_DAN</u>	<u>TWLG_DANISH</u>
	<u>TWLG_DUT</u>	<u>TWLG_DUTCH</u>
	<u>TWLG_ENG</u>	<u>TWLG_ENGLISH</u>
	<u>TWLG_USA</u>	<u>TWLG_ENGLISH_USA</u>
	<u>TWLG_FIN</u>	<u>TWLG_FINNISH</u>
	<u>TWLG_FRN</u>	<u>TWLG_FRENCH</u>
	<u>TWLG_FCF</u>	<u>TWLG_FRENCH_CANADIAN</u>
	<u>TWLG_GER</u>	<u>TWLG_GERMAN</u>
	<u>TWLG_ICE</u>	<u>TWLG_ICELANDIC</u>
	<u>TWLG_ITN</u>	<u>TWLG_ITALIAN</u>
	<u>TWLG_NOR</u>	<u>TWLG_NORWEGIAN</u>
	<u>TWLG_POR</u>	<u>TWLG_PORTUGUESE</u>
	<u>TWLG_SPA</u>	<u>TWLG_SPANISH</u>
	<u>TWLG_SWE</u>	<u>TWLG_SWEDISH</u>

Structures

```
typedef struct {
    TW_MEMREF    FileName;
    TW_UINT16    FileNameType;
    TW_UINT16    Format;
    TW_INT16     VRefNum;
    TW_UINT32    parID;
} TW_SETUPFILEXFER2, FAR * pTW_SETUPFILEXFER2;
```

```
typedef struct {
    TW_IDENTITY    identity;
    TW_STR255      dsPath;
} TW_TWUNKIDENTITY, FAR * pTW_TWUNKIDENTITY;
```

```
typedef struct {
    TW_INT8        destFlag;
```

```

        TW_IDENTITY    dest;
        TW_INT32       dataGroup;
        TW_INT16       dataArgType;
        TW_INT16       message;
        TW_INT32       pDataSize;
    } TW_TWUNKDSENTRYPARAMS, FAR * pTW_TWUNKDSENTRYPARAMS;

typedef struct {
    TW_UINT16    returnCode;
    TW_UINT16    conditionCode;
    TW_INT32     pDataSize;
} TW_TWUNKDSENTRYRETURN, FAR * pTW_TWUNKDSENTRYRETURN;

typedef struct {
    TW_UINT16    Cap;
    TW_UINT16    Properties;
} TW_CAPEXT, FAR * pTW_CAPEXT;

typedef struct {
    TW_STR255    FileName;
    TW_UINT16    Format;
    TW_INT16     VRefNum;
} TW_SETUPAUDIOFILEXFER, FAR * pTW_SETUPAUDIOFILEXFER;

```

9

Extended Image Information Definitions

Chapter Contents

TWAIN 1.7 Extended Image Attribute Capabilities.....	9-1
TWAIN 1.9 Extended Image Attribute Capabilities.....	9-12
TWAIN 1.91 Extended Image Attribute Capabilities.....	9-16
TWAIN 2.0 Extended Image Attribute Capabilities.....	9-17

The following sections contain information about extended image attributes.

TWAIN 1.7 Extended Image Attribute Capabilities

The following extended image attribute capabilities have been defined. If a data source wishes to create additional custom image attribute capabilities, it should define its TWEI_CUSTOMxxx identifiers with a base starting ID of TWEI_CUSTOM+ (x) where x is a unique positive number defined by the data source.

For all extended image attributes see: DG_IMAGE/DAT_EXTIMAGEINFO/MSG_GET

Bar Code Recognition

TWEI_BARCODECOUNT

Description	Returns the number of bar codes found on the document image. A value of 0 means the bar code engine was enabled but that no bar codes were found. A value of -1 means the bar code engine was not enabled.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_BARCODECONFIDENCE

Description	This number reflects the degree of certainty the bar code engine has in the accuracy of the information obtained from the scanned image and ranges from 0 (no confidence) to 100 (supreme confidence). The Source may return a value of -1 if it does not support confidence reporting.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_BARCODEROTATION

Description	The bar code's orientation on the scanned image is described in reference to a Western-style interpretation of the image.	
Value Type:	TW_UINT32	
Allowed Values:	TWBCOR_ROT0	Normal reading orientation
	TWBCOR_ROT90	Rotated 90 degrees clockwise
	TWBCOR_ROT180	Rotated 180 degrees clockwise
	TWBCOR_ROT270	Rotated 270 degrees clockwise
	TWBCOR_ROTXX	The orientation is not known.

TWEI_BARCODETEXTLENGTH

Description	The number of ASCII characters derived from the bar code.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_BARCODETEXT

Description	The text of a bar code found on a page.
Value Type:	TW_HANDLE
Allowed Values:	Any handle to a string

TWEI_BARCODEX

Description	The X coordinate of a bar code found on a page.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_BARCODEY

Description	The Y coordinate of a bar code found on a page.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_BARCODETYPE

Description	The type of bar code found on a page.
Value Type:	TW_UINT32
Allowed Values:	TWBT_3OF9

Shaded Area Detection and Removal

TWEI_DESHADECOUNT

Description	Returns the number of shaded regions found and erased in the document image. A value of 0 means the deshade engine was enabled but that no regions were processed. A value of -1 means the deshade engine was not enabled.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_DESHADETOP

Description	The top coordinate of a shaded region found on a page.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_DESHADELEFT

Description	The left coordinate of a shaded region found on a page.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_DESHADEHEIGHT

Description	The height of a shaded region found on a page.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_DESHADEWIDTH

Description	The width of a shaded region found on a page.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_DESHADESIZE

Description	The width of the dots within the shade region.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_DESHADEBLACKCOUNTOLD

Description	The total number of black pixels in the region prior to deshading. If this value is unknown the Source returns -1.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_DESHADEBLACKCOUNTNEW

Description	The total number of black pixels in the region after deshading. If this value is unknown the Source returns -1.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_DESHADEBLACKRLMIN

Description	The shortest black pixel run-length in the region prior to deshading. If this value is unknown the Source returns -1.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_DESHADEBLACKRLMAX

Description	The longest black pixel run-length in the region prior to deshading. If this value is unknown the Source returns -1.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_DESHADEWHITECOUNTOLD

Description	The total number of white pixels in the region prior to deshading. If this value is unknown the Source returns -1.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_DESHADEWHITECOUNTNEW

Description	The total number of white pixels in the region after deshading. If this value is unknown the Source returns -1.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_DESHADEWHITERLMIN

Description	The shortest white pixel run-length in the region prior to deshading. If this value is unknown the Source returns -1.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_DESHADEWHITERLAVE

Description	The average length of all white pixel run-lengths in the region prior to deshading. If this value is unknown the Source returns -1.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_DESHADEWHITERLMAX

Description	The longest white pixel run-length in the region prior to deshading. If this value is unknown the Source returns -1.
Value Type:	TW_UINT32
Allowed Values:	>=0

Speckle Removal

TWEI_SPECKLESREMOVED

Description	The number of speckles removed from the image when de-speckle is enabled.
Value Type:	TW_UINT32
Allowed Values:	≥ 0

TWEI_BLACKSPECKLESREMOVED

Description	The number of black speckles removed from the image when despeckle is enabled.
Value Type:	TW_UINT32
Allowed Values:	≥ 0

TWEI_WHITESPECKLESREMOVED

Description	The number of white speckles removed (black speckles added) from the image when despeckle is enabled.
Value Type:	TW_UINT32
Allowed Values:	≥ 0

Horizontal Line Detection and Removal**TWEI_HORZLINECOUNT**

Description	Returns the number of horizontal lines found and erased in the document image. A value of 0 means the line removal engine was enabled but that no lines were found. A value of -1 means the line engine was not enabled.
Value Type:	TW_UINT32
Allowed Values:	≥ 0

TWEI_HORZLINECOORD

Description	The x coordinate of a horizontal line detected in the image.
Value Type:	TW_UINT32
Allowed Values:	≥ 0

TWEI_HORZLINEYCOORD

Description	The y coordinate of a horizontal line detected in the image
Value Type:	TW_UINT32
Allowed Values:	≥ 0

TWEI_HORZLINELENGTH

Description	The length of a horizontal line detected in the image.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_HORZLINETHICKNESS

Description	The thickness (height) of a horizontal line detected in the image.
Value Type:	TW_UINT32
Allowed Values:	>=0

Vertical Line Detection and Removal

TWEI_VERTLINECOUNT

Description	Returns the number of vertical lines found and erased in the document image. A value of 0 means the line removal engine was enabled but that no lines were found. A value of -1 means the line engine was not enabled.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_VERTLINEXCOORD

Description	The x coordinate of a vertical line detected in the image.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_VERTLINEYCOORD

Description	The y coordinate of a vertical line detected in the image.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_VERTLINELENGTH

Description	The length of a vertical line detected in the image.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_VERTLINETHICKNESS

Description	The thickness (width) of a vertical line detected in the image.
Value Type:	TW_UINT32
Allowed Values:	>=0

Patch Code Detection (Job Separation)

TWEI_PATCHCODE

Description	The patch code detected.
Value Type:	TW_UINT32
Allowed Values:	TWPCH_PATCH1, TWPCH_PATCH2, TWPCH_PATCH3, TWPCH_PATCH4, TWP= CH_PATCH6, TWPCH_PATCHT

Skew detection and Removal

TWEI_DESKEWSTATUS

Description	Returns the status of the deskew operation.
Value Type:	TW_UINT32
Allowed Values:	TWDSK_SUCCESS Image successfully deskewed TWDSK_REPORTONLY Deskew information only TWDSK_FAIL Deskew failed TWDSK_DISABLED Deskew engine not enabled

TWEI_SKEWORIGINALANGLE

Description	The amount of skew in the original image.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_SKEWFINALANGLE

Description	The amount of skew in the deskewed image. This number may not be zero.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_SKEWCONFIDENCE

Description	This number reflects the degree of certainty the deskew engine has in the accuracy of the deskewing of the current image and ranges from 0 (no confidence) to 100 (supreme confidence). The Source may return a value of -1 if it does not support confidence reporting.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_SKEWWINDOWX1

Description	This is the X image coordinate of the upper left corner of the virtual deskewed image. It may be negative indicating the deskewed corner is not represented by actual pixels.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_SKEWWINDOWY1

Description	The Y image coordinate of the upper left corner of the virtual deskewed image. It may be negative indicating the deskewed corner is not represented by actual pixels.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_SKEWWINDOWX2

Description	The X image coordinate of the upper right corner of the virtual deskewed image.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_SKEWWINDOWY2

Description	The Y image coordinate of the upper right corner of the virtual deskewed image.
Value Type:	TW_UINT32
Allowed Values:	≥ 0

TWEI_SKEWWINDOWX3

Description	This is the X image coordinate of the lower left corner of the virtual deskewed image. It may be negative indicating the deskewed corner is not represented by actual pixels.
Value Type:	TW_UINT32
Allowed Values:	≥ 0

TWEI_SKEWWINDOWY3

Description	The Y image coordinate of the lower left corner of the virtual deskewed image.
Value Type:	TW_UINT32
Allowed Values:	≥ 0

TWEI_SKEWWINDOWX4

Description	The X image coordinate of the lower right corner of the virtual deskewed image.
Value Type:	TW_UINT32
Allowed Values:	≥ 0

TWEI_SKEWWINDOWY4

Description	The Y image coordinate of the lower right corner of the deskewed image.
Value Type:	TW_UINT32
Allowed Values:	≥ 0

Endorsed / Imprinted Text**TWEI_ENDORSEDTEXT**

Description	The text that was endorsed on the paper by the scanner.
Value Type:	TW_STR255
Allowed Values:	Any string

Forms Recognition

TWEI_FORMCONFIDENCE

Description	The confidence that the specified form was detected. This is an array property with a confidence factor for each form In the data set with 0 meaning no match and 100 meaning absolute certainty. Typically values over 70 imply a good form match with the template.
Value Type:	TW_UINT32
Allowed Values:	0 to 100

TWEI_FORMTEMPLATEMATCH

Description	The array of file names for the master forms matched against a form. If multi-page master forms are used, the associated page numbers are contained in the FORMTEMPLATEPAGEMATCH capability array.
Value Type:	TW_STR255
Allowed Values:	Any string

TWEI_FORMTEMPLATEPAGEMATCH

Description	An array containing the number of the page from a multi-page master form matched against a form image. It is useful when matching a form image against the pages of a multi-page master form. The file name of the master form is contained in the FORMTEMPLATEMATCH capability.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_FORMHORZDOCOFFSET

Description	An array containing the perceived horizontal offsets of the form image being matched against a set of master forms. This is useful for page registration once the form has been recognized.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_FORMVERTDOCOFFSET

Description	An array containing the perceived vertical offsets of the form image being matched against a set of master forms. This is useful for page registration once the form has been recognized.
Value Type:	TW_UINT32
Allowed Values:	>= 0

TWAIN 1.9 Extended Image Attribute Capabilities

These next items, taken together, provide a way to unambiguously identify the physical source of an image. Applications can use this information to associate scanned images from the same side of a sheet of paper, the sheet of paper itself, or a set of sheets comprising a document. While much of this information is available using `DAT_IMAGELAYOUT`, it is provided here for performance reasons; to allow an Application to glean as much information about the image as possible through a single call.

These items are mandatory, if a Source supports `DAT_EXTIMAGEINFO`, then these items must be present in the data returned by the Source.

TWEI_BOOKNAME

Description	This is new with TWAIN 1.9, expanding on the document/page/frame numbers described by previous versions of TWAIN in the TW_IMAGELAYOUT structure. The ordering is book/chapter/document/page(camera)/frame, and increases the detail of image addressing that a Source can provide for an Application. TWAIN 1.9 Sources that support extended image info must provide this information, even if the value is always fixed at 1.
Value Type:	TW_STR255
Allowed Values:	Any valid string data.
See Also:	DAT_IMAGELAYOUT TW_IMAGELAYOUT

TWEI_CHAPTERNUMBER

Description	This is new with TWAIN 1.9, expanding on the document/page/frame numbers described by previous versions of TWAIN in the TW_IMAGELAYOUT structure. The ordering is book/chapter/document/page(camera)/frame, and increases the detail of image addressing that a Source can provide for an Application. TWAIN 1.9 Sources that support extended image info must provide this information, even if the value is always fixed at 1.
Value Type:	TW_UINT32
Allowed Values:	1 to $2^{32}-1$
See Also:	DAT_IMAGELAYOUT TW_IMAGELAYOUT

TWEI_DOCUMENTNUMBER

Description	This must be the same value returned by a call to DG_CONTROL / DAT_IMAGELAYOUT / MSG_GET. The ordering is book/chapter/document/page(camera)/frame, and increases the amount of image addressing that a Source can provide for an Application. TWAIN 1.9 Sources that support extended image info must provide this information, even if the value is always fixed at 1.
Value Type:	TW_UINT32
Allowed Values:	1 to $2^{32}-1$
See Also:	DAT_IMAGELAYOUT TW_IMAGELAYOUT

TWEI_PAGENUMBER

Description	This must be the same value returned by a call to DG_CONTROL / DAT_IMAGELAYOUT / MSG_GET. The ordering is book/ chapter/ document/ page(camera)/ frame, and increases the amount of image addressing that a Source can provide for an Application. TWAIN 1.9 Sources that support extended image info must provide this information, even if the value is always fixed at 1.
Value Type:	TW_UINT32
Allowed Values:	1 to $2^{32}-1$
See Also:	DAT_IMAGELAYOUT TW_IMAGELAYOUT

TWEI_CAMERA

Description	<p>The primary use of this value is to determine if the image is from the top or the bottom side of a sheet of paper. This is accomplished by naming the camera that was used to obtain the image. For Sources that support DAT_FILESYSTEM, the Application can use the string to determine if the camera is capturing images from the top or bottom side of the paper.</p> <p>Applications should browse the available camera devices in State 4 to create a lookup table mapping the various camera filenames to the side they represent. DAT_FILESYSTEM is not supported, then the Application should watch for the strings "TOP" and "BOTTOM".</p>
Value Type:	TW_STR255
Allowed Values:	<p>TWIFY_CAMERA, TWIFY_CAMERATOP and TWIFY_CAMERABOTTOM filenames maintained by the Source and accessible using the DAT_FILESYSTEM triplet. This string must be exactly the same as that supplied by the Source when the Application issues a DAT_FILESYSTEM / MSG_GETINFO (or related command).</p> <p>The Source must identify the exact camera used. This means that even if the Source has been set to use a TWIFY_CAMERA device, it must report the TWIFY_CAMERATOP or TWIFY_CAMERABOTTOM device as appropriate.</p> <p>If the Source does not support the use of DAT_FILESYSTEM, then it must return the string "TOP" for images from the top side of the sheet of paper, and "BOTTOM" for images on the bottom side of the sheet of paper.</p>

TWEI_FRAMENUMBER

Description	This must be the same value returned by a call to DG_CONTROL / DAT_IMAGELAYOUT / MSG_GET. TWAIN 1.9 Sources that support extended image info must provide this information.
Value Type:	TW_UINT32
Allowed Values:	1 to $2^{32}-1$
See Also:	DAT_IMAGELAYOUT TW_IMAGELAYOUT

TWEI_FRAME

Description	Returns the coordinates of the current segment within the current document in pixels. Since segments may be acquired at various resolutions, the physical location must be calculated using the resolution reported by DAT_IMAGEINFO for the current segment. The top left coordinate stored in the FRAME is relative to the top left of the scanned document.
Value Type:	TW_FRAME
Allowed Values:	Any valid FRAME describing a segment within the boundaries of the current document
See Also:	TWEI_SEGMENTNUMBER DAT_IMAGELAYOUT TW_IMAGELAYOUT ICAP_FRAMES

TWEI_PIXELFLAVOR

Description	This value must correctly describe the pixel flavor of the current image, the same data that is available through ICAP_PIXELFLAVOR. TWAIN 1.9 Sources that support extended image info must provide this information.
Value Type:	TW_UINT16
Allowed Values:	TWPF_CHOCOLATE TWPF_VANILLA
See Also:	ICAP_PIXELFLAVOR

TWAIN 1.91 Extended Image Attribute Capabilities

These next items add image segmentation and ICC Profile metadata returns.

TWEI_ICCPROFILE

Description	Returns the name of the ICC profile that was used to render the current image. This may be a fully qualified path indicating the exact location of the ICC profile. If this is not a fully qualified path, then the default location is operating system dependant. Windows default location: <windows path>\system32\spool
Value Type:	TW_STR255
Allowed Values:	Any valid ICC profile file name or fully qualified path

TWEI_LASTSEGMENT

Description	Returns TRUE if the current segment is the last segment of a page.
Value Type:	TW_BOOL
Allowed Values:	TRUE or FALSE
See Also:	

TWEI_SEGMENTNUMBER

Description	Returns a number identifying the segment of an image. Segments allow independent image processing strategies on a document for more accurate document reproduction and smaller file sizes. For instance, a document containing text with a picture may be segmented into a high resolution bitonal image consisting of the text and a lower resolution color image consisting of the picture. Sources that support this item must support TWEI_FRAME, and must specify a left and top value to position the segment in the final image. Segments may overlap.
Value Type:	TW_UINT32
Allowed Values:	>=0
See Also:	TWEI_FRAME DAT_IMAGELAYOUT TW_IMAGELAYOUT ICAP_FRAMES

TWAIN 2.0 Extended Image Attribute Capabilities

These next items provide support for MICR.

MICR Types

TWMD_MICR

Reports back that magnetic data was found and it is of a string. Data may contain placeholders for unrecognized characters.

TWMD_RAW

Reports back the raw magnetic data that was read.

TWMD_INVALID

Reports back that magnetic data was found, but it is not in a valid MICR format

TWAIN 2.1 Extended Image Attribute Capabilities

TWEI_FILESYSTEMSOURCE

Description	Returns a DAT_FILESYSTEM string describing the camera that captured the image data.
Value Type:	TW_STR255
Allowed Values:	Any of the camera values returned by DAT_FILESYSTEM / MSG_GETFIRSTFILE or MSG_GETNEXTFILE

TWEI_IMAGEMERGED

Description	Indicates that the current image is the result of a merger between the front and rear images of a duplex capture. See CAP_IMAGEMERGE for more information.
Value Type:	TW_BOOL
Allowed Values:	TRUE if the front and rear images were merged.

TWEI_MAGDATA

Description	This is a “blob” of data with a byte count retrieved from the driver/device. The interpretation of the data comes from TWEI_MAGTYPE.
Value Type:	TW_HANDLE, or TW_STR255
Allowed Values:	Any handle to a blob of data

TWEI_MAGDATALENGTH

Description:	This describes the length of the magnetic data. Either in bytes for “blob” or data or characters for string data.
Value Type:	TW_UINT32
Allowed Values:	>=0

TWEI_MAGTYPE

Description	This describes the kind of magnetic data.
Value Type:	TW_UINT16
Allowed Values:	TWMD_MICR, TWMD_RAW, or TWMD_INVALID

TWEI_PAGESIDE

Description	Returns a value indicating if the image represents the front or rear of the sheet of paper.
Value Type:	TW_UINT16
Allowed Values:	TWCS_TOP (front of sheet) TWCS_BOTTOM (rear of sheet)

10

Capabilities

Chapter Contents

Overview	10-1
Required Capabilities	10-2
Capabilities in Categories of Functionality	10-2
The Capability Listings	10-10

Overview

Sources *may* support a large number of capabilities but are *required* to support very few. To determine if a capability is supported by a Source, the application can query the Source using a DG_CONTROL / DAT_CAPABILITY / MSG_GET, MSG_GETCURRENT, or MSG_GETDEFAULT operation. The application specifies the particular capability by storing its identifier in the Cap field of the TW_CAPABILITY structure. This is the structure pointed to by the pData parameter in the DSM_Entry() call.

DG_CONTROL / DAT_CAPABILITY operations for capability negotiation include:

MSG_GET	Returns the available settings for this capability, as well as the Current and Default settings (if the container is TW_ENUMERATION or TW_RANGE).
MSG_GETCURRENT	Returns the Current setting for this capability.
MSG_GETDEFAULT	Returns the value of the Source's preferred Default values.
MSG_RESET	Returns the capability to its TWAIN Default (power-on) condition (i.e. all previous negotiation is ignored).
MSG_RESETALL	Returns all of the current values to the default settings used when the driver was first installed.
MSG_SET	Allows the application to set the Current value of a capability or even to restrict the available values to some subset of the Source's power-on set of values. Sources are strongly encouraged to allow the application to set as many of its capabilities as possible, and further to reflect these changes in the Source's user interface. This will

ensure that the user can only select images with characteristics that are useful to the consuming application.

Required Capabilities

The list of required capabilities can be found in [Chapter 5, "Source Implementation."](#)

Sources must implement and make available to TWAIN applications the advertised features of the devices they support. This is especially true in "no-UI mode." A Source must support a capability if its device supports it, even if the capability is listed as required by none.

Capabilities in Categories of Functionality

Asynchronous Device Events

CAP_DEVICEEVENT	MSG_SET selects which events the application wants the source to report; MSG_RESET returns the preferred settings of the source.
---------------------------------	--

Audible Alarms

CAP_ALARMS	Turns specific audible alarms on and off.
CAP_ALARMVOLUME	Controls the volume of a device's audible alarm.

Audio

ACAP_XFERMECH	Allows application and source to identify which audio transfer mechanisms they have in common.
-------------------------------	--

Automatic Adjustments

CAP_AUTOMATICSENSEMEDIUM	Configures a Source to check for paper in the Automatic Document Feeder.
ICAP_AUTODISCARDBLANKPAGES	Discards blank pages.
ICAP_AUTOMATICBORDERDETECTION	Turns automatic border detection on and off.
ICAP_AUTOMATICCOLORENABLED	Detects the pixel type of the image and returns either a color image or a non-color image specified by ICAP_AUTOMATICCOLORNONCOLORPIXELTYPE .

ICAP_AUTOMATICCOLORNONCOLORPIXELTYPE	Specifies the non-color pixel type to use when automatic color is enabled.
ICAP_AUTOMATICCROPUSESFRAME	Reduces the amount of data captured from the device, potentially improving the performance of the driver.
ICAP_AUTOMATICDESKEW	Turns automatic skew correction on and off.
ICAP_AUTOMATICLENGTHDETECTION	Controls the automatic detection of the length of a document, this is intended for use with an Automatic Document Feeder.
ICAP_AUTOMATICROTATE	When TRUE, depends on source to automatically rotate the image.
ICAP_AUTOSIZE	Force the output image dimensions to match either the current value of ICAP_SUPPORTEDSIZES or any of its current allowed values.
ICAP_FLIPROTATION	Orients images that flip orientation every other image.
ICAP_IMAGEMERGE	Merges the front and rear image of a document in one of four orientations: front on the top.
ICAP_IMAGEMERGEHEIGHTTHRESHOLD	Specifies a Y-Offset in ICAP_UNITS units.

Automatic Capture

CAP_AUTOMATICCAPTURE	Specifies the number of images to automatically capture.
CAP_TIMEBEFOREFIRSTCAPTURE	Selects the number of seconds before the first picture taken.
CAP_TIMEBETWEENCAPTURES	Selects the hundredths of a second to wait between pictures taken.

Automatic Scanning

CAP_AUTOSCAN	Enables the source's automatic document scanning process.
CAP_CAMERAENABLED	Delivers images from the current camera.
CAP_CAMERAORDER	Selects the order of output for Single Document Multiple Image mode.
CAP_CAMERASIDE	Sets the top and bottom values of cameras in a scanning device.
CAP_CLEARBUFFERS	MSG_GET reports presence of data in scanner's buffers; MSG_SET clears the buffers.
CAP_MAXBATCHBUFFERS	Describes the number of pages that the scanner can buffer when CAP_AUTOSCAN is enabled.

Bar Code Detection Search Parameters

ICAP_BARCODEDETECTIONENABLED	Turns bar code detection on and off.
ICAP_SUPPORTEDBARCODETYPES	Provides a list of bar code types that can be detected by current data source.
ICAP_BARCODEMAXRETRIES	Restricts the number of times a search will be retried if no bar codes are found.
ICAP_BARCODEMAXSEARCHPRIORITIES	Specifies the maximum number of supported search priorities.
ICAP_BARCODESEARCHMODE	Restricts bar code searching to certain orientations, or prioritizes one orientation over another.
ICAP_BARCODESEARCHPRIORITIES	A prioritized list of bar code types dictating the order in which they will be sought.
ICAP_BARCODETIMEOUT	Restricts the total time spent on searching for bar codes on a page.

Capability Negotiation Parameters

CAP_EXTENDEDCAPS	Capabilities negotiated in States 5 & 6
CAP_SUPPORTEDCAPS	Inquire Source's capabilities valid for MSG_GET

Color

ICAP_COLORMANAGEMENTENABLED	Disables the Source's color and gamma tables for color and grayscale images, resulting in output that that could be termed "raw".
ICAP_FILTER	Color characteristics of the subtractive filter applied to the image data
ICAP_GAMMA	Gamma correction value for the image data
ICAP_ICCPROFILE	Embeds or links ICC profiles into files
ICAP_PLANARCHUNKY	Color data format - Planar or Chunky

Compression

ICAP_BITORDERCODES	CCITT Compression
ICAP_CCITTKFACTOR	CCITT Compression
ICAP_COMPRESSION	Compression method for Buffered Memory Transfers
ICAP_JPEGPIXELTYPE	JPEG Compression
ICAP_JPEGQUALITY	JPEG quality

ICAP_PIXELFLAVORCODES	CCITT Compression
ICAP_TIMEFILL	CCITT Compression

Device Parameters

CAP_DEVICEONLINE	Determines if hardware is on and ready
CAP_DEVICETIMEDATE	Date and time of a device's clock.
CAP_SERIALNUMBER	The serial number of the currently selected source device.
ICAP_MINIMUMHEIGHT	Allows the source to define the minimum height (Y-axis) that the source can acquire.
ICAP_MINIMUMWIDTH	Allows the source to define the minimum width (X-axis) that the source can acquire.
ICAP_EXPOSURETIME	Exposure time used to capture the image, in seconds
ICAP_FLASHUSED2	For devices that support a flash, MSG_SET selects the flash to be used; MSG_GET reports the current setting.
ICAP_IMAGEFILTER	For devices that support image filtering, selects the algorithm to be used.
ICAP_LAMPSTATE	Is the lamp on?
ICAP_LIGHTPATH	Image was captured transmissively or reflectively
ICAP_LIGHTSOURCE	Describes the color characteristic of the light source used to acquire the image
ICAP_NOISEFILTER	For devices that support noise filtering, selects the algorithm to be used.
ICAP_OVERSCAN	For devices that support overscanning, controls whether additional rows or columns are appended to the image.
ICAP_PHYSICALHEIGHT	Maximum height Source can acquire (in ICAP_UNITS)
ICAP_PHYSICALWIDTH	Maximum width Source can acquire (in ICAP_UNITS)
ICAP_UNITS	Unit of measure (inches, centimeters, etc.)
ICAP_ZOOMFACTOR	With MSG_GET, returns all camera supported lens zooming range.

Imprinter/Endorser Functionality

CAP_ENDORSER	Allows the application to specify the starting endorser / imprinter number.
CAP_PRINTER	MSG_GET returns current list of available printer devices; MSG_SET selects the device for negotiation.
CAP_PRINTERENABLED	Turns the current CAP_PRINTER device on or off.
CAP_PRINTERINDEX	Starting number for the CAP_PRINTER device.

<code>CAP_PRINTERMODE</code>	Specifies appropriate current <code>CAP_PRINTER</code> device mode.
<code>CAP_PRINTERSTRING</code>	String(s) to be used in the string component when <code>CAP_PRINTER</code> device is enabled.
<code>CAP_PRINTERSUFFIX</code>	String to be used as current <code>CAP_PRINTER</code> device's suffix.

Image Information

<code>CAP_AUTHOR</code>	Author of acquired image (may include a copyright string)
<code>CAP_CAPTION</code>	General note about acquired image
<code>CAP_TIMEDATE</code>	Date and Time the image was acquired (entered State 7)
<code>ICAP_EXTIMAGEINFO</code>	Allows the application to query the data source to see if it supports the new operation triplet <code>DG_IMAGE/</code> <code>DAT_EXTIMAGEINFO/</code> <code>MSG_GET</code> .
<code>ICAP_SUPPORTEDEXTIMAGEINFO</code>	Lists all of the information that the Source is capable of returning from a call to <code>DAT_EXTIMAGEINFO</code> .

Image Parameters for Acquire

<code>CAP_THUMBNAILSENABLED</code>	Allows an application to request the delivery of thumbnail representations for the set of images that are to be delivered.
<code>ICAP_AUTOBRIGHT</code>	Enable Source's Auto-brightness function
<code>ICAP_BRIGHTNESS</code>	Source brightness values
<code>ICAP_CONTRAST</code>	Source contrast values
<code>ICAP_HIGHLIGHT</code>	Lightest highlight, values lighter than this value will be set to this value
<code>ICAP_IMAGEDATASET</code>	Gets or sets the image indices that will be delivered during the standard image transfer done in States 6 and 7.
<code>ICAP_ORIENTATION</code>	Defines which edge of the paper is the top: Portrait or Landscape
<code>ICAP_ROTATION</code>	Source can, or should, rotate image this number of degrees
<code>ICAP_SHADOW</code>	Darkest shadow, values darker than this value will be set to this value
<code>ICAP_XSCALING</code>	Source Scaling value (1.0 = 100%) for x-axis
<code>ICAP_YSCALING</code>	Source Scaling value (1.0 = 100%) for y-axis

Image Type

<code>ICAP_BITDEPTH</code>	Pixel bit depth for Current value of <code>ICAP_PIXELTYPE</code>
----------------------------	--

ICAP_BITDEPTHREDUCTION	Allows a choice of the reduction method for bit depth loss
ICAP_BITORDER	Specifies how the bytes in an image are filled by the Source
ICAP_CUSTHALFTONE	Square-cell halftone (dithering) matrix to be used
ICAP_HALFTONES	Source halftone patterns
ICAP_PIXELFLAVOR	Sense of the pixel whose numeric value is zero
ICAP_PIXELTYPE	The type of pixel data (B/W, gray, color, etc.)
ICAP_THRESHOLD	Specifies the dividing line between black and white values

Language Support

CAP_LANGUAGE	Allows application and source to identify which languages they have in common.
--------------	--

MICR

CAP_MICRENABLED	Enables actions needed to support check scanning.
-----------------	---

Pages

CAP_SEGMENTED	Describes the segmentation setting for captured images
ICAP_FRAMES	Size and location of frames on page
ICAP_MAXFRAMES	Maximum number of frames possible per page
ICAP_SUPPORTEDSIZES	Fixed frame sizes for typical page sizes

Paper Handling

CAP_AUTOFEED	MSG_SET to TRUE to enable Source's automatic feeding
CAP_CLEARPAGE	MSG_SET to TRUE to eject current page and leave acquire area empty
CAP_DUPLEX	Indicates whether the scanner supports duplex.
CAP_DUPLEXENABLED	Enables the user to set the duplex option to be TRUE or FALSE.
CAP_FEEDERALIGNMENT	If TRUE, feeder is centered; FALSE if it is free-floating.
CAP_FEEDERENABLED	If TRUE, Source's feeder is available
CAP_FEEDERLOADED	If TRUE, Source has documents loaded in feeder (MSG_GET only)

<code>CAP_FEEDERORDER</code>	Specifies whether feeder starts with top of first or last page.
<code>CAP_FEEDERPOCKET</code>	Report what pockets are available as paper leaves a device.
<code>CAP_FEEDERPREP</code>	Improve the movement of paper through a scanner ADF.
<code>CAP_FEEDPAGE</code>	MSG_SET to TRUE to eject current page and feed next page
<code>CAP_PAPERDETECTABLE</code>	Determines whether source can detect documents on the ADF or flatbed.
<code>CAP_REACQUIREALLOWED</code>	Capable of acquiring multiple images of the same page without changing the physical registration of that page.
<code>CAP_REWINDPAGE</code>	MSG_SET to TRUE to do a reverse feed
<code>ICAP_FEEDERTYPE</code>	Allows application to set scan parameters depending on the type of feeder being used.

Patch Code Detection

<code>ICAP_PATCHCODEDETECTIONENABLED</code>	Turns patch code detection on and off.
<code>ICAP_SUPPORTEDPATCHCODETYPES</code>	List of patch code types that can be detected by current data source.
<code>ICAP_PATCHCODEMAXSEARCHPRIORITIES</code>	Maximum number of search priorities.
<code>ICAP_PATCHCODESEARCHPRIORITIES</code>	List of patch code types dictating the order in which patch codes will be sought.
<code>ICAP_PATCHCODESEARCHMODE</code>	Restricts patch code searching to certain orientations, or prioritizes one orientation over another.
<code>ICAP_PATCHCODEMAXRETRIES</code>	Restricts the number of times a search will be retried if none are found on a page.
<code>ICAP_PATCHCODETIMEOUT</code>	Restricts total time for searching for a patch code on a page.

Power Monitoring

<code>CAP_BATTERYMINUTES</code>	The minutes of battery power remaining on a device.
<code>CAP_BATTERYPERCENTAGE</code>	With MSG_GET, indicates battery power status.
<code>CAP_POWERSAVETIME</code>	With MSG_SET, sets the camera power down timer in seconds; with MSG_GET, returns the current setting of the power down time.
<code>CAP_POWERSUPPLY</code>	MSG_GET reports the kinds of power available; MSG_GETCURRENT reports the current power supply to use.

Resolution

ICAP_XNATIVERESOLUTION	Native optical resolution of device for x-axis
ICAP_XRESOLUTION	Current/ Available optical resolutions for x-axis
ICAP_YNATIVERESOLUTION	Native optical resolution of device for y-axis
ICAP_YRESOLUTION	Current/ Available optical resolutions for y-axis

Transfers

CAP_JOBCONTROL	Allows multiple jobs in batch mode.
CAP_XFERCOUNT	Number of images the application is willing to accept this session
ICAP_COMPRESSION	Buffered Memory transfer compression schemes
ICAP_IMAGEFILEFORMAT	File formats for file transfers
ICAP_TILES	Tiled image data
ICAP_UNDEFINEDIMAGE SIZE	The application will accept undefined image size
ICAP_XFERMECH	Transfer mechanism - used to learn options and set-up for upcoming transfer

User Interface

CAP_CAMERAPREVIEWUI	Queries the source for UI support for preview mode.
CAP_CUSTOMDSDATA	Allows the application to query the data source to see if it supports the new operation triplets DG_CONTROL/ DAT_CUSTOMDSDATA / MSG_GET and DG_CONTROL/ DAT_CUSTOMDSDATA / MSG_SET.
CAP_CUSTOMINTERFACEGUID	Uniquely identifies an interface for a Data Source.
CAP_ENABLEDSUIONLY	Queries an application to see if it implements the new user interface settings dialog.
CAP_INDICATORS	Use the Source's progress indicator? (valid only when ShowUI==FALSE)
CAP_UICONTROLLABLE	Indicates that Source supports acquisitions with UI disabled

The Capability Listings

The following section lists descriptions of all TWAIN capabilities in alphabetical order. The format of each capability entry is:

NAME OF CAPABILITY

Description

Description of the capability

Application

(Optional) Information for the application

Source

(Optional) Information for the Source

Values

Type:	Data structure for the capability.
Default Value:	<p>The value the Source must use as the Current value when entering State 4 (following DG_CONTROL / DAT_IDENTITY / MSG_OPENDS).</p> <p>This is the value the Source resets the Current value to when it receives a MSG_RESET operation.</p> <p>The Source reports its preferred Default value when it receives a MSG_GETDEFAULT. The Source's preferred value may be different from the TWAIN Default value.</p>
Allowed Values:	Definition of the values allowed for this capability.
Container for MSG_GET	Acceptable containers for use on MSG_GET operations.
Container for MSG_SET	Acceptable containers for use on MSG_SET operations.

Required By

If a Source or application is required to support the capability.

Source Required Operations

Operations the Source is required to support.

See Also

Associated capabilities and data structures.

ACAP_XFERMECH

Description

Allows the Application and Source to identify which audio transfer mechanisms they have in common.

Application

The current setting of ACAP_XFERMECH must match the constant used by the application to specify the audio transfer mechanism when starting the transfer using the triplet: DG_AUDIO / DAT_AUDIOxxxxXFER / MSG_GET.

Values

Type:	TW_UINT16
Default Value:	TWSX_NATIVE
Allowed Values:	TWSX_NATIVE TWSX_FILE TWSX_FILE2
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

All Audio Sources

Source Required Operations

MSG_GET/CURRENT/DEFAULT ,
MSG_SET/RESET

See Also

DG_AUDIO / DAT_AUDIOxxxxXFER / MSG_GET

CAP_ALARMS

Description

Turns specific audible alarms on and off.

Application

Note that an application may opt to turn off all alarms by issuing a MSG_SET with no data. Therefore, an application should also be prepared to receive an empty array from a Source with an MSG_GET. (i.e., pTW_ARRAY->NumItems == 0)

The easiest way to test for allowed values is to try to set them all with MSG_SET. If not all are allowed, the Source will return TWRC_CHECKSTATUS with those values that it supports.

Source

It is worth noting that the alarms do not have to be present in the device for a Source to make use of this capability. If the device is capable of alerting the Source to these various kinds of conditions, but is unable to generate the alarms, itself; then the Source may opt to generate them on its behalf.

TWAL_ALARM is a catchall for alarms not explicitly listed. It is also used where a device only provides control over a single, multi-use alarm. For instance, if a device beeps for both jams and bar-codes, but doesn't allow independent control of the alarms, then it should report TWAL_ALARM to cover them, and not TWAL_BARCODE, TWAL_JAM.

TWAL_FEEDERERROR covers paper handling errors such as jams, double-feeds, skewing and the like; conditions that most likely stop scanning.

TWAL_FEEDERWARNING covers non-fatal events, such as feeder empty.

TWAL_DOUBLEFEED, TWAL_JAM and TWALSKEW cover paper handling errors.

TWAL_BARCODE and TWAL_PATCHCODE generate alarms when an image with this kind of data is recognized.

TWAL_POWER generates alarms for any changes in power to the device.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY/ MSG_QUERY SUPPORT)

Values

Type:	TW_UINT16
Default Value:	No default
Allowed Values:	TWAL_ALARM TWAL_FEEDERERROR TWAL_FEEDERWARNING

	TWAL_BARCODE
	TWAL_DOUBLEFEED
	TWAL_JAM
	TWAL_PATCHCODE
	TWAL_POWER
	TWAL_SKEW
Container for <i>MSG_GET</i>:	TW_ARRAY
Container for <i>MSG_SET</i>:	TW_ARRAY
Container for <i>MSG_QUERY</i>SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

CAP_ALARMVOLUME

CAP_ALARMVOLUME

Description

The volume of a device’s audible alarm. Note that this control affects the volume of all alarms; no specific volume control for individual types of alarms is provided.

Application

Take note of the range step, some Sources may only offer a step of 100, which turns the alarm on or off.

Source

If 0, the audible alarm is turned off. All other values control the volume of the alarm.

Windows only - If the alarm is managed in the Source, as opposed to the device, then it should be consistent with the control panel Accessibility Options (i.e., the user should get visual notification if that is the current setting for the desktop).

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY/ MSG_QUERY SUPPORT)

Values

Type:	TW_INT32
Default Value:	No default
Allowed Values:	0 - 100
Container for MSG_GET:	TW_ONEVALUE, TW_RANGE
Container for MSG_SET:	TW_ONEVALUE, TW_RANGE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

CAP_ALARMS

CAP_AUTHOR

Description

The name or other identifying information about the Author of the image. It may include a copyright string.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_STR128
Default Value:	"\0"
Allowed Values:	Any string
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

CAP_CAPTION
CAP_TIMEDATE

CAP_AUTOFEED

Description

If TRUE, the Source will automatically feed the next page from the document feeder after the number of frames negotiated for capture from each page are acquired. CAP_FEEDERENABLED must be TRUE to use this capability.

Application

Set the capability to TRUE to enable the Source’s automatic feed process, or FALSE to disable it. After the completion of each transfer, check TW_PENDINGXFERS. Count to determine if the Source has more images to transfer. A -1 means there are more images to transfer but the exact number is not known.

CAP_FEEDERLOADED indicates whether the Source’s feeder is loaded. (The automatic feed process continues whenever this capability is TRUE.)

Source

If CAP_FEEDERENABLED equals FALSE, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED (capability is not supported in current settings).

If it is supported, return TWRC_SUCCESS and enable the device’s automatic feed process: After all frames negotiated for capture from each page are acquired, put the current document in the output area and advance the next document from the input area to the feeder image acquisition area. If the feeder input area is empty, the automatic feeding process is suspended but should continue when the feeder is reloaded.

Values

Type:	TW_BOOL	
Default Value:	No Default	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

All Sources with Feeder Devices

Source Required Operations

MSG_GET / CURRENT / DEFAULT ,
MSG_SET / RESET

See Also

CAP_CLEARPAGE
CAP_FEEDERENABLED
CAP_FEEDERLOADED
CAP_FEEDPAGE
CAP_REWINDPAGE

CAP_AUTOMATICCAPTURE

Description

The number of images to automatically capture. This does *not* refer to the number of images to be sent to the Application, use CAP_XFERCOUNT for that.

Source

If 0, Automatic Capture is disabled. If 1 or greater, that number of images is captured by the device.

Automatic capture implies that the device is capable of capturing images without the presence of the Application. This means that it must be possible for the Application to close the Source and reopen it later, after the images have been captured.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_INT32
Default Value:	0
Allowed Values:	0 or greater
Container for MSG_GET:	TW_ONEVALUE, TW_RANGE
Container for MSG_SET:	TW_ONEVALUE, TW_RANGE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

CAP_TIMEBEFOREFIRSTCAPTURE
CAP_TIMEBETWEENCAPTURES
CAP_XFERCOUNT
DG_CONTROL / DAT_FILESYSTEM / MSG_AUTOMATICCAPTUREDIRECTORY

CAP_AUTOMATICSENSEMEDIUM

Description

Configures a Source to check for paper in the Automatic Document Feeder, and if it finds any, then automatically capture all of its images from the Feeder. If the Feeder is empty when acquisition starts, then all images are automatically captured from the Flatbed.

Application

This capability offers a less complex method to let the Source automatically choose whether to acquire images from the Automatic Document Feeder or from the Flatbed.

Note: If this capability is not supported, Applications can simulate this behavior by examining CAP_FEEDERLOADED. If it is TRUE, set CAP_FEEDERENABLED to TRUE. If it is FALSE, set CAP_FEEDERENABLED to FALSE. And after that begin to acquire images.

Source

If the Source supports CAP_PAPERDETECTABLE, and it has both an Automatic Document Feeder and a Flatbed, then it should support this capability.

When this capability is set to TRUE the Source ignores the value of CAP_FEEDERENABLED. It always attempts to acquire its first image from the Automatic Document Feeder. If paper is not present, then images are acquired from the Flatbed.

When this capability is set to FALSE the source of images is determined by CAP_FEEDERENABLED.

Values

Type:	TW_BOOL
Default Value:	FALSE
Allowed Values:	TRUE, FALSE
Container for MSG_GET:	TW_ONEVALUE , TW_ENUMERATION
Container for MSG_GET:	TW_ONEVALUE , TW_ENUMERATION
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Operations

MSG_GET , MSG_GETCURRENT , MSG_GETDEFAULT , MSG_QUERY SUPPORT , MSG_RESET , MSG_SET

See Also

CAP_FEEDERENABLED, CAP_FEEDERLOADED

CAP_AUTOSCAN

Description

This capability is intended to boost the performance of a Source. The fundamental assumption behind AutoScan is that the device is able to capture the number of images indicated by the value of CAP_XFERCOUNT without waiting for the Application to request the image transfers. This is only possible if the device has internal buffers capable of caching the images it captures.

The default behavior is undefined, because some high volume devices are incapable of anything but CAP_AUTOSCAN being equal to TRUE. However, if a Source supports FALSE, it should use it as the mandatory default, since this best describes the behavior of pre-1.8 TWAIN Applications.

Application

The application should check the TW_PENDINGXFERS.Count, and continue to scan until it becomes 0.

When AutoScan is set to TRUE, the Application should not rely on just the paper sensors (for example, CAP_FEEDERLOADED) to determine if there are images to be transferred. The latency between the Source and the Application makes it very likely that at the time the sensor reports FALSE, there may be more than one image waiting for the transfer inside of the device's buffers. Applications should use the TW_PENDINGXFERS.Count returned from DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER to determine whether or not there are more images to be transferred.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_BOOL	
Default Value:	No default	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None

Source Required Operations

None

See Also

CAP_AUTOFEED

CAP_CLEARBUFFERS

CAP_MAXBATCHBUFFERS

DG_CONTROL / DAT_PENDINGXFERS / MSG_STOPFEEDER

CAP_BATTERYMINUTES

Description

The minutes of battery power remaining to the device.

Source

- 2 indicates that the available power is infinite.
- 1 indicates that the device cannot report the remaining battery power.
- 0 and greater indicates the minutes of battery life remaining.
- If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY/ MSG_QUERY SUPPORT)

Values

Type:	TW_INT32
Default Value:	No default
Allowed Values:	-2, -1, 0, and greater
Container for MSG_GET:	TW_ONEVALUE, TW_RANGE
Container for MSG_SET:	MSG_SET not allowed
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

CAP_POWER SUPPLY ,
CAP_BATTERY PERCENTAGE

CAP_BATTERYPERCENTAGE

Description

When used with MSG_GET, return the percentage of battery power level on camera. If -1 is returned, it indicates that the battery is not present.

Application

Use this capability with MSG_GET to indicate to the user about the battery power status. It is recommended to use CAP_POWERSUPPLY to identify the power source first.

Source

- 2 indicates that the available power is infinite.
- 1 indicates that the device cannot report the remaining battery power.
- 0 to 100 indicates the percentage of battery life remaining.
- If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.
- If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY/ MSG_QUERY SUPPORT)

Values

Type:	TW_INT16
Default Value:	None
Allowed Values:	-2, -1, 0 to 100.
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_SET:	Not allowed
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None. Highly recommended for digital cameras that are equipped with batteries.

Source Required Operations

MSG_GET

See Also

CAP_POWERSUPPLY,
CAP_BATTERYMINUTES

CAP_CAMERAENABLED

Description

If set to true the device will deliver images from the current camera.

Source

This feature depends on “camera addressing”, the ability to address elements in the device responsible for the various color spaces. To reduce ambiguity the driver must support either DAT_FILESYSTEM or CAP_CAMERASIDE, and must specifically address the desired camera, even if the device is simplex.

If CAP_CAMERASIDE is supported, the application can use it to set the driver up for bottom (rear) only scanning. Set CAP_CAMERASIDE to TWCS_BOTTOM and set CAP_CAMERAENABLED to TRUE, then set CAP_CAMERASIDE to TWCS_TOP and set CAP_CAMERAENABLED to FALSE.

If DAT_FILESYSTEM is supported, then the application may be able to enter Single Document Multiple Images (SDMI) mode. In this mode the application can independently address the color, grayscale, bitonal, top and bottom cameras as supported by the driver. If the application sets CAP_CAMERAENABLED to TRUE for more than one “pixel type” on the same camera side, (for instance, color and bitonal on the front) then the driver will output multiple images for that side of the document.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Note: It is not recommended that applications mix the use of ICAP_PIXELTYPE with DAT_FILESYSTEM or CAP_CAMERASIDE. ICAP_PIXELTYPE is intended for simple applications that only want to choose color, grayscale or bitonal. Applications that want to provide bottom (rear) only scanning should use DAT_FILESYSTEM or CAP_CAMERASIDE. Applications that want to provide Single Document Multiple Images should use DAT_FILESYSTEM.

Values

Type:	TW_BOOL	
Default Value:	Dependent on ICAP_PIXELTYPE	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None

Source Required Operations

MSG_GET
MSG_GETCURRENT
MSG_GETDEFAULT
MSG_RESET
MSG_SET

See Also

CAP_CAMERASIDE
CAP_CAMERAORDER
DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY

CAP_CAMERAORDER

Description

This capability selects the order of output for Single Document Multiple Image mode based on an array of pixel types. For example, if the scanner is set up to deliver color and bitonal documents on the top (front) camera, then an array of {TWPT_RGB, TWPT_BW} will deliver first the color image, then the bitonal image, while an array of {TWPT_BW, TWPT_RGB} will deliver first the bitonal image, then the color image.

Source

Camera ordering only applies if CAP_CAMERAENABLED is set for more than one pixel type on the same camera, putting the scanner into Single Document Multiple Images mode. DAT_FILESYSTEM is required to perform the proper addressing.

The setting applies to both the top (front) and the bottom (rear), it is not allowed to have one ordering for the top and another for the bottom.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Default Value:	Scanner specific
Allowed Values:	All applicable ICAP_PIXELTYPE values
Container for MSG_GET:	TW_ARRAY
Container for MSG_SET:	TW_ARRAY
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

MSG_GET
MSG_GETCURRENT
MSG_GETDEFAULT
MSG_RESET
MSG_SET

See Also

CAP_CAMERAENABLED
DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY

CAP_CAMERAPREVIEWUI

Description

This capability queries the Source for UI support for preview mode. If TRUE, the Source supports preview UI.

Application

Use this capability to query the preview UI support by the Source. However, the application can choose to use the Source’s UI or not even if the Source supports it.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY/ MSG_QUERY SUPPORT)

Values

Type:	TW_BOOL	
Default Value:	None	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	Not allowed.	
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None. Highly recommended for digital cameras.

Source Required Operations

MSG_GET

CAP_CAMERASIDE

Description

Provides a simpler way to independently address the top and bottom cameras in a scanning device without going through DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY.

Application

The application changes which camera it is addressing any capability that allows independent values for the top and bottom. Please note that “top” refers to the camera that captures the top of the sheet of paper (sometimes referred to as the “front”).

There is no easy way to determine if a capability supports independent values for the top and bottom, though as a general rule the ICAP_ capabilities are more likely to allow this. An application can determine support by setting one side, then testing the other side to see if it has changed.

The value of CAP_DUPLEXENABLED does not impact the ability of the application to negotiate the top and bottom values. That is, if CAP_DUPLEXENABLED is FALSE CAP_CAMERASIDE can still be set to TWCS_BOTTOM (if CAP_DUPLEX is TRUE).

Source

If set to TWCS_BOTH (the default) then DAT_CAPABILITY / MSG_SET and MSG_RESET operations apply to the top and bottom. MSG_GET operations get their data from the top camera.

If set to TWCS_TOP or TWCS_BOTTOM, and if the capability being negotiated allows separate values for the top and bottom, then only the side addressed by this capability will be changed as part of a MSG_SET or MSG_RESET, or returned as part of a MSG_GET.

If a capability does not allow separate values for the top and bottom (for instance CAP_DUPLEXENABLED), then the current value of CAP_CAMERASIDE has no impact on how it is negotiated.

If DAT_FILESYSTEM is also supported by the source, it must keep it in sync with the current value of this capability.

Consider the following sequence:

```
CAP_CAMERASIDE set to TWCS_TOP
ICAP_XRESOLUTION set to 200
CAP_CAMERASIDE set to TWCS_BOTTOM
ICAP_XRESOLUTION set to 300
CAP_CAMERASIDE set to TWCS_BOTH
```

At this point getting the value of ICAP_XRESOLUTION will return a value of 200, even though the bottom is currently set to 300. This is acceptable behavior. It is up to the application to correctly use CAP_CAMERASIDE.

Values

Type:	TW_UINT16
Default Value:	TWCS_BOTH
Allowed Values:	TWCS_BOTH
	TWCS_TOP
	TWCS_BOTTOM
Container for MSG_GET:	TW_ENUMERATION
	TW_ONEVALUE
Container for MSG_SET:	TW_ENUMERATION
	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY

CAP_CAPTION

Description

A general note about the acquired image.

Source

If not supported, the Source should return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_STR255
Default Value:	"\0"
Allowed Values:	Any string
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

CAP_AUTHOR
CAP_TIMEDATE

CAP_CLEARBUFFERS

Description

MSG_GET reports the presence of data in the scanner’s buffers. MSG_SET with a value of TWCB_CLEAR immediately clears the buffers.

Source

MSG_SET: TWCB_AUTO causes the Source to automatically clear the buffers when it transitions from state 4 to state 5, or from state 5 to state 4.

MSG_SET: TWCB_CLEAR causes the Source to immediately clear its buffers.

MSG_SET: TWCB_NOCLEAR causes the Source to preserve images in the buffers. If the Source transitions from state 4 to state 5 with images in its buffer, it will immediately report MSG_XFERREADY, and deliver those images before any new images scanned by the user.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY/ MSG_QUERY SUPPORT)

Values

Type:	TW_UINT16
Default Value:	TWCB_AUTO
Allowed Values:	TWCB_AUTO TWCB_CLEAR TWCB_NOCLEAR
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

CAP_AUTOSCAN
CAP_MAXBATCHBUFFERS

CAP_CLEARPAGE

Description

If TRUE, the Source will eject the current page being acquired from and will leave the feeder acquire area empty.

If CAP_AUTOFEED is TRUE, a fresh page will be advanced.

CAP_FEEDERENABLED must equal TRUE to use this capability.

This capability must have been negotiated as an extended capability to be used in States 5 and 6.

Application

Do a MSG_SET on this capability to advance the document in the feeder acquire area to the output area and abort all transfers pending on this page.

This capability is used in States 5 and 6 by applications controlling the Source’s feeder (usually without the Source user interface).

This capability can also be used while CAP_AUTOFEED equals TRUE to abort all remaining transfers on this page and continue with the next page.

Source

If CAP_FEEDERENABLED equals FALSE, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED (capability is not supported in current settings).

If supported, advance the document in the feeder-acquire area to the output area and abort all pending transfers from this page.

The Source will perform this action once whenever the capability is MSG_SET to TRUE. The Source should then revert the Current value to FALSE.

Values

Type:	TW_BOOL	
Default Value:	FALSE	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None

Source Required Operations

None

See Also

CAP_AUTOFEED
CAP_EXTENDED CAPS
CAP_FEEDERENABLED
CAP_FEEDERLOADED
CAP_FEEDPAGE
CAP_REWINDPAGE

CAP_CUSTOMDSDATA

Description

Allows the application to query the data source to see if it supports the new operation triplets DG_CONTROL/ DAT_CUSTOMDSDATA / MSG_GET and DG_CONTROL/ DAT_CUSTOMDSDATA / MSG_SET.

If TRUE, the source will support the DG_CONTROL/ DAT_CUSTOMDSDATA/MSG_GET message.

Source

If not supported, return TWRC_FAILURE/ TWCC_CAPUNSUPPORTED.

Values

Type:	TW_BOOL	
Default Value:	FALSE	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	Set not allowed	
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None

Source Required Operations

None

See Also

DG_CONTROL/DAT_CUSTOMDSDATA /MSG_GET

CAP_CUSTOMINTERFACEGUID

Description

Uniquely identifies an interface for a Data Source, so that an Application can properly interpret its custom content.

Application

Use the value from this capability to interpret all of the numeric values referenced in the See Also section below.

Consider the following example, which results in three GUID's, one for Vendor ABC and two for Vendor XYZ:

- Vendor ABC's Scanner models Fred and Wilma have a custom capability called CAP_MYFEATURE with a numeric value of 0x8001.
- Vendor XYZ's Scanner model Barney has a custom capability CAP_OURFEATURE with a numeric value of 0x8001, but their Scanner Model Betty has a different custom capability CAP_BETTERFEATURE with a numeric value of 0x8001.

The challenge for the Application is to know what 0x8001 means. Historically, this has been determined from the Source's TW_IDENTITY structure. But this is hard to maintain, and requires the Application to constantly update its recognition code, even in the case of Vendor ABC whose interface stays the same from one model to the next.

Using CAP_CUSTOMINTERFACEGUID the Application can immediately identity Vendor ABC's unique interface, without having to check its TW_IDENTITY structure.

Source

The Source writer is responsible for creating a GUID. This GUID guarantees that the custom numeric values have exactly the same meaning for any Source that reports that GUID.

If you need to create a GUID, but don't know how, go to the TWAIN Working Group website and click on FAQ.

Values

Type:	TW_STR255
Default Value:	Same as the current value
Allowed Values:	A string in GUID format {XXXXXXXX-XXXX-XXXX-XXXX-XXXXXXXXXXXXX}
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

MSG_GET, MSG_GETCURRENT, MSG_GETDEFAULT, MSG_QUERY SUPPORT

See Also

TWDE_CUSTOMEVENTS, DAT_CUSTOMBASE, MSG_CUSTOMBASE, CAP_CUSTOMBASE,
TWRC_CUSTOMBASE, TWCC_CUSTOMBASE

CAP_DEVICEEVENT

Description

MSG_SET selects which events the Application wants the Source to report. MSG_GET gets the current setting. MSG_RESET resets the capability to the empty array (no events set).

TWDE_CHECKAUTOMATICCAPTURE:	The automatic capture settings on the device have been changed by the user.
TWDE_CHECKBATTERY:	The status of the battery has changed.
TWDE_CHECKFLASH:	The flash setting on the device has been changed by the user.
TWDE_CHECKPOWERSUPPLY:	The power supply has been changed (for instance, the user may have just connected AC to a device that was running on battery power).
TWDE_CHECKRESOLUTION:	The x/y resolution setting on the device has been changed by the user.
TWDE_DEVICEADDED:	The user has added a device (for instance a memory card in a digital camera).
TWDE_DEVICEOFFLINE:	A device has become unavailable, but has not been removed.
TWDE_DEVICEREADY:	The device is ready to capture an image.
TWDE_DEVICEREMOVED:	The user has removed a device.
TWDE_IMAGECAPTURED:	The user has captured an image to the device's internal storage.
TWDE_IMAGEDELETED:	The user has removed an image from the device's internal storage.
TWDE_PAPERDOUBLEFEED:	Two or more sheets of paper have been fed together.
TWDE_PAPERJAM:	The device's document feeder has jammed.
TWDE_LAMPFAILURE:	The device's light source has failed.
TWDE_CHECKDEVICEONLINE:	The device has been turned off and on.
TWDE_POWERSAVE:	The device has powered down to save energy.
TWDE_POWERSAVENOTIFY:	The device is about to power down to save energy.
TWDE_CUSTOMEVENTS:	Baseline for events specific to a given Source.

Application

Set all values and process the TWRC_CHECKSTATUS (if returned) to identify those items supported by the Source.

Source

The startup default must be an empty array. Generate TWRC_CHECKSTATUS and remove unsupported events when an Application requests events not supported by the Source.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Please note that the actions of an Application must never directly generate a device event. For instance, if the user deletes an image using the controls on the device, then the Source should generate an event. If, however, an Application deletes an image in the device (using DG_CONTROL / DAT_FILESYSTEM / MSG_DELETE), then the Source must not generate an event.

Values

Type:	TW_UINT16
Default Value:	(empty array)
Allowed Values:	TWDE_CHECKAUTOMATICCAPTURE TWDE_CHECKBATTERY TWDE_CHECKDEVICEONLINE TWDE_CHECKFLASH TWDE_CHECKPOWERSUPPLY TWDE_CHECKRESOLUTION TWDE_DEVICEADDED TWDE_DEVICEOFFLINE TWDE_DEVICEREADY TWDE_DEVICEREMOVED TWDE_IMAGECAPTURED TWDE_IMAGEDELETED TWDE_PAPERDOUBLEFEED TWDE_PAPERJAM TWDE_LAMPFAILURE TWDE_POWERSAVE TWDE_POWERSAVENOTIFY TWDE_CUSTOMEVENTS 0x8000
Container for MSG_GET:	TW_ARRAY
Container for MSG_SET:	TW_ARRAY
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

DG_CONTROL / DAT_NULL / MSG_DEVICEEVENT
DG_CONTROL / DAT_DEVICEEVENT / MSG_GET

[Device Events Article](#)

CAP_DEVICEONLINE

Description

If TRUE, the physical hardware (e.g., scanner, digital camera, image database, etc.) that represents the image source is attached, powered on, and communicating.

Application

This capability can be issued at any time to determine the availability of the image source hardware.

Source

The receipt of this capability request should trigger a test of the status of the physical link to the image source. The source should not assume that the link is still active since the last transaction, but should issue a transaction that actively tests this condition.

Values

Type:	TW_BOOL	
Default Value:	None	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	MSG_SET not allowed	
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

All image Sources

Source Required Operations

MSG_GET / CURRENT / DEFAULT

CAP_DEVICETIMEDATE

Description

The date and time of the device’s clock.

Managed in the form “YYYY/MM/DD HH:mm:ss:sss” where YYYY is the year, MM is the numerical month, DD is the numerical day, HH is the hour, mm is the minute, SS is the second, and sss is the millisecond.

Source

The internal date and time of the device. Be sure to leave the space between the ending of the date and the beginning of the time fields. All fields must be specified for MSG_SET.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY/ MSG_QUERY SUPPORT)

Values

Type:	TW_STR32
Default Value:	No Default
Allowed Values:	Any date
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_TIMEDATE

CAP_DUPLEX

Description

This indicates whether the scanner supports duplex. If so, it further indicates whether one-path or two-path duplex is supported.

Application

Application can send MSG_GET to find out whether the scanner supports duplex.

Source

Source should determine level of duplex support returning the values accordingly.

Values

Type:	TW_UINT16
Default Value:	TWDX_NONE
Allowed Values:	TWDX_NONE TWDX_1PASSDUPLEX TWDX_2PASSDUPLEX
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_SET:	Not allowed.
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

-

See Also

CAP_DUPLEXENABLED

CAP_DUPLEXENABLED

Description

The user can set the duplex option to be TRUE or FALSE. If TRUE, the scanner scans both sides of a paper; otherwise, the scanner will scan only one side of the image.

Application

Application should send MSG_GETCURRENT to determine if the duplex option is enabled or not.

Source

Source should return TRUE or FALSE based on the level of duplex support; otherwise, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_BOOL	
Default Value:	FALSE	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None

Source Required Operations

-

See Also

CAP_DUPLEX

CAP_ENABLEDSUIONLY

Description

Allows an application to query a source to see if it implements the new user interface settings dialog. If a source reports that it has the capability CAP_ENABLEDSUIONLY, then it must implement the operation triplet DG_CONTROL/ DAT_USERINTERFACE/ MSG_ENABLEDSUIONLY to display the source user interface without acquiring an image.

If TRUE, the source will support the DG_CONTROL/ DAT_USERINTERFACE / MSG_ENABLEDSUIONLY message.

Source

If not supported, return TWRC_FAILURE/ TWCC_CAPUNSUPPORTED.

Values

Type:	TW_BOOL	
Default Value:	FALSE	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	Set not allowed	
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None.

Source Required Operations

None

See Also

DG_CONTROL/DAT_USERINTERFACE/MSG_ENABLEDSUIONLY

CAP_ENDORSER

Description

Allows the application to specify the starting endorser / imprinter number. All other endorser/ imprinter properties should be handled through the data source’s user interface.

The user can set the starting number for the endorser.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT32
Default Value:	0
Allowed Values:	Any value
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

-

See Also

None

CAP_EXTENDED CAPS

Description

Allows the application and Source to negotiate capabilities to be used in States 5 and 6.

Application

MSG_GETCURRENT provides a list of all capabilities which the Source and application have agreed to negotiate in States 5 and 6.

MSG_GET provides a list of all capabilities the Source is willing to negotiate in States 5 and 6.

MSG_SET specifies which capabilities the application wants to negotiate in States 5 and 6.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	Any xCAP_xxxx
Container for MSG_GET:	TW_ARRAY
Container for MSG_SET:	TW_ARRAY
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

CAP_SUPPORTED CAPS

CAP_FEEDERALIGNMENT

Description

Helps the Application determine any special actions it may need to take when negotiating frames with the Source.

TWFA_NONE:	The alignment is free-floating. Applications should assume that the origin for frames is on the left.
TWFA_LEFT:	The alignment is to the left.
TWFA_CENTER:	The alignment is centered. This means that the paper will be fed in the middle of the ICAP_PHYSICALWIDTH of the device. If this is set, then the Application should calculate any frames with a left offset of zero.
TWFA_RIGHT:	The alignment is to the right.

Application

The Application can use this to determine if it must center the framing information sent to the Source. With some Sources it might be possible for the Application to select whether the paper is center fed or not.

Source

Use this capability to report the state of the feeder.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	TWFA_NONE TWFA_LEFT TWFA_CENTER TWFA_RIGHT
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE, if supported
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

CAP_FEEDERENABLED

Description

If **TRUE**, Source must acquire data from the document feeder acquire area and other feeder capabilities can be used. If **FALSE**, Source must acquire data from the non-feeder acquire area and no other feeder capabilities can be used.

Application

The application should **MSG_SET** this capability to **TRUE** before attempting to use any other feeder capabilities. This sets the current acquire area to the feeder area (it may not be a different physical area on some Sources).

The application can **MSG_SET** this capability to **FALSE** to use the Source's non-feeder acquisition area and disallow the further use of feeder capabilities.

Source

This setting should reflect the current acquire area:

If **TRUE**, feeder acquire area should be used

If **FALSE**, use non-feeder acquire area

Usually, the feeder acquire area and non-feeder acquire area of the Source will be the same. For example, a flatbed scanner may feed a page onto the flatbed platen then scanning always takes place from the platen.

The counter example is a flatbed scanner that moves the scan bar over the platen when **CAP_FEEDERENABLED** is **FALSE**, but moves the paper over the scan bar when it is **TRUE**.

Default Support Guidelines for Sources

- Flatbed scanner (without an optional ADF installed) - Default to **FALSE**. Do not allow setting to **TRUE** (return **TWRC_FAILURE** / **TWCC_BADVALUE**) but support the capability (never return **TWRC_FAILURE** / **TWCC_CAPUNSUPPORTED**).
- A device that uses the same acquire area for feeder and non-feeder, and has a feeder installed - Default to **TRUE** and allow settings to **TRUE** or **FALSE** (meaning allow or don't allow other feeder capabilities).
- A device that operates differently when acquiring from the feeder and non-feeder areas (for example, physical pages sizes are different) - Default to preferred area and allow setting to either **TRUE** or **FALSE**.
- A sheet feed scanner or image database - Default to **TRUE** (meaning there is only one acquire area - the feeder area) and do not allow setting to **FALSE** (return **TWRC_FAILURE** / **TWCC_BADVALUE**).
- A handheld scanner would not support this capability (return **TWRC_FAILURE** / **TWCC_CAPUNSUPPORTED**).

Values

Type:	TW_BOOL	
Default Value:	No Default	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

All Sources with feeder devices

Source Required Operations

MSG_GET/CURRENT/DEFAULT

See Also

- CAP_AUTOFEED
- CAP_CLEARPAGE
- CAP_FEEDERLOADED
- CAP_FEEDERPOCKET
- CAP_FEEDERPREP
- CAP_FEEDPAGE
- CAP_REWINDPAGE

CAP_FEEDERLOADED

Description

Reflect whether there are documents loaded in the Source’s feeder.

Application

Used by application to inquire whether there are documents loaded in the Source’s feeder.

CAP_FEEDERENABLED must equal TRUE to use this capability.

Source

If CAP_FEEDERENABLED equals FALSE, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED (capability is not supported in current settings).

If CAP_FEEDERENABLED equals TRUE, return the status of the feeder (documents loaded = TRUE; no documents loaded = FALSE).

The Source is responsible for reporting instructions to users on using the device. This includes instructing the user to place documents in the feeder when CAP_FEEDERLOADED equals FALSE and the application has requested a feed page (manually or automatically).

Values

Type:	TW_BOOL	
Default Value:	No Default	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	MSG_SET not allowed	
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

All Sources with feeder devices

Source Required Operations

MSG_GET/CURRENT/DEFAULT

See Also

CAP_AUTOFEED
CAP_CLEARPAGE
CAP_FEEDERENABLED
CAP_FEEDPAGE
CAP_REWINDPAGE

CAP_FEEDERORDER

Description

TWFO_FIRSTPAGEFIRST if the feeder starts with the top of the first page.
TWFO_LASTPAGEFIRST is the feeder starts with the top of the last page.

Application

An Application can use this to determine if it should reorganize the stream of images received from a Source.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY/ MSG_QUERY SUPPORT)

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	TWFO_FIRSTPAGEFIRST TWFO_LASTPAGEFIRST
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE, if supported
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

CAP_FEEDERENABLED

CAP_FEEDERPOCKET

Description

Report what pockets are available to receive paper as it exits from the device..

Source

This capability enumerates the available output or collation pockets on the device.
TWFP_POCKET1 - TWFP_POCKET16 are organized from top to bottom and left to right, facing in the direction of the motion of the paper.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Allowed Values:	TWFP_POCKET1 - TWFP_POCKET16 TWFP_POCKETERROR
Container for MSG_GET:	TW_ARRAY
Container for MSG_SET:	TW_ARRAY
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

MSG_GET

See Also

CAP_FEEDERENABLED
CAP_MICREENABLED

CAP_FEEDERPREP

Description

Improve the movement of paper through a scanner ADF.

Source

If CAP_FEEDERENABLED is TRUE, and CAP_FEEDERPREP is TRUE, then the scanner will perform any action needed to improve the movement of paper through the transport.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_BOOL
Default Value:	FALSE
Allowed Values:	TRUE or FALSE
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

MSG_GET
MSG_GETCURRENT
MSG_GETDEFAULT
MSG_RESET
MSG_SET

See Also

CAP_FEEDERENABLED
CAP_MICREENABLED

CAP_FEEDPAGE

Description

If TRUE, the Source will eject the current page and advance the next page in the document feeder into the feeder acquire area.

If CAP_AUTOFEED is TRUE, the same action just described will occur and CAP_AUTOFEED will remain active.

CAP_FEEDERENABLED must equal TRUE to use this capability.

This capability must have been negotiated as an extended capability to be used in States 5 and 6.

Application

Do a MSG_SET to TRUE on this capability to advance the next document in the feeder to the feeder acquire area.

This capability is used in States 5 and 6 by applications controlling the Source’s feeder (usually without the Source’s user interface).

This capability can also be used while CAP_AUTOFEED equals TRUE to abort all remaining transfers on this page and continue with the next page.

Source

If CAP_FEEDERENABLED equals FALSE, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED (capability is not supported in current settings).

If supported, advance the document in the feeder-acquire area to the output area and abort all pending transfers from this page.

Advance the next page in the input area to the feeder acquire area. If there are no documents in the input area, return: TWRC_FAILURE / TWCC_BADVALUE.

The Source will perform this action once whenever the capability is MSG_SET to TRUE. The Source should then revert the Current value to FALSE.

Values

Type:	TW_BOOL	
Default Value:	FALSE	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None

Source Required Operations

None

See Also

CAP_AUTOFEED
CAP_CLEARPAGE
CAP_EXTENDED CAPS
CAP_FEEDERENABLED
CAP_FEEDERLOADED
CAP_REWINDPAGE

CAP_INDICATORS

Description

If `TRUE`, the Source displays a progress indicator during acquisition and transfer, regardless of whether the Source's user interface is active. If `FALSE`, the progress indicator is suppressed if the Source's user interface is inactive.

The Source displays device-specific instructions and error messages if either the user interface or progress indicator is turned on. In this case it returns `TWCC_OPERATIONERROR` to alert the application that it handled the error, and communicated the problem to the user.

If both the user interface and progress indicator are turned off, then the Source never displays any message to the user, even if `TWCC_OPERATIONERROR` is returned. Messages to the user are under the sole control of the Application.

Application

If the application plans to enable the Source with `TW_USERINTERFACE`. `ShowUI = FALSE`, it can also suppress the Source's progress indicator by using this capability.

Source

If not supported, return `TWRC_FAILURE / TWCC_CAPUNSUPPORTED`.

Values

Type:	TW_BOOL	
Default Value:	TRUE	
Allowed Values:	TRUE or FALSE	
Container for <i>MSG_GET</i> :	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for <i>MSG_SET</i> :	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for <i>MSG_QUERY SUPPORT</i> :	TW_ONEVALUE	

Required By

None

Source Required Operations

None

See Also

DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLEDS

CAP_JOBCONTROL

Description

Allows multiple jobs in batch mode. The application can decide how the job can be processed, according to the flags listed below.

TWJC_NONE	No job control.
TWJC_JSIC	Detect and include job separator and continue scanning.
TWJC_J SIS	Detect and include job separator and stop scanning.
TWJC_JSXC	Detect and exclude job separator and continue scanning.
TWJC_JSXS	Detect and exclude job separator and stop scanning.

If application selects options other than none, it should check the JCL field of the new PENDINGXFERS data.

To distinguish between jobs, a job separator sheet containing patch code can be inserted. If the application knows the how to save different jobs, the TWJC_JSIC or TWJC_JSXC can be used. When this job separator is detected, the application will give a separate name for each job. If the application does not know how to save different jobs, it can use TWJC_J SIS or TWJC_JSXS to stop scanning and ask the user for different job name.

Source

If not supported, return TWRC_FAILURE/ TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Default Value:	TWJC_NONE
Allowed Values:	TWJC_NONE TWJC_JSIC TWJC_J SIS TWJC_JSXC TWJC_JSXS
Container for MSG_GET:	TW_ONEVALUE/ TW_ENUMERATION
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

MSG_PENDINGXFER

CAP_LANGUAGE

Description

Allows Application and Source to identify which languages they have in common for the exchange of string data, and to select the language of the internal UI.

Note: Since the TWLG_xxxx codes include language and country data, there is no separate capability for selecting the country.

Application

In multi-lingual environments, it is the responsibility of the Application to recall the last selected language for a given User.

Source

The current value of this setting specifies the language used by the Source (and possibly the device). The Source must first default to the Application’s current language. If that fails then it must default to the User’s Locale (c.f., the Win32 call GetLocaleInfo()). If that fails then the Source should make the best choice it can, preferably using a common secondary language (i.e., English, French...).

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL /DAT_CAPABILITY/ MSG_QUERY SUPPORT)

Note:

- TWLG_ARABIC_UAE is for the United Arabic Emirates.
- TWLG_CHINESE_PRC is for the People’s Republic of China

Values

Type:	TW_UINT16
Default Value:	In order of priority: 1) appIdentity->Version.Language 2) TWLG_USERLOCALE 3) Source’s choice
Allowed Values:	TWLG_USERLOCALE // pre 1.8 values... TWLG_DAN TWLG_DUT TWLG_ENG TWLG_FCF TWLG_FIN TWLG_FRN

TWLG_GER
 TWLG_ICE
 TWLG_ITN
 TWLG_NOR
 TWLG_POR
 TWLG_SPA
 TWLG_SWE
 TWLG_USA
// 1.8 should use these...
 TWLG_AFRIKAANS
 TWLG_ALBANIA
 TWLG_ARABIC
 TWLG_ARABIC_ALGERIA
 TWLG_ARABIC_BAHRAIN
 TWLG_ARABIC_EGYPT
 TWLG_ARABIC_IRAQ
 TWLG_ARABIC_JORDAN
 TWLG_ARABIC_KUWAIT
 TWLG_ARABIC_LEBANON
 TWLG_ARABIC_LIBYA
 TWLG_ARABIC_MOROCCO
 TWLG_ARABIC_OMAN
 TWLG_ARABIC_QATAR
 TWLG_ARABIC_SAUDIARABIA
 TWLG_ARABIC_SYRIA
 TWLG_ARABIC_TUNISIA
 TWLG_ARABIC_UAE
 TWLG_ARABIC_YEMEN
 TWLG_BASQUE
 TWLG_BYELORUSSIAN
 TWLG_BULGARIAN
 TWLG_CATALAN
 TWLG_CHINESE
 TWLG_CHINESE_HONGKONG
 TWLG_CHINESE_PRC
 TWLG_CHINESE_SINGAPORE
 TWLG_CHINESE_SIMPLIFIED
 TWLG_CHINESE_TAIWAN
 TWLG_CHINESE_TRADITIONAL
 TWLG_CROATIA
 TWLG_CZECH
 TWLG_DANISH
 TWLG_DUTCH
 TWLG_DUTCH_BELGIAN
 TWLG_ENGLISH
 TWLG_ENGLISH_AUSTRALIAN
 TWLG_ENGLISH_CANADIAN
 TWLG_ENGLISH_IRELAND
 TWLG_ENGLISH_NEWZEALAND
 TWLG_ENGLISH_SOUTHAFRICA
 TWLG_ENGLISH_UK
 TWLG_ENGLISH
 TWLG_ESTONIAN
 TWLG_FAEROESE

TWLG_FARSI
TWLG_FINNISH
TWLG_FRENCH
TWLG_FRENCH_BELGIAN
TWLG_FRENCH_CANADIAN
TWLG_FRENCH_LUXEMBOURG
TWLG_FRENCH_SWISS
TWLG_GERMAN
TWLG_GERMAN_AUSTRIAN
TWLG_GERMAN_LUXEMBOURG
TWLG_GERMAN_LIECHTENSTEIN
TWLG_GERMAN_SWISS
TWLG_GREEK
TWLG_HEBREW
TWLG_HUNGARIAN
TWLG_ICELANDIC
TWLG_INDONESIAN
TWLG_ITALIAN
TWLG_ITALIAN_SWISS
TWLG_JAPANESE
TWLG_KOREAN
TWLG_KOREAN_JOHAB
TWLG_LATVIAN
TWLG_LITHUANIAN
TWLG_NORWEGIAN
TWLG_NORWEGIAN_BOKMAL
TWLG_NORWEGIAN_NYNORSK
TWLG_POLISH
TWLG_PORTUGUESE
TWLG_PORTUGUESE_BRAZIL
TWLG_ROMANIAN
TWLG_RUSSIAN
TWLG_SERBIAN_LATIN
TWLG_SLOVAK
TWLG_SLOVENIAN
TWLG_SPANISH
TWLG_SPANISH_MEXICAN
TWLG_SPANISH_MODER
TWLG_SWEDISH
TWLG_THAI
TWLG_TURKISH
TWLG_UKRANIAN
TWLG_ASSAMESE
TWLG_BENGALI
TWLG_BIHARI
TWLG_BODO
TWLG_DOGRI
TWLG_GUJARATI
TWLG_HARYANVI
TWLG_HINDI
TWLG_KANNADA
TWLG_KASHMIRI
TWLG_MALAYALAM
TWLG_MARATHI

TWLG_MARWARI
TWLG_MEGHALAYAN
TWLG_MIZO
TWLG_NAGA
TWLG_ORISSI
TWLG_PUNJABI
TWLG_PUSHTU
TWLG_SERBIAN_CYRILLIC
TWLG_SIKKIMI
TWLG_SWEDISH_FINLAND
TWLG_TAMIL
TWLG_TELUGU
TWLG_TRIPURI
TWLG_URDU
TWLG_VIETNAMESE

Container for *MSG_GET*: TW_ENUMERATION,
TW_ONEVALUE

Container for *MSG_SET*: TW_ENUMERATION,
TW_ONEVALUE

Container for *MSG_QUERY SUPPORT*: TW_ONEVALUE

Required By

None

Source Required Operations

None

CAP_MAXBATCHBUFFERS

Description

Describes the number of pages that the scanner can buffer when CAP_AUTOSCAN is enabled.

Application

MSG_GET returns the supported values

MSG_SET sets the current number pages to be buffered (if the Source allows this to be set)

Source

If supported, report the maximum batch buffer settings during MSG_GET. If MSG_SET is supported, limit batch buffers to the requested value for future transfers.

If not supported, return TWRC_FAILURE/ TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_UINT32
Default Value:	No Default
Allowed Values:	1 to 2 ³² -1
Container for MSG_GET:	TW_ONEVALUE TW_ENUMERATION TW_RANGE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

CAP_AUTOSCAN
CAP_CLEARBUFFERS

CAP_MICRENABLED

Description

Get this capability to determine if the Source supports check scanning. If set to TRUE check scanning is enabled, if set to FALSE check scanning is disabled.

Source

When disabled the scanner ignores all related capabilities (refer to the See Also section).

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_BOOL
Default Value:	FALSE
Allowed Values:	TRUE or FALSE
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

MSG_GET
MSG_GETCURRENT
MSG_GETDEFAULT
MSG_RESET
MSG_SET

See Also

CAP_FEEDERPREP
CAP_FEEDERPOCKET
DG_CONTROL / DAT_EXTIMAGEINFO / MSG_GET

CAP_PAPERDETECTABLE

Description

This capability determines whether the device has a paper sensor that can detect documents on the ADF or Flatbed.

Application

If the source returns FALSE, the application should not rely on values such as CAP_FEEDERLOADED, and continue as if the paper is loaded.

Source

If supported, the source is responsible for detecting whether document is loaded or not.

If not supported, return TWRC_FAILURE/ TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL/DAT_CAPABILITY/MSG_QUERY SUPPORT)

Values

Type:	TW_BOOL	
Default Value:	TRUE	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	MSG_SET not allowed	
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None

Source Required Operations

None

See Also

CAP_FEEDERLOADED

CAP_POWERSAVETIME

Description

When used with MSG_SET, set the camera power down timer in seconds. When used with MSG_GET, return the current setting of the power down time.

Application

Use this capability with MSG_SET to set the user selected camera power down time, when no activity is detected by the camera. The default value of -1 means no power down, power is always on.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_INT32
Default Value:	-1
Allowed Values:	>= -1
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None. Highly recommended for digital cameras. MSG_GET, MSG_SET, MSG_RESET

Source Required Operations

-

See Also

-

CAP_POWERSUPPLY

Description

MSG_GET reports the kinds of power available to the device. MSG_GETCURRENT reports the current power supply in use.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY/ MSG_QUERY SUPPORT)

Values

Type:	TW_UINT16
Default Value:	No default
Allowed Values:	TWPS_EXTERNAL TWPS_BATTERY
Container for MSG_GET:	TW_ENUMERATION, TW_ONEVALUE
Container for MSG_SET:	MSG_SET not allowed
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

CAP_PRINTER

Description

MSG_GET returns the current list of available printer devices, along with the one currently being used for negotiation. MSG_SET selects the current device for negotiation, and optionally constrains the list. MSG_RESET restores all the available devices (useful after MSG_SET has been used to constrain the list).

Top/Bottom refer to duplex devices, and indicate if the printer is writing on the top or the bottom of the sheet of paper. Simplex devices use the top settings.

Before/ After indicates whether printing occurs before or after the sheet of paper has been scanned.

Application

Use this capability to determine which printers are available for negotiation, and to select a specific printer prior to negotiation.

Source

Imprinters are used to print data on documents at the time of scanning, and may be used for any purpose. Endorsers are more specific in nature, stamping some kind of proof of scanning on the document. Applications may opt to use imprinters for endorsing documents.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	TWPR_IMPRINTERTOPBEFORE TWPR_IMPRINTERTOPAFTER TWPR_IMPRINTERBOTTOMBEFORE TWPR_IMPRINTERBOTTOMAFTER TWPR_ENDORSERTOPBEFORE TWPR_ENDORSERTOPAFTER TWPR_ENDORSERBOTTOMBEFORE TWPR_ENDORSERBOTTOMAFTER
Container for MSG_GET:	TW_ENUMERATION, TW_ONEVALUE
Container for MSG_SET:	TW_ENUMERATION, TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

CAP_PRINTERENABLED
CAP_PRINTERINDEX
CAP_PRINTERMODE
CAP_PRINTERSTRING
CAP_PRINTERSUFFIX

CAP_PRINTERENABLED

Description

Turns the current CAP_PRINTER device on or off.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_BOOL	
Default Value:	FALSE	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None

Source Required Operations

None

See Also

CAP_PRINTER
CAP_PRINTERINDEX
CAP_PRINTERMODE
CAP_PRINTERSTRING
CAP_PRINTERPREFIX

CAP_PRINTERINDEX

Description

The User can set the starting number for the current CAP_PRINTER device.

Source

This value allows the user to set the starting page number for the current CAP_PRINTER device.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_UINT32
Default Value:	0
Allowed Values:	Any values.
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

See Also

CAP_PRINTER
CAP_PRINTERENABLED
CAP_PRINTERMODE
CAP_PRINTERSTRING
CAP_PRINTERSUFFIX

CAP_PRINTERMODE

Description

Specifies the appropriate current CAP_PRINTER device mode.

Note:

- TWPM_SINGLESTRING specifies that the printed text will consist of a single string.
- TWPM_MULTISTRING specifies that the printed text will consist of an enumerated list of strings to be printed in order.
- TWPM_COMPOUNDSTRING specifies that the printed string will consist of a compound of a String followed by a value followed by a suffix string.

Application

Negotiate this capability to specify the mode of printing to use when the current CAP_PRINTER device is enabled.

Source

If supported, use the specified mode for future image acquisitions.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_UINT16
Default Value:	TWPM_SINGLESTRING
Allowed Values:	TWPM_SINGLESTRING TWPM_MULTISTRING TWPM_COMPOUNDSTRING
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

CAP_PRINTER
CAP_PRINTERENABLED
CAP_PRINTERINDEX
CAP_PRINTERSTRING
CAP_PRINTERSUFFIX

CAP_PRINTERSTRING

Description

Specifies the string(s) that are to be used in the string component when the current CAP_PRINTER device is enabled.

Application

Negotiate this capability to specify the string or strings to be used for printing (depending on printer mode). Use enumeration to print multiple lines of text, one line per string in the enumerated list. Be sure to check the status codes if attempting multiple lines, since not all devices support this feature.

Source

If supported, use the specified string for printing during future acquisitions.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_STR255
Default Value:	No Default
Allowed Values:	Any string
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

CAP_PRINTER
CAP_PRINTERENABLED
CAP_PRINTERINDEX
CAP_PRINTERMODE
CAP_PRINTERSUFFIX

CAP_PRINTER_SUFFIX

Description

Specifies the string that shall be used as the current CAP_PRINTER device’s suffix.

Application

Negotiate this capability to specify the string that is used as the suffix for printing if TWPM_COMPOUNDSTRING is used.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY_SUPPORT)

Values

Type:	TW_STR255
Default Value:	No Default
Allowed Values:	Any string
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY_SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

CAP_PRINTER
CAP_PRINTERENABLED
CAP_PRINTERINDEX
CAP_PRINTERMODE
CAP_PRINTERSTRING

CAP_REACQUIREALLOWED

Description

Indicates whether the physical hardware (e.g. scanner, digital camera) is capable of acquiring multiple images of the same page without changes to the physical registration of that page.

Application

Use this capability to enable or disable modes of operation where multiple image acquisitions of the page are required. Examples: preview mode, automated image analysis mode.

Source

If supported, return TRUE if the device is capable of capturing the page image multiple times without refeeding the page or otherwise causing physical registration changes. Return FALSE otherwise.

If not supported, return TWRC_FAILURE/ TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL/DAT_CAPABILITY/MSG_QUERY SUPPORT)

Support Guidelines for Sources

- A flat bed scanner that can retain the page on the platen and moves the scan bar past the page would return TRUE.
- A sheet-fed scanner that physically moves the page past the scan bar would return FALSE.
- A hand held scanner would return FALSE.

Values

Type:	TW_BOOL	
Default Value:	No Default	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	MSG_SET not allowed	
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None

Source Required Operations

None

See Also

CAP_AUTOFEED
CAP_CLEARPAGE
CAP_FEEDERENABLED
CAP_FEEDPAGE
CAP_REWINDPAGE

CAP_REWINDPAGE

Description

If TRUE, the Source will return the current page to the input side of the document feeder and feed the last page from the output side of the feeder back into the acquisition area.

If CAP_AUTOFEED is TRUE, automatic feeding will continue after all negotiated frames from this page are acquired.

CAP_FEEDERENABLED must equal TRUE to use this capability.

This capability must have been negotiated as an extended capability to be used in States 5 and 6.

Application

This capability is used in States 5 and 6 by applications controlling the Source’s feeder (usually without the Source’s user interface).

If CAP_AUTOFEED is TRUE, the normal automatic feeding will continue after all frames of this page are acquired.

Source

If CAP_FEEDERENABLED equals FALSE, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED (capability is not supported in current settings).

If there are no documents in the output area, return: TWRC_FAILURE / TWCC_BADVALUE.

The Source will perform this action once whenever the capability is MSG_SET to TRUE. The Source should then revert the Current value to FALSE.

Values

Type:	TW_BOOL	
Default Value:	FALSE	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None

Source Required Operations

None

See Also

CAP_AUTOFEED
CAP_CLEARPAGE
CAP_EXTENDED CAPS
CAP_FEEDERENABLED
CAP_FEEDERLOADED
CAP_FEEDPAGE

CAP_SEGMENTED

Description

Describes the segmentation setting for captured images. Image segmentation occurs when either the device or the Source breaks up an image into a stream of image components (text, pictures, graphics) that must be assembled by the application to reconstruct the original document. Applications must use the DAT_EXTIMAGEINFO / TWEI_SEGMENTNUMBER field to identify pieces of an image that are associated with each other through segmentation.

Application

Applications should be able to Get/Set whether segmentation will be applied to captured images.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Default Value:	TWSG_NONE
Allowed Values:	TWSG_AUTO , TWSG_NONE
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

MSG_GET / CURRENT / DEFAULT ,
MSG_SET / RESET

See Also

DAT_EXTIMAGEINFO (TWEI_SEGMENTNUMBER)
DAT_IMAGELAYOUT
TW_IMAGELAYOUT

CAP_SERIALNUMBER

Description

A string containing the serial number of the currently selected device in the Source. Multiple devices may all report the same serial number.

Application

The value is device specific, Applications should not attempt to parse the information.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY/ MSG_QUERY SUPPORT)

Values

Type:	TW_STR255
Default Value:	No default
Allowed Values:	Any value
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_SET:	MSG_SET not allowed
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

CAP_SUPPORTEDCAPS

Description

Returns a list of all the capabilities for which the Source will answer inquiries. Does not indicate which capabilities the Source will allow to be set by the application. Some capabilities can only be set if certain setup work has been done so the Source cannot globally answer which capabilities are “set-able.”

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	Any “get-able” capability
Container for MSG_GET:	TW_ARRAY
Container for MSG_SET:	MSG_SET not allowed
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

All Sources

Source Required Operations

MSG_GET/CURRENT/DEFAULT

See Also

CAP_EXTENDED CAPS

CAP_TIMEBEFOREFIRSTCAPTURE

Description

For automatic capture, this value selects the number of milliseconds before the first picture is to be taken, or the first image is to be scanned.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_INT32
Default Value:	0
Allowed Values:	0 or greater
Container for MSG_GET:	TW_ONEVALUE, TW_RANGE
Container for MSG_SET:	TW_ONEVALUE, TW_RANGE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

CAP_AUTOMATICCAPTURE
CAP_TIMEBETWEENCAPTURES
CAP_XFERCOUNT

CAP_TIMEBETWEENCAPTURES

Description

For automatic capture, this value selects the milliseconds to wait between pictures taken, or images scanned.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_INT32
Default Value:	0
Allowed Values:	0 or greater
Container for MSG_GET:	TW_ONEVALUE, TW_RANGE
Container for MSG_SET:	TW_ONEVALUE, TW_RANGE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

CAP_AUTOMATICCAPTURE
CAP_TIMEBEFOREFIRSTCAPTURE
CAP_XFERCOUNT

CAP_TIMEDATE

Description

The date and time the image was acquired.

Note: CAP_TIMEDATE does not return the *exact* time the image was acquired; rather, it returns the *closest available approximation* of the time the physical phenomena represented by the image was recorded. If the application needs the exact time of acquisition, the application should generate that value itself during the image acquisition procedure.

Stored in the form “YYYY/MM/DD HH:mm:SS.sss” where YYYY is the year, MM is the numerical month, DD is the numerical day, HH is the hour, mm is the minute, SS is the second, and sss is the millisecond.

This capability must be negotiated during State 7 before the call to the DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER triplet. It must also be listed in the CAP_EXTENDEDCAPS capability by the data source.

Source

The time and date when the image was originally acquired (when the Source entered State 7).

Be sure to leave the space between the ending of the date and beginning of the time fields. Pad the unused characters after the string with zeros.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_STR32
Default Value:	No Default
Allowed Values:	Any date
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_SET:	MSG_SET not allowed
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

CAP_AUTHOR
CAP_CAPTION

CAP_THUMBNAILSENABLED

Description

Allows an application to request the delivery of thumbnail representations for the set of images that are to be delivered.

Setting CAP_THUMBNAILSENABLED to TRUE turns on thumbnail mode. Images transferred thereafter will be sent at thumbnail size (exact thumbnail size is determined by the Data Source). Setting this capability to FALSE turns thumbnail mode off and returns full size images.

Application

A successful set of this capability to TRUE will cause the Source to deliver image thumbnails during normal data transfer operations. This mode remains in effect until this capability is set back to FALSE.

Source

A successful set of this capability to TRUE should enable the delivery of thumbnail images during normal data transfer. Setting this capability to FALSE will disable thumbnail delivery.

If not supported, return TWRC_FAILURE/ TWCC_CAPUNSUPPORTED.

Values

Type:	TW_BOOL	
Default Value:	FALSE (do not deliver thumbnails).	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

All Image Store Data Sources.

Source Required Operations

MSG_GET, MSG_SET, MSG_GETCURRENT, MSG_RESET

See Also

ICAP_IMAGEDATASET

CAP_UICONTROLLABLE

Description

If `TRUE`, indicates that this Source supports acquisition with the UI disabled; i.e., `TW_USERINTERFACE`'s `ShowUI` field can be set to `FALSE`. If `FALSE`, indicates that this Source can only support acquisition with the UI enabled.

Source

This capability was introduced in TWAIN 1.6. All Sources compliant with TWAIN 1.6 and above must support this capability. Sources that are not TWAIN 1.6-compliant may return `TWRC_FAILURE` / `TWCC_BADCAP` if they do not support this capability.

Application

A return value of `TWRC_FAILURE` / `TWCC_CAPUNSUPPORTED` indicates that the Source in use is not TWAIN 1.6-compliant. Therefore, the Source may ignore `TW_USERINTERFACE`'s `ShowUI` field when `MSG_ENABLEDS` is issued. See the description of `DG_CONTROL` / `DAT_USERINTERFACE` / `MSG_ENABLEDS` for more details.

Values

Type:	TW_BOOL	
Default Value:	No Default	
Allowed Values:	TRUE or FALSE	
Container for <i>MSG_GET</i> :	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for <i>MSG_SET</i> :	MSG_SET not allowed	
Container for <i>MSG_QUERYUPPORT</i> :	TW_ONEVALUE	

Required By

All Sources

See Also

`CAP_INDICATORS`
`DG_CONTROL` / `DAT_USERINTERFACE` / `MSG_ENABLEDS`

CAP_XFERCOUNT

Description

The application is willing to accept this number of images.

Application

Set this capability to the number of images you are willing to transfer per session. Common values are:

- 1 Application wishes to transfer only one image this session
- 1 Application is willing to transfer multiple images

Source

If the application limits the number of images it is willing to receive, the Source should not make more transfers available than the specified number.

Values

Type:	TW_INT16
Default Value:	-1
Allowed Values:	-1 to 2 ¹⁵
Container for <i>MSG_GET</i> :	TW_ONEVALUE
Container for <i>MSG_SET</i> :	TW_ONEVALUE
Container for <i>MSG_QUERY SUPPORT</i> :	TW_ONEVALUE

Required By

All Sources and applications

Source Required Operations

MSG_GET / CURRENT / DEFAULT ,
MSG_SET / RESET

See Also

TW_PENDINGXFERS.Count

ICAP_AUTOBRIGHT

Description

TRUE enables and FALSE disables the Source’s Auto-brightness function (if any).

Source

If TRUE, apply auto-brightness function to acquired image before transfer.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_BOOL	
Default Value:	FALSE	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None

Source Required Operations

None

See Also

ICAP_BRIGHTNESS

ICAP_AUTODISCARDBLANKPAGES

Description

Use this capability to have the Source discard blank images. The Application never sees these images during the scanning session.

TWBP_DISABLE – this must be the default state for the Source. It indicates that all images will be delivered to the Application, none of them will be discarded.

TWBP_AUTO – if this is used, then the Source will decide if an image is blank or not and discard as appropriate.

If the specified value is a positive number in the range 0 to $2^{31}-1$, then this capability will use it as the byte size cutoff point to identify which images are to be discarded. If the size of the image is less than or equal to this value, then it will be discarded. If the size of the image is greater than this value, then it will be kept so that it can be transferred to the Application.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY/ MSG_QUERY SUPPORT)

Values

Type:	TW_INT32
Default Value:	TW_DISABLE
Allowed Values:	TWBP_DISABLE TWBP_AUTO Byte count0 to $2^{31}-1$
Container for MSG_GET:	TW_ONEVALUE, TW_RANGE
Container for MSG_SET:	TW_ONEVALUE, TW_RANGE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

DAT_EXTIMAGEINFO

ICAP_AUTOMATICBORDERDETECTION

Description

Turns automatic border detection on and off.

Application

Negotiate this capability to determine the state of the AutoBorder detection.

ICAP_UNDEFINEDIMAGESIZE must be enabled for this feature to work.

Source

If supported, enable or disable automatic border detection according to the value specified. Default to FALSE for backward compatibility. For this capability to be enabled, ICAP_UNDEFINEDIMAGESIZE must be enabled.

If not supported, return TWRC_FAILURE/ TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL/DAT_CAPABILITY/MSG_QUERY SUPPORT)

Values

Type:	TW_BOOL	
Default Value:	FALSE	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None

Source Required Operations

None

See Also

ICAP_UNDEFINEDIMAGESIZE
ICAP_AUTOMATICDESKEW
ICAP_AUTOSIZE

ICAP_AUTOMATICCROPUSESFRAME

Description

Set TRUE if DAT_IMAGELAYOUT, ICAP_SUPPORTEDSIZES or ICAP_FRAMES reduces the amount of data captured from the device, potentially improving the performance of the driver, even if any automatic detection capability like ICAP_AUTOMATICBORDERDETECTION is set TRUE.

Application

If this capability reports TRUE then the Application may assume a performance benefit from specifying a cropping frame using DAT_IMAGELAYOUT, ICAP_SUPPORTEDSIZES or ICAP_FRAMES.

The Application sets the frame after turning on any automated capabilities. For instance, if the Application wants automatic border detection, but knows that the largest paper size it will receive is US Letter, then it sets ICAP_AUTOMATICBORDERDETECTION to TRUE and then sets ICAP_SUPPORTEDSIZES to TWSS_USLETTER.

Source

The Source reports TRUE if it uses the cropping frame specified by DAT_IMAGELAYOUT, ICAP_SUPPORTEDSIZES or ICAP_FRAMES to reduce the amount of data physically transferred from the device to the Source.

The Source is not obligated to exactly match the frame requested by the Application, but it should use it as a hint to improve the performance of the capture.

Values

Type:	TW_BOOL
Default Value:	(none)
Allowed Values:	TRUE or FALSE
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Operations

MSG_GET, MSG_GETCURRENT, MSG_GETDEFAULT, MSG_QUERY SUPPORT

See Also

DAT_IMAGELAYOUT, ICAP_AUTOMATICBORDERDETECTION, ICAP_FRAMES, ICAP_SUPPORTEDSIZES

ICAP_AUTOMATICLENGTHDETECTION

Description

Controls the automatic detection of the length of a document, this is intended for use with an Automatic Document Feeder.

Application

If this capability is present, but does not support TWQC_SET when MSG_QUERY SUPPORT is called, then it indicates the fixed behavior of the Source (always TRUE or always FALSE).

If this capability reports TWQC_SET, then the Application can control the automatic detection of the length of a document.

If ICAP_AUTOMATICBORDERDETECTION (which detects width and length) is set to TRUE, then this capability is ignored.

Source

If set to TRUE, the Source automatically crops the height of the image to the length of the document.

If set to FALSE (and assuming ICAP_AUTOMATICBORDERDETECTION is FALSE), the Source returns the full height specified by ICAP_FRAME or DAT_IMAGE LAYOUT, regardless of the actual height of the captured document (for instance, a check in an A4 size area).

Values

Type:	TW_BOOL
Default Value:	FALSE
Allowed Values:	TRUE or FALSE
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Operations

MSG_GET, MSG_GETCURRENT, MSG_GETDEFAULT, MSG_RESET, MSG_SET, MSG_QUERY SUPPORT

See Also

DAT_IMAGE LAYOUT, ICAP_AUTOMATICBORDERDETECTION, ICAP_FRAMES, ICAP_SUPPORTEDSIZES

ICAP_AUTOMATICCOLORENABLED

Description

The Source automatically detects the pixel type of the image and returns either a color image or a non-color image specified by `ICAP_AUTOMATICCOLORNONCOLORPIXELTYPE`.

Application

When the Application sets this capability to `TRUE`, it must be prepared to receive a mixture of color and non-color images.

Source

When this capability is `TRUE` the Source automatically determines the pixel type.

Values

Type:	TW_BOOL
Default Value:	TRUE
Allowed Values:	TRUE, FALSE
Container for <i>MSG_GET</i> :	TW_ENUMERATION, TW_ONEVALUE
Container of <i>MSG_SET</i> :	TW_ENUMERATION, TW_ONEVALUE
Container for <i>MSG_QUERY</i> SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

`MSG_GET`, `MSG_GETCURRENT`, `MSG_GETDEFAULT`, `MSG_QUERY`SUPPORT, `MSG_RESET`, `MSG_SET`

See Also

`ICAP_PIXELTYPE`, `ICAP_AUTOMATICCOLORNONCOLORPIXELTYPE`

ICAP_AUTOMATICCOLORNONCOLORPIXELTYPE

Description

Specifies the non-color pixel type to use when automatic color is enabled.

Application

ICAP_AUTOMATICCOLORENABLED must be TRUE. When it is the Application sets this capability to specify the pixel type the Source uses when transferring non-color images.

Source

When ICAP_AUTOMATICCOLORENABLED is TRUE, this capability determines the pixel type of the non-color images.

Values

Type:	TW_UINT16
Default Value:	(none)
Allowed Values:	TWPT_BW, TWPT_GRAY
Container for MSG_GET:	TW_ENUMERATION, TW_ONEVALUE
Container of MSG_SET:	TW_ENUMERATION, TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

MSG_GET, MSG_GETCURRENT, MSG_GETDEFAULT, MSG_QUERY SUPPORT, MSG_RESET, MSG_SET

See Also

ICAP_PIXELTYPE, ICAP_AUTOMATICCOLORENABLED

ICAP_AUTOMATICDESKEW

Description

Turns automatic deskew correction on and off.

Application

Negotiate this capability to enable or disable Automatic deskew.

Source

If supported, enable or disable the Automatic deskew feature according to the value specified for future transfers. Default to FALSE for backward compatibility. Some Sources may require ICAP_UNDEFINEDIMAGESIZE to be enabled.

If not supported, return TWRC_FAILURE/ TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL/DAT_CAPABILITY/MSG_QUERY SUPPORT)

Values

Type:	TW_BOOL	
Default Value:	FALSE	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None

Source Required Operations

None

See Also

ICAP_AUTOMATICBORDERDETECTION
ICAP_AUTOMATICROTATE
ICAP_AUTOSIZE
ICAP_UNDEFINEDIMAGESIZE

ICAP_AUTOMATICROTATE

Description

When TRUE this capability depends on intelligent features within the Source to automatically rotate the image to the correct position.

Application

If this capability is set to TRUE, then it must be assumed that no other correction is required (deskew, rotation, etc...); the Source is guaranteeing that it will deliver images in the correct orientation.

Source

There are no criteria for how this automatic rotation is determined. A Source may use a field of text, or some distinguishing non-text field, such as a barcode or a logo, or it may rely on form recognition to help rotate the document.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL /DAT_CAPABILITY/ MSG_QUERY SUPPORT)

Values

Type:	TW_BOOL	
Default Value:	FALSE	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None

Source Required Operations

None

See Also

ICAP_AUTOMATICDESKEW
ICAP_ORIENTATION
ICAP_ROTATION

ICAP_AUTOSIZE

Description

Force the output image dimensions to match either the current value of ICAP_SUPPORTEDSIZES or any of its current allowed values.

Source

This capability takes precedence over CAP_AUTOMATICBORDERDETECTION and ICAP_AUTOMATICLENGTHDETECTION.

When this capability is on images will have their dimensions adjusted to exactly match either the current value of ICAP_SUPPORTEDSIZES, if set to TWAS_CURRENT. Or to any of the allowed values in ICAP_SUPPORTEDSIZES, if set to TWAS_AUTO.

If set to TWAS_NONE, then no action is taken.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Default Value:	TWAS_NONE
Allowed Values:	TWAS_NONE TWAS_AUTO TWAS_CURRENT
Container for MSG_GET:	TW_ENUMERATION
Container for MSG_SET:	TW_ENUMERATION
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

MSG_GET
MSG_GETCURRENT
MSG_GETDEFAULT
MSG_RESET
MSG_SET

See Also

ICAP_AUTOMATICBORDERDETECTION
ICAP_AUTOMATICDESKEW
ICAP_ORIENTATION

ICAP_ROTATION
ICAP_SUPPORTEDSIZES

ICAP_BARCODEDETECTIONENABLED

Description

Turns bar code detection on and off.

Source

Support this capability if the scanner supports any Bar code recognition. If the device allows this feature to be turned off, then default to off. If the device does not support disabling this feature, report TRUE and disallow attempts to set FALSE.

If not supported, return TWRC_FAILURE/ TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_BOOL	
Default Value:	No Default	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None

Source Required Operations

None

See Also

ICAP_SUPPORTEDBARCODETYPES
ICAP_SUPPORTEDPATCHCODETYPES
ICAP_BARCODEMAXSEARCHPRIORITIES
ICAP_BARCODESEARCHPRIORITIES
ICAP_BARCODESEARCHMODE
ICAP_BARCODEMAXRETRIES
ICAP_BARCODETIMEOUT

ICAP_BARCODEMAXRETRIES

Description

Restricts the number of times a search will be retried if none are found on each page.

Application

Refine this capability to limit the number of times the bar code search algorithm is retried on a page that contains no bar codes.

Source

If supported, limit the number of retries the value specified.

If not supported, return TWRC_FAILURE/ TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_UINT32
Default Value:	No Default
Allowed Values:	1 to 2 ³² -1
Container for MSG_GET:	TW_ENUMERATION TW_RANGE TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_BARCODEDETECTIONENABLED
ICAP_SUPPORTEDBARCODETYPES
ICAP_SUPPORTEDPATCHCODETYPES
ICAP_BARCODEMAXSEARCHPRIORITIES
ICAP_BARCODESEARCHPRIORITIES
ICAP_BARCODESEARCHMODE
ICAP_BARCODETIMEOUT

ICAP_BARCODEMAXSEARCHPRIORITIES

Description

The maximum number of supported search priorities.

Application

Query this value to determine how many bar code detection priorities can be set.

Set this value to limit the number of priorities to speed the detection process.

Source

If bar code searches can be prioritized, report the maximum number of priorities allowed for a search.

If not supported, return TWRC_FAILURE/ TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_UINT32
Default Value:	No Default
Allowed Values:	1 to 2 ³² -1
Container for MSG_GET:	TW_ENUMERATION TW_RANGE TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_BARCODEDETECTIONENABLED
ICAP_SUPPORTEDBARCODETYPES
ICAP_SUPPORTEDPATCHCODETYPES
ICAP_BARCODESEARCHPRIORITIES
ICAP_BARCODESEARCHMODE

ICAP_BARCODEMAXRETRIES
ICAP_BARCODETIMEOUT

ICAP_BARCODESEARCHMODE

Description

Restricts bar code searching to certain orientations, or prioritizes one orientation over the other.

Application

Negotiate this capability if the orientation of bar codes is already known to the application. Refinement of this capability can speed the bar code search.

Source

If set then apply the specified refinements to future bar code searches.

If not supported, return TWRC_FAILURE/ TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	TWBD_HORZ TWBD_VERT TWBD_HORZVERT TWBD_VERTHORZ
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_BARCODEDETECTIONENABLED
ICAP_SUPPORTEDBARCODETYPES
ICAP_SUPPORTEDPATCHCODETYPES
ICAP_BARCODEMAXSEARCHPRIORITIES
ICAP_BARCODESEARCHPRIORITIES

ICAP_BARCODEMAXRETRIES
ICAP_BARCODETIMEOUT

ICAP_BARCODESEARCHPRIORITIES

Description

A prioritized list of bar code types dictating the order in which bar codes will be sought.

Application

Set this capability to specify the order and priority for bar code searching. Refining the priorities to only the bar code types of interest to the application can speed the search process.

Source

If this type of search refinement is supported, then report the current values.

If set, then limit future searches to the specified bar codes in the specified priority order.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	TWBT_3OF9 TWBT_2OF5INTERLEAVED TWBT_2OF5NONINTERLEAVED TWBT_CODE93 TWBT_CODE128 TWBT_UCC128 TWBT_CODABAR TWBT_UPCA TWBT_UPCE TWBT_EAN8 TWBT_EAN13 TWBT_POSTNET TWBT_PDF417 TWBT_2OF5INDUSTRIAL TWBT_2OF5MATRIX TWBT_2OF5DATALOGIC TWBT_2OF5IATA TWBT_3OF9FULLASCII TWBT_CODABARWITHSTARTSTOP TWBT_MAXICODE
Container for MSG_GET:	TW_ ARRAY
Container for MSG_SET:	TW_ ARRAY

Container for *MSG_QUERY*SUPPORT: TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_BARCODEDETECTIONENABLED
ICAP_SUPPORTEDBARCODETYPES
ICAP_SUPPORTEDPATCHCODETYPES
ICAP_BARCODEMAXSEARCHPRIORITIES
ICAP_BARCODESEARCHMODE
ICAP_BARCODEMAXRETRIES
ICAP_BARCODETIMEOUT

ICAP_BARCODETIMEOUT

Description

Restricts the total time spent on searching for a bar code on each page.

Application

Refine this value to tune the length of time the search algorithm is allowed to execute before giving up.

Source

If supported, limit the duration of a bar code search to the value specified.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT).

Values

Type:	TW_UINT32
Default Value:	No Default
Allowed Values:	1 to 2 ³² -1
Container for MSG_GET:	TW_ENUMERATION TW_RANGE TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_BARCODEDETECTIONENABLED
ICAP_SUPPORTEDBARCODETYPES
ICAP_SUPPORTEDPATCHCODETYPES
ICAP_BARCODEMAXSEARCHPRIORITIES
ICAP_BARCODESEARCHPRIORITIES
ICAP_BARCODESEARCHMODE
ICAP_BARCODEMAXRETRIES

ICAP_BITDEPTH

Description

Specifies the pixel bit depths for the Current value of ICAP_PIXELTYPE. For example, when using ICAP_PIXELTYPE = TWPT_GRAY, this capability specifies whether this is 8-bit gray or 4-bit gray.

This depth applies to all the data channels (for instance, the R, G, and B channels will all have this same bit depth for RGB data).

Application

The application should loop through all the ICAP_PIXELTYPES it is interested in and negotiate the ICAP_BITDEPTH(s) for each.

For all allowed settings of ICAP_PIXELTYPE

- Set ICAP_PIXELTYPE
- Set ICAP_BITDEPTH for the current ICAP_PIXELTYPE

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If the bit depth in a MSG_SET is not supported for the current ICAP_PIXELTYPE setting, return TWRC_FAILURE / TWCC_BADVALUE.

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	>=1
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

All Image Sources

Source Required Operations

MSG_GET/CURRENT/DEFAULT

See Also

ICAP_PIXELTYPE

ICAP_BITDEPTHREDUCTION

Description

Specifies the Reduction Method the Source should use to reduce the bit depth of the data. Most commonly used with ICAP_PIXELTYPE = TWPT_BW to reduce gray data to black and white.

Application

Set the capability to the reduction method to be used in future acquisitions

Also select the Halftone or Threshold to be used.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	TWBR_THRESHOLD TWBR_HALFTONE TWBR_CUSTHALFTONE TWBR_DIFFUSION
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_CUSTHALFTONE
ICAP_HALFTONES
ICAP_PIXELTYPE
ICAP_THRESHOLD

ICAP_BITORDER

Description

Specifies how the bytes in an image are filled by the Source. TWBO_MSBFIRST indicates that the leftmost bit in the byte (usually bit 7) is the byte’s Most Significant Bit.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Default Value:	TWBO_MSBFIRST
Allowed Values:	TWBO_LSBFIRST TWBO_MSBFIRST
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

All Image Sources

Source Required Operations

MSG_GET / CURRENT / DEFAULT

See Also

ICAP_BITORDERCODES

ICAP_BITORDERCODES

Description

Used for CCITT data compression only. Indicates the bit order representation of the stored compressed codes.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Default Value:	TWBO_LSBFIRST
Allowed Values:	TWBO_LSBFIRST TWBO_MSBFIRST
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_COMPRESSION

ICAP_BRIGHTNESS

Description

The brightness values available within the Source.

Application

The application can use this capability to inquire, set, or restrict the values for BRIGHTNESS used in the Source.

Source

Source should normalize the values into the range. Make sure that a '0' value is available as the Current Value when the Source starts up. If the Source's \pm range is asymmetric about the '0' value, set range maxima to ± 1000 and scale homogeneously from the '0' value in each direction. This will yield a positive range whose step size differs from the negative range's step size.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_FIX32
Default Value:	0
Allowed Values:	-1000 to +1000
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE TW_RANGE
Container for MSG_SET:	TW_ENUMERATION TW_ONEVALUE TW_RANGE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_AUTOBRIGHT
ICAP_CONTRAST

ICAP_CCITTKFACTOR

Description

Used for CCITT Group 3 2-dimensional compression. The 'K' factor indicates how often the new compression baseline should be re-established. A value of 2 or 4 is common in facsimile communication. A value of zero in this field will indicate an infinite K factor – the baseline is only calculated at the beginning of the transfer.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values:

Type:	TW_UINT16
Default Value:	4
Allowed Values:	0 to 216
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_COMPRESSION

ICAP_COLORMANAGEMENTENABLED

Description

Disables the Source’s color and gamma tables for color and grayscale images, resulting in output that that could be termed “raw”.

Application

When the Application sets this capability to FALSE, it takes responsibility for profiling the color and grayscale output of the device, and applying the desired color and gamma corrections itself. The Application is completely responsible for the quality of the finished image.

Source

When this capability is FALSE the Source turns off as much of its color and gamma correction as it can. There is no universal standard for this behavior, so it makes its best effort.

It is recommended that the Source not expose this capability unless it can do a credible job of outputting “raw” image data.

Values

Type:	TW_BOOL
Default Value:	TRUE
Allowed Values:	TRUE, FALSE
Container for MSG_GET:	TW_ONEVALUE , TW_ENUMERATION
Container of MSG_SET:	TW_ONEVALUE , TW_ENUMERATION
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

MSG_GET , MSG_GETCURRENT , MSG_GETDEFAULT , MSG_QUERY SUPPORT , MSG_RESET , MSG_SET

See Also

ICAP_PIXELTYPE

ICAP_COMPRESSION

Description

Allows the application and Source to identify which compression schemes they have in common for Buffered Memory and File transfers.

Note for File transfers:

Since only certain file formats support compression, this capability must be negotiated after setting the desired file format with `ICAP_IMAGEFILEFORMAT`.

<code>TWCP_NONE</code>	All Sources must support this.
<code>TWCP_PACKBITS</code>	Macintosh PackBits format, (can be used with TIFF or PICT)
<code>TWCP_GROUP31D,</code> <code>TWCP_GROUP31DEOL,</code> <code>TWCP_GROUP32D,</code> <code>TWCP_GROUP4</code>	Are all from the CCITT specification (now ITU), intended for document images (can be used with TIFF).
<code>TWCP_JPEG</code>	Intended for the compression of color photographs (can be used with TIFF, JFIF or SPIFF).
<code>TWCP_LZW</code>	A compression licensed by UNISYS (can be used with TIFF).
<code>TWCP_JBIG</code>	Intended for bitonal and grayscale document images (can be used with TIFF or SPIFF).
<code>TWCP_PNG</code>	This compression can only be used if <code>ICAP_IMAGEFILEFORMAT</code> is set to <code>TWFF_PNG</code> .
<code>TWCP_RLE4,</code> <code>TWCP_RLE8,</code> <code>TWCP_BITFIELDS</code>	These compressions can only be used if <code>ICAP_IMAGEFILEFORMAT</code> is set to <code>TWFF_BMP</code> .

Application

Applications must not assume that a Source can provide compressed Buffered Memory or File transfers, because many cannot. The application should use `MSG_SET` on a `TW_ONEVALUE` container to specify the compression type for future transfers.

Source

The current value of this setting specifies the compression method to be used in future transfers. If the image transfer mechanism is changed, then the allowed list must be modified to reflect the supported values. If the current value is not available on the new allowed list, then the Source must change it to its preferred value.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_UINT16
Default Value:	TWCP_NONE
Allowed Values:	TWCP_NONE TWCP_PACKBITS TWCP_GROUP31D TWCP_GROUP31DEOL TWCP_GROUP32D TWCP_GROUP4 TWCP_JPEG TWCP_LZW TWCP_JBIG TWCP_PNG TWCP_RLE4 TWCP_RLE8 TWCP_BITFIELDS
Container for MSG_GET:	TW_ENUMERATION, TW_ONEVALUE
Container for MSG_SET:	TW_ENUMERATION, TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

All Image Sources

Source Required Operations

MSG_GET / CURRENT / DEFAULT

See Also

DG_CONTROL / DAT_IMAGEMEMFILEXFER / MSG_GET
 DG_CONTROL / DAT_IMAGEMEMXFER / MSG_GET
 DG_CONTROL / DAT_IMAGEFILEXFER / MSG_GET
 CAP_XFERMECH
 ICAP_IMAGEFILEFORMAT

ICAP_CONTRAST

Description

The contrast values available within the Source.

Application

The application can use this capability to inquire, set or restrict the values for CONTRAST used in the Source.

Source

Scale the values available internally into a homogeneous range between -1000 and 1000. Make sure that a '0' value is available as the Current value when the Source starts up. If the Source's \pm range is asymmetric about the '0' value, set range maxima to ± 1000 and scale homogeneously from the '0' value in each direction. This will yield a positive range whose step size differs from the negative range's step size.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_FIX32
Default Value:	0
Allowed Values:	-1000 to +1000
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE TW_RANGE
Container for MSG_SET:	TW_ENUMERATION TW_ONEVALUE TW_RANGE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_BRIGHTNESS

ICAP_CUSTHALFTONE

Description

Specifies the square-cell halftone (dithering) matrix the Source should use to halftone the image.

Application

The application should also set ICAP_BITDEPTHREDUCTION to TWBR_CUSTHALFTONE to use this capability.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT8
Default Value:	No Default
Allowed Values:	Any rectangular array
Container for MSG_GET:	TW_ARRAY
Container for MSG_SET:	TW_ARRAY
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_BITDEPTHREDUCTION

ICAP_EXPOSURETIME

Description

Specifies the exposure time used to capture the image, in seconds.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_FIX32
Default Value:	No Default
Allowed Values:	>0
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE TW_RANGE
Container for MSG_SET:	TW_ENUMERATION TW_ONEVALUE TW_RANGE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_FLASHUSED2
ICAP_LAMPSTATE
ICAP_LIGHTPATH
ICAP_LIGHTSOURCE

ICAP_EXTIMAGEINFO

Description

Allows the application to query the data source to see if it supports the new operation triplet DG_IMAGE/ DAT_EXTIMAGEINFO/ MSG_GET.

If TRUE, the source will support the DG_IMAGE/DAT_EXTIMAGEINFO/MSG_GET message.

Note: The TWAIN API allows for an application to query the results of many advanced device/manufacture operations. The responsibility of configuring and setting up each advanced operation lies with the device’s data source user interface. Since the configuration of advanced device/manufacture-specific operations varies from manufacturer to manufacturer, placing the responsibility for setup and configuration of advanced operations allows the application to remain device independent.

Source

If not supported, return TWRC_FAILURE/ TWCC_CAPUNSUPPORTED.

Values

Type:	TW_BOOL	
Default Value:	FALSE	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None

Source Required Operations

None

See Also

DG_IMAGE/
DAT_EXTIMAGEINFO/
MSG_GET
ICAP_SUPPORTEDEXTIMAGEINFO

ICAP_FEEDERTYPE

Description

Allows the Application to set scan parameters depending upon the type of feeder.

If the Source has a general type of the feeder only, default scan parameters can depend upon the type of scan (general document or photo). In this case, negotiating this capability will allow the Source adjusting the settings accordingly. It is advised, therefore, that this capability be negotiated prior to the capabilities related to specific Source settings (like ICAP_*RESOLUTION, ICAP_PIXELTYPE, etc.) but after the other feeder-related capabilities (CAP_FEEDERENABLED, CAP_FEEDERLOADED).

Application

MSG_GET provides a list of available feeder types.
MSG_SET specifies which type of feeder to use.

Source

Use this capability to report either the types of feeders available or (in the case where there is a general type feeder only) the scan types supported through the feeder.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	TWFE_GENERAL TWFE_PHOTO
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

CAP_FEEDERENABLED
CAP_FEEDERLOADED

ICAP_FILTER

Description

Describes the color characteristic of the subtractive filter applied to the image data. Multiple filters may be applied to a single acquisition.

Source

If the Source only supports application of a single filter during an acquisition and multiple filters are specified by the application, set the current filter to the first one requested and return TWRC_CHECKSTATUS.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	TWFT_RED TWFT_GREEN TWFT_BLUE TWFT_NONE TWFT_WHITE TWFT_CYAN TWFT_MAGENTA TWFT_YELLOW TWFT_BLACK
Container for MSG_GET:	TW_ARRAY TW_ONEVALUE
Container for MSG_SET:	TW_ARRAY TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

ICAP_FLASHUSED2

Description

For devices that support flash. MSG_SET selects the flash to be used (if any). MSG_GET reports the current setting. This capability replaces ICAP_FLASHUSED, which is only able to negotiate the flash being on or off.

Application

Note that an image with flash may have a different color composition than an image without flash.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY/ MSG_QUERY SUPPORT)

Values

Type:	TW_UINT16
Default Value:	TWFL_NONE
Allowed Values:	TWFL_NONE TWFL_OFF TWFL_ON TWFL_AUTO TWFL_REDEYE
Container for MSG_GET:	TW_ENUMERATION, TW_ONEVALUE
Container for MSG_SET:	TW_ENUMERATION, TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also


ICAP_FLASHUSED

ICAP_FLIPROTATION


Description

Flip rotation is used to properly orient images that flip orientation every other image.

TWFR_BOOK The images to be scanned are viewed in book form, flipping each page from left to right or right to left.



TWFR_FANFOLD The images to be scanned are viewed in fanfold paper style, flipping each page up or down.

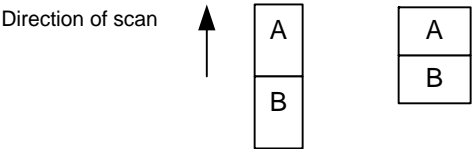

On duplex paper, the As are all located on the top, and the Bs are all located on the bottom. If ICAP_FLIPROTATION is set to TWFR_BOOK, and fanfold paper is scanned, then every B image will be upside down. Setting the capability to TWFR_FANFOLD instructs the Source to rotate the B images 180 degrees around the x-axis.

Because this capability is described to act upon every other image, it will work correctly in simplex mode, assuming that every other simplex image is flipped in the manner described above.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL /DAT_CAPABILITY/ MSG_QUERYSUPPORT)

Values

Type:	TW_UINT16
Default Value:	TWFR_BOOK
Allowed Values:	TWFR_BOOK TWFR_FANFOLD
Container for MSG_GET:	TW_ONEVALUE TW_ENUMERATION
Container for MSG_SET:	TW_ONEVALUE TW_ENUMERATION
Container for MSG_QUERYSUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

ICAP_FRAMES

Description

The list of frames the Source will acquire on each page.

Application

MSG_GET returns the size and location of all the frames the Source will acquire image data from when acquiring from each page.

MSG_GETCURRENT returns the size and location of the next frame to be acquired.

MSG_SET allows the application to specify the frames and their locations to be used to acquire from future pages.

This ICAP is most useful if the Source supports simultaneous acquisition from multiple frames. Use ICAP_MAXFRAMES to establish this ability.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_FRAME
Default Value:	No Default
Allowed Values:	Device dependent
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_MAXFRAMES
ICAP_SUPPORTEDSIZES
TW_IMAGE_LAYOUT

ICAP_GAMMA

Description

Gamma correction value for the image data.

Application

Do not use with TW_CIECOLOR, TW_GRAYRESPONSE, or TW_RGBRESPONSE data.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_FIX32
Default Value:	2.2
Allowed Values:	Any value
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

ICAP_HALFTONES

Description

A list of names of the halftone patterns available within the Source.

Application

The application may not rename any halftone pattern.

The application should also set ICAP_BITDEPTHREDUCTION to use this capability.

Values

Type:	TW_STR32
Default Value:	No Default
Allowed Values:	Any halftone name
Container for MSG_GET:	TW_ARRAY (for backwards compatibility with 1.0 only) TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ARRAY (for backwards compatibility with 1.0 only) TW_ENUMERATION TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_CUSTHALFTONE
ICAP_BITDEPTHREDUCTION
ICAP_THRESHOLD

ICAP_HIGHLIGHT

Description

Specifies which value in an image should be interpreted as the lightest “highlight.” All values “lighter” than this value will be clipped to this value. Whether lighter values are smaller or larger can be determined by examining the Current value of ICAP_PIXELFLAVOR.

Source

If more or less than 8 bits are used to describe the image, the actual data values should be normalized to fit within the 0-255 range. The normalization need not result in a homogeneous distribution if the original distribution was not homogeneous.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_FIX32
Default Value:	255
Allowed Values:	0 to 255
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE TW_RANGE
Container for MSG_SET:	TW_ENUMERATION TW_ONEVALUE TW_RANGE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_SHADOW

ICAP_ICCPROFILE

Description

Informs the application if the source has an ICC profile and can embed or link it in the current ICAP_IMAGEFILEFORMAT. Tells the source if the application would like an ICC profile embedded or linked into the image file the source will write.

Application

Use this ICAP to determine if the source supports embedding or linking of ICC profiles into files and to control whether or not the source does so.

Source

If not supported, return TWRC_FAILURE/TWCC_CAP_UNSUPPORTED. This should only be supported if ICAP_IMAGEFILEFORMAT is set to a file format that supports the embedding or linking of profiles and the source has an ICC profile it can embed.

Since the given ICAP_PIXELTYPE may not have been determined at the time this is called, the source should ignore the current ICAP_PIXELTYPE. For example, if the source has an ICC profile for color data, but not grayscale or monochrome data, it should offer values as if all pixeltypes are supported.

In the case of TWPT_SRGB, the source should embed the sRGB ICC profile to the file if told to embed a profile.

If operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CNTRLOL / DAT_CAPABILITY / MSG_QUERYSUPORT)

Values

Type:	TW_UNIT16
Default Value:	TWIC_NONE
Allowed Value:	TWIC_NONE TWIC_EMBED TWIC_LINK
Container for MSG_GET:	TW_ENUMERATION, TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERYSUPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

DG_IMAGE/ DAT_ICCPROFILE / MSG_GET

ICAP_IMAGEDATASET

Description

Gets or sets the image indices that will be delivered during the standard image transfer done in States 6 and 7. Indices are assumed to start at 1, so a TW_ONEVALUE container sets an implied range from 1 to the number specified. TW_RANGE returns are useful for those cases where the images are contiguous (5 .. 36). TW_ARRAY returns should be used were index values are discontinuous (as could be the case where the user previously set such a data set). See the note in the Values section below.

Application

A MSG_RESET operation should always be done before a MSG_GET if the application wishes to get the complete list of available images. A MSG_SET operation will define the number and order of images delivered during States 6 and 7.

Source

For MSG_GET, if a contiguous range of images are available starting from the first index (e.g., 1 .. 36) it is recommended that the TW_ONEVALUE container is used specifying just the total number of available images (e.g., 36).

If not supported, return TWRC_FAILURE/ TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT32
Default Value:	Entire range or set of available images
Allowed Values:	0 to 2 ³² -1 (for MSG_GET) 1 to 2 ³² -1 (for MSG_SET)
Container for MSG_GET:	TW_ONEVALUE TW_RANGE (see note below) TW_ARRAY (see note below)
Container for MSG_SET:	TW_ONEVALUE TW_RANGE TW_ARRAY
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Note: These container types are supported for the returning discontinuous indices that have been previously set by the application. It is highly recommended that for a initialized or reset *Image Store* device, the TW_ONEVALUE container be the only one returned by the MSG_GET operation. In other words, the data source should not expose the details of the internal memory management of the Image Store device by claiming that it has a hole in its storage locations due to user deletions. For example, a camera that currently has data for pictures 1 to 10 should report that it has 10 images available. If the user later deletes pictures 5, 7, and 9, it should now report that it has 7 images available (i.e., 1 to 7), and not claim that it has pictures 1, 2, 3, 4, 6, 8, and 10 available. To do so would

expose the internal memory management constraints of the device and serves little use but to confuse the user.

Required By

All Image Store Data Sources.

Source Required Operations

MSG_GET, MSG_SET, MSG_RESET

ICAP_IMAGEFILEFORMAT

Description

Informs the application which file formats the Source can generate (MSG_GET). Tells the Source which file formats the application can handle (MSG_SET).

TWFF_TIFF	Used for document imaging
TWFF_PICT	Native Macintosh format
TWFF_BMP	Native Microsoft format
TWFF_XBM	Used for document imaging
TWFF_JFIF	Wrapper for JPEG images
TWFF_FPX	FlashPix, used with digital cameras
TWFF_TIFFMULTI	Multi-page TIFF files
TWFF_PNG	An image format standard intended for use on the web, replaces GIF
TWFF_SPIFF	A standard from JPEG, intended to replace JFIF, also supports JBIG
TWFF_EXIF	File format for use with digital cameras.
TWFF_PDF	A file format from Adobe
TWFF_JP2	A file format from the Joint Photographic Experts Group
TWFF_DEJAVU	A file format from LizardTech
TWFF_PDFA	A file format from Adobe

Application

Use this ICAP to determine which formats are available for file transfers, and set the context for other capability negotiations such as ICAP_COMPRESSION.

Be sure to use the DG_CONTROL / DAT_SETUPFILEXFER / MSG_SET operation to specify the format to be used for a particular acquisition.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_UINT16
Default Value:	TWFF_BMP (Windows) TWFF_PICT (Macintosh)

Allowed Values:

TWFF_TIFF
 TWFF_PICT
 TWFF_BMP
 TWFF_XBM
 TWFF_JFIF
 TWFF_FPX
 TWFF_TIFFMULT
 TWFF_PNG
 TWFF_SPIFF
 TWFF_EXIF
 TWFF_PDF
 TWFF_JP2
 TWFF_JPX
 TWFF_DEVAVU
 TWFF_PDFA

Container for MSG_GET:

TW_ENUMERATION,
 TW_ONEVALUE

Container for MSG_SET:

TW_ENUMERATION,
 TW_ONEVALUE

Container for MSG_QUERY SUPPORT:

TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

DG_CONTROL / DAT_SETUPFILEXFER / MSG_SET
 DG_IMAGE / DAT_IMAGEFILEXFER / MSG_GET
 ICAP_COMPRESSION

ICAP_IMAGEFILTER

Description

For devices that support image enhancement filtering. This capability selects the algorithm used to improve the quality of the image.

Application

- TWIF_LOWPASS is good for halftone images.
- TWIF_BANDPASS is good for improving text.
- TWIF_HIGHPASS is good for improving fine lines.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY/ MSG_QUERY SUPPORT)

Values

Type:	TW_UINT16
Default Value:	TWIF_NONE
Allowed Values:	TWIF_NONE TWIF_AUTO TWIF_LOWPASS TWIF_BANDPASS TWIF_HIGHPASS TWIF_TEXT TWIF_FINELINE
Container for MSG_GET:	TW_ENUMERATION, TW_ONEVALUE
Container for MSG_SET:	TW_ENUMERATION, TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

ICAP_IMAGEMERGE

Description

Merges the front and rear image of a document in one of four orientations: front on the top, front on the bottom, front on the left or front on the right.

Application

The front and rear have the same settings. It is a customization for a source to allow different settings, for instance a front of TWPT_RGB and a rear of TWPT_BW.

The merged image can be found at an origin of (0, total-image-height / 2) or (total-image-width, 0), depending on the value of this capability.

Use the TWI_IMAGEMERGED value with DAT_EXTIMAGEINFO to determine if an image is the result of a merge.

Source

This capability only has meaning when scanning duplex.

Front or Rear	For TWIM_FRONTONTOP and TWIM_FRONTONBOTTOM the final image is twice the pixel height of the larger of the two images. The top image has its origin at the upper left hand corner. The bottom image has its origin on the left but down (total-image-height / 2) pixels.
Rear or Front	

Front or Rear	Rear or Front	For TWIM_FRONTONLEFT and TWIM_FRONTONRIGHT the final image is twice the pixel width of the larger of the two images. The left image has its origin at the upper left hand corner. The right image has its origin on the top but left (total-image-width / 2) pixels.
---------------	---------------	--

The source chooses how many differences it wants to support between the front and the rear. The only one it is obligated to deal with is differences in the width and height. In both cases the larger value must be selected, and the extra space in the smaller image filled in with some color.

If the source cannot negotiate this capability because of a difference in the front and rear settings, it returns TWCC_CAPSEQERROR.

Values

Type:	TW_UINT16
Default Value:	TWIM_NONE

Allowed Values:	TWIM_NONE, TWIM_FRONTONTOP, TWIM_FRONTONBOTTOM, TWIM_FRONTONLEFT, TWIM_FRONTONRIGHT
Container for <i>MSG_GET</i>:	TW_ENUMERATION TW_ONEVALUE
Container for <i>MSG_SET</i>:	TW_ENUMERATION TW_ONEVALUE
Container for <i>MSG_QUERY SUPPORT</i>:	TW_ONEVALUE

Required By

None

Source Operations

MSG_GET, MSG_GETCURRENT, MSG_GETDEFAULT, MSG_RESET, MSG_SET,
MSG_QUERY SUPPORT

See Also

CAP_DUPLEXENABLED, CAP_IMAGEMERGEHEIGHTTHRESHOLD, TWEI_IMAGEMERGED

ICAP_IMAGEMERGEHEIGHTTHRESHOLD

Description

Specifies a Y-Offset in ICAP_UNITS units. Front and rear images less than or equal to this value are merged according to the settings of ICAP_IMAGEMERGE. If either the front or the rear image is greater than this value, they are not merged.

Application

The Application specifies this value to help with mixed batches of different paper sizes. For instance, a value of 4.0 inches would be enough to merge check-size documents, while leaving larger paper sizes unmerged.

If ICAP_AUTOMATICDESKEW is FALSE, then this value must allow for image skew in the height. If ICAP_AUTOMATICDESKEW is TRUE, then some small amount above the expected document height is still recommended.

Source

This capability only has meaning when CAP_INDICATORS is set to a value other than TWIM_NONE.

Values

Type:	TW_FIX32
Default Value:	0.0
Allowed Values:	0.0 to ICAP_PHYSICALHEIGHT
Container for MSG_GET:	TW_ONEVALUE, TW_RANGE
Container for MSG_SET:	TW_ONEVALUE, TW_RANGE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Operations

MSG_GET, MSG_GETCURRENT, MSG_GETDEFAULT, MSG_RESET, MSG_SET, MSG_QUERY SUPPORT

See Also

CAP_INDICATORS

ICAP_JPEGPIXELTYPE

Description

Allows the application and Source to agree upon a common set of color descriptors that are made available by the Source. This ICAP is only useful for JPEG-compressed buffered memory image transfers.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	TWPT_BW TWPT_GRAY TWPT_RGB TWPT_PALETTE TWPT_CMY TWPT_CMYK TWPT_YUV TWPT_YUVK TWPT_CIEXYZ
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_COMPRESSION

ICAP_JPEGQUALITY

Description

Use this capability as a shortcut to select JPEG quantization tables that tradeoff quality versus compressed image size. Used in concert with DAT_JPEGCOMPRESSION it is possible for an Application to obtain the tables that are appropriate for varying percentages of quality within a given Source.

TWJQ_UNKNOWN is a read-only value (MSG_GET or MSG_GETCURRENT), the Application cannot set the Source to this value. This value is reported if the Application uses DAT_JPEGCOMPRESSION to select the quantization tables, and the Source is unable to resolve those tables to a percentage value.

The next three TWJQ_ values are intended as markers into the quality range, and are only applicable with MSG_SET.

MSG_GET, MSG_GETCURRENT and MSG_GETDEFAULT only return values in the range 0 – 100. If an Application wishes to map a TWJQ_ value to a corresponding value in the range 0 – 100, then it must issue a MSG_GET after a MSG_SET with one of the three TWJQ_ values.

No assumption is made about the meaning of the range 0 – 99, it may be derived from the JPEG standard or it may be optimized for the Source's device. 100, though, implies a lossless form of compression. Applications are not encouraged to use this value since it results in poor compression, as well as a format that is not currently widely supported in the industry.

TWJQ_UNKNOWN – read-only; must be the setting for this capability if the user sets the JPEG compression tables using DAT_JPEGCOMPRESSION, and the Source is not able to map the selected tables to a specific percentage of quality.

TWJQ_LOW – write-only; implies low quality; the images are at the maximum compression recommended by the Source.

TWJQ_MEDIUM – write-only; implies medium quality; the images are at the balance point between good compression and good images. This is an arbitrary setting on the part of the Source writer that is expected to best represent their device. This is the value that Applications are most encouraged to use.

TWJQ_HIGH – write-only; implies high quality; the images display the maximum quality that produces any kind of meaningful compression. Note that images at this setting are still considered to be lossy.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type: TW_INT16

Default Value:	No default
Allowed Values:	TWJQ_UNKNOWN TWJQ_LOW TWJQ_MEDIUM TWJQ_HIGH 0 - 100
Container for <i>MSG_GET</i>:	TW_ENUMERATION, TW_ONEVALUE, TW_RANGE
Container for <i>MSG_SET</i>:	TW_ENUMERATION, TW_ONEVALUE, TW_RANGE
Container for <i>MSG_QUERY SUPPORT</i>:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

DAT_JPEGCOMPRESSION

ICAP_LAMPSTATE

Description

TRUE means the lamp is currently, or should be set to ON. Sources may not support MSG_SET operations.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_BOOL	
Default Value:	No Default	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None

Source Required Operations

None

See Also

ICAP_EXPOSURETIME
ICAP_FLASHUSED2
ICAP_LIGHTPATH
ICAP_LIGHTSOURCE

ICAP_LIGHTPATH

Description

Describes whether the image was captured transmissively or reflectively.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	TWLP_REFLECTIVE TWLP_TRANSMISSIVE
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_EXPOSURETIME
ICAP_FLASHUSED2
ICAP_LAMPSTATE
ICAP_LIGHTSOURCE

ICAP_LIGHTSOURCE

Description

Describes the general color characteristic of the light source used to acquire the image.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	TWLS_RED TWLS_GREEN TWLS_BLUE TWLS_NONE TWLS_WHITE TWLS_UV TWLS_IR
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_EXPOSURETIME
ICAP_FLASHUSED2
ICAP_LAMPSTATE
ICAP_LIGHTPATH

ICAP_MAXFRAMES

Description

The maximum number of frames the Source can provide or the application can accept per page.

This is a bounding capability only. It does not establish current or future behavior.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	1 to 216
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_FRAMES
TW_IMAGELAYOUT

ICAP_MINIMUMHEIGHT

Description

Allows the source to define the minimum height (Y-axis) that the source can acquire.

Application

Source

The minimum height that the device can scan. This may be different depending on the value of CAP_FEEDERENABLED.

Values

Type:	TW_FIX32
Default Value:	No Default
Allowed Values:	0 to 32767 in ICAP_UNITS
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_SET:	MSG_SET not allowed
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

See Also

CAP_FEEDERENABLED
ICAP_PHYSICALHEIGHT
ICAP_UNITS

ICAP_MINIMUMWIDTH

Description

Allows the source to define the minimum width (X-axis) that the source can acquire.

Source

The minimum width that the device can scan. This may be different depending on the value of CAP_FEEDERENABLED.

Values

Type:	TW_FIX32
Default Value:	No Default
Allowed Values:	0 to 32767 in ICAP_UNITS
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_SET:	MSG_SET not allowed
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

See Also

CAP_FEEDERENABLED
ICAP_PHYSICALWIDTH
ICAP_UNITS

ICAP_NOISEFILTER

Description

For devices that support noise filtering. This capability selects the algorithm used to remove noise.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_UINT16
Default Value:	TWNF_NONE
Allowed Values:	TWNF_NONE TWNF_AUTO TWNF_LONEPIXEL TWNF_MAJORITYRULE
Container for MSG_GET:	TW_ENUMERATION, TW_ONEVALUE
Container for MSG_SET:	TW_ENUMERATION, TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

ICAP_ORIENTATION

Description

Defines which edge of the “paper” the image’s “top” is aligned with. This information is used to adjust the frames to match the scanning orientation of the paper. For instance, if an ICAP_SUPPORTEDSIZE of TWSS_ISO4 has been negotiated, and ICAP_ORIENTATION is set to TWOR_LANDSCAPE, then the Source must rotate the frame it downloads to the scanner to reflect the orientation of the paper. Please note that setting ICAP_ORIENTATION does not affect the values reported by ICAP_FRAMES; it just causes the Source to use them in a different way.

The upper-left of the image is defined as the location where both the primary and secondary scans originate. (The X axis is the primary scan direction and the Y axis is the secondary scan direction.) For a flatbed scanner, the light bar moves in the secondary scan direction. For a handheld scanner, the scanner is drug in the secondary scan direction. For a digital camera, the secondary direction is the vertical axis when the viewed image is considered upright.

Application

If one pivots the image about its center, then orienting the image in TWOR_LANDSCAPE has the effect of rotating the original image 90 degrees to the “left.” TWOR_PORTRAIT mode does not rotate the image. The image may be oriented along any of the four axes located 90 degrees from the unrotated image. Note that:

TWOR_ROT0 == TWOR_PORTRAIT and TWOR_ROT270 == TWOR_LANDSCAPE.
TWOR_AUTO orients the image according to criteria determined by the source.
TWOR_AUTOTEXT orients the document using text only algorithms. TWOR_AUTOPICTURE orients the document using image only algorithms.

Source

The Source is responsible for rotating the image if it allows this capacity to be set.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Default Value:	TWOR_PORTRAIT
Allowed Values:	TWOR_ROT0 TWOR_ROT90 TWOR_ROT180 TWOR_ROT270 TWOR_PORTRAIT (equals TWOR_ROT0) TWOR_LANDSCAPE (equals TWOR_ROT270) TWOR_AUTO // 2.0 and higher TWOR_AUTOTEXT // 2.0 and higher TWOR_AUTOPICTURE // 2.0 and higher
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE

Container for <i>MSG_SET</i>:	TW_ENUMERATION TW_ONEVALUE
Container for <i>MSG_QUERY SUPPORT</i>:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also


ICAP_ROTATION
ICAP_AUTOSIZE

ICAP_OVERSCAN

Description

Overscan is used to scan outside of the boundaries described by ICAP_FRAMES, and is used to help acquire image data that may be lost because of skewing.

Consider the following:

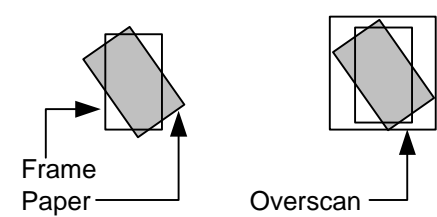

This is primarily of use for transport scanners which rely on edge detection to begin scanning. If overscan is supported, then the device is capable of scanning in the inter-document gap to get the skewed image information.

Application

Use this capability, if available, to help software processing images for deskew and border removal.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY/ MSG_QUERY SUPPORT)

Values

Type:	TW_UINT16
Default Value:	TWOV_NONE
Allowed Values:	TWOV_NONE TWOV_AUTO TWOV_TOPBOTTOM TWOV_LEFTRIGHT TWOV_ALL
Container for MSG_GET:	TW_ENUMERATION, TW_ONEVALUE
Container for MSG_SET:	TW_ENUMERATION, TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

ICAP_PATCHCODEDETECTIONENABLED

Description

Turns patch code detection on and off.

Source

Support this capability if the scanner supports any patch code recognition. If the device allows this feature to be turned off, then default to off. If the device does not support disabling this feature, report TRUE and disallow attempts to set FALSE.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_BOOL	
Default Value:	No Default	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None

Source Required Operations

None

See Also

ICAP_SUPPORTEDPATCHCODETYPES
ICAP_PATCHCODEMAXSEARCHPRIORITIES
ICAP_PATCHCODESEARCHPRIORITIES
ICAP_PATCHCODESEARCHMODE
ICAP_PATCHCODEMAXRETRIES
ICAP_PATCHCODETIMEOUT

ICAP_PATCHCODEMAXRETRIES

Description

Restricts the number of times a search will be retried if none are found on each page.

Application

Refine this capability to limit the number of times the patch code search algorithm is retried on a page that contains no patch codes.

Source

If supported, limit the number of retries the value specified.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_UINT32
Default Value:	No Default
Allowed Values:	1 to 2 ³² -1
Container for MSG_GET:	TW_ENUMERATION TW_RANGE TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_PATCHCODEDETECTIONENABLED
ICAP_SUPPORTEDPATCHCODETYPES
ICAP_PATCHCODEMAXSEARCHPRIORITIES
ICAP_PATCHCODESEARCHPRIORITIES
ICAP_PATCHCODESEARCHMODE
ICAP_PATCHCODETIMEOUT

ICAP_PATCHCODEMAXSEARCHPRIORITIES

Description

The maximum number of supported search priorities.

Application

Query this value to determine how many patch code detection priorities can be set.

Source

Set this value to limit the number of priorities to speed the detection process.

If patch code searches can be prioritized, report the maximum number of priorities allowed for a search.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_UINT32
Default Value:	No Default
Allowed Values:	1 to 2 ³² -1
Container for MSG_GET:	TW_ENUMERATION TW_RANGE TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_PATCHCODEDETECTIONENABLED
ICAP_SUPPORTEDPATCHCODETYPES
ICAP_PATCHCODESEARCHPRIORITIES
ICAP_PATCHCODESEARCHMODE

ICAP_PATCHCODEMAXRETRIES
ICAP_PATCHCODETIMEOUT

ICAP_PATCHCODESEARCHMODE

Description

Restricts patch code searching to certain orientations, or prioritizes one orientation over the other.

Application

Negotiate this capability if the orientation of patch codes is already known to the application. Refinement of this capability can speed the patch code search.

Source

If set then apply the specified refinements to future patch code searches.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	TWBD_HORZ TWBD_VERT TWBD_HORZVERT TWBD_VERTHORZ
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_PATCHCODEDETECTIONENABLED
ICAP_SUPPORTEDPATCHCODETYPES
ICAP_PATCHCODEMAXSEARCHPRIORITIES
ICAP_PATCHCODESEARCHPRIORITIES

ICAP_PATCHCODEMAXRETRIES
ICAP_PATCHCODETIMEOUT

ICAP_PATCHCODESEARCHPRIORITIES

Description

A prioritized list of patch code types dictating the order in which patch codes will be sought.

Application

Set this capability to specify the order and priority for patch code searching. Refining the priorities to only the patch code types of interest to the application can speed the search process.

Source

If this type of search refinement is supported, then report the current values.

If set, then limit future searches to the specified patch codes in the specified priority order.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	TWPCH_PATCH1 TWPCH_PATCH2 TWPCH_PATCH3 TWPCH_PATCH4 TWPCH_PATCH6 TWPCH_PATCHT
Container for MSG_GET:	TW_ARRAY
Container for MSG_SET:	TW_ ARRAY
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_PATCHCODEDETECTIONENABLED
ICAP_SUPPORTEDPATCHCODETYPES
ICAP_PATCHCODEMAXSEARCHPRIORITIES

ICAP_PATCHCODESEARCHMODE
ICAP_PATCHCODEMAXRETRIES
ICAP_PATCHCODETIMEOUT

ICAP_PATCHCODETIMEOUT

Description

Restricts the total time spent on searching for a patch code on each page.

Application

Refine this value to tune the length of time the search algorithm is allowed to execute before giving up.

Source

If supported, limit the duration of a patch code search to the value specified.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_UINT32
Default Value:	No Default
Allowed Values:	1 to 2 ³² -1
Container for MSG_GET:	TW_ENUMERATION TW_RANGE TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_PATCHCODEDETECTIONENABLED
ICAP_SUPPORTEDPATCHCODETYPES
ICAP_PATCHCODEMAXSEARCHPRIORITIES
ICAP_PATCHCODESEARCHPRIORITIES
ICAP_PATCHCODESEARCHMODE
ICAP_PATCHCODEMAXRETRIES

ICAP_PHYSICALHEIGHT

Description

The maximum physical height (Y-axis) the Source can acquire (measured in units of ICAP_UNITS).

Source

For a flatbed scanner, the scannable height of the platen. For a handheld scanner, the maximum length of a scan.

For dimensionless devices, such as digital cameras, this ICAP is meaningless for all values of ICAP_UNITS other than TWUN_PIXELS. If the device is dimensionless, the Source should return a value of zero if ICAP_UNITS does not equal TWUN_PIXELS. This tells the application to inquire with TWUN_PIXELS.

Note: The physical acquired area may be different depending on the setting of CAP_FEEDERENABLED (if the Source has separate feeder and non-feeder acquire areas).

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_FIX32
Default Value:	No Default
Allowed Values:	0 to 65535 in ICAP_UNITS
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_SET:	MSG_SET not allowed
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

All Image Sources

Source Required Operations

MSG_GET/CURRENT/DEFAULT

See Also

CAP_FEEDERENABLED
ICAP_UNITS

ICAP_PHYSICALWIDTH

Description

The maximum physical width (X-axis) the Source can acquire (measured in units of ICAP_UNITS).

Source

For a flatbed scanner, the scannable width of the platen. For a handheld scanner, the maximum width of a scan.

For dimensionless devices, such as digital cameras, this ICAP is meaningless for all values of ICAP_UNITS other than TWUN_PIXELS. If the device is dimensionless, the Source should return a value of zero if ICAP_UNITS does not equal TWUN_PIXELS. This tells the application to inquire with TWUN_PIXELS. The Source should then reply with its X-axis pixel count.

Note: The physical acquired area may be different depending on the setting of CAP_FEEDERENABLED (if the Source has separate feeder and non-feeder acquire areas).

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_FIX32
Default Value:	No Default
Allowed Values:	0 to 65535 in ICAP_UNITS
Container for MSG_GET:	TW_ONEVALUE
Container for MSG_SET:	MSG_SET not allowed
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

All Image Sources

Source Required Operations

MSG_GET / CURRENT / DEFAULT

See Also

CAP_FEEDERENABLED
ICAP_UNITS

ICAP_PIXELFLAVOR

Description

Sense of the pixel whose numeric value is zero (minimum data value). For example, consider a black and white image:

```
If ICAP_PIXELTYPE is TWPT_BW then
  If ICAP_PIXELFLAVOR is TWPB_CHOCOLATE
    then Black = 0
  Else if ICAP_PIXELFLAVOR is TWPB_VANILLA
    then White = 0
```

Application

Sources may prefer a different value depending on ICAP_PIXELTYPE. Set ICAP_PIXELTYPE and do a MSG_GETDEFAULT to determine the Source’s preferences.

Source

TWPB_CHOCOLATE means this pixel represents the darkest data value that can be generated by the device (the darkest available optical value may measure greater than 0).

TWPB_VANILLA means this pixel represents the lightest data value that can be generated by the device (the lightest available optical value may measure greater than 0).

Values

Type:	TW_UINT16
Default Value:	TWPB_CHOCOLATE
Allowed Values:	TWPB_CHOCOLATE TWPB_VANILLA
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

All Image Sources

Source Required Operations

MSG_GET/CURRENT/DEFAULT ,
MSG_SET/RESET

See Also

ICAP_PIXELTYPE

ICAP_PIXELFLAVORCODES

Description

Used only for CCITT data compression. Specifies whether the compressed codes' pixel "sense" will be inverted from the Current value of ICAP_PIXELFLAVOR prior to transfer.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Default Value:	TWPF_CHOCOLATE
Allowed Values:	TWPF_CHOCOLATE TWPF_VANILLA
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_COMPRESSION

ICAP_PIXELTYPE

Description

The type of pixel data that a Source is capable of acquiring (for example, black and white, gray, RGB, etc.).

Application

- MSG_GET returns a list of all pixel types available from the Source.
- MSG_SET on a TW_ENUMERATION structure requests that the Source restrict the available pixel types to the enumerated list.
- MSG_SET on a TW_ONEVALUE container specifies the only pixel type the application can accept.

If the application plans to transfer data through any mechanism other than Native and cannot handle all possible ICAP_PIXELTYPES, it *must* support negotiation of this ICAP.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	TWPT_BW TWPT_GRAY TWPT_RGB TWPT_PALETTE TWPT_CMY TWPT_CMYK TWPT_YUV TWPT_YUVK TWPT_CIEXYZ TWPT_LAB TWPT_SRGB TWPT_SRGB64 TWPT_BGR TWPT_CIELAB TWPT_CIELUV TWPT_YCBCR TWPT_INFRARED
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

All Image Sources

Source Required Operations

MSG_GET/CURRENT/DEFAULT,
MSG_SET/RESET

See Also

ICAP_BITDEPTH
ICAP_BITDEPTHREDUCTION

ICAP_PLANARCHUNKY

Description

Allows the application and Source to identify which color data formats are available. There are two options, “planar” and “chunky.”

For example, planar RGB data is transferred with the entire red plane of data first, followed by the entire green plane, followed by the entire blue plane (typical for three-pass scanners). “Chunky” mode repetitively interlaces a pixel from each plane until all the data is transferred (R-G-B-R-G-B...) (typical for one-pass scanners).

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	TWPC_CHUNKY TWPC_PLANAR
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

All Image Sources

Source Required Operations

MSG_GET/CURRENT/DEFAULT

See Also

TW_IMAGEINFO.Planar

ICAP_ROTATION

Description

How the Source can/should rotate the scanned image data prior to transfer. This doesn't use ICAP_UNITS. It is always measured in degrees. Any applied value is additive with any rotation specified in ICAP_ORIENTATION.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_FIX32
Default Value:	0
Allowed Values:	+/- 360 degrees
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE TW_RANGE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_ORIENTATION
ICAP_AUTOSIZE

ICAP_SHADOW

Description

Specifies which value in an image should be interpreted as the darkest “shadow.” All values “darker” than this value will be clipped to this value.

Application

Whether darker values are smaller or larger can be determined by examining the Current value of ICAP_PIXELFLAVOR.

Source

If more or less than 8 bits are used to describe the image, the actual data values should be normalized to fit within the 0-255 range. The normalization need not result in a homogeneous distribution if the original distribution was not homogeneous.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_FIX32
Default Value:	0
Allowed Values:	0 to 255
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE TW_RANGE
Container for MSG_SET:	TW_ENUMERATION TW_ONEVALUE TW_RANGE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_PIXELFLAVOR

ICAP_SUPPORTEDBARCODETYPES

Description

Provides a list of bar code types that can be detected by the current Data Source.

Application

Query this capability to determine if the Data Source can detect bar codes that are appropriate to the particular application.

Source

If bar code detection is supported, report all the bar code types that can be detected.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	TWBT_3OF9 TWBT_2OF5INTERLEAVED TWBT_2OF5NONINTERLEAVED TWBT_CODE93 TWBT_CODE128 TWBT_UCC128 TWBT_CODABAR TWBT_UPCA TWBT_UPCE TWBT_EAN8 TWBT_EAN13 TWBT_POSTNET TWBT_PDF417 TWBT_2OF5INDUSTRIAL TWBT_2OF5MATRIX TWBT_2OF5DATALOGIC TWBT_2OF5IATA TWBT_3OF9FULLASCII TWBT_CODABARWITHSTARTSTOP TWBT_MAXICODE
Container for MSG_GET:	TW_ARRAY
Container for MSG_SET:	MSG_SET not allowed
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_BARCODEDETECTIONENABLED
ICAP_SUPPORTEDPATCHCODETYPES
ICAP_BARCODEMAXSEARCHPRIORITIES
ICAP_BARCODESEARCHPRIORITIES
ICAP_BARCODESEARCHMODE
ICAP_BARCODEMAXRETRIES
ICAP_BARCODETIMEOUT

ICAP_SUPPORTEDEXTIMAGEINFO

Description

Lists all of the information that the Source is capable of returning from a call to DAT_EXTIMAGEINFO.

Application

This capability mirrors CAP_SUPPORTEDCAPS. The array indicates all of the possible TWEI_ values the Source is capable of returning. It does not guarantee that all of these values will be returned for every call to DAT_EXTIMAGEINFO, because that depends on the negotiated capabilities and on what the device finds.

For instance, if the Source supports CAP_BARCODEDETECTIONABLED, then it may report TWEI_BARCODETEXT as part of this capability. However, if the image that was just captured has no barcode data, then the Source can return TWRC_INFONOTSUPPORTED for that TW_INFO field, when the Application calls DAT_EXTIMAGEINFO.

Source

The Source lists all of the TWEI_ values it is capable of returning in a call to DAT_EXTIMAGEINFO.

Values

Type:	TW_UINT16
Default Value:	Same as the current value
Allowed Values:	An array of TWEI_* values
Container for MSG_GET:	TW_ARRAY
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

MSG_GET, MSG_GETCURRENT, MSG_GETDEFAULT, MSG_QUERY SUPPORT

See Also

DAT_EXTIMAGEINFO, [ICAP_EXTIMAGEINFO](#)

ICAP_SUPPORTEDPATCHCODETYPES

Description

A list of patch code types that may be detected by the current Data Source.

Application

Query this capability to determine if the Data Source can detect patch codes that are appropriate to the Application.

Source

If patch code detection is supported, report all the possible patch code types that might be detected.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	TWPCH_PATCH1 TWPCH_PATCH2 TWPCH_PATCH3 TWPCH_PATCH4 TWPCH_PATCH6 TWPCH_PATCHT
Container for MSG_GET:	TW_ARRAY TW_ONEVALUE
Container for MSG_SET:	MSG_SET not allowed
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_PATCHCODEDETECTIONENABLED
ICAP_PATCHCODEMAXSEARCHPRIORITIES
ICAP_PATCHCODESEARCHPRIORITIES

ICAP_PATCHCODESEARCHMODE
ICAP_PATCHCODEMAXRETRIES
ICAP_PATCHCODETIMEOUT

ICAP_SUPPORTEDSIZES

Description

For devices that support fixed frame sizes. Defined sizes match typical page sizes. This specifies the size(s) the Source can/should use to acquire image data.

(*) Constant should not be used in Sources or Applications using TWAIN 1.8 or higher. For instance, use TWSS_A4 instead of TWSS_A4LETTER (note that the values are the same, the reason for the new constants is to improve naming clarification and consistency).

Note: TWSS_B has been removed from the specification.

Source

The frame size selected by using this capability should be reflected in the TW_IMAGE_LAYOUT structure information.

If the Source cannot acquire the exact frame size specified by the application, it should provide the closest possible size (preferably acquiring an image that is larger than the requested frame in both axes).

For devices that support physical dimensions TWSS_NONE indicates that the maximum image size supported by the device is to be used. Devices that do not support physical dimensions should not support this capability.

Note: TWSS_MAXSIZE has been added to simplify negotiating for the entire acquisition area of a device, since TWSS_NONE was overloaded to mean both “a custom frame” and “the maximum image size.”

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL / DAT_CAPABILITY / MSG_QUERY SUPPORT)

Values

Type:	TW_UINT16
Default Value:	No Default
Allowed Values:	TWSS_NONE *TWSS_A4LETTER *TWSS_B5LETTER TWSS_USLETTER TWSS_USLEGAL TWSS_A5 *TWSS_B4 *TWSS_B6 TWSS_USLEDGER TWSS_USEXECUTIVE TWSS_A3

```

*TWSS_B3
*TWSS_A6
TWSS_C4
TWSS_C5
TWSS_C6

```

// 1.8 Additions

```

TWSS_4A0
TWSS_2A0
TWSS_A0
TWSS_A1
TWSS_A2
TWSS_A4
TWSS_A7
TWSS_A8
TWSS_A9
TWSS_A10
TWSS_ISO0
TWSS_ISO1
TWSS_ISO2
TWSS_ISO3
TWSS_ISO4
TWSS_ISO5
TWSS_ISO6
TWSS_ISO7
TWSS_ISO8
TWSS_ISO9
TWSS_ISO10
TWSS_JIS0
TWSS_JIS1
TWSS_JIS2
TWSS_JIS3
TWSS_JIS4
TWSS_JIS5
TWSS_JIS6
TWSS_JIS7
TWSS_JIS8
TWSS_JIS9
TWSS_JIS10
TWSS_C0
TWSS_C1
TWSS_C2
TWSS_C3
TWSS_C7
TWSS_C8
TWSS_C9
TWSS_C10
TWSS_USSTATEMENT
TWSS_BUSINESSCARD
TWSS_MAXSIZE

```

TWSS_A4LETTER

TWSS_B3

TWSS_B4

TWSS_B6

TWSS_B5LETTER

Container for MSG_GET:

```

TW_ENUMERATION,
TW_ONEVALUE

```

Container for *MSG_SET*: TW_ENUMERATION,
TW_ONEVALUE

Container for *MSG_QUERY SUPPORT*: TW_ONEVALUE

Required By

All Image Sources that support fixed frame sizes.

Source Required Operations

MSG_GET/CURRENT/DEFAULT, MSG_SET/RESET

See Also

ICAP_FRAMES
ICAP_AUTOSIZE
TW_IMAGEINFO
TW_IMAGELAYOUT

ICAP_THRESHOLD

Description

Specifies the dividing line between black and white. This is the value the Source will use to threshold, if needed, when `ICAP_PIXELTYPE = TWPT_BW`.

The value is normalized so there are no units of measure associated with this ICAP.

Application

Application will typically set `ICAP_BITDEPTHREDUCTION` to `TWBR_THRESHOLD` to use this capability.

Source

Source should fit available values linearly into the defined range such that the lowest available value equals 0 and the highest equals 255.

If not supported, return `TWRC_FAILURE` / `TWCC_CAPUNSUPPORTED`.

Values

Type:	TW_FIX32
Default Value:	128
Allowed Values:	0 to 255
Container for <i>MSG_GET</i> :	TW_ENUMERATION TW_ONEVALUE TW_RANGE
Container for <i>MSG_SET</i> :	TW_ENUMERATION TW_ONEVALUE TW_RANGE
Container for <i>MSG_QUERY SUPPORT</i> :	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

`ICAP_BITDEPTHREDUCTION`

ICAP_TILES

Description

This is used with buffered memory transfers. If TRUE, Source can provide application with tiled image data.

Application

If set to TRUE, the application expects the Source to supply tiled data for the upcoming transfer(s). This persists until the application sets it to FALSE. If the application sets it to FALSE, Source will supply strip data.

Source

If Source can supply tiled data and application does not set this ICAP, Source may or may not supply tiled data at its discretion.

In State 6, ICAP_TILES should reflect whether tiles or strips will be used in the upcoming transfer.

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_BOOL	
Default Value:	No Default	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None

Source Required Operations

None

See Also

TW_IMAGEMEMXFER

ICAP_TIMEFILL

Description

Used only with CCITT data compression. Specifies the minimum number of words of compressed codes (compressed data) to be transmitted per line.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Default Value:	1
Allowed Values:	1 to 216
Container for MSG_GET:	TW_ONEVALUE TW_RANGE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_COMPRESSION

ICAP_UNDEFINEDIMAGE SIZE

Description

If TRUE the Source will issue a MSG_XFERREADY before starting the scan.

Note: The Source may need to scan the image before initiating the transfer. This is the case if the scanned image is rotated or merged with another scanned image.

Application

Used by the application to notify the Source that the application accepts -1 as the image width or -length in the TW_IMAGEINFO structure.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_BOOL	
Default Value:	FALSE	
Allowed Values:	TRUE or FALSE	
Container for MSG_GET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_SET:	TW_ONEVALUE, TW_ENUMERATION	// 2.0 and higher
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE	

Required By

None

Source Required Operations

None

See Also

TW_IMAGEINFO

ICAP_UNITS

Description

Unless a quantity is dimensionless or uses a specified unit of measure, ICAP_UNITS determines the unit of measure for all quantities.

Application

Applications should be able to handle TWUN_PIXELS if they want to support data transfers from “dimensionless” devices such as digital cameras.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_UINT16
Default Value:	TWUN_INCHES
Allowed Values:	TWUN_INCHES TWUN_CENTIMETERS TWUN_PICAS TWUN_POINTS TWUN_TWIPS TWUN_PIXELS TWUN_MILLIMETERS
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

All Image Sources

Source Required Operations

MSG_GET/CURRENT/DEFAULT,
MSG_SET/RESET

See Also

ICAP_FRAMES
DAT_IMAGE LAYOUT

ICAP_XFERMECH

Description

Allows the application and Source to identify which transfer mechanisms the source supports.

Application

The current value of ICAP_XFERMECH must match the data argument type when starting the transfer using the triplet: DG_IMAGE / DAT_IMAGExxxxXFER / MSG_GET.

Values

Type:	TW_UINT16
Default Value:	TWSX_NATIVE
Allowed Values:	TWSX_NATIVE TWSX_FILE TWSX_MEMORY TWSX_FILE2 TWSX_MEMFILE
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

All Image Sources

Source Required Operations

MSG_GET/CURRENT/DEFAULT,
MSG_SET/RESET

See Also

DG_IMAGE / DAT_IMAGExxxxXFER / MSG_GET

ICAP_XNATIVERESOLUTION

Description

The native optical resolution along the X-axis of the device being controlled by the Source. Most devices will respond with a single value (TW_ONEVALUE).

This is NOT a list of all resolutions that can be generated by the device. Rather, this is the resolution of the device's optics. Measured in units of pixels per unit as defined by ICAP_UNITS (pixels per TWUN_PIXELS yields dimensionless data).

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_FIX32
Default Value:	No Default
Allowed Values:	>0
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	MSG_SET not allowed
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_UNITS
ICAP_XRESOLUTION
ICAP_YNATIVERESOLUTION

ICAP_XRESOLUTION

Description

All the X-axis resolutions the Source can provide.

Measured in units of pixels per unit as defined by ICAP_UNITS (pixels per TWUN_PIXELS yields dimensionless data). That is, when the units are TWUN_PIXELS, both ICAP_XRESOLUTION and ICAP_YRESOLUTION shall report 1 pixel/pixel. Some data sources like to report the actual number of pixels that the device reports, but that response is more appropriate in ICAP_PHYSICALHEIGHT and ICAP_PHYSICALWIDTH.

Application

Setting this value will restrict the various resolutions that will be available to the user during acquisition.

Applications will want to ensure that the values set for this ICAP match those set for ICAP_YRESOLUTION.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_FIX32
Default Value:	No Default
Allowed Values:	>0
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE TW_RANGE
Container for MSG_SET:	TW_ENUMERATION TW_ONEVALUE TW_RANGE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

All Image Sources

Source Required Operations

MSG_GET/CURRENT/DEFAULT ,
MSG_SET/RESET

See Also

ICAP_UNITS
ICAP_XNATIVERESOLUTION
ICAP_YRESOLUTION

ICAP_XSCALING

Description

All the X-axis scaling values available. A value of ‘1.0’ is equivalent to 100% scaling. Do not use values less than or equal to zero.

Application

Applications will want to ensure that the values set for this ICAP match those set for ICAP_YSCALING. There are no units inherent with this data as it is normalized to 1.0 being “unscaled.”

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_FIX32
Default Value:	1.0
Allowed Values:	> 0
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE TW_RANGE
Container for MSG_SET:	TW_ENUMERATION TW_ONEVALUE TW_RANGE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_YSCALING

ICAP_YNATIVERESOLUTION

Description

The native optical resolution along the Y-axis of the device being controlled by the Source.

Measured in units of pixels per unit as defined by ICAP_UNITS (pixels per TWUN_PIXELS yields dimensionless data).

Application

Most devices will respond with a single value (TW_ONEVALUE). This is NOT a list of all resolutions that can be generated by the device. Rather, this is the resolution of the device's optics

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_FIX32
Default Value:	No Default
Allowed Values:	> 0
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE
Container for MSG_SET:	MSG_SET not allowed
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_UNITS
ICAP_XNATIVERESOLUTION
ICAP_YRESOLUTION

ICAP_YRESOLUTION

Description

All the Y-axis resolutions the Source can provide.

Measured in units of pixels per unit as defined by ICAP_UNITS (pixels per TWUN_PIXELS yields dimensionless data). That is, when the units are TWUN_PIXELS, both ICAP_XRESOLUTION and ICAP_YRESOLUTION shall report 1 pixel/pixel. Some data sources like to report the actual number of pixels that the device reports, but that response is more appropriate in ICAP_PHYSICALHEIGHT and ICAP_PHYSICALWIDTH.

Application

Setting this value will restrict the various resolutions that will be available to the user during acquisition.

Applications will want to ensure that the values set for this ICAP match those set for ICAP_XRESOLUTION.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_FIX32
Default Value:	No Default
Allowed Values:	> 0
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE TW_RANGE
Container for MSG_SET:	TW_ENUMERATION TW_ONEVALUE TW_RANGE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

All Image Sources

Source Required Operations

MSG_GET/CURRENT/DEFAULT ,
MSG_SET/RESET

See Also

ICAP_UNITS
ICAP_XRESOLUTION
ICAP_YNATIVEVERESOLUTION

ICAP_YSCALING

Description

All the Y-axis scaling values available. A value of ‘1.0’ is equivalent to 100% scaling. Do not use values less than or equal to zero.

There are no units inherent with this data as it is normalized to 1.0 being “unscaled.”

Application

Applications will want to ensure that the values set for this ICAP match those set for ICAP_XSCALING.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

Values

Type:	TW_FIX32
Default Value:	1.0
Allowed Values:	> 0
Container for MSG_GET:	TW_ENUMERATION TW_ONEVALUE TW_RANGE
Container for MSG_SET:	TW_ENUMERATION TW_ONEVALUE TW_RANGE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None

Source Required Operations

None

See Also

ICAP_XSCALING

ICAP_ZOOMFACTOR

Description

When used with MSG_GET, return all camera supported lens zooming range.

Application

Use this capability with MSG_SET to select one of the lens zooming value that the Source supports.

Source

If not supported, return TWRC_FAILURE / TWCC_CAPUNSUPPORTED.

If Operation is not supported, return TWRC_FAILURE, TWCC_CAPBADOPERATION. (See DG_CONTROL /DAT_CAPABILITY/ MSG_QUERY SUPPORT)

Values

Type:	TW_INT16
Default Value:	0
Allowed Values:	Source dependent.
Container for MSG_GET:	TW_ENUMERATION, TW_ONEVALUE, TW_RANGE
Container for MSG_SET:	TW_ONEVALUE
Container for MSG_QUERY SUPPORT:	TW_ONEVALUE

Required By

None. Highly recommended for digital cameras that are equipped with zoom lenses.

Source Required Operations

MSG_GET, MSG_SET,
MSG_GETCURRENT,
MSG_RESET

11

Return Codes and Condition Codes

Chapter Contents

An Overview of Return Codes and Condition Codes	11-1
Currently Defined Return Codes.	11-2
Currently Defined Condition Codes.	11-2
Custom Return and Condition Codes	11-4

An Overview of Return Codes and Condition Codes

The TWAIN protocol defines no dynamic messaging system through which the application might determine, in real-time, what is happening in either the Source Manager or a Source. Neither does the protocol implement the native messaging systems built into the operating environments that TWAIN is defined to operate under (Microsoft Windows and Macintosh). This decision was made due to issues regarding platform specificity and higher-than-desired implementation costs.

Instead, for each call the application makes to `DSM_Entry()`, whether aimed at the Source Manager or a Source, the Source Manager returns an appropriate Return Code (`TWRC_XXXX`). The Return Code may have originated from the Source if that is where the original operation was destined.

To get more specific status information, the application can use the `DG_CONTROL / DAT_STATUS / MSG_GET` operation to inquire the complimentary Condition Code (`TWCC_XXXX`) from the Source Manager or Source (whichever one originated the Return Code).

The application should always check the Return Code. If the Return Code is `TWRC_FAILURE`, it should also check the Condition Code. This is especially important during capability negotiation.

There are very few, if any, catastrophic error conditions for the application to worry about. Usually, the application will only have to “recover” from low memory errors caused from allocations in the Source. Most error conditions are handled by the Source Manager or, most typically, by the Source (often involving interaction with the user). If the Source fails in a way that is unrecoverable, it will ask to have its user interface disabled by sending the `MSG_CLOSEDREQ` to the application’s event loop.

The following operations can only return TWRC_SUCCESS or TWRC_FAILURE / TWCC_SEQERROR, if called in the wrong state. This is to avoid a situation where an Application is unable to shutdown a Source because of an error state, like the device being offline. The Source must comply with the request to change states.

```
DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER
DG_CONTROL / DAT_PENDINGXFERS / MSG_RESET
DG_CONTROL / DAT_USERINTERFACE / MSG_DISABLED
DG_CONTROL / DAT_IDENTITY / MSG_CLOSED
DG_CONTROL / DAT_IDENTITY / MSG_CLOSEDM
```

When an Application receives this condition code, it alerts the user (so they can exit, if they wish). While waiting for the user response the Application polls the value of CAP_DEVICEONLINE. The device continues to be offline as long as this call returns TWCC_SUCCESS, with a value of FALSE.

The state 3 operation DG_CONTROL / DAT_IDENTITY / MSG_OPENDS is the only one capable of returning TWCC_CHECKDEVICEONLINE. The Application cannot check CAP_DEVICEONLINE (since that is a state 4 operation), however, it can retry the MSG_OPENDS call, if it chooses.

Currently Defined Return Codes

Code	Description
TTWRC_CANCEL	Abort transfer or the Cancel button was pressed.
TWRC_CHECKSTATUS	Partially successful operation; request further information.
TWRC_DSEVENT	Event (or Windows message) belongs to this Source.
TWRC_ENDOFLIST	No more Sources found after MSG_GETNEXT.
TWRC_FAILURE	Operation failed - get the Condition Code for more information.
TWRC_NOTDSEVENT	Event (or Windows message) does not belong to this Source.
TWRC_SUCCESS	Operation was successful.
TWRC_XFERDONE	All data has been transferred.

Currently Defined Condition Codes

The following are the currently defined condition codes:

Code	Description
TWCC_BADCAP*	Capability not supported by Source or operation (get, set) is not supported on capability, or capability had dependencies on other capabilities and cannot be operated upon at this time (Obsolete, see TWCC_CAPUNSUPPORTED, TWCC_CAPBADOPERATION, and TWCC_CAPSEQERROR).
TWCC_BADDEST	Unknown destination in DSM_Entry.
TWCC_BADPROTOCOL	Unrecognized operation triplet.
TWCC_BADVALUE	Data parameter out of supported range.
TWCC BUMMER	General failure. Unload Source immediately.
TWCC_CAPBADOPERATION*	Operation (i.e., Get or Set) not supported on capability.
TWCC_CAPSEQERROR*	Capability has dependencies on other capabilities and cannot be operated upon at this time.
TWCC_CAPUNSUPPORTED*	Capability not supported by Source.
TWCC_CHECKDEVICEONLINE	Check the device status using CAP_DEVICEONLINE, this condition code can be returned by any TWAIN operation in state 4 or higher, or from the state 3 DG_CONTROL / DAT_IDENTITY / MSG_OPENS. The state remains unchanged. If in state 4 the Application can poll with CAP_DEVICEONLINE until the value returns TRUE.
TWCC_DAMAGEDCORNER	Operation failed because the document has a damaged corner.
TWCC_DENIED	File System operation is denied (file is protected).
TWCC_DOCTOODARK	Operation failed because the document is too dark.
TWCC_DOCTOOLIGHT	Operation failed because the document is too light.
TWCC_FILEEXISTS	Operation failed because file already exists.
TWCC_FILENOTFOUND	File not found.
TWCC_FOCUSERROR	Operation failed because of a focusing error during document capture.
TWCC_INTERLOCK	Operation failed because the cover or door is open.
TWCC_LOWMEMORY	Not enough memory to complete operation.
TWCC_MAXCONNECTIONS	Source is connected to maximum supported number of applications.
TWCC_NODS	Source Manager unable to find the specified Source.
TWCC_NOMEDIA	Source has nothing to capture for a transfer. Can be returned by DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLEDS, by any of the DAT_IMAGE*XFER operations, by DAT_IMAGEINFO or DAT_EXTIMAGEINFO.
TWCC_NOTEMPTY	Operation failed because directory is not empty.

Code	Description
TWCC_OPERATIONERROR	Source or Source Manager reported an error to the user and handled the error; no application action required.
TWCC_PAPERDOUBLEFEED	Transfer failed because of a feeder error, this can be returned by any of the DAT_IMAGE*XFER operations. When received the current TWAIN state remains unchanged.
TWCC_PAPERJAM	Transfer failed because of a feeder error, this can be returned by any of the DAT_IMAGE*XFER operations. When received the current TWAIN state remains unchanged.
TWCC_SEQERROR	Illegal operation for current Source Manager or Source state.
TWCC_SUCCESS	Operation worked.

* TWCC_BADCAP has been replaced with three new condition codes that more clearly specify the reason for a capability operation failure. For backwards compatibility applications should also accept TWCC_BADCAP and treat it as a general capability operation failure. No 1.6 Image Data Sources should return this condition code, but use the new ones instead.

Custom Return and Condition Codes

Although probably not necessary or desirable, it is possible to create custom Return Codes and Condition Codes. Refer to the TWAIN.H file for the value of TWRC_CUSTOMBASE for custom Return Codes and TWCC_CUSTOMBASE for custom Condition Codes. All custom values must be numerically greater than these base values. Remember that the consumer of these custom values will look in your TW_IDENTITY.ProductName field to clarify what the identifier's value means. There is no other protection against overlapping custom definitions.

A

TWAIN Articles

Chapter Contents

Device Events	A-1
Supported Sizes	A-5
Automatic Capture	A-8
Camera Preview	A-9
Internationalization	A-19
Audio Snippets	A-19
How to use the Preview Device	A-21
Imprinter / Endorser	A-23
Capability Ordering	A-24
Defaults	A-30

The articles in this appendix provide additional information about some of the features described in this specification.

Device Events

TWAIN 1.8 expands upon asynchronous event notification. Previous versions provided the `DG_CONTROL / DAT_NULL` messages: `MSG_CLOSEDOK`, `MSG_CLOSEDREQ` and `MSG_XFERREADY` to permit the Source to alert the Application that it needed to exit, or that an image was ready to be processed. With the addition of Digital Cameras, and the burgeoning interest in Push Technologies, it has become desirable to enhance TWAIN in this area.

An event begins when the Source needs to alert the Application to some change that has occurred within the device. For example, the owner of a Digital Camera (which is tethered to a host machine) has changed the setting for flash from on to off. The Source wants to alert the Application of this change: first, it records the event in a FIFO queue; second, it sends a `DG_CONTROL / DAT_NULL / DAT_DEVICEEVENT` to the Source Manager, which forwards the message to the Application.

The Application receives the `DG_CONTROL / DAT_NULL / DAT_DEVICEEVENT`, and immediately issues a `DG_CONTROL / DAT_DEVICEEVENT / MSG_GET` request to the Source. The Source delivers the information about the event, and pops it off the queue. The process concludes with the Application examining the information and acting upon it, in this case by alerting the user that the flash setting on the camera has been changed.

Notes:

- Sources must start up in a mode with device events turned off (an empty array for `CAP_DEVICEEVENTS`), this is for the benefit of pre-1.8 applications which may not be able to process this new event.
- Device events are never generated by an Application setting a value within a Source (such as Application changing `ICAP_FLASHUSED2`). Device events are only generated in response to some outside change within the Source or the Device (such as the User changing the flash setting on the camera).
- Sources must maintain an internal Event Queue, so that they can report each and every device event to the Application in the order of their occurrence.
- Device events are supported in State 4. Windows Sources must use the main window handle supplied with the `DG_CONTROL / DAT_PARENT / MSG_OPENDS` if they issue device events in State 4. In States 5 through 7 Sources must use the `PTW_USERINTERFACE->hParent` supplied in the `DG_CONTROL / DAT_USERINTERFACE / MSG_ENABLEDS` triplet.
- Since device events may occur in State 4, Applications that enable them using `CAP_DEVICEEVENTS` must be ready to receive and process them.
- When the Application receives a device event, it must immediately collect the information about it. The Application must not issue the `DG_CONTROL / DAT_DEVICEEVENT / MSG_GET`, except when it has received a `DG_CONTROL / DAT_NULL / DAT_DEVICEEVENT` message.
- The Application must process events without User intervention, this is to prevent situations where the device event queue builds up because a User is not responding to the system.
- Applications may sometimes fail to respond to a Source's device events. A maximum queue size should be selected so that the Source does not exhaust memory. If the queue fills, the Source must do the following:
 - Turns off device events (resets `CAP_DEVICEEVENT` to an empty array).
 - Refuse to set `CAP_DEVICEEVENT` until the queue is emptied, return `TWCC_SEQERROR`.
 - Process `DG_CONTROL / DAT_DEVICEEVENT / MSG_GET` requests for each item on the device event queue.

After the last device event is read by the Application, return `TWRC_FAILURE / TWCC_DEVICEEVENTOVERFLOW` for the next call to `DG_CONTROL / DAT_DEVICEEVENT / MSG_GET`.

- After `TWCC_DEVICEEVENTOVERFLOW` has been reported, permit the Source to set `CAP_DEVICEEVENT` again.

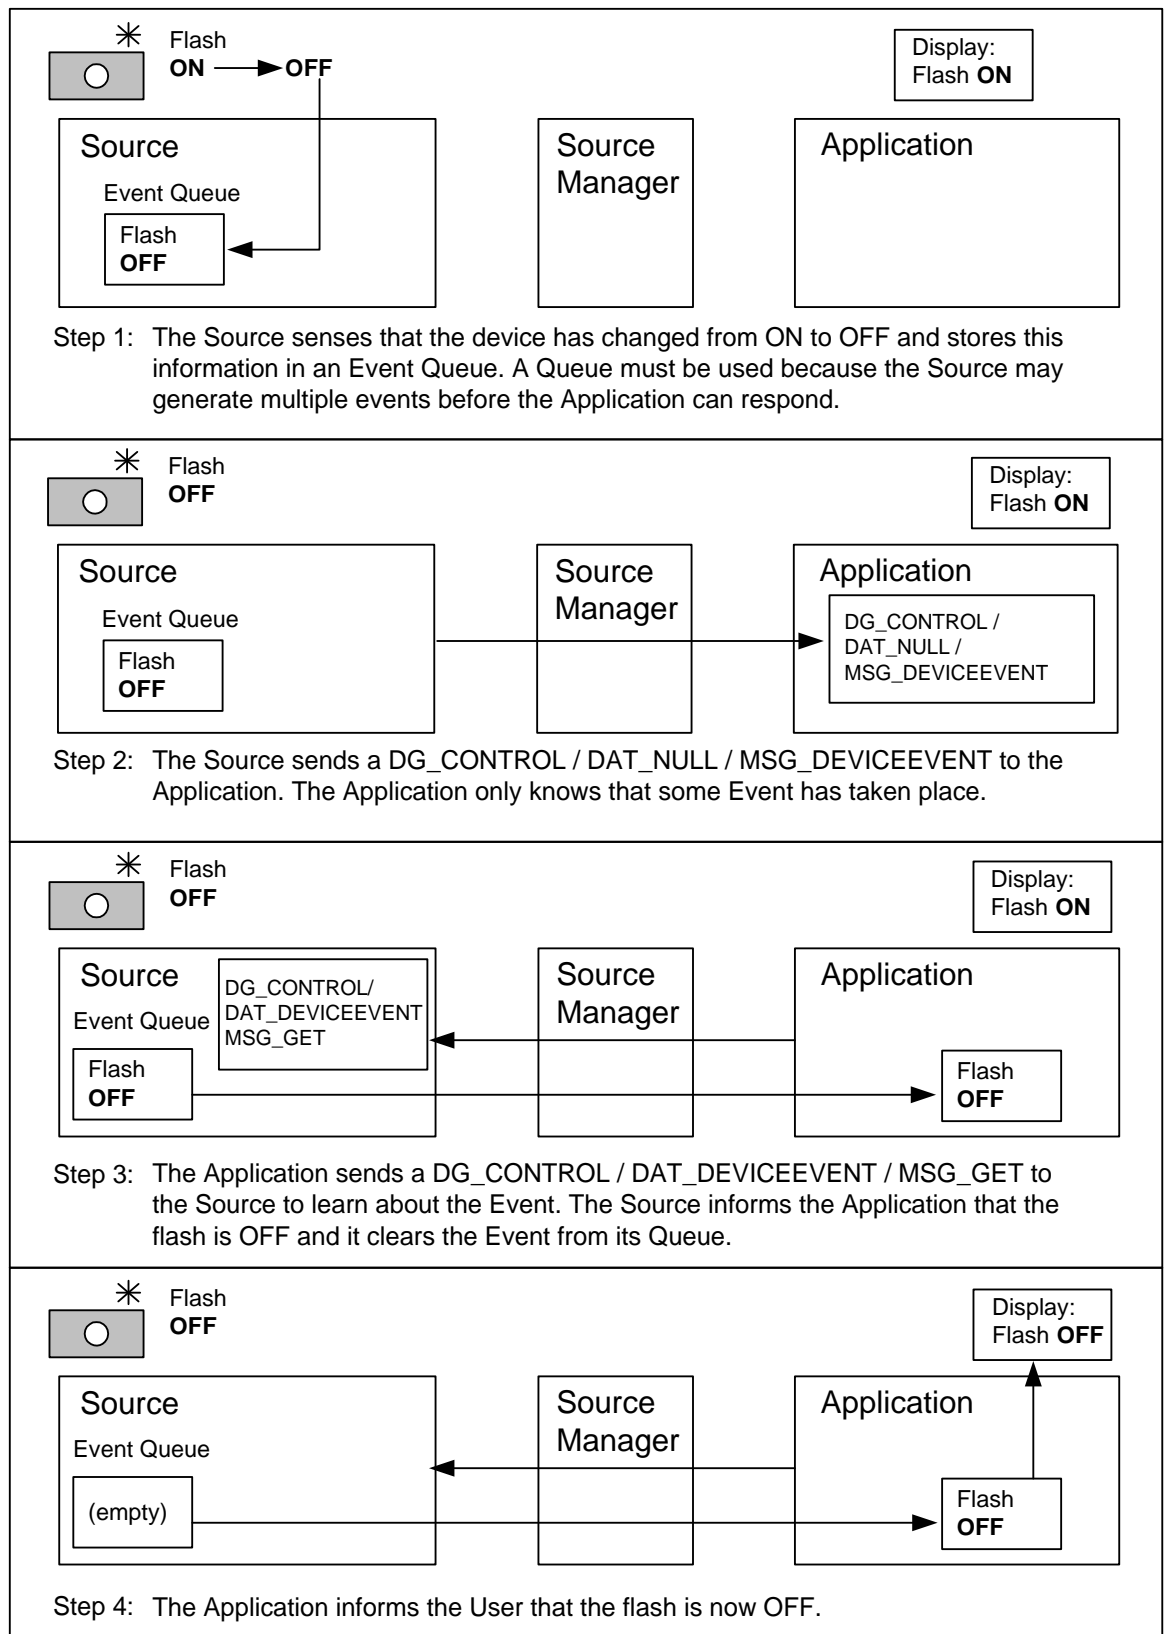


Figure A-1 Device Events

This section details the various event types and how Sources and Applications should make use of them.

TWDE_CHECKAUTOMATICCAPTURE

The automatic capture settings on the device have been changed.

TWDE_CHECKBATTERY

Status of the battery has changed. Sources will report BatteryMinutes or BatteryPercentage depending on which capabilities say they support.

TWDE_CHECKDEVICEONLINE

The device has been powered off. If an Application receives this device event, it should call CAP_DEVICEONLINE to verify the state of the Source, and then proceed as seems appropriate.

TWDE_CHECKFLASH

The flash setting on the device has been changed.

TWDE_CHECKPOWERSUPPLY

The power supply has changed, for example this event would be generated if AC was removed from a device, putting it on battery. Scanners may also provide this event to notify that a power on reset has taken place, indicating that the device has been power cycled.

TWDE_CHECKRESOLUTION

The resolution on the device has changed.

TWDE_DEVICEADDED

A device has been added to the Source. See DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY and DG_CONTROL / DAT_FILESYSTEM / MSG_GETINFO to get more information about the new device.

TWDE_DEVICEOFFLINE

A device has become unavailable. This is different from TWDC_DEVICEREMOVED, since the device is assumed to be connected.

TWDE_DEVICEREADY

A device is ready to capture another image. Applications should be careful when negotiating this event, especially in situations where images are gathered quickly, as with automatic capture.

TWDE_DEVICEREMOVED

A device has been removed from the Source. This is different from TWDE_DEVICEOFFLINE. As soon as this event is received an Application should re-negotiate its current device, since that may have been the one that was removed. Sources must default to the TWFY_CAMERA device if the current device is removed.

TWDE_PAPERDOUBLEFEED

Report double feeds to the Application. Because of the asynchronous nature of device events there may still be images waiting to be transferred, applications need to decide if they want to recover these images or discard them.

TWDE_PAPERJAM

Report paper jams to the Application. Because of the asynchronous nature of device events there may still be images waiting to be transferred, applications need to decide if they want to recover these images or discard them.

Supported Sizes

Typical uses for ICAP_SUPPORTEDSIZES include, but are not limited to the following:

A0, A1	Technical drawings, posters
A2, A3	Drawings, diagrams, large tables
A4	Letters, magazines, forms, catalogs, laser printer and copying machine output
A5	Note pads
A6	Postcards
B5, A5, B6, A6	Books
C4, C5, C6	Envelopes for A4 letters: unfolded (C4), folded once (C5), folded twice (C6)
B4, A3	Newspapers, supported by most copying machines in addition to A4

The following table details the physical dimensions associated with ICAP_SUPPORTEDSIZES. Multiply millimeters by 0.03937 to get the approximate inches. Multiply inches by 25.4 to get the approximate millimeters.

ICAP_SUPPORTEDSIZES	Description
TWSS_NONE	Images will match the maximum scanning dimensions of the device. This setting is only applicable to devices that have fixed measurable dimensions, such as most scanners. Devices that do not support physical dimensions should not support ICAP_SUPPORTEDSIZES.
TWSS_A4LETTER TWSS_B5LETTER TWSS_B3 TWSS_B4 TWSS_B6	These values are preserved for backward compatibility. TWAIN 1.8+ enabled Applications should not use these settings.
TWSS_B	This value is obsolete, and no longer supported by the specification. Do not use it.
TWSS_USLETTER	8.5" x 11.0" (216mm x 280mm)
TWSS_USLEGAL	8.5" x 14.0" (216mm x 356mm)
TWSS_USLEDGER	11.0" x 17.0" (280mm x 432mm)
TWSS_USEXECUTIVE	7.25" x 10.5" (184mm x 267mm)
TWSS_USSTATEMENT	5.5" x 8.5" (140mm x 216mm)

TWSS_BUSINESSCARD	90mm x 55mm
TWSS_4A0	1682mm x 2378mm
TWSS_2A0	1189mm x 1682mm
TWSS_A0	841mm x 1189mm
TWSS_A1	594mm x 841mm
TWSS_A2	420mm x 594mm
TWSS_A3	297mm x 420mm
TWSS_A4	210mm x 297mm
TWSS_A5	148mm x 210mm
TWSS_A6	105mm x 148mm
TWSS_A7	74mm x 105mm
TWSS_A8	52mm x 74mm
TWSS_A9	37mm x 52mm
TWSS_A10	26mm x 37mm
TWSS_ISOBO	1000mm x 1414mm

TWSS_ISOBI	707mm x1000mm
TWSS_ISOBI2	500mm x 707mm
TWSS_ISOBI3	353mm x 500mm
TWSS_ISOBI4	250mm x 353mm
TWSS_ISOBI5	176mm x 250mm
TWSS_ISOBI6	125mm x 176mm
TWSS_ISOBI7	88mm x 125mm
TWSS_ISOBI8	62mm x 88mm
TWSS_ISOBI9	44mm x 62mm
TWSS_ISOBI10	31mm x 44mm
TWSS_JISBI0	1030mm x1456mm
TWSS_JISBI1	728mm x1030mm
TWSS_JISBI2	515mm x 728mm
TWSS_JISBI3	364mm x 515mm
TWSS_JISBI4	257mm x 364mm
TWSS_JISBI5	182mm x 257mm
TWSS_JISBI6	128mm x 182mm
TWSS_JISBI7	91mm x 128mm
TWSS_JISBI8	64mm x 91mm
TWSS_JISBI9	45mm x 64mm
TWSS_JISBI10	32mm x 45mm

TWSS_C0	917mm x1297mm
TWSS_C1	648mm x 917mm
TWSS_C2	458mm x 648mm
TWSS_C3	324mm x 458mm
TWSS_C4	229mm x 324mm
TWSS_C5	162mm x 229mm
TWSS_C6	114mm x 162mm
TWSS_C7	81mm x 114mm
TWSS_C8	57mm x 81mm
TWSS_C9	40mm x 57mm

TWSS_C10

28mm x 40mm

Automatic Capture

Automatic image capture is intended for Digital Cameras, although there may be opportunities for other kinds of devices. The intention is to allow an Application to control when pictures are taken, how many pictures are taken, and the interval of time between picture taking. All that is required is that the device be able to perform capture on command from the Source, the timing control and storage of pictures may reside in the Source or the device; the Application does not care.

There are three capabilities needed to control automatic capture:

- CAP_AUTOMATICCAPTURE
- CAP_TIMEBEFOREFIRSTCAPTURE
- CAP_TIMEBETWEENCAPTURES

And one triplet:

- DG_CONTROL/DAT_FILESYSTEM/MSG_AUTOMATICCAPTUREDIRECTIONS

CAP_AUTOMATICCAPTURE selects the number of images to be captured. A value of zero (0), the default, disables it. CAP_TIMEBEFOREFIRSTCAPTURE selects how many milliseconds are to pass before the first picture is taken by the device. If this value is 0, then picture taking begins immediately. CAP_TIMEBETWEENCAPTURES selects the milliseconds of elapsed time between pictures. If this value is 0, then the pictures are taken as fast as the device can go.

DG_CONTROL / DAT_FILESYSTEM / MSG_AUTOMATICCAPTUREDIRECTIONS selects the directory that will receive the images as they are captured.

Automatic capture expects the device (or Source) to manage the storage of images until the Application is ready to collect them. Applications may choose to retrieve images as they are captured by the Source (using the DAT_FILESYSTEM triplets to browse the storage directory), but must realize that this may affect the performance of the device.

The nature of automatic capture suggests that an Application should be able to disconnect from a Source and expect that if it returns after CAP_TIMEBEFOREFIRSTCAPTURE has passed, there may be images available for it to collect. Because of this Sources should remember their automatic capture settings from session to session, so that a Source starting up does not inadvertently clear them.

Applications need to remember that since the capture of images may occur outside of their control that the settings may be changed directly on the device by the user, resulting in alternations in any of the automatic capture settings. Applications that cannot support this uncertainty should clear the Source's automatic capture settings prior to shutdown (and after notifying the User).

Camera Preview

Some digital cameras offer a way to preview the intended shot through either a continuous flow of low-resolution frames or streaming video. TWAIN exposes two methods for a Source to present this information to an Application, both in association with the `TWIFY_CAMERAPREVIEW` device.

The `TWIFY_CAMERAPREVIEW` Device

Sources that wish to provide access to their preview camera must do so through `DAT_FILESYSTEM`. A minimum configuration includes a single `TWIFY_CAMERA` and a single `TWIFY_CAMERAPREVIEW`. The Application discovers what devices are available by using the `DAT_FILESYSTEM` commands `MSG_GETFIRSTFILE` and `MSG_GETNEXTFILE`. It can then switch from the startup default `TWIFY_CAMERA` to the `TWIFY_CAMERAPREVIEW` using the `MSG_CHANGEDIRECTORY` command.

Performance

It is important when taking a picture from preview mode that the switch from `TWIFY_CAMERAPREVIEW` to `TWIFY_CAMERA` happens as quickly as possible. Applications can minimize the switch over time by negotiating the settings of the `TWIFY_CAMERA` before changing to the `TWIFY_CAMERAPREVIEW` device to collect real-time images.

Sources can help by optimizing their communication with the `TWIFY_CAMERA`, perhaps downloading its values when the user sends `MSG_ENABLEDS` to the `TWIFY_CAMERAPREVIEW` device so that when the switch back occurs all that needs to happen is a command sent to the camera to take a picture.

Another matter of importance is the transfer mechanism. If the camera is capable of sending a run of continuous snapshots to the application (as opposed to real video streaming), then it is recommended that the `TWIFY_CAMERAPREVIEW` device only support an `ICAP_XFERMECH` of `TWSX_NATIVE`.

Entering Preview Mode

An application should do the following before entering preview mode.

1. The application sends `MSG_OPENDS` to the Source.
2. The application determines that the Source `TWIFY_CAMERAPREVIEW` device.
3. The user/application negotiates values for the `TWIFY_CAMERA` device.
4. The user/application decides to enter preview mode. The application uses `MSG_CHANGEDIRECTORY` to change to the `TWIFY_CAMERAPREVIEW` device.
5. The application uses `MSG_ENABLEDS` to enter preview mode. Note that the value of `ShowUI` should depend on which of the next two sections the application decides to use to control the Source (GUI mode or programmatic).

Previewing with the Source's GUI (`ShowUI == TRUE`)

If the application relies solely on the Source's GUI for its control of the camera, then it shouldn't have to worry about preview mode issues, since it is hoped that a Source that supports preview

will provide access to it from its GUI. This section is concerned with a more limited area, where an application has opted to control the Source programmatically, except for the use of preview. One reason an application might need to do this is to provide preview support for cameras that output streaming video. TWAIN does not have a mechanism for handling this kind of data, so if the only way that a TWAIN application will be able to show this kind of preview data, is if the Source provides a GUI that can show it.

If the Source has `CAP_CAMERAPREVIEWUI` set to `TRUE`, then it is possible for the application to use this to preview the images coming from the camera. In this mode the application does not have to concern itself with the kind of data that the Source is providing, since the Source takes the responsibility of displaying the preview images to the user. However, the application does have to wait for the triggers that indicates that the user wishes to take a picture, or that they wish to exit from preview mode. To help standardize this behavior, the preview GUI should be able to indicate two things.

1. **Take a picture** – if the user selects to take a picture, perhaps by pressing a button labeled `CAPTURE`, then the Source should send the `DAT_NULL` command `MSG_CLOSEDSOK` back to the application.
2. **Cancel preview** – if the user decides to exit from preview mode, then the Source should send the `DAT_NULL` command `MSG_CLOSEDSREQ` back to the application. The application should then send `MSG_DISABLED` to the Source, change back to the `TWIFY_CAMERA` device, and resume its programmatic control of the Source.

Previewing under Programmatic Control (`ShowUI == FALSE`):

TWAIN provides programmatic support for `TWIFY_CAMERAPREVIEW` devices that operate by taking a continuous flow of low-resolution snapshots. An application learns that a Source is capable of this by changing to `TWIFY_CAMERAPREVIEW` and testing `ICAP_XFERMECH`. If the capability is supported, then the `TWIFY_CAMERAPREVIEW` device is capable of transferring these low-resolution images fast enough to simulate real-time video. The way the application obtains these images is similar to how scanners work. The application sets `CAP_XFERCOUNT` to `-1` and enables the Source. The Source sends a `MSG_XFERREADY` to the application, and the application begins transferring and displaying the low-resolution images as fast as it can. These steps are repeated to aid understanding...

1. The application negotiates any capabilities with the `TWIFY_CAMERAPREVIEW` device, including setting `CAP_XFERCOUNT` to `-1`, indicating that the application wishes to receive an unlimited number of images.
2. The application send `MSG_ENABLED` (`ShowUI == FALSE`) to the Source.
3. The Source sends back `MSG_XFERREADY` and transitions to State 6.
4. The application uses `MSG_IMAGENATIVEXFER` to transfer the image and the Source transitions to State 7.
5. The application displays the image.
6. The application uses `DAT_PENDINGXFERS` / `MSG_ENDXFER` to transition the Source to State 6. The application needs to pay attention to the `TW_PENDINGXFERS.Count`, but it is expected that it should remain at `-1`.
7. Go to step (4).

As long as the application and Source are looping from steps (4) through (7) the application should be displaying a continuous run of snapshots.

Since the application is in complete control, it is implementation dependent on how the user indicates that a picture should be taken. However, once the decision to take a picture is made, the steps to do it are as follows...

Taking a Picture:

The application should do the following when it is told to take a picture while in preview mode.

1. The application sends `DAT_PENDINGXFERS / MSG_ENDXFER` to the Source, transitioning from State 7 to State 6 (if necessary).
2. The application sends `DAT_PENDINGXFERS / MSG_RESET` to the Source, transitioning from State 6 to State 5.
3. The application sends `MSG_DISABLED`s to the Source, transitioning from State 5 to State 4.
4. The application uses `MSG_CHANGEDIRECTORY` to switch from the `TWFY_CAMERAPREVIEW` device to the `TWFY_CAMERA` device.
5. The application uses `MSG_ENABLED`s (`ShowUI == FALSE`) to enable the `TWFY_CAMERA` device.
6. The application sends one of the `MSG_IMAGExxxxXFER` commands to the Source.
7. The source takes the full resolution picture and transfers it back to the application

File System

This section consists of the following:

- Overview
- Rules for path and file names
- File system components
- Rule for root directory
- Rules for image directory
- File Types
- `DAT_FILESYSTEM` operations
- Thumbnails and Sound snippets
- Context variable
- Condition Codes

Note: The term 'camera' is used generically in the specification to describe a device that captures an image, and is not limited to just devices that employ a camera to accomplish this.

Overview

Digital cameras and some scanners have the ability to capture images to their own local storage. When Automatic Capturing is being used an Application need not collect the captured images until long after their acquisition. A file system is a good representation for the storage of images (since it is a model that is familiar to most programmers), so TWAIN exposes a simple file system interface that Applications may browse through in a random fashion.

There is also a need in TWAIN to expose multiple devices through a single Source. Single pass duplex scanners have multiple cameras that accept different settings. Digital cameras come with disks and memory expansion cards, and many are able to provide a stream of preview images. The file system offers a way for a Source to maintain in its root directory a list of the devices available to an Application.

Rules for Path and File Names

There are two main grouping of files supported by TWAIN; devices, which are associated with real-time capture, which accept image capture settings, and which are of the form:

`/DeviceName`

And image path and file names, which are images on local storage which have been previously captured by the device, and which are of the form (bracketed items are optional):

`[/DomainName] [/HostName] /TopDirectory [/Sub-Directory...] /ImageFile`

1. A filename consists of any characters *except*: NUL (0), either of the slashes '/' or '\ ' and the colon ': '.
2. Sources should at a minimum support the characters: "A-Z a-z 0-9 _ ."
3. The file system should not be case sensitive, though it may show upper and lowercase.
4. Applications should take into consideration that internationalized Sources may construct filenames from characters within UNICODE.
5. The forward slash '/' and backward slash '\ ' may be used interchangeably in the creation of path names. Sources and Applications must support the use of both slashes. (ex: /abc\xyz).
6. Multiple adjacent slashes reduce to a single slash. (ex: ///\abc//xyz == /abc/xyz).
7. The root directory is designated as a solitary slash (ex: / or \).
8. The MSG_CHANGEDIRECTORY and MSG_AUTOMATICCAPTUREDIRECTIONS operations are the only ones that accept absolute or relative directory paths. All other operations occur within the current directory.
9. MSG_CHANGEDIRECTORY and MSG_AUTOMATICCAPTUREDIRECTIONS can use dot '.' to address the current directory (ex: ./abc).
10. MSG_CHANGEDIRECTORY and MSG_AUTOMATICCAPTUREDIRECTIONS can use dot-dot '..' to address the parent directory (ex: ../abc).
11. In the root directory a MSG_CHANGEDIRECTORY or AUTOMATICCAPTUREDIRECTIONS to dot-dot '..' is the same as dot '.' (ex: /. == /..).

Examples:

\Camera is the same as /Camera

```
//Camera is the same as /Camera
./Camera is the same as /Camera
../Camera is the same as /Camera
```

File System Components

A file system consists of the following.

1. A root directory.
2. A camera device (TWFY_CAMERA), which must be the default device when the Source starts.
3. Zero or more additional devices (TWFY_CAMERATOP, TWFY_CAMERATOP, TWFY_CAMERAPREVIEW).
4. It is possible for a Source to support multiples of a given device type, for instance a scanner may support two devices of type TWFY_CAMERA, both with a supporting TWFY_CAMERATOP and TWFY_CAMERABOTTOM. Use pTW_FILESYSTEM->DeviceGroupMask to uniquely identify a camera or to group it with its associated top and bottom cameras. For example:

Name	Type	Group
/camera_1	TWFY_CAMERA	0x0001
/camera_1_top	TWFY_CAMERATOP	0x0001
/camera_1_bottom	TWFY_CAMERABOTTOM	0x0001
/camera_2	TWFY_CAMERA	0x0002
/camera_2_top	TWFY_CAMERATOP	0x0002
/camera_2_bottom	TWFY_CAMERABOTTOM	0x0002

5. Zero or more directories for storing images (on memory cards, disks, etc...). These are organized in a hierarchical structure that permits, but does not require the ability to browse in a network:

A TWFY_DOMAIN directory contains only TWFY_HOST directories

A TWFY_HOST directory contains only TWFY_DIRECTORY directories

A TWFY_DIRECTORY contains TWFY_IMAGE files and/or TWFY_DIRECTORY directories.

Sources that provide image storage must provide at least one TWFY_DIRECTORY.

TWFY_DOMAIN and TWFY_HOST are optional.

Rules for Root Directory

1. The root directory can only contain devices or directories, not images.
2. The application cannot create, delete, copy into or rename files in the root directory.
3. Files in a directory are not ordered in any fashion (for instance, an Application may not assume that they are alphabetically sorted). There is one exception to this rule: when an Application issues a DG_CONTROL / DAT_FILESYSTEM / MSG_GETFIRSTFILE on the root directory, the Source must return a TWFY_CAMERA device. This device is the designated default capture camera. If an Application begins capability negotiation, or image capture *without* accessing DAT_FILESYSTEM, then this is the device that will be used.

Rules for Image Directory

1. A TWFY_DIRECTORY can contain 0 or more TWFY_DIRECTORYs (sub-directories).
2. Can contain 0 or more TWFY_IMAGE (image files).
3. May be fully accessible, read or write protected.
4. May be created or deleted by an Application, given that it is not in the root directory, and that it is not protected by the Source.

Context Variable

The reason for the Context variable is that it allows for unconditional mingling of DAT_FILESYSTEM operations. If there was no Context variable, then Applications would be more limited in the order of operations that could be performed. For instance, the recursive directory walk in the code sample would be much harder to accomplish without a Context to help the Source identify the current directory being accessed by a call to MSG_GETNEXTFILE.

This value is provided solely for the benefit of Source writers. When MSG_GETFIRSTFILE is called, the Source should record the current directory and the current file and store those values internally, using Context as a reference to their location. The nature or value of the Context is dependent on the implementation of the Source, Applications must never attempt to use or modify the Context. A call to MSG_GETINFO must use this Context to identify the file being reported. Calls to any of the file transfer methods (MSG_IMAGENATIVEXFER, MSG_IMAGEFILEXFER, MSG_IMAGEMEMXFER, MSG_AUDIONATIVEXFER, MSG_AUDIOFILEXFER) must use this Context to determine the data being sent to the Application. A call to MSG_GETNEXTFILE must use this Context to help obtain the next file from the directory (this will result in a change in the context as it references the new file). And, finally, a call to MSG_GETCLOSE releases the memory in the Source associated with this Context.

Condition Codes

These are some condition codes that apply specifically to file system operations:

TWCC_DENIED	File system operation is denied. A Source should report this condition code if an attempt is made to access a protected file. Examples of such protection include: any attempt to delete, rename or copy into the root directory; protected files that are on the network; and any file that the Source feels it needs to protect.
TWCC_FILEEXISTS	The operation failed because the file already exists. A Source should report this condition code if an attempt is made to create a sub-directory with a name that already exists in the targeted directory; or if an attempt is made to copy or rename over an existing file or directory.
TWCC_FILENOTFOUND	The file was not found. This can occur for a variety of reasons: attempts to change directory to a path that does not exist; attempts to delete, rename or copy files that do not exist; as the condition code from MSG_GETFIRSTFILE for an empty directory; or MSG_GETNEXTFILE when it finds no more files in the current directory; and, finally, from MSG_GETINFO if it is requested to provide information on a file that has been deleted.

TWCC_NOTEMPTY

Operation failed because the directory is not empty. This condition code is used by the Source if an attempt is made with the Recursion flag set to FALSE to delete a non-empty directory.

File Types

The DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY operation is used to make either a device or a directory current. If a camera device is the target, then all capability negotiation is with that device and all images come from that device, until a new MSG_CHANGEDIRECTORY command is issued. If an image directory is selected then the current device is set to be the root level directory name (i.e., changing to /abc/mno/xyz means that the current device is /abc).

TWIFY_CAMERA

Every TWAIN file system must support at least one camera, which must be the default device on startup. This is for compatibility with pre 1.8 applications as well as post 1.8 applications that do not choose to make use of the file system. On single pass duplex scanners, this camera device is used to simultaneously set values for the top and bottom cameras. During the capturing of images (in duplex mode) it sends a stream of images in the order: TOP, BOTTOM, TOP...

TWIFY_CAMERATOP / TWIFY_CAMERABOTTOM

Single pass duplex scanners may opt to provide independent access to the top and bottom cameras. A device with one of these file types controls the settings for the specified camera. If this device is the current device at the time image capture commences, then only images from that camera will be passed to the Application. This means that even if a device is set for duplex scanning, if the current device has a file type of TWIFY_CAMERATOP, then only top images will be passed to the Application.

TWIFY_CAMERAPREVIEW

A logical device that performs camera live preview functionality. When implementing the Source for this logical device, related capabilities must be negotiated to perform preview specific functions. Among them, ICAP_XRESOLUTION and ICAP_YRESOLUTION must be implemented to specify the preview image sizes. Other capabilities may be available in some sources, such as ICAP_ZOOMFACTOR and ICAP_FLASHUSED2.

TWIFY_DIRECTORY	At the root directory level files of this type should correspond to a physical piece of hardware (a memory card or a disk). The root directory is only allowed to contain devices. Sub-directories may only contain image files or more sub-directories. Access to files and directories is controlled by the Source, so Applications should check all operations and watch out for condition codes such as TWCC_DENIED.
TWIFY_IMAGE	Any directory, except root, may contain image files. The DAT_FILESYSTEM messages MSG_GETFIRSTFILE and MSG_GETNEXTFILE select the current image. Once an image has been selected, it may be transferred in the same fashion used to acquire images from a camera. Note: this file type is reserved for full resolution images, see the section on Thumbnails for information on how to acquire them.

DAT_FILESYSTEM Operations

MSG_AUTOMATICCAPTUREDDIRECTORY	Selects the directory to be used to store images acquired by automatic capture.
MSG_CHANGEDIRECTORY	Selects the device or image subdirectory. Use this to select between direct camera (scanner) control, and browsing of stored images. All capabilities negotiated and triplet operations are with the current device (directory), until this value is changed by the Application.
MSG_COPY	Copies the specified file from one directory to another. If the Recursive flag is TRUE and the file type specified is TWIFY_DIRECTORY then that directory and all the files and directories under it are copied. The Application cannot copy files into the root directory.
MSG_CREATEDIRECTORY	Creates a new image subdirectory. The Application cannot create files in the root directory.
MSG_DELETE	Deletes the specified file. If the Recursive flag is TRUE and the file type specified is TWIFY_DIRECTORY, then all the files under that directory are deleted. The Application cannot delete files in the root directory.
MSG_FORMATMEDIA	Formats the currently selected storage device. Use with caution.

MSG_GETCLOSE	Closes the Context created by MSG_GETFIRSTFILE.
MSG_GETFIRSTFILE	Creates a Context that points to the first file in a directory. This Context is used by MSG_GETINFO, MSG_GETNEXTFILE, MSG_GETCLOSE; and for files of type TWFY_IMAGE all image transfer related operations performed in states 6 and 7 use the image pointed to by this Context (i.e., DAT_IMAGEINFO, DAT_IMAGEMEMXFER, etc...).
MSG_GETINFO	Returns information about a device, directory or image file.
MSG_GETNEXTFILE	Updates the Context to point to the next file in the directory.
MSG_RENAME	Renames a directory or an image file. If the directories differ, then it moves the file as well, creating it in the new location and deleting it from the old location. Files in the root directory cannot be renamed by the Application.

Thumbnails and Sound Snippets

TWAIN is primarily concerned with the acquisition of images, so the file system does not contain thumbnail files or sound files, since these kinds of data are expected to be associated with image files. This simplifies an Application's browsing of the file system, since it need only concern itself with one type of data file (TWFY_IMAGE), and does not have to trace associated data files.

Sources must filter out non-image files, if the device stores thumbnail and sound data independent of the image files. For instance, if a device stores the following files:

```
IMAGE001.TIF
IMAGE001_THUMBNAIL.TIF
IMAGE001_SOUND.WAV
```

The file system must only report the existence of IMAGE001.TIF

An Application obtains the thumbnail for an image by setting ICAP_THUMBNAILSENABLED to TRUE; the same filename is used for both the full resolution and thumbnail versions of an image. By setting ICAP_THUMBNAILSENABLED, the Application decides which version of the image it receives.

Sound snippets are also associated with image files, unlike thumbnails it is possible for a single image file to own several sound snippets. An Application can get the number of snippets that an image owns, and then, during image transfer, the Application has the option to transfer any number of those snippets. It is also possible to collect the snippets for an image without transferring the image data.

Sample Recursive Directory Walk

The following is a sample recursive directory walk.

```
// This Application function walks through all the files in a Source's
// file system, counting the file types file system, counting the file
```

```

// types it finds. It is intended only as a sample, error checking is
// omitted to simplify the code.

typedef struct {
    int Devices;
    int Directories;
    int Images;
} t_Counters;

TW_UINT16 DirectoryWalk(TW_FILESYSTEM *fsArg, t_Counters *Counters)
{
    TW_UINT16 rc; TW_FILESYSTEM fs;

    // Caller has set fsArg->InputFile to some value, such as "/"...
    rc = (*DS_Entry) (&app,&src,DG_CONTROL,DAT_FILESYSTEM,
        MSG_CHANGEDIRECTORY, fsArg);

    // We do GETFIRSTFILE first in each new directory, GETNEXTFILE for all
    // subsequent calls...
    for (rc = (*DS_Entry)(&app,&src,DG_CONTROL,DAT_FILESYSTEM,
        MSG_GETFIRSTFILE,&fs);
        rc == TWRC_SUCCESS;
        rc = (*DS_Entry)(&app,&src,DG_CONTROL,DAT_FILESYSTEM
            ,MSG_GETNEXTFILE,&fs)) {

        // Count the appropriate file type...
        switch (fs.FileType) {
            default: Counters->Devices += 1; break;
            case TWFY_IMAGE: Counters->Images += 1; break;
            case TWFY_DOMAIN:
            case TWFY_HOST:
            case TWFY_DIRECTORY:
                Counters->Directories += 1;
                // Recursively step into this directory, looking for more
                // stuff...
                rc = DirectoryWalk(&fs,&Counters);
                if (rc != TWRC_SUCCESS) {
                    rc = (*DS_Entry)(&app,&src,DG_CONTROL,DAT_FILESYSTEM,
                        MSG_GETCLOSE,&fs);
                    return(rc);
                }
                break;
        }
    }
}

```

```

        // Cleanup and return...
        rc =
        (*DS_Entry)(&app,&src,DG_CONTROL,DAT_FILESYSTEM,MSG_GETCLOSE,&fs);
        return(TWRC_SUCCESS);
    }

    // Using this function...
    TW_UINT16 rc;
    TW_FILESYSTEM fs;
    t_Counters Counters;
    memset(&fs,0,sizeof(fs));
    memset(&Counters,0,sizeof(Counters));
    strcpy(fs.InputFile,"/"); // start at root...
    rc = DirectoryWalk(&fs,&Counters);

```

Internationalization

TWAIN 2.0 Applications and Sources use UTF-8 to pass localized data back and forth in any field with a type of TW_STR32, TW_STR64, TW_STR128 or TW_STR255. Since the first 128 characters map to US-ASCII, this requires no change for most Applications and Sources.

Some structures should never localize their data, like TW_IDENTITY, since changing locales presents a problem for Applications and Sources that need to recognize a particular string to help with customization.

The use of UTF-8 is not mandated for localized strings displayed by the Application or the Source. Those strings are internal to their respective functions, and do not pass through the TWAIN API, so the Applications and Sources are free to encode them in any way they choose.

Audio Snippets

Digital Cameras have the ability to acquire audio snippets along with an image. To support this TWAIN 1.8 provides a new data group, DG_AUDIO. Because TWAIN is image-centric, DG_AUDIO operations are dependent on an image context, audio snippets must be associated with an image. When a Source enters into state 6, the Application can opt to transfer any and all audio snippets. The steps required to obtain audio snippets deliberately parallel the steps required to transfer images, to reduce the effort to learn how to access this new kind of data.

The following Data Argument Types (DATs) are supported by DG_AUDIO:

DAT_AUDIOFILEXFER	transfer audio in file format
DAT_AUDIOINFO	info about an audio snippet
DAT_AUDIONATIVEXFER	transfer audio in native format

The following DG_CONTROL (DATs) are supported when DAT_XFERGROUP is set to DG_AUDIO, DATs not mentioned in this list must return TWRC_FAILURE / TWCC_BADPROTOCOL:

DAT_CAPABILITY	no changes to its operation
DAT_EVENT	no changes to its operation
DAT_IDENTITY	no changes to its operation
DAT_NULL	no changes to its operation
DAT_PASSTHRU	no changes to its operation
DAT_PENDINGXFERS	reports number of snippets remaining to be transferred, MSG_ENDXFER and MSG_RESET do not cause the Source to drop to State 5.
DAT_SETUPFILEXFER	selects the audio file format
DAT_STATUS	no changes to its operation
DAT_USERINTERFACE	no changes to its operation
DAT_XFERGROUP	MSG_SET, MSG_GETDEFAULT and MSG_GETCURRENT added to allow switching between data groups. The default value for MSG_GETDEFAULT must be DG_IMAGE. And when the Source starts up, MSG_GETCURRENT must report DG_IMAGE as the current data group, to maintain compatibility with pre-TWAIN 1.8 Applications.

The following capabilities support audio; all capabilities are negotiable at all times (at least in state 4), independent of the current setting of DAT_XFERGROUP:

ACAP_XFERMECH	negotiate audio snippet transfer mechanism
---------------	--

Collecting Audio Snippets

The transfer of an audio snippet was designed to be used when an Application is browsing through a selection of stored images. There is nothing to prevent the transfer of audio when an image is captured in real-time, though TWAIN does require that any audio snippets be transferred before the image is transferred.

A typical transfer may occur in the following way: An Application is browsing through storage managed by the TWAIN Source using MSG_GETFILEFIRST / MSG_GETFILENEXT (see DAT_FILESYSTEM), and finds an image that it wants to work with. The Application enters state 6 by calling DG_CONTROL / DAT_IDENTITY / MSG_ENABLEDS. If the Application wants to find out if there are any audio snippets associated with the image, it can call DG_AUDIO / **DAT_AUDIOINFO** / MSG_GET. In this example it finds in the TW_AUDIOINFO structure that this image file has three audio snippets associated with it. The Application wants the second audio snippet, so it calls DG_CONTROL / DAT_XFERGROUP / MSG_SET and sets the data group to DG_AUDIO. This call changes the context of the Source, it is now set up to transfer audio data. One effect of this is that a call to DG__CONTROL / DAT_PENDINGXFERS / MSG_GET will report the number of audio snippets (for this image) that remain to be transferred. Because the Application wants the second audio snippet, it must discard the first one, and does this by making a call to DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER. The snippet that it wants is now available to be transferred, and it does this with a call to DG_AUDIO / **DAT_AUDIONATIVEXFER** / MSG_GET. The Source moves up into state 7. The Application ends the transfer with a call to DG_CONTROL / DAT_PENDINGXFERS / MSG_ENDXFER.

Because the Application only wanted the second audio snippet, it can return to DG_IMAGE by making a call to DG_CONTROL / DAT_XFERGROUP / MSG_SET. Once this is done, all other commands work in a traditional TWAIN fashion. The Application can opt to transfer or discard the image, even though it did not transfer all of the audio snippets.

There is one more thing to note, if the Application had read the third audio snippet, or if it had issued the DG_CONTROL / DAT_PENDINGXFERS / MSG_RESET command while in DG_AUDIO, the state of the Source would remain at state 6. TWAIN works this way because it is image-centric, the only way to transition from state 6 to state 5 is when it is determined that there are no more images to transfer.

Notes

1. TWAIN 1.8 supports native and file transfers of audio snippets. Buffered mode transfers are not supported, because TWAIN does not have the necessary infrastructure to describe audio data, and it was decided that adding that structure in this release would be overly complex, and probably incomplete.
2. As a general rule, even though many operations are possible with DAT_XFERGROUP set to DG_AUDIO, Applications are encouraged to only change to DG_AUDIO for the length of time it takes to collect an audio snippet, and to stay in DG_IMAGE mode at all other times.
3. Though TWAIN is image-centric, it is possible to envision a TWAIN Source that is only capable of supporting DG_AUDIO. The TWAIN Working Group feels that any such notion is a bad idea, and encourages anyone thinking of doing this to pick on some other API.

How to use the Preview Device

Application Switch to the Preview Logical Device

The application first tries to switch to the preview logical device using the DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY triplet with TWFY_CAMERAPREVIEW set in InputName field of TW_FILENAME structure. If the returned value is TW_SUCCESS, the application can proceed.

1. After the application successfully switches to the preview device, all subsequent capability negotiation is with the preview device.
2. The application queries the Source with capability CAP_CAMERAPREVIEWUI. If it returns SUCCESS, then the Source is able to assume the responsibility of displaying preview images. The application can choose to use the Source's UI or not when it issues the MSG_ENABLEDS. If the application uses the Source's UI, it will do nothing but wait to issue MSG_DISABLED, or wait for a MSG_CLOSEDREQ from the Source to stop the preview mode. If the application does not use the Source's UI or the Source does not provide a UI, then the application should follow the following steps.

Setting Up Environments for Preview Mode

1. The application starts negotiation on the Preview size using the ICAP_XRESOLUTION and ICAP_YRESOLUTION capabilities with MSG_GET first. With the returned supported sizes

from the Source, the application can set the selected preview sizes using the ICAP_XRESOLUTION and ICAP_YRESOLUTION capabilities with MSG_SET.

2. Optionally, the application can negotiate the zoom lens value, camera flash state during previewing, etc, with available capabilities such as ICAP_ZOOMFACTOR, ICAP_FLASHUSED2. If application queries for capabilities that are not related to preview device, Source will return TWRC_FAILURE.

Start Getting and Displaying Preview Thumbnails

1. The application can use the automatic capture feature with CAP_XFERCOUNT to -1 (Application is willing to transfer multiple images).
2. Application issues MSG_ENABLEDS to move to state 5. Upon receiving this message, the Source should start capturing images¹.
3. Source issues MSG_XFERREADY, indicating that an image is present, and state moves to 6.

LOOP:

4. Application issues DAT_IMAGENATIVEXFER to get image and goes to state 7.
5. Application issues MSG_ENDXFER to return to state 6, and it displays the image. Then if it wants the next preview image, examines pTW_PENDINGXFERS->Count to verify that there is another image, and it goes to LOOP. Source, upon receiving the MSG_ENDXFER message, takes the next picture and returns -1 in the pTW_PENDINGXFERS->Count.

END LOOP

6. If the application wants to end preview mode, it issues DAT_PENDINGXFERS / MSG_RESET. This forces the Source to go to state 5 (CAP_XFERCOUNT is set to 0). If the Source is unable to deliver preview images, it sets pTW_PENDINGXFERS->Count to 0 in reply to the application's MSG_ENDXFER command, and returns to state 5.
7. The application can then issue MSG_DISABLED, which returns it to state 4, and now the application can use DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY to change directory to the camera device to take a full resolution picture.

How to Take a Snapshot from Preview Scene

1. The application could provide a button or menu item for the user to take a snapshot from the preview scene, for example, a "Take Picture" button. In response to this, the application should use the triplet DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY with TWFS_CAMERA set in the TW_FILENAME structure to stop the preview mode.
2. Subsequently, the application can use the automatic capture feature with CAP_XFERCOUNT to 1, CAP_TIMEBEFOREFIRSTCAPTURE to 0 and CAP_AUTOMATICCAPTURE set to 1 to initiate the capture of preview snapshot.
3. When the Source receives the CAP_AUTOMATICCAPTURE, it should capture the preview snapshot, and inform the application with MSG_XFERREADY when it is ready to transfer.
4. After receiving the MSG_XFERREADY, the application should use one of the three standard image transfer methods to transfer the captured image from the Source to the application.

1. The Source takes a picture as soon as it receives MSG_ENABLEDS and each time it receives MSG_ENDXFER

5. At the end of this operation, the application has the option of going back to the preview thumbnail loop.

Imprinter / Endorser

Scanners intended for document imaging sometimes include accessories that let the scanner print data on the documents as it scans them. TWAIN provides basic functionality to negotiate capabilities for imprinter / endorser devices. An imprinter is a general term for any document-printing device. An endorser is more specialized, and is primarily intended as proof of scanning. In addition to the type of printing device, TWAIN offers ways to locate the printer on the scanning path: top or bottom of the sheet of paper, before or after the paper has been scanned. It is the responsibility of the Source to provide the available combinations to the Application. It is the responsibility of the Application to enable the printers that it wants to use, and to establish seed values prior to scanning.

This is a context sensitive scheme, Applications use `CAP_PRINTER` to discover what printers are available to the Source, and to select each of those printers for negotiation.

`CAP_PRINTERENABLED` determines whether or not a given printer will be used when scanning begins; a value of `TRUE` indicates that it will be used, a value of `FALSE` that it will not be used. Applications must enable a printer before negotiating the seed values.

`CAP_PRINTERINDEX` describes an index that counts by ones for every image seen by a given printer.

`CAP_PRINTERMODE` selects one of three options: print one line of text from `CAP_PRINTERSTRING`, or multiple lines from `CAP_PRINTERSTRING`, or a compound string constructed (in order) from `CAP_PRINTERSTRING`, `CAP_PRINTERINDEX` and `CAP_PRINTERSUFFIX`.

`CAP_PRINTERSTRING` specifies the base message to be printed. For compound strings, the `CAP_PRINTERSTRING` serves as the prefix to the `CAP_PRINTERINDEX`.

`CAP_PRINTERSUFFIX` is only available for compound strings, and describes the text (if any) that is to follow the `CAP_PRINTERINDEX`.

Example of Use:

Consider a Source that supports two `CAP_PRINTERS`:

`TWPR_IMPRINTERTOPBEFORE`

`TWPR_IMPRINTERBOTTOMBEFORE`

The Application then:

- uses `CAP_PRINTER` to discover the two printers
- sets `CAP_PRINTER` to `TWPR_IMPRINTERTOPBEFORE`
 - sets `CAP_PRINTERENABLED` to `TRUE` (turning this printer on)

- sets CAP_PRINTERMODE to TWPM_SINGLESTRING
- sets CAP_PRINTERSTRING to a string containing today's date
- sets CAP_PRINTER to TWPR_IMPRINTERBOTTOMBEFORE
- sets CAP_PRINTERENABLED to FALSE (turning this printer off)

Note that the value of CAP_PRINTER is not important at the time of scanning, it is the other capabilities that control the imprinter, like CAP_PRINTERENABLED; CAP_PRINTER only selects the current printer under negotiation.

Capability Ordering

As the number of capabilities described by TWAIN has increased it has become clear that there are dependencies between many of them. In some cases these dependencies are not likely to be critical, for example if ICAP_CCITTKFACTOR is set to some non-zero value, and ICAP_COMPRESSION is not TWCP_GROUP32D, most scanners will not see this as a problem. On the other hand, if ICAP_COMPRESSION is set to TWCP_JPEG and ICAP_XFERMECH is set to TWSX_NATIVE then it is extremely unlikely that the Application will get useable image data.

It is the responsibility of the Source to properly constrain itself according to the current settings of all of its capabilities. Doing so has the following benefits:

- The Source protects itself from illegal configurations.
- The Source reports to the Application through constraints and the TWCC_CAPSEQERROR condition code which capabilities are fully, partially or currently not negotiable.

It is the responsibility of the Application to negotiate capabilities in the proper order. Doing so has the following benefits:

- The Application protects itself from illegal configurations.
- The Application can use constraints and occurrences of TWCC_CAPSEQERROR to modify the behavior of its user interface, better representing the Source's capabilities to the user.

The reset of this article is written in the order of negotiation that an Application should use to control a Source.

Language Support

The first thing the Source and Application should negotiate is the language. This negotiation best occurs as part of the DG_CONTROL / DAT_PARENT / MSG_OPENDS call. The Application reports the language it is using in `appIdentity->Version.Language`. The Source should attempt to try to match this language. If it cannot, it should attempt to match the language that the user logged in with. If this fails then it should pick the best language that it can. For those Sources that support CAP_LANGUAGE the Application has a further opportunity to try and get a good language match, and this should be done as soon as the Source is successfully opened.

Duplex Control

If an Application finds that `CAP_DUPLEX` exists and it indicates that duplex scanning is supported, then the Application should negotiate `CAP_DUPLEXENABLED`. If `CAP_DUPLEXENABLED` is set to `FALSE`, then `DAT_FILESYSTEM` capable Sources should not report any `TWFY_CAMERABOTTOM` devices in the root directory. If the Source is set to a `TWFY_CAMERABOTTOM` device at the time that `CAP_DUPLEXENABLED` is set to `FALSE`, then it should automatically change itself to the corresponding `TWFY_CAMERATOP` device.

Device Negotiation

If the Source supports `DAT_FILESYSTEM`, then the Application needs to walk through the root directory to determine what devices are available, if it wants to independently control the individual devices. Sources are required to default to the `TWFY_CAMERA` device (the implied default for Sources that do not support `DAT_FILESYSTEM`). If an Application negotiates capabilities using this device, then the Source is expected to apply the settings to as many of its applicable devices as possible. For instance, in a duplex scanner changing the value of `ICAP_BRIGHTNESS` for the default `TWFY_CAMERA` device will change the settings of its corresponding `TWFY_CAMERATOP` and `TWFY_CAMERABOTTOM`. Once the list of devices has been identified, the Application may optionally change to one of them using `DG_CONTROL / DAT_FILESYSTEM / MSG_CHANGEDIRECTORY`.

Supported Capabilities

Applications are encouraged to use this call to get the capabilities supported by a Source, since this information can be used to quickly characterize the device. For instance, a Source that supports `ICAP_FLASH2` is more likely to be a digital camera than a scanner. Or in another case, a single-pass duplex scanner that supports `DAT_FILESYSTEM` access to both of its cameras might not support all the same capabilities for both cameras.

Extended Capabilities

This is an appropriate time to negotiate the extended capabilities `CAP_EXTENDEDCAPS` as indicated by `CAP_SUPPORTEEXTCAPS` (ones that are settable in state 6), though there is no implied dependency in locating it here.

Feeder Control

`CAP_FEEDERENABLED` is the key capability to determine if a Source supports an automatic document feeder (ADF). Once this value has been determined no special ordering is required to test most of the other values, although there are groupings worth noting. Some ADFs provide control over individual sheets of paper: `CAP_CLEARPAGE`, `CAP_FEEDPAGE`, `CAP_REWINDPAGE`. Some ADFs are supported by memory buffers built into the device: `CAP_AUTOSCAN`, `CAP_MAXBATCHBUFFERS`. Some ADFs are capable of detecting the presence of paper in the input bin: `CAP_PAPERDETECTABLE`, `CAP_FEEDERLOADED`. `ICAP_FEEDERTYPE` reports either the types of feeders available (in the case where there is a general type feeder only) or the scan types supported through the feeder

Frame Management

Before negotiating frame information an Application should first establish the unit of measurement using `ICAP_UNITS`. It should establish the `ICAP_XRESOLUTION` and

ICAP_YRESOLUTION of the image, especially if TWUN_PIXEL is supported, since the reported values should vary with the pixel density. After that the Application should determine the physical limits of the Source using ICAP_MINIMUMHEIGHT, ICAP_MINIMUMWIDTH, ICAP_PHYSICALHEIGHT and ICAP_PHYSICALWIDTH.

Note: ICAP_MINIMUMHEIGHT, ICAP_MINIMUMWIDTH, ICAP_PHYSICALHEIGHT, and ICAP_PHYSICALWIDTH may vary depending on the source of the document. For example, when using a Flatbed / ADF combination scanner, the ADF path may permit longer documents to be scanned. In this case, values for these extents would be expected to differ for different values of CAP_FEEDERENABLED.

DAT_IMAGELAYOUT is required by all Sources. Most scanners support ICAP_SUPPORTEDSIZES (unlike digital cameras, which tend to not support physical measurements like inches and centimeters).

ICAP_SUPPORTEDSIZES is required to set itself to TWSS_NONE if frames are negotiated using either DAT_IMAGELAYOUT or ICAP_FRAMES.

ICAP_MAXFRAMES will report how many frames ICAP_FRAMES is capable of delivering per captured item.

ICAP_ORIENTATION is intended to tell a Source how the orientation of a sheet of paper fed into the scanner varies from the settings of its frame information. ICAP_ROTATION is a specific request to the scanner to rotate the scanned image the indicated number of degrees. In neither case should these capabilities affect anything but the output from DAT_IMAGEINFO. The reason for negotiating these values after establishing the frame is that some Sources may reject attempts to rotate data if one of the dimensions exceeds the physical width or height of the scanner.

ICAP_OVERSCAN is intended as a way to capture image data beyond the usual boundaries of a scanned sheet of paper, and is primarily intended as an aid in deskewing images. The additional scan area is only reported with DAT_IMAGEINFO. The reason for negotiating this value after setting the other values listed above is that some Sources may reject overscan if certain dimensions are exceeded.

ICAP_AUTOMATICDESKEW will correct the rotation of an image, it may also affect the dimensions of the image as reported by DAT_IMAGEINFO.

ICAP_AUTOMATICBORDERDETECTION reduces or removes the border generated around an image by the scanner scanning its own platen (the area not covered by the paper).

ICAP_UNDEFINEDIMAGESIZE may be set to TRUE by a Source depending on one or more of the previously negotiated capabilities. Applications need to remember that it is possible for images to exceed the width and height dimensions, which can impact the amount of allocated memory. It is also important to note that if the width is undefined and ICAP_XFERMECH is set to TWSX_MEMORY, then the Source is required to also set ICAP_TILES to TRUE.

Bar Code Negotiation

ICAP_BARCODEDETECTIONENABLED must be set before any of the other, related capabilities are made available. ICAP_SUPPORTEDBARCODETYPES should then be tested, to determine what bar-code values are supported by the Source. After that the bar-code capabilities may be negotiated in any order.

Patch Code Negotiation

ICAP_PATCHCODEDETECTIONENABLED must be set before any of the other, related capabilities are made available. ICAP_SUPPORTEDPATCHCODETYPES should then be tested, to determine what patch-code values are supported by the Source. After that the patch-code capabilities may be negotiated in any order.

Imprinter/Endorser Negotiation

CAP_PRINTER establishes what (if any) printer/endorsers are supported by the Source. Selecting one establishes a context for that printer/endorser that is used by all related capabilities. CAP_PRINTERENABLED turns the printer on or off; the printer must be on in order for the other settings to be negotiated. A Source may opt to refuse to enable a printer if ICAP_SUPPORTEDSIZES selects a document with a size that is not within the area of the printer.

CAP_PRINTERINDEX should be negotiated next. CAP_PRINTERMODE can then be determined, followed by CAP_PRINTERSTRING and CAP_PRINTERPREFIX.

Scaling

ICAP_XSCALING should be negotiated before the ICAP_YSCALING.

General Capability Negotiation

ICAP_XFERMECH selects the way an image is transferred from the Source to an Application, which has an impact on some of the characteristics of an image, which is why this value must be selected first. If TWSX_NATIVE is selected, then no other action related to image transfer is needed. If TWSX_FILE or TWSX_FILE2 is selected, then the application should negotiate ICAP_IMAGEFILEFORMAT, which will be used when DAT_SETUPFILEXFER is called. If TWSX_MEMORY is selected, then DAT_SETUPMEMXFER will need to be called. The Application may then opt to negotiate ICAP_TILES.

```
// Then negotiate these capabilities...
ICAP_PIXELTYPE
    or
ICAP_JPEGPIXELTYPE
    // Use of flash may affect other values...
    ICAP_FLASHUSED
    ICAP_FLASHUSED2
        ICAP_AUTOBRIGHT
        ICAP_BRIGHTNESS
    ICAP_BITDEPTH
    ICAP_BITDEPTHREDUCTION
        ICAP_CUSTHALFTONE
        ICAP_HALFTONES
        ICAP_THRESHOLD
```

```

ICAP_BITORDER
ICAP_COMPRESSION
    ICAP_BITORDERCODES
    ICAP_CCITTKFACTOR
    ICAP_PIXELFLAVORCODES
    ICAP_TIMEFILL
ICAP_CONTRAST
ICAP_EXPOSURETIME
ICAP_FILTER
ICAP_GAMMA
ICAP_IMAGEFILTER
ICAP_NOISEFILTER
ICAP_PIXELFLAVOR
    ICAP_HIGHLIGHT
    ICAP_SHADOW
ICAP_PLANARCHUNKY
ICAP_XRESOLUTION
    ICAP_XNATIVERESOLUTION
    ICAP_YRESOLUTION
        ICAP_YNATIVERESOLUTION

```

Audio Negotiation

The availability of the audio capabilities can be inferred from the presence of `DG_AUDIO`. If it is available then the Application should negotiate `ACAP_XFERMECH`. Note that these operations occur independently of the current value of `DAT_XFERGROUP`. The actual selection of an audio file format takes place in State 6 using `DAT_SETUPFILEXFER`, and must be preceded by a call to `DAT_XFERGROUP / MSG_SET` to `DG_AUDIO` to change the Source over to the audio data group. Sources that transfer audio data need to set the Source back to `DG_IMAGE` when they are done with the audio data, and ready to get image data, or exit back to State 4.

Alarms

`CAP_ALARMS` selects the kind of audio alerts provided by a Source. `CAP_ALARMVOLUME` is only available if an alarm is selected, and controls the volume for all alarms with a single value.

Power Supply

`CAP_POWERSUPPLY` reports which power supply is currently in effect for the Source. `CAP_BATTERYPERCENTAGE`, `CAP_BATTERYMINUTES` and `CAP_POWERDOWNTIME` are available at all times, though the values they report may change depending on the current value of `CAP_POWERSUPPLY`.

Asynchronous Device Events

CAP_DEVICEEVENT may be used to activate device events.

Automatic Capture

DG_CONTROL / DAT_FILESYSTEM / MSG_AUTOMATICCAPTUREDIREDTORY should be negotiated first, since it selects the destination for the images.

CAP_TIMEBEFOREFIRSTCAPTURE and CAP_TIMEBETWEENCAPTURES should be negotiated next. CAP_AUTOMATICCAPTURE must be negotiated last, because it is the trigger that starts the timer.

Camera-Dependent Capabilities

The following list covers capabilities have no interdependencies, but which may be dependent on the currently selected device (for Sources that support DAT_FILESYSTEM).

CAP_AUTHOR
CAP_CAMERASIDE
CAP_CAPTION
CAP_DEVICETIMEDATE
CAP_ENDORSER
CAP_JOBCONTROL
CAP_PASSTHRU
CAP_SERIALNUMBER
CAP_TIMEDATE
CAP_XFERCOUNT
ICAP_EXTIMAGEINFO
ICAP_IMAGEDATASET
ICAP_LAMPSTATE
ICAP_LIGHTPATH
ICAP_LIGHTSOURCE
ICAP_ZOOMFACTOR

Camera-Independent Capabilities

The following list covers capabilities that are free of any dependencies. Applications can negotiate these in any order (during state 4), and regardless of the current device in effect (for Sources that support DAT_FILESYSTEM):

CAP_CAMERAPREVIEWUI
CAP_CUSTOMDSDATA
CAP_DEVICEONLINE
CAP_DEVICETIMEDATE

CAP_ENABLEDSUIONLY
 CAP_INDICATORS
 CAP_PASSTHRU
 CAP_SEGMENTED
 CAP_THUMBNAILSENABLED
 CAP_TIMEDATE
 CAP_UICONTROLLABLE
 CAP_XFERCOUNT

Defaults

TWAIN describes defaults for capabilities, unfortunately, this information is spread throughout the specification, and in some cases is ambiguous. This article discusses how Sources and Applications should use and manage defaults values. It covers the three main kinds of defaults supported by TWAIN. It discusses the `DG_CONTROL` / `DAT_CAPABILITY` / `MSG_xxxx` functions and how they relate to defaults. Finally, it offers a section that describes the expected default settings for each capability within TWAIN.

Default Mechanisms

Defaults in TWAIN serve three main functions:

Mandatory Defaults	Protect Applications from incompatible settings.
Preferred Defaults	Permit Source providers to expose preferred settings for capabilities.
User Defaults	Create consistency in a Source's user interface; values selected in one session are preserved for the next session.

Mandatory defaults are established by the TWAIN specification. Preferred defaults may be selected by a Source for any capability that does not have a mandatory default. User defaults may replace any preferred default with a value selected by the user through the Source's user interface. These three functions are not intrinsically compatible, which creates ambiguity; Applications cannot make assumptions about the initial values of all capabilities.

Mandatory Defaults

Some capabilities must reflect certain values when a Source is opened. These defaults are selected because Applications must be allowed to expect certain kinds of behavior without being forced to negotiate all capabilities (not only would this be tedious, but it is impossible in situations where a Source and Application are derived from different versions of TWAIN). For example, the 1.8 capability `CAP_PRINTERENABLED` must default to `FALSE`, otherwise a 1.6 Application might find itself printing data on scanned documents, and unable to do anything about it.

Preferred Defaults

TWAIN permits a Source to provide its own defaults. These settings are assumed to produce the most favorable results possible, whether they are measured in terms of processing speed, memory usage, or some other criteria. For instance, a Source will select a preferred value for `ICAP_PIXELFLAVOR` that keeps it from having to invert the bits in an image. In some cases the preferred defaults are gleaned from the current state of the device. For instance, `CAP_FEEDERENABLED` depends on the presence of a feeder on the scanner device. A Source is expected to determine if the feeder is truly present, not assume that the value saved from the last session is valid.

User Defaults

Prior to TWAIN 1.7 Applications generally relied on Sources to provide user interfaces that controlled image capture. Since one of the tenants of TWAIN is to make things easier for Applications, it became common for Sources to save state, preserving the values selected by a user, so the next time the Application started the same values would be displayed. This mechanism continues to be desirable, but Source writers should bear in mind that user defaults values are a convenience that can create problems for users who access their Source from more than one Application. `CAP_AUTOSCAN` is an example of a capability that should never have its state saved, since Applications that do not negotiate will also not be able to handle the results if it happens to be set to `TRUE`.

DAT_CAPABILITY Operations

There are five methods of negotiating values with a Source, this section discusses how Sources and Applications should relate them to the various kinds of default values:

- `MSG_GET` returns the current value of the capability, along with the allowed values (if any). At startup, this value will reflect the mandatory default, if there is one. If there is no mandatory default, then this call will return the user default, if supported and if one is available; otherwise it will return the preferred default value for the Source. It is up to the Application to understand the possible sources of a value, and override it if desired. Note that the allowed values are always reset when a Source starts up. Sources must never save the constraints created by an Application.
- `MSG_GETCURRENT` returns the current value of the capability, it does not return the allowed list. At startup, this value will reflect the mandatory default, if there is one. If there is no mandatory default, then this call will return the user default, if supported and if one is available; otherwise it will return the preferred default value for the Source.
- **`MSG_GETDEFAULT`** always returns either the mandatory or preferred default, whichever is appropriate for the capability. It never returns a user default. Like `MSG_GETCURRENT` it only returns the value, not the allowed list.
- `MSG_RESET` resets a capability's allowed list to all permitted values, and sets the current value to the mandatory or preferred default, never the user default. The container returned by `MSG_RESET` must be the same kind of container returned for a **`MSG_GETDEFAULT`** operation, this preserves legacy behavior; however, Applications should follow `MSG_RESET` with `MSG_GET` if they wish to determine how the constraints for the capability have been reset. This message is a good one for Applications to use, since it is easy to code, and can be used to get a Source to some kind of a known state.

A simple mechanism for resetting a Source uses the following steps (*Applications that use the Source's UI should not use this method*): for each device supported by the Source (pre-1.8 Sources

only have one implicit device) the Application calls CAP_SUPPORTEDCAPS; for each capability the Application calls DG_CONTROL / DAT_CAPABILITY / MSG_QUERYINTERFACE to see if it supports TWQI_RESET; if it does, then the Application sends DG_CONTROL / DAT_CAPABILITY / MSG_RESET which resets the capability.

Performing these steps will protect an Application from any user defaults created by a previous Application. Please note, not all Sources may support MSG_QUERYINTERFACE. For those that don't, an Application would have to issue MSG_RESET on all capabilities (perhaps excluding those it knows to be read-only) and trust that the Source is robust enough to report TWRC_FAILURE for those capabilities that do not support MSG_RESET.

- MSG_SET sets the current value and optionally sets the constraints on a capability. Sources must never save the constraints negotiated by an Application. The case of the current value is a little different, since a Source is supposed to reflect the negotiated values in its UI, it's possible for a capability set in State 4 to find its way into the user defaults.

Capability Default-Values Table

This table details for each capability whether its defaults are mandatory or not (preferred and user defaults are non-mandatory), along with the default value, if any. Note that some capabilities do not support defaults (actions), or have defaults that are governed by the current device, or have defaults that are always equal to the current value (read-only values). It is worth reiterating that the use of the word **Mandatory** does not imply that the capability must be present in a Source, only that if it is present its initial value is defined by this specification.

Capability	Type	Value / Comments
ACAP_XFERMECH	Mandatory	TWSX_NATIVE
CAP_ALARMVOLUME	Preferred / User	No default
CAP_ALARMS	Preferred / User	No default
CAP_AUTHOR	Preferred / User	No default
CAP_AUTODISCARDBLANKPAPER	Mandatory	FALSE
CAP_AUTOFEED	Preferred / User	No default
CAP_AUTOMATICCAPTURE	Preferred / User	No default. It is possible for an Application to disconnect from a device, leaving it in a state where it will automatically take pictures at the specified time. This value is preserved so that after a disconnect, a reconnect will not reset automatic capture and prevent the device from taking pictures.
CAP_AUTOSCAN	Mandatory	FALSE
CAP_BATTERYMINUTES	n/a	Read-only value
CAP_BATTERYPERCENTAGE	n/a	Read-only value
CAP_CAMERAPREVIEWUI	n/a	Read-only value

Capability	Type	Value / Comments
CAP_CAMERASIDE	n/a	TWCS_BOTH
CAP_CAPTION	Preferred / User	No default
CAP_CLEARBUFFERS	Mandatory	TWCB_AUTO
CAP_CLEARPAGE	n/a	n/a
CAP_CUSTOMDSDATA	n/a	Read-only value
CAP_DEVICEEVENT	Mandatory	Empty, no events reported by MSG_GET
CAP_DEVICEONLINE	n/a	Read-only value
CAP_DEVICETIMEDATE	n/a	Device generated value
CAP_DUPLEX	n/a	Read-only value
CAP_DUPLEXENABLED	Preferred / User	Read-only value
CAP_ENABLEDSUIONLY	n/a	Read-only value
CAP_ENDORSER	Mandatory	0
CAP_EXTENDED CAPS	Mandatory	Empty, no capabilities reported by MSG_GET
CAP_FEEDERALIGNMENT	n/a	Read-only value
CAP_FEEDERENABLED	Preferred / User	No default
CAP_FEEDERLOADED	n/a	Read-only value
CAP_FEEDERORDER	n/a	Read-only value
CAP_FEEDPAGE	n/a	Device action
CAP_INDICATORS	Mandatory	TRUE
CAP_JOBCONTROL	Mandatory	TWJC_NONE
CAP_LANGUAGE	Preferred / User	In the following order: appIdentity->Version.Language GetLocaleInfo(LOCALE_USER_DEFAULT) Preferred (some suitable secondary language, such as English or French)
CAP_MAXBATCHBUFFERS	n/a	Calculated value
CAP_PAGEMULTIPLEACQUIRE	n/a	Read-only value
CAP_PAPERDETECTABLE	n/a	Read-only value
CAP_POWERSAVETIME	Preferred / User	No default
CAP_POWERSUPPLY	n/a	Read-only value
CAP_PRINTER	n/a	No default

Capability	Type	Value / Comments
CAP_PRINTERENABLED	Mandatory	FALSE (for each item in CAP_PRINTER)
CAP_PRINTERINDEX	Preferred / User	No default
CAP_PRINTERMODE	Preferred / User	No default
CAP_PRINTERSTRING	Preferred / User	No default
CAP_PRINTERSUFFIX	Preferred / User	No default
CAP_REWINDPAGE	n/a	Device action ???Read-only value
CAP_SEGMENTED	Preferred / User	TWSG_None
CAP_SERIALNUMBER	n/a	Read-only value
CAP_SUPPORTEDCAPS	n/a	Read-only value
CAP_TIMEBEFOREFIRSTCAPTURE	Preferred / User	No default
CAP_TIMEBETWEENCAPTURES	Preferred / User	No default
CAP_TIMEDATE	n/a	Read-only value
CAP_THUMBNAILENABLED	Mandatory	FALSE
CAP_UICONTROLLABLE	n/a	Read-only value
CAP_XFERCOUNT	Mandatory	-1
ICAP_AUTOMATICBORDERDETECTION	Mandatory	FALSE
ICAP_AUTOBRIGHT	Preferred / User	No default
ICAP_AUTOMATICDESKEW	Mandatory	FALSE
ICAP_AUTOMATICROTATE	Mandatory	FALSE
ICAP_BARCODEDETECTIONENABLED	Mandatory	FALSE
ICAP_BARCODEMAXRETRIES	Preferred / User	No default
ICAP_BARCODEMAXSEARCHPRIORITIES	Preferred / User	No default
ICAP_BARCODESEARCHMODE	Preferred / User	No default
ICAP_BARCODESEARCHPRIORITIES	Preferred / User	No default
ICAP_BARCODETIMEOUT	Preferred / User	No default
ICAP_BITDEPTH	Preferred / User	No default
ICAP_BITDEPTHREDUCTION	Preferred / User	No default
ICAP_BITORDER	Preferred / User	No default
ICAP_BITORDERCODES	Preferred / User	No default
ICAP_BRIGHTNESS	Preferred / User	No default
ICAP_CCITTFACITOR	Preferred / User	No default
ICAP_COMPRESSION	Mandatory	TWCP_NONE

Capability	Type	Value / Comments
ICAP_CONTRAST	Preferred / User	No default
ICAP_CUSTHALFTONE	Preferred / User	No default
ICAP_EXPOSURETIME	Preferred / User	No default
ICAP_EXTIMAGEINFO	Mandatory	FALSE
ICAP_FEEDERTYPE	Preferred / User	TWFP_GENERAL
ICAP_FILTER	Mandatory	TWFT_NONE
ICAP_FLASHUSED	Preferred / User	Preferred <i>or</i> Device controlled default
ICAP_FLASHUSED2	Preferred / User	Preferred <i>or</i> Device controlled default
ICAP_FLIPROTATION	Mandatory	TWFR_BOOK
ICAP_FRAMES	Preferred / User	No default
ICAP_GAMMA	Preferred / User	No default
ICAP_HALFTONES	Preferred / User	No default
ICAP_HIGHLIGHT	Preferred / User	No default
ICAP_IMAGEDATASET	Mandatory	Default to entire range of images
ICAP_IMAGEFILEFORMAT	Preferred / User	No default TWFF_BMP (Windows) TWFF_PICT (Macintosh)
ICAP_IMAGEFILTER	Preferred / User	No default
ICAP_JPEGPIXELTYPE	Preferred / User	No default
ICAP_LAMPSTATE	Preferred / User	No default
ICAP_LIGHTPATH	Preferred / User	No default
ICAP_LIGHTSOURCE	Preferred / User	No default
ICAP_MAXFRAMES	Preferred / User	No default
ICAP_MINIMUMHEIGHT	n/a	Read-only value
ICAP_MINIMUMWIDTH	n/a	Read-only value
ICAP_NOISEFILTER	Preferred / User	No default
ICAP_ORIENTATION	Mandatory	TWOR_PORTRAIT
ICAP_OVERSCAN	Mandatory	TWOV_NONE
ICAP_PATCHCODEDETECTIONENABLED	Mandatory	FALSE
ICAP_PATCHCODEMAXRETRIES	Preferred / User	No default
ICAP_PATCHCODEMAXSEARCHPRIORITIES	Preferred / User	No default
ICAP_PATCHCODESEARCHMODE	Preferred / User	No default
ICAP_PATCHCODESEARCHPRIORITIES	Preferred / User	No default

Capability	Type	Value / Comments
ICAP_PATCHCODETIMEOUT	Preferred / User	No default
ICAP_PHYSICALHEIGHT	n/a	Read-only value
ICAP_PHYSICALWIDTH	n/a	Read-only value
ICAP_PIXELFLAVOR	Preferred / User	No default. This is a break from previous versions of TWAIN, made to better support the potential difference in pixel flavor between bitonal and grayscale data in the same device (note that pixel flavor is not defined to have any meaning for color data). Sources are encouraged to default to TWPF_CHOCOLATE if they are accessed by an Application using a protocol prior to TWAIN 1.9. Applications are strongly encouraged to check an image's pixel flavor in state 7, at least once per batch.
ICAP_PIXELFLAVORCODES	Preferred / User	No default
ICAP_PIXELTYPE	Preferred / User	No default
ICAP_PLANARCHUNKY	Preferred / User	No default
ICAP_ROTATION	Mandatory	0
ICAP_SHADOW	Preferred / User	No default
ICAP_SUPPORTEDBARCODETYPES	n/a	Read-only value
ICAP_SUPPORTEDPATCHCODETYPES	n/a	Read-only value
ICAP_SUPPORTEDSIZES	Preferred / User	No default
ICAP_THRESHOLD	Preferred / User	No default
ICAP_TILES	Mandatory	FALSE
ICAP_TIMEFILL	Preferred / User	No default
ICAP_UNDEFINEDIMAGE SIZE	Mandatory	FALSE
ICAP_UNITS	Preferred / User	TWUN_INCHES
ICAP_XFERMECH	Mandatory	TWSX_NATIVE
ICAP_XNATIVERESOLUTION	n/a	Read-only value
ICAP_XRESOLUTION	Preferred / User	No default
ICAP_XSCALING	Preferred / User	No default
ICAP_YNATIVERESOLUTION	n/a	Read-only value
ICAP_YRESOLUTION	Preferred / User	No default
ICAP_YSCALING	Preferred / User	No default
ICAP_ZOOMFACTOR	Preferred / User	No default

B

Twain Technical Support

Chapter Contents

E-Mail Support.....	B-1
Worldwide Web.....	B-2

E-Mail Support

Developers who are connected to AppleLink and the WWW or Internet have access to TWAIN support groups. The support groups can answer your TWAIN development or marketing questions. There are two support groups: the TWAIN Working Group and the TWAIN Developers distribution.

- The TWAIN Working Group is read by Technical, Marketing and Support representatives from the Working Group companies. You can contact this group via e-mail at twainwg@twain.org.
- The TWAIN Developers distribution includes TWAIN developers who want to keep up on TWAIN or offer advice to other developers. This distribution includes the TWAIN Working Group. It is the best place to get support because both the Working Group and other developers can respond. You can contact this group via e-mail at twain@email.twain.org. In order to send mail to the list, you must first subscribe to the list at <http://email.sparklist.com/scripts/lyris.pl?enter=twain>.
- For Apple-specific questions, please email the TWAIN Working Group Mac Subcommittee at twain-mac@twain.org.

Twain developers are encouraged to participate on the TWAIN Developer distribution list. The TWAIN Working Group also uses this distribution as a means to communicate with developers. For example, we use the distribution when posting the latest news about TWAIN, asking questions we may have about implementations, and requesting review of any Technical Notes that are under development. Technical Notes provide the mechanism for distributing updated information and corrections to errors that may occur in this document.

Worldwide Web

Developers connected to the WWW can also get on-line information and updates. There is an on-line version of the Developers' matrix with connections to those implementers with WWW pages. In addition, this manual is available as a readable file.

The WWW address is <http://www.twain.org/>